

FACTORY AUTOMATION

Low Voltage Circuit Breakers

(General Catalog)





Molded Case Circuit Breakers and Earth Leakage Circuit Breakers











Our Factory Automation business is focused on "Automating the World" to make it a better, more sustainable environment supporting manufacturing and society, celebrating diversity and contributing towards an active and fulfilling role.

Mitsubishi Electric is involved in many areas including the following:

Energy and Electric Systems

A wide range of power and electrical products from generators to large-scale displays.

Electronic Devices

A wide portfolio of cutting-edge semiconductor devices for systems and products.

Home Appliance

Dependable consumer products like air conditioners and home entertainment systems.

Information and Communication Systems

Commercial and consumer-centric equipment, products and systems.

Industrial Automation Systems

Maximizing productivity and efficiency with cutting-edge automation technology.



The Mitsubishi Electric Group is actively solving social issues, such as decarbonization and labor shortages, by providing production sites with energy-saving equipment and solutions that utilize automation systems, thereby helping towards a sustainable society.

INDEX

+) Miloubishi EEOD and EET Manufacturing History			-13
2. Detailed Specifications			17
1 Molded Case Circuit Breakers	.18	5 Measuring Display Unit Breakers	41
1) NF-C (Economy class)	18	1) MDU Breakers	41
2) NF-S (Standard class)		6 DC High-Voltage Circuit Breakers	47
3) NF-L/NF-H/NF-R (High-performance class)		7 Miniature Circuit Breakers	
4) NF-U (Ultra current-limiting class)		1) BH	
2 Earth Leakage Circuit Breakers		2) BV	
1) NV-C (Economy class)		8 Circuit Protectors	53
2) NV-S (Standard class)		1) CP	
3) NV-H/NV-R (High-performance class)		9 Low Voltage Air Circuit Breakers	56
3 Motor Protection Breakers		1) Low Voltage Air Circuit Breakers (AE-SW Series)	
1) NF-MB		10Earth Leakage Relays	
4UL Certified Circuit Breakers		1) Earth Leakage Relays	
UL 489 Listed Molded Case Circuit Breakers UL 489 Listed Earth Leakage Circuit Breakers		,	
3) UL 1077 Recognized Circuit Breakers for Control boards			
o, or 1977 Hoodymized Official Dieakers for Control Bodius	+0		
3. Special-purpose Breakers			61
4) MCCB and ELCB for special environment			64
4. Selection			65
1 Construction and Operation	66	8) Selection of Circuit Breaker for Inverter Circuit	80
1) Construction of MCCB		9) Selection of Circuit Breaker for Transformer Primary Side	
2) Construction of ELCB.		10) Combination for Selective Breaking	
2 Selection of MCCB and ELCB		11) Combinations for Cascade Breaking	
1) Selecting Procedure		12) International Standard Conformance List	
2) Features and Performance		3 Selection of ELCB	
3) Current-carrying Capacity and Operating Temperature	72	1) Electric Shock Protection	
4) Application of Circuit Breaker According to Breaking Capacity	74	2) ELCB Grounding Method	
5) Selection of Circuit Breaker for Electric Lamp or Heater Circuit		Rated Voltage and Number of Poles Earth Fault Protection Coordination and Combination of Devices	
6) Selection of Circuit Breaker for Motor Branch Circuit		4) Earth Fault Protection Coordination and Combination of Devices	95
7) Selection of Motor Protection Breaker	79		
5. Installation and Connection			97
1) Connection Types			98
2) Connecting Parts			
,			
, , , , , , , , , , , , , , , , , , , ,			
·			
8) Connection of Line and Load			. 106
6. Accessories			107
1 Internal Accessories	108	2 External Accessories	123
1) Internal Accessories		F-type Operating Handle (Breaker Mount Type)	
2) Terminal Symbols		2) V-type Operating Handle (Door Mount Type)	
3) Operations and Ratings of Switches		3) C-type Operating Handle	
4) Maximum Number of Internal Accessories	110	4) Terminal Covers	128
5) Cassette Type Accessories		5) Insulating Barriers	
6) Shunt Trip (SHT)		6) Handle Lock Devices, Lock Covers, Auxiliary Handles, Card Holders	
7) Undervoltage Trip (UVT)		7) Mechanical Interlocks (MI)	
8) Lead Wire Drawing		8) Boxes for Circuit Breakers and Boxed Circuit Breakers9) Electrical Operated Circuit Breakers and Electrical Operation Devices	
10) Test Button Module (TBM)		10) IEC 35mm Rail Mounting Adapters	
11) Pre-Alarm Module (PAL)		,	

7. Characteristics and Dimensions			145
1 Molded Case Circuit Breakers	146	3 UL Certified Circuit Breakers	202
• NF32-SV, NF63-CV/SV/HV	146	• NF50-SMU	202
• NF125-CV/SV/HV		NF50-SVFU, NV50-SVFU	204
• NF125-UV	150	NF100-CVFU, NV100-CVFU	206
• NF250-CV/SV/HV	152	 NF100-SRU/HRU, NV100-SRU/HRU 	208
• NF250-UV	154	• NF125-SVU/HVU, NV125-SVU/HVU	
• NF125-SGV/LGV/HGV/RGV, NF160-SGV/LGV/HGV,		 NF250-CVU/SVU/HVU, NV250-CVU/SVU/HVU 	
NF250-SGV/LGV/HGV/RGV	156	NF400-SWU/HWU	
• NF125-SEV/HEV, NF250-SEV/HEV	158	NF630-SWU/HWU	216
• NF400-CW/SW		 NF30-FAU, NF50-FAU, NV30-FAU, NV50-FAU 	218
• NF400-SEW/HEW/REW		 NF50-FHU, NF100-FHU, NV50-FHU, NV100-FHU 	
• NF400-UEW		4 Measuring Display Unit Breakers	222
• NF630-CW/SW		NF250-SEV/HEV with MDU	
• NF630-SEW/HEW/REW		NF400-SEW/HEW with MDU	
NF800-CEW/SEW/HEW/REW		NF800-SEW/HEW with MDU	
• NF800-SDW	172		
• NF800-UEW		5 DC High-Voltage Circuit Breakers	
• NF1000-SEW, NF1250-SEW		• NF63-HDV	
• NF1250-SDW		NF125-HDVA, NF250-HDVA	
• NF1600-SEW		• NF400-HDW, NF800-HDW	234
• NF1600-SDW		6 Miniature Circuit Breakers,	
2 Earth Leakage Circuit Breakers		Residual Current Circuit Breakers,	
NV32-SV, NV-63CV/SV/HV		Residual Current Circuit Breakers	
• NV125-CV/SV/HV		with Overcurrent Protection and	
		Isolating Switches	236
• NV250-CV/SV/HV		• BH-D6, BH-D10	
• NV125-SEV/HEV, NV250-SEV/HEV		• BH-DN	
• NV400-CW/SW		• BV-D	238
NV400-SEW/HEW		• BV-DN, BV-DN6	239
• NV630-CW/SW		• KB-D	240
• NV630-SEW/HEW		7 Circuit Protectors	
• NV800-SEW/HEW	200	• CP30-BA/HU	
		8 Electrical Operated Cicuit Breakers	
Storage and Transportation Normal Service Conditions Mounting and Connections Maintenance and Inspections			248 248 249 252
		rminal Cover Mounting Hala Dimonaine	
		erminal Cover Mounting Hole Dimensions	
,			
, ,			
,			
,			
, •			
,			
,			
			272

MEMO	
	•••••
	•••••
	•••••
	······•
	·····-
	•••••
	·····-
	····



Technologies based on long year experience are brought together to realize more improved performance

The new circuit breaking technology "Expanded ISTAC" has improved the current-limiting performance and upgraded the overall breaking capacity.


Expansion of the conductor under the stator shortens the contact parting time of the mover as compared to the conventional ISTAC structure.

The current-limiting performance has been improved remarkably. (The maximum peak current value has been reduced by approx. 10%.)

Breaking capacity has been improved with this new technology and, in the case of class S, Icu is now equivalent to Ics.


Example of breaking capacity improvement



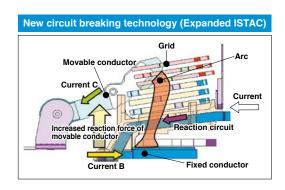

Breaking capacity of 5 models is 20% to 50% higher than the W & WS Series

Improvement of breaking capacity on 250AF-C/S/H models (Fixed) and 125AF/250AF-R models (Thermal/Adjustable).

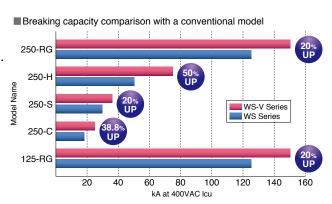



The new electronic circuit breakers (with display) and MDU breakers can display various measurement items

This will enable energy management through "visualization", which leads to energy saving.




Electronic Circuit Breaker (with display)




Measuring Display Unit Breaker

- The display is on the circuit breaker body and shows circuit information.
- Detailed setting can be done on the display.
- The display turns red during alarms.

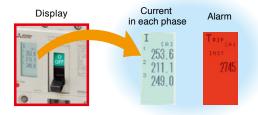

Intelligent Communications through CC-Link

■ Measuring data can be transmitted to Personal Computer through CC-Link.

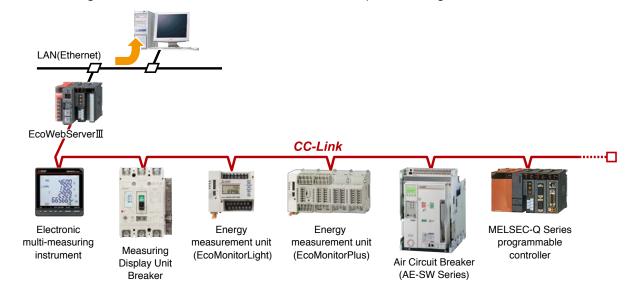



Compact design for easy to use


■ The thermal adjustable circuit breakers and electronic circuit breakers are smaller.




■ 250AF circuit breakers' fixed types (NF250-CV, NF250-SV, NF250-HV, NV250-CV, NV250-SV, NV250-HV), thermal adjustable types (NF250-SGV, NF250-HGV, NF250-RGV), and electronic types (NF250-SEV, NF250-HEV, NV250-SEV, NV250-HEV) are the same size, leading to the reduction and standardization of panel design.

Types of internal accessories are reduced from 3 types to 1 type

■ Standardization of internal accessories contributes to the reduction of stock and delivery time.

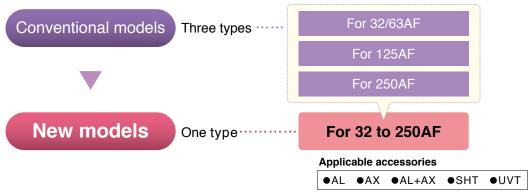

- 32AF and 63AF circuit breakers can now be used in both AC and DC circuits without specifying when ordering. This will lead to prevention of ordering mistakes.
- The earth leakage circuit breakers can now be equipped with a voltage shunt trip device (SHT).

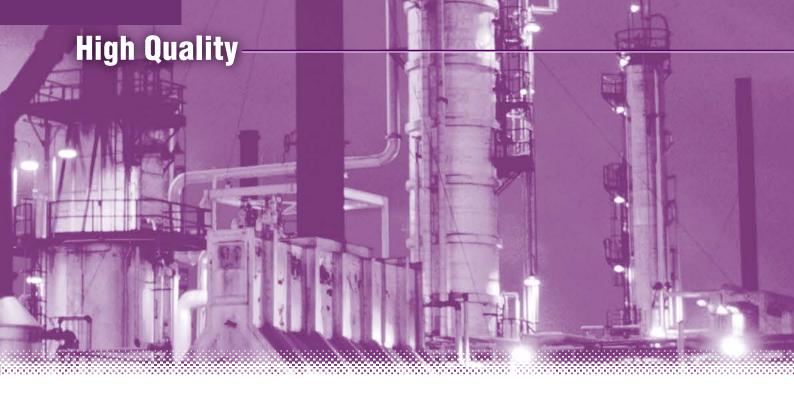

Innovative manufacturing using a robot-cell production line


■ This manufacturing innovation takes the pursuit of increased productivity, shortened manufacturing lead-time and improved quality to the upper limits.



Robot-cell Production Line

Individual unit production management system

■ A multi-model, single-unit flow production system is utilized the ultimate multi-cycle production method. The production line is controlled using barcodes to manage the model information for each unit. Small-lot, flexible production that's one step ahead!

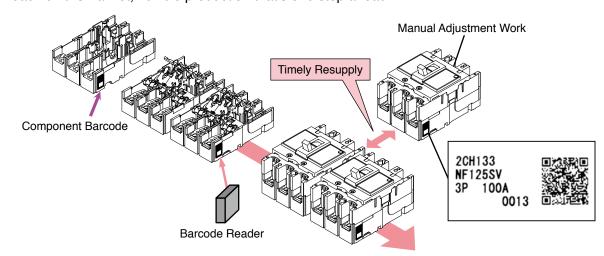



Use of Various Recyclable Materials

The circuit breakers are made of thermo-plastic materials that are easy to recycle. (Some models are partially made of thermoset materials.)

The major plastic parts bear material identifications so that they can be recycled.



Nonuse of Hazardous Substances

■ Eco-friendly design is used for all circuit breakers, and they do not use hazardous substances. The circuit breakers comply with RoHS regulation.

Energy Saving at Mitsubishi Electric Corporation Fukuyama Works

Mitsubishi Electric Corporation Fukuyama Works uses energy saving support devices such as MDU breakers and EcoServer to save energy through "visualization" of energy. Along with "visualization", Fukuyama Works also installed high-efficiency equipments to further promote energy saving.


Through energy saving activity, Fukuyama Works has successfully reduced its CO₂ emissions by 38.7%. (compared with 2013, results for 2020)





Global Networks of Sales Offices and Production Bases

Our sales networks are designed to comfort customers internationally through the worldwide distributors. Constantly contactable distributors enable us to accommodate customer's needs for smooth supply.

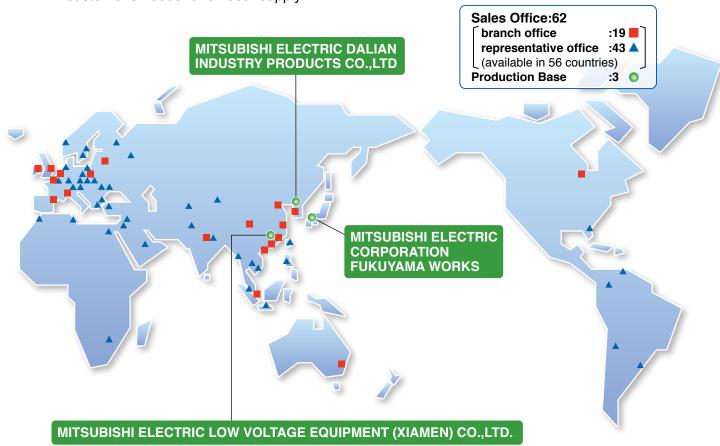

1 Outline of Circuit Breakers

Product Line-up

	Frame (A)					
Classification	Flame (A)	30 32	50 60 63	100 125	160	
	NF-C Economy class		NF63-CV	NF125-CV		
Molded Case	NF-S Standard class	NF32-SV	NF63-SV	NF125-SV NF125-SGV NF125-SEV	NF160-SGV	
Circuit Breakers	NF-H/L High-performance class		NF63-HV	NF125-HV NF125-LGV NF125-HEV NF125-HGV		
	NF-R/U Ultra current-limiting class			NF125-RGV NF125-UV		
	NV-C Economy class		NV63-CV	NV125-CV		
Earth Leakage Circuit Breakers	NV-S Standard class	NV32-SV	NV63-SV	NV125-SV NV125-SEV		
	NV-H/R High-performance class		NV63-HV	NV125-HV NV125-HEV		
Motor Protection Breakers	NF-MB	NF32-SV (*1)	NF63-CV (*1) NF63-SV (*1)	NF125-SV (*1)		
	UL 489 Listed MCCB		NF50-SWU	NF100-CVFU NF125-SVU NF100-HRU NF125-HVU		
UL Certified Circuit Breakers	UL 489 Listed ELCB		NV50-SVFU	NV100-CVFU NV125-SVU NV125-HVU		
	UL 1077 Recognized Circuit Breakers	NF30-FAU	NF50-FAU NF50-FHU	NF100-FHU		
	for Control boards	NV30-FAU	NV50-FAU NV50-FHU	NV100-FHU		
Measuring Display Unit Breakers	MDU Breakers					
	NF-HDV		NF63-HDV			
DC high voltage	NF-HDVA			NF125-HDVA		
	NF-HDW					
Miniature Circuit Breakers		BH-DN	BH-D6 BH-D10			
Residual Current Circuit Breaker			BV-D			
Residual Current Circuit Breaker with Overload Protection			BV-DN BV-DN6			
Isolating Switch			KB-D			
	Circuit Protectors	CP30-BA				
Air Circuit Breakers	AE-SW					
Related		NV-ZBA, NV-ZSA, NV-ZHA	A, NV-ZLA			

Note *1 When placing an order, specify "MB".

	Molded Case Circuit Breakers						
NF-C	NF-S	NF-H	NF-L	NF-R	NF-U		
	AND THE PROPERTY OF THE PROPER						

	Earth Leakage (Motor Protection Breakers		
NV-C	NV-S	NV-H	NV-R	NF-MB

UL Certified Ci	rcuit Breakers	Measuring Display Unit Breakers
UL 489 Listed MCCB	UL 489 Listed ELCB	MDU Breakers

250	400	600 630	800	1000	1250	1600	2000	2500	3200	4000	5000	6300
NF250-CV	NF400-CW	NF630-CW	NF800-CEW									
NF250-SV NF250-SGV NF250-SEV	NF400-SW NF400-SEW	NF630-SW NF630-SEW	NF800-SDW NF800-SEW	NF1000-SEW	NF1250-SDW NF1250-SEW	NF1600-SDW NF1600-SEW						
NF250-HV NF250-LGV NF250-HEV NF250-HGV	NF400-HEW		NF800-HEW									
NF250-RGV NF250-UV	NF400-REW NF400-UEW	NF630-REW	NF800-REW NF800-UEW									
NV250-CV	NV400-CW	NV630-CW										
NV250-SV NV250-SEV	NV400-SW NV400-SEW	NV630-SW NV630-SEW	NV800-SEW									
NV250-HV NV250-HEV	NV400-HEW	NV630-HEW	NV800-HEW									
NF250-SV (*1)												
NF250-CVU NF250-SVU NF250-HVU	NF400-SWU NF400-HWU											
NV250-CVU NV250-SVU NV250-HVU												
NF250-SEV with MDU NF250-HEV with MDU	NF400-SEW with MDU NF400-HEW with MDU		NF800-SEW with MDU NF800-HEW with MDU									
NF250-HDVA	NF400-HDW		NF800-HDW									
							AF2000-SW			AF4000-SWA	.=	
		AE630-SW		AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA	AE2500-SW	AE3200-SW	AE4000-SW	AE5000-SW	AE6300-S

	Miniature Circuit Breakers				
BH-D6	BH-D10	BH-DN			

Residual Current Circuit Breaker	Residual Current Circuit Breaker with Overload Protection	Isolating Switch
BV-D	BV-DN, BV-DN6	KB-D
S N	N N N N N N N N N N N N N N N N N N N	

Circuit Protectors	Air Circuit Breakers	Related Components
CP30-BA	AE-SW	Earth Leakage Relays
The state of the s		TO THE PARTY OF TH

Instructions for Application

1. Warranty period and warranty coverage

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi Electric occurs during use of the product within the warranty period, the product shall be repaired at no cost via the sales representative or Mitsubishi Electric Sales office. However, if repairs are required on-site at domestic or overseas locations, expenses to send an engineer will be charged.

1. Warranty period

The warranty period of the product shall be for twelve (12) months after the date of purchase or delivery to the designated place.

2. Warranty coverage

- (1) The primary failure diagnosis should be performed by users. However, if required by users, Mitsubishi Electric or Mitsubishi Electric Sales office may be able to perform the diagnosis. In that case, for damages caused by any cause found to be the responsibility of Mitsubishi Electric, the diagnosis will be performed at no cost. For details, contact a distributor.
- (2) The coverage shall be limited to ordinary use within the usage state, usage methods, usage environment, and other conditions which follow the instructions and precautions given in the instruction manual, user's manual, and caution labels on the product.
- (3) Even within the warranty period, repair cost shall be charged for the following cases.
 - Failure occurring from inappropriate storage or handling, carelessness or negligence by the user.
 Failure caused by selection of hardware or software design on the user side.
 - ② Failure caused by modifications, etc. to the product by the user without any approvals from Mitsubishi Electric.
 - ③ In case Mitsubishi Electric product is assembled into a user's device, failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 - Failure that could have been avoided if the maintenance described in the user's manual has been performed.
 - ⑤ Failure caused by external irresistible forces such as fires or abnormal voltages, and failure caused by natural disasters such as earthquakes, lightning, wind and water damages.
 - ⑥ Failure caused by reasons unpredictable based on scientific technology standards at the time of shipment from Mitsubishi Electric.
 - Any other failure found not to be the responsibility of Mitsubishi Electric or that admitted not to be so by the user.

In addition, the warranty applies only to the product delivered. It does not apply to the damage that is caused by the failure of the product.

3. The period to supply the spare parts after discontinuation of production

Mitsubishi Electric shall supply spare parts for five (5) years after discontinuation of production. After five years, Mitsubishi Electric shall supply spare parts until the spare parts run out of stock.

2. Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the warranty period, Mitsubishi Electric shall not be liable for compensation to:

- Damages caused by any cause found not to be the responsibility of Mitsubishi Electric.
- (2) Loss in opportunity, lost profits incurred to the user by failures of Mitsubishi Electric product.
- (3) Damages whether foreseeable or not, secondary damages, compensation for accidents, and compensation for damages to products other than Mitsubishi Electric products, caused by exceptional situations.
- (4) Compensation for cost occurring secondarily from replacement work by the user, maintenance of on-site equipment and start-up test run and other operations.
- (5) Regarding the usage which is out of the scope of handling that is described in the catalogue, we cannot guarantee the performance of our circuit breakers at all.

3. Product applications

- (1) When using the products listed in this catalogue, the following conditions must be confirmed and obeyed. The product must be used so that a failure that occurs to the product does not lead to a serious accident. When a damage or failure occurs, the external backup function or fail-safe function must be executed systematically.
- (2) The products listed in this catalogue are designed and manufactured as general-purpose products for application to the general industry field. Therefore, the warranty does not apply to the following special uses.
 - ① The use that has a significant influence on the public facilities such as nuclear power plants and other power plants of power companies.
 - ② The use for railway companies, government offices, etc. that require to build the special quality assurance system.
 - ③ The use for aerospace equipment, medical equipment, railway equipment, combustion and fuel equipment, passenger vehicles, manned transportation equipment, recreational equipment, safety equipment, and air conditioner for servers and the cooling facilities that are expected to have a significant influence on life, body, and property.

If the products listed in this catalogue are used for the above mentioned special uses, Mitsubishi Electric does not take any responsibility for the quality, performance, and safety of the product, which includes, but is not limited to, default liability, defect liability, quality assurance liability, tort liability, and product liability. However, in case

the special quality (beyond general specifications) is not required and the use is a limited purpose and the backup/fail-safe functions are equipped with the facility, Mitsubishi Electric may determine that the products listed in this catalogue can be guaranteed. For details, consult a distributor or Mitsubishi Electric.

4. Safety precautions

- Carefully read the safety precautions prior to use the circuit breaker correctly.
- Important safety instructions are given below. Strictly observe the instructions.
- Be sure to communicate these safety precautions to the end user.

⚠ DANGER

- Do not touch the terminal area. Doing so can cause an electric shock.
- The earth leakage circuit breakers are designed to operate when the difference between leaving current and returning current exceeds the specified value. In the case shown in this figure, earth leakage is not detected. Therefore, never touch the two bare live parts. The circuit breaker will not operate upon occurrence of an electric shock.



Earth leakage circuit breaker

Instructions for installation

⚠ CAUTION

- The electrical work shall be performed by qualified personnel (electrical workers).
- Before performing wiring work, turn off the upstream circuit breaker, and ensure that no current is flowing through the circuit breaker to be wired. Failure to do so may expose you to shock hazard.
- When connecting any wire, tighten the terminal screw to the torque specified in the instruction manual. Failure to do so may cause a fire.
- When the model comes with insulating barriers as standard accessories, install the insulating barriers without fail.
- Do not install the circuit breaker in an abnormal environment with high temperature, high moisture, dust, corrosive gas, vibration or shock.
 - Doing so may cause a fire or make the circuit breaker inoperative.
- Protect the circuit breaker so that foreign particles, such as dust, concrete powder and iron powder, and rain water will not enter the circuit breaker.
- Failure to do so may make the circuit breaker inoperative. [Earth leakage circuit breaker]
- When using an earth leakage circuit breaker for use only in single-phase 3-wire or 3-phase 4-wire systems, connect the neutral wire to the neutral phase without fail. If they are not connected, the circuit breaker may not operate in the case of open phase or overcurrent, thereby resulting in a fire.
- Connect the circuit breaker to a power supply appropriate to the rating of its body.
- Failure to do so may make the circuit breaker inoperative or damage it.
- Tighten securely the lead wire in the open phase to the neutral wire on the load side.
 If the wires are not connected, the open phase of the neutral
- wire cannot be detected.

 When there are two terminal screws for the neutral pole, tighten
- When there are two terminal screws for the neutral pole, tighten the screws alternately. Failure to do so may loosen the screws, thereby causing a fire.

[Explanation of warning symbols]

⚠ DANGER	Incorrect handling of the product will result in a hazardous situation, such as death or serious injury.
 ∴ CAUTION	Incorrect handling of the product may result in a hazardous situation according to circumstances.
\Diamond	This means something is prohibited and should never be performed.
	Ignition or fire may occur under certain circumstances.

Instructions for use

⚠ CAUTION

 When the circuit breaker automatically breaks a circuit, turn on the handle after removing the cause. Failure to do so may cause an electric shock or a fire.

[Earth leakage circuit breaker]

- Ground the earth terminal of electrical equipment.
- Failure to do so may cause an electric shock or a fire.
- Press the test button to check the operation once a month or so. If the earth leakage circuit breaker is not turned off, it is out of order. Consult an electrician.

Instructions for maintenance

♠ CAUTION

- The circuit breakers shall be maintained by persons with specialized knowledge.
- Before maintaining, turn off the upstream circuit breaker, and ensure that no current is flowing through the circuit breaker to be maintained.
 Failure to do so may expose you to shock hazard.
- Retighten the terminals periodically.
 Failure to do so may cause a fire.

Instructions for disposal

↑ CAUTION


When disposing of the product, treat it as industrial waste.

5. Change in product specifications

The specifications of the product listed in this catalogue, manuals or technical documents are subject to change without prior notice.

1 Outline of Circuit Breakers

Mitsubishi MCCB Manufacturing History

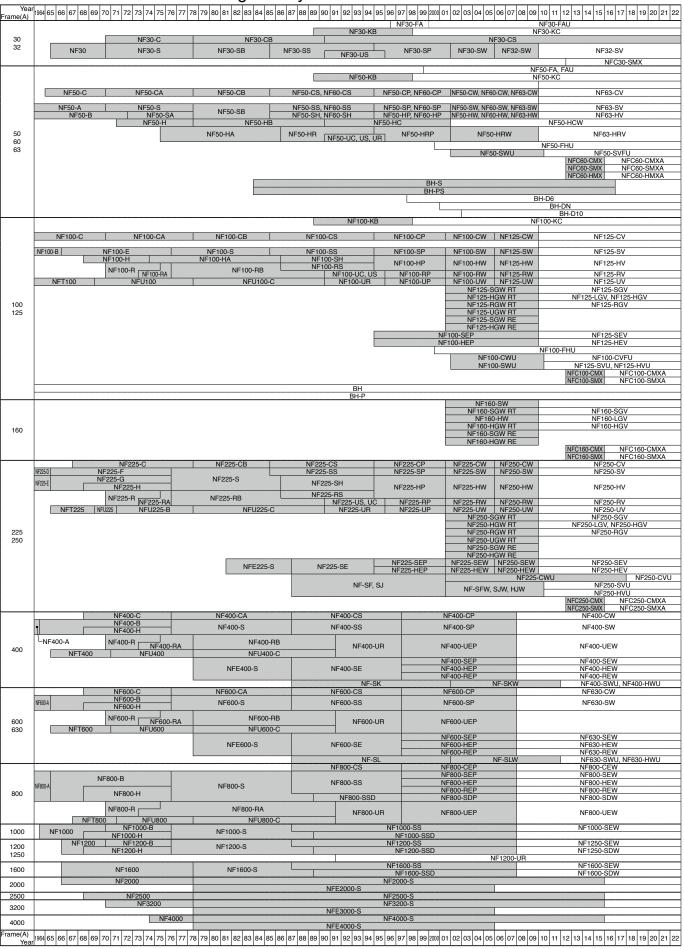

Mitsubishi ELCB and ELR Manufacturing History NV-KF NV-KB NV-G2N NV-K30F NV-G3N NV-G3NA NV30-F NV-1 NV-1C NV-2F NV-1F NV30-FA NV30-FAU NV30-KB NV30-KC NV30-C NV30-CA NV30-CS NV-3 NV30-SA NV30 NV30-SP NV30-SW NV32-SV NV30-S NV30-SS NV32-SW NV50-FA, FAU NV50-FHU NV50-K NV50-KB NV50-KC NV50-CSA NV50-C NV50-CA NV50-CF, NV60-CF, NV50-CP, NV60-CP NV63-CV NV50-CW, NV60-CW, NV63-CW NV-5 NV50 NV50-S NV50-SA NV50-SS, NV60-SS, NV50-SF, NV60-SF, NV50-SP, NV60-SF NV50-SW, NV60-SW, NV63-SW NV63-SV NV50-HP, NV60-HP NV50-HW, NV60-HW, NV63-HW NV63-HV NV50-SWU NV50-SVFU BV-DN NV100-FH NV100-FHU NV100-K NV100-KB NV100-KC NV100 NV100-C NV100-CA NV100-CS NV100-CF NV100-CP NV100-CW NV125-CW NV125-CV NV125-SV NV100-SF NV100-SP NV100-SW NV125-SW NV100-SA NV100-SB NV100-SS(4P) NV100-HW NV125-HW NV125-HV NV100-HF 100 125 NV100-HA NV100-HB NV100-HB(4P) NV100-SEP NV125-SEV NV100-HEP NV125-HEV NV100-RP NV100-RW NV125-RW NV100-CVFU NV100-SWII NV125-SVU NV125-HVU NV225-CP NV225 NV225-C NV225-CA NV225-CS NV225-CF NV225-CW NV250-CW NV250-CV NV225-S NV225-HP NV225-HW NV250-HW NV250-HV NV225-SA NV225-SB NV225-SF NV250-SV NV250-SW NV225-SS NV225-SEW NV250-SEW NV250-SEV NV225-HEP NV225-HEW NV250-HEW NV250-HEV NV225-RP NV225-RW NV250-RW NV250-CVU NV225-CWU NV250-SVU

										NV250-HVU
	NV400	NV400-C	NV40	00-CA	NV400-CS	NV400-CF		NV400-CP		NV400-CW
		NV400-S NV400-H	NV400-SA	NV400-SB	NV	(400-SB(4P)				
					NV400-SS			NV400-SEP		NV400-SEW
400					NV400-55	NV400-SF		NV400-SP		NV400-SW
								NV400-HEP		NV400-HEW
								NV400-REP		
									NV-SKW	NV400-SWU
									INV-ORW	NV400-HWU
		NV600-C		NV60	00-CA			NV600-CP		NV630-CW
600 630		NV600-S NV600-H	NV600-SA		NV600-SB			NV600-SP		NV630-SW
000								NV600-SEP		NV630-SEW
								NV600-HEP		NV630-HEW
		NV800-S NV800-H	NV800-SA		NV800-SA(4F	P)				
800					NV800-SB(3F	P)				
								NV800-SEP		NV800-SEW
								NV800-HEP		NV800-HEW
1000		NV1000-B NV1000-H	NV1000-SA		NV1000-SA(4	P)				
				NV1000-5	SA(3P)			NV100	0-SB(3P)	
1200 1250		NV1200-B NV1200-H	NV1200-SA		NV1200-SA(4	P)				
				NV1200-5	SA(3P)			NV120	0-SB(3P)	
			NV-ZB							NV-ZBA
	NV-R NV-	Z	INV-ZD					NV-ZP		
ELR	NV-R100, N NV-	V-R200 R400			NV-ZS					NV-ZSA
						NV-ZU				
		Į			NV-ZA					NV-ZAA
							NV-ZH			NV-ZHA
										NV-ZLA

Frame(A) 1971 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 2000 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22

[:]Production stopped model
This manufacturing history is based on Japanese domectic market.



Detailed Specifications

1 Molded Case Circuit Breakers	18
1) NF-C (Economy class)	18
2) NF-S (Standard class)	20
3) NF-L/NF-H/NF-R (High-performance class)	24
4) NF-U (Ultra current-limiting class)	27
2 Earth Leakage Circuit Breakers	28
1) NV-C (Economy class)	28
2) NV-S (Standard class)	30
3) NV-H/NV-R (High-performance class)	
3 Motor Protection Breakers	34
1) NF-MB	34
4 UL Certified Circuit Breakers	35
1) UL 489 Listed Molded Case Circuit Breakers	35
2) UL 489 Listed Earth Leakage Circuit Breakers	
3) UL 1077 Recognized Circuit Breakers for Control boards	40
5 Measuring Display Unit Breakers	41
1) MDU Breakers	41
6 DC High-Voltage Circuit Breakers	47
7 Miniature Circuit Breakers	49
1) BH	49
2) BV	
8 Circuit Protectors	53
1) CP	53
9 Low Voltage Air Circuit Breakers	56
Low Voltage Air Circuit Breakers (AE-SW Series)	
10 Earth Leakage Relays	58
1) Earth Leakage Relays	58

NF-C (Economy class)

									J
		ame (A)		50	60	63	100	125	
		Model			NF63-CV		NF12	25-CV	
		Image					ATT		
	Rated	current In (A)		3 4 (5) 6 10 (15) 16 20 25	(00)	00	50 (60) 63	105	
Refere		erature 40°C (45°C for ma	arine use)	(30) 32 40 50	(60)	63	(75) 80 100	125	
		per of poles		2 3	2 3	2 3	2 3	2 3	
	Hated insula	tion voltage Ui (V		600	600	600	600	600	
8			690V 500V	2.5/2.5	2.5/2.5	2.5/2.5	7.5/4	7.5/4	
paciji			440V	2.5/2.5	2.5/2.5	2.5/2.5	10/5	10/5	
5 8	IEC 60947-2	,	415V	2.5/2.5	2.5/2.5	2.5/2.5	10/5	10/5	
reaki	EN 60947-2		400V	5/5	5/5	5/5	10/5	10/5	
Rated short-circuit breaking capacities (KA)	(Icu/Ics)		380V	5/5	5/5	5/5	10/5	10/5	
hortc			230V	7.5/7.5	7.5/7.5	7.5/7.5	30/15	30/15	
ateds		-	200V	7.5/7.5	7.5/7.5	7.5/7.5	30/15	30/15	
	d image de a suith	DC nstand voltage Uin		2.5/2.5 (*5)	2.5/2.5 (*5)	2.5/2.5 (*5) 8	7.5/4 (*3)	7.5/4 (*3) 8	
Hale		rrent (*1)	np (kv)	8 AC/DC compatible	8 AC/DC compatible	AC/DC compatible	8 AC/DC compatible	AC/DC compatible	
		ty for isolation		Yes	Yes	Yes	Yes	Yes	
		e connection		Available	Available	Available	Available	Available	
	Number of	Without cu		10,000	10,000	10,000	10,000	10,000	
ope	erating cycles		40VAC)	6,000	6,000	6,000	6,000	6,000	
		tion category		A	A	A	A	A	
EMC		tion degree ndition (environmen	t A or B)	3 Not Applicable	3 Not Applicable	3 Not Applicable	3 Not Applicable	3 Not Applicable	
		L ca J	a	50 75	50 75	50 75	60 90	60 90	
Overall dimensions (mm)	===	* [===	b	130	130	130	130	130	
Over		և Ա	С	68	68	68	68	68	
į		↓ 4	ca	90	90	90	90	90	
_		ont-face type (kg)	-	0.45 0.65	0.5 0.7	0.5 0.7	0.6 0.9	0.6 0.9	
Installation and connections	Front conne			●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	Screw terminal	
lation	Rear	OX) terminal (SL) (B)		− ●Round stud	●Round stud	− ●Round stud	●Bar stud	●Bar stud	
nsta	Plug-in	(PM)		• Itouria staa	e i louriu stau	• Tiouria staa	• Bai sidd	• Dai stud	
0	Alarm switch			● (*4)	● (*4)	• (*4)	● (*4)	●(*4)	
ty p	Auxiliary swi		115	● (*4)	● (*4)	● (*4)	● (*4)	●(*4)	
sso tte	Shunt trip	(SHT)	1.0	● (*4)	• (*4)	● (*4)	● (*4)	●(*4)	
sse	Undervoltag		100	• (*4)	● (*4)	• (*4)	• (*4)	●(*4)	
Cassette-type accessories	Pre-alarm	terminal block (SLT) (PAL)		-	<u> </u>	-	-	-	
	alaini	Closed (S)		•	•	•	•	•	
1	Enclosure	Dustproof (I)		•	•	•	•	•	
		Waterproof (W)		- •	- •	- •	- •	- •	
တ္ဆ		ration device (NFM)	140	-		-	- •	- •	
External accessories	Mechanical interlock (MI) (*8)	Panel mounting Breaker mounting	136	•	•	•	•	•	
ess	Lock cover	LC		•	•	•	•	•	
) Š	Handle lock	HL	134	•	•	•	•	•	
<u>a</u>	device	HL-S		•	•	•	•	•	
tern	External	(F)	123	•	•	•	•	•	
Ιŭ	operating handle			•	•	•	•	•	
	Rear stud	-L, TC-S, TTC, BTC, PTC) (B-ST)		•	•	•	•	•	
	Plug-in	(PM)		•	•	•	•	•	
		I mounting adapters		•	•	•	-	-	
		marking		Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
	UKC	A marking		Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
		CCC		Certified	Certified	Certified	Certified	Certified	
N	Marine use ap	proval (☆:Certifie	ed)	*	☆	☆	☆	#	
-		R, ABS, DNV)		Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	
-		ip button		Equipped	Equipped	Equipped	Equipped	Equipped	
Pag		eristics and dimer	nsions	-чирреи	146				
9							· · · · · · · · · · · · · · · · · · ·		


- 146

 1 The operating characteristics are different between AC and DC.
 15 For 100A of rated current, NK rating is not shown.
 16 For 100A of rated current, NK rating is not shown.
 17 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any two terminals except N-pole.

 When connected cables/busbars as shown on the right, maximum of 400VDC can be applied to 3-pole product and maximum of 500VDC to 4-pole product.

 18 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.
 18 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any two terminals except N-pole.

 19 Not available for use with connection as shown on the right.
 19 Place an order with circuit breaker.
 19 Solid state relay output is available as an option. Specify if this contact output is required. Lead-wire terminal block (SLT) is equipped as standard.
 19 No isolation function except 400A to 800A frame.

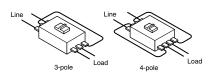

NF-C (Econom	y class)				
225	250	400	600	630	800
NF25		NF400-CW		0-CW	NF800-CEW
	222		e je		
(100) 125 150 175 200 225 (*2)	250	250 300 350 400	500 600	(630)	Adjustable 400 450 500 600 700 800
2 3	2 3	2 3	2 3	2 3	3
600	600	690	690	690	690
_	-	_	-	-	_
10/8	10/8	15/8	18/9	18/9	18/9
15/12	15/12	25/13	36/18	36/18	36/18
 25/19	25/19	36/18	36/18	36/18	36/18
25/19	25/19	36/18	36/18	36/18	36/18
25/19	25/19	40/20	40/20	40/20	40/20
36/27	36/27	50/25	50/25	50/25	50/25
36/27	36/27	50/25	50/25	50/25	50/25
15/12 (*3)	15/12 (*3)	20/10 (*3)	20/10 (*3)	20/10 (*3)	-
8	8	8	8	8	8
AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC
Yes	Yes	Yes	Yes	Yes	Yes
Available	Available	Available	Available	Available	Available
8,000	8,000	6,000	6,000	6,000	4,000
4,000	4,000	1,000	1,000	1,000	500
A	A	A	A	A	В
Not Applicable	3 Not Applicable	3 Not Applicable	3 Not Applicable	3 Not Applicable	3 A
105	105	140	140	140	210
165	165	257	257	257	275
68	68	103	103	103	103
92	92	134	155	155	155
1.3 1.5	1.3 1.5	4.4 5.0	5.2 6.0	5.2 6.0	10.9
Screw terminal	●Screw terminal	●Busbar terminal	●Busbar terminal	Busbar terminal	●Busbar terminal
•			<u> </u>		_
●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud
•	•	•	•	•	•
●(*4) ●(*4)	●(*4)	●(*4)	●(*4)	●(*4) ●(*4)	●(*4)
●(*4) ●(*4)	●(*4)	●(*4)	●(*4)	●(*4) ●(*4)	●(*4)
●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)
●(*4)	●(*4)	•	•	•	•
-	<u> </u>	<u> </u>	<u> </u>	<u> </u>	● ●(*7)
<u> </u>	•				-
•	<u>-</u>	<u> </u>	•	•	•
-	-	•	•	•	•
•	•	●(*6)	●(*6)	● (*6)	●(*6)
•	•	•	•	•	•
•	•	•	•	•	•
•	•		=		_
•	•	•	•	•	•
•	•	•	•	•	•
•	•	•	•	•	•
•	•	•	•	•	•
•	•	•	•	•	•
•	•	• •	• •	• •	•
•	•	•			•
-	Ž	_	_	_	
TÜV approval	TÜV approval	Self-declaration	Self-declaration	Self-declaration	Self-declaration
Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
Certified	Certified	Certified	Certified	Certified	Certified
☆(*4)	☆	☆	☆	☆	☆

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.
2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.
3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.
4. NF250-CV (100A) does not have any marine use approvals.

Thermal-magnetic Equipped

Thermal-magnetic Equipped 160

Thermal-magnetic Equipped

Thermal-magnetic Equipped

Thermal-magnetic Equipped

Electronic (effective value detection)
Equipped
170

NF-S (Standard class)


Frame (A)	30	32	50	60	63	
Model Image	NFC	12-SV		NF63-SV		
Rated current In (A) Reference ambient temperature 40°C (45°C for marine use)	3 4 (5) 6 10 (15) 16 20 25 (30)	32	3 4 (5) 6 10 (15) 16 20 25 (30) 32 40 50	(60)	63	
Number of poles	2 3	2 3	2 3 4	2 3 4	2 3 4	
Rated insulation voltage Ui (V)	600	600	600	600	600	
Second S	2.5/2.5	2.5/2.5	7.5/7.5	7.5/7.5	7.5/7.5	
440V	2.5/2.5	2.5/2.5	7.5/7.5	7.5/7.5	7.5/7.5	
E IEC 60947-2 415V	2.5/2.5	2.5/2.5	7.5/7.5	7.5/7.5	7.5/7.5	
EN 60947-2 AC 400V	5/5	5/5	7.5/7.5	7.5/7.5	7.5/7.5	
(Icu/Ics) 380V	5/5	5/5	7.5/7.5	7.5/7.5	7.5/7.5	
물 230V	7.5/7.5	7.5/7.5	15/15	15/15	15/15	
200V	7.5/7.5	7.5/7.5	15/15	15/15	15/15	
	2.5/2.5 (*5)	2.5/2.5 (*5)	7.5/7.5 (*5) 8	7.5/7.5 (*5)	7.5/7.5 (*5)	
Rated impulse withstand voltage Uimp (kV) Current (*1)	8 AC/DC compatible	8 AC/DC compatible	AC/DC compatible	8 AC/DC compatible	8 AC/DC compatible	
Suitability for isolation	Yes	Yes	Yes	Yes	Yes	
Reverse connection	Available	Available	Available	Available	Available	
Number of Without current	10,000	10,000	15,000	15,000	15,000	
operating cycles With current (440VAC)	6,000	6,000	8,000	8,000	8,000	
Utilization category	A	A	A	A	A	
Pollution degree EMC environment condition (environment A or B)	3 Not Applicable	3 Not Applicable	3 Not Applicable	3 Not Applicable	3 Not Applicable	
	50 75	50 75	50 75 100	50 75 100	50 75 100	
a b c c ca	130	130	130	130	130	
Payore C	68	68	68	68	68	
E Ca ca	90	90	90	90	90	
Mass of front-face type (kg)	0.45 0.65	0.45 0.65	0.5 0.7 0.9	0.55 0.75 1.0	0.55 0.75 1.0	
Front connection (F) Page Solderless (BOX) terminal (SL) Rear (B) Plug-in (PM)	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	
Solderless (BOX) terminal (SL) Rear (B) 98	– ●Bar stud	PRound stud	●Round stud	− •Round stud	- Round stud	
Plug-in (PM)	• Dai siuu	Troulid stad	Tround stud	Priodria stad	Tround stud	
Alexan quitale (AL)	● (*4)	• (*4)	● (*4)	● (*4)	● (*4)	
Auxiliary switch (AX)	• (*4)	• (*4)	• (*4)	• (*4)	• (*4)	
၌ ဂ္ဂ Shunt trip (SHT)	● (*4)	• (*4)	• (*4)	● (*4)	● (*4)	
Undervoltage trip (UVT)	• (*4)	• (*4)	• (*4)	● (*4)	● (*4)	
Auxiliary switch (AX) Auxiliary switch (SHT) Shunt trip (SHT) Undervoltage trip (UVT) With lead-wire terminal block (SLT) 120	•	•	• •	• •	• •	
Pre-alarm (PAL) 122 Closed (S)	- •	-	• -	- • -	• -	
Enclosure Dustproof (I) 137	•	•	• -	• -		
Waterproof (W)	-	-	- -	-	-	
Electrical operation device (NFM) 140	-	-	-	-	-	
Mechanical Panel mounting 136	•	•	• •	• •	• •	
interiock (MI) (*/) Breaker mounting	•	•	• -	• -	• -	
Lock cover LC	•	•	•	•	•	
Handle lock HL 134	•	•	•	•	•	
External (F)	•	-	•	•		
operating handle (V) 123	•	·	•	•	•	
Terminal cover (TC-L, TC-S, TTC, BTC, PTC) 128	•	•	• •	• •	• •	
Rear stud (B-ST)	•	•	•	•	•	
Plug-in (PIVI)	•	•	• •	• •	• •	
IEC 35mm rail mounting adapters 143	0-16-1	0-16-1-1-1-1-1		O o life also also medians	0-16 de elemetico	
CE marking	Self-declaration	Self-declaration Self-declaration	Self-declaration	Self-declaration	Self-declaration	
UKCA marking CCC	Self-declaration Certified	Self-declaration Certified	Self-declaration Certified	Self-declaration Certified	Self-declaration Certified	
Marine use approval (☆:Certified)						
(NK, LR, ABS, DNV)	☆	*	☆ -	☆ –	☆ -	
Automatic tripping device	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	
Trip button	Equipped	Equipped	Equipped	Equipped	Equipped	
Page of Characteristics and dimensions	1	46		146		

- The operating characteristics are different between AC and DC.
 For 100A of rated current, NK rating is not shown.
 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any two terminals except N-pole.
 When connected cables/busbars as shown on the right, maximum of 400VDC can be applied to 3-pole product and

maximum of 500VDC to 4-pole product.

(For NF250-SV model, connected as shown on the right, maximum of 500VDC can be applied to 3-pole product and maximum of 600VDC to 4-pole product.)

 *4 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.
 *5 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any *5 For 3-pole product, connect cables business and any this terminals except N-pole.
 Not available for use with connection as shown on the right.
 *6 Place an order with circuit breaker.
 *7 No isolation function except 400A to 800A frame.

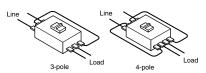

NF-S (S	Stand	ard class)											
100		125		125		1 1	25	160		225		250	
100	NF12			NF125-S0	3V		zo 5-SEV	NF160-S	GV	225	NF25	50-SV	
	M					f, f							
(15) 16 20 (30) 50 (60) 63 (75)		125		16-20 20-25 25- 35-50 45-63 70-100 90-	53-80	16-32 32-	stable 63 63-125 step) (6.25A step)	125-16	0	(100) 125 15 175 200 22		250	
2 3	4	2 3	4	2 3	4	3	4	2 3	4	2 3	4	2 3	4
690		690		690			90	690		690		690	
8/8		8/8		8/8			/8	8/8		8/8		8/8	
18/18 25/25		18/18 25/25		30/30 36/36		30. 36.		30/30 36/36		30/30 36/36		30/30 36/36	
30/30		30/30		36/36		36		36/36		36/36		36/36	
 30/30		30/30		36/36		36		36/36		36/36		36/36	
30/30		30/30		36/36		36		36/36		36/36		36/36	
50/50		50/50		85/85		85.		85/85		85/85		85/85	
50/50		50/50		85/85		85.		85/85		85/85		85/85	
40/40 (*3)	40/40 (*	3)	20/20 (300V	(*3)			20/20 (300\	/) (*3)	20/20 (300\	/) (*3)	20/20 (300)	V) (*3)
 8		8		8			3	8		8		8	
AC/DC compa	atible	AC/DC com	atible	AC/DC comp	atible		.C	AC/DC com	oatible	AC/DC compa	tible (*1)	AC/DC compa	
Yes		Yes		Yes Available			es labla	Yes Availab	la .	Yes Availab	la .	Yes	
Available 25,000	•	Availab 25,000		50,000		25,	lable	40,000	-	25,000		Availab 25,000	
10,000		10,000		30,000			000	15,000		10,000		10,000	
A		A		A			4	A		A		A	
3		3		3			3	3		3		3	
Not Applica		Not Applic	able	Not Applica		,	4	Not Applic		Not Applic	able	Not Applic	able
60 90	120	60 90	120	105	140	105	140	105	140	105	140	105	140
130		130		165			65	165		165		165	
68		68 90		68 92		9		68 92		68 92		68 92	
90 0.7 1.0	1.3	0.7 1.0	1.3	1.4 1.6	2.0	1.7	2.2	1.4 1.6	2.0	1.4 1.6	2.0	1.4 1.6	2.0
Screw term		●Screw ter		Screw terr			terminal	●Screw ter		●Screw ter		●Screw ter	
•		•		•		•	•	•		•	•	•	•
●Bar stud	t	●Bar sti	ıd	●Bar stu	ıd	●Bar stud	●Bar stud	●Bar st	ud	●Bar sti	ud	●Bar st	ud
•	•	•	•	•		•	•	•		•	•	•	•
● (*4)	•	• (*4)	•	• (*4)	•	• (*4)	•	• (*4)	•	• (*4)	•	• (*4)	•
● (*4)	•	● (*4)	•	• (*4)	•	● (*4)	•	● (*4)	•	● (*4)	•	● (*4)	•
● (*4) ● (*4)	•	● (*4) ● (*4)	•	● (*4) ● (*4)	•	● (*4) ● (*4)	•	● (*4) ● (*4)	•	● (*4) ● (*4)	-	● (*4) ● (*4)	•
• (4)		• (4)		• (4)		• (4)		• (4)		• (4)		• (4)	-
				_						_		_	
•	-	•	-	•	-	•	-	•	-	•	-	•	-
•	-	•	-	•	-	•	-	•	-	•	-	•	-
- •		- •	_	•	_	•	_	•	_	•		•	_
- •		-	•	•		- '		•		•		•	
•	-	•	-			•	_	•		•	-	•	-
•		•						•		•		•	
•		•		•			•	•		•		•	
•		•		•				•		•		•	
•		•		•		•		•		•		•	
- •	•	-	•	•				•		•		•	
•	•	•	•	•		•	•	•		•	•	•	•
	•	•				•	•			•	-	•	•
_	_	_		_		_		_		_		_	
Self-declara	tion	Self-declar	ation	Self-declara	ation		claration	Self-declar	ation	TÜV approval	Self-declaration	TÜV approval	Self-declaration
 Self-declara		Self-declar		Self-declara	ation		claration	Self-declar		Self-declar	ation	Self-declar	ration
Certified		Certifie	1	Certified	1	Cert	ified	Certifie		Certifie	d	Certifie	ed .
☆	-	☆	-	(LR, ABS, DNV)	-	(LR, ABS, DNV)	-	(LR, ABS, DNV	, -	☆	_	☆	_
Thermal-mag	netic	Thermal-ma	gnetic	Thermal-mag			/e value detection)	Thermal-ma		Thermal-ma	gnetic	Thermal-ma	agnetic
Equipped		Equippe		Equippe			pped	Equippe		Equippe		Equippe	
7. 17.7		18		156			58	156		1. 66.	1:		


Remarks: 1. Products with rated current parenthesized are produced when an order is placed.
2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.
3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

NF-S (Standard class)

	Frame (A)		250		50	400			00		600			630		
	Model		NF250-SGV	NF25	0-SEV	NF400-S	W	NF400)-SEW			NF63	80-SW			
	Image		T H													
Referer	Rated current In (A) nce ambient temperature 40°C (45°C for ma	rine use)	125-160 140-200 175-250	80-160	stable 125-250 (12.5A step)	250 300 350 400			200 225 350 400	5	00 600)		(630)		
	Number of poles		2 3 4	3	4	2 3	4	3	4	2	3	4	2	3	4	
	Rated insulation voltage Ui (V)		690		90	690			90		690			690		
S (KA)		690V	8/8		/30	10/10			/10		10/10			10/10		
Rated short-circuit breaking capacities (KA)		500V 440V	30/30 36/36		36	30/30 42/42			/30 /42		30/30 42/42			30/30 42/42		
g	IEC 60947-2	415V	36/36		/36	45/45			/50		50/50			50/50		
breaki	EN 60947-2	400V	36/36		/36	45/45			/50		50/50			50/50		
ionit	(Icu/Ics)	380V	36/36		/36	50/50			/50		50/50			50/50		
horto		230V	85/85		/85	85/85			/85		85/85			85/85		
ateds	DC.	200V	85/85		/85	85/85	١,		/85		85/85	n\	4	85/85	2)	
	DC d impulse withstand voltage Uim	250V	20/20 (300V) (*2) 8		<u> </u>	40/40 (*2	2)		 3	40	0/40 (*2 8	2)	4	0/40 (* <u>/</u> 8	<u> </u>	
natet	Current	ip (KV)	AC/DC compatible		(C	AC/DC comp	atible		.C	AC/DO	comp	atible	AC/D	C comp	atible	
	Suitability for isolation		Yes		es	Yes			es		Yes			Yes		
	Reverse connection		Available		ilable	Available	е		lable		vailable	Э	Α	vailabl	е	
	Number of Without curr		25,000		000	6,000			000		6,000			6,000		
ope	erating cycles With current (44 Utilization category	OVAC)	10,000 A		000 A	1,000 A)00 3		1,000 A			1,000 A		
Rated	short time with stand current lcw (kA) a	at 0.25s		-					5		_					
11000	Pollution degree	ut 0.200	3		3	3			3		3			3		
EMC (environment condition (environment	A or B)	Not Applicable		A	Not Applica	able		4	Not	Applica	able	Not	Applica	able	
_ (E)	a ca	а	105 140	105	140	140	185	140	185	140		185	14		185	
Overall dimensions (b	165		65	257		2			257			257		
lo mens		c	68 92		68 92	103 155			03 55		103 155			103 155		
-	Mass of front-face type (kg)	Ca	1.4 1.6 2.0	1.7	2.2	4.6 5.2	6.8	6.0	7.6	5.4	6.2	8.0	5.4	6.2	8.0	
p g	Front connection (F)	Page	1.4 1.0 2.0	Screw terminal	Screw terminal	●Busbar terr			r terminal		sbar terr			sbar teri		
iona	Solderless (BOX) terminal (SL)		•	•	•		-	-	-	-	-	-	-	-	-	
Installation and connections	Rear (B)	98	●Bar stud	●Bar stud	●Bar stud	●Bar stud ●Bar stud	_	●Bar stud	●Bar stud	●Bar stud	■Bar stud	■Bar stud	■Bar stud	Bar stud	-	
Ĕ	Plug-in (PM) Alarm switch (AL)		• (*0)	• (*O)	•	• (*0)	•	• (*0)	•	• • · · · · · · · · · · · · · · · · · ·	۵\	•		:0)	•	
l be	Alarm switch (AL) Auxiliary switch (AX)		● (*3) ● ● (*3) ●	● (*3) ● (*3)	•	● (*3) ● (*3)	•	● (*3) ● (*3)	•	• (* • (*		•	• ('		•	
Cassette-type accessories	Shunt trip (SHT)	115	• (*3) •	● (*3)	•	● (*3)	•	● (*3)	•	• (*		•	• (•	
set	Undervoltage trip (UVT)		● (*3)	● (*3)	•	•	•	•	•	•		•	•		•	
acc	With lead-wire terminal block (SLT)	120	•	•	•	•	•	•	•	•		•	•		•	
<u> </u>	Pre-alarm (PAL)	122			<u> </u>	_		•	(*5)	-	-					
	Enclosure Closed (S) Ustproof (I)	137	• -	•	-	-	T -	•	<u> </u>	•	-	l -	•	-	Ι -	
	Waterproof (W)	.07	• -	•	_	•	-	•	_	•		-			-	
"	Electrical operation device (NFM)	140	•	(● (*6)		•	(*6)		● (*6)			● (*6)		
accessories	Mechanical Panel mounting	136	•	•	•	•	•	•	•	•		•	•		•	
SSG	interlock (MI) (*7) Breaker mounting Lock cover LC		•	•		•	-	•	_	•		-	•	1	_	
8	Lock cover LC Handle lock HL	134				-			<u> </u>		-			-		
	device HL-S	104	`		•	•			-		÷			÷		
ernal	External (F)	400	•		•	•			•		•			•		
Exte	operating handle (V)	123	•	(•	•			•		•			•		
"	Terminal cover (TC-L, TC-S, TTC, BTC, PTC)	128	•	•	•	•	•	•	•	•		•	•		•	
	Rear stud (B-ST)	100	•	•	•	-	•	- (•	•	•	•	•	•	
	Plug-in (PM) IEC 35mm rail mounting adapters		<u> </u>	•	_	-	•	•	• -	-	_		-			
	CE marking	1-10	Self-declaration		claration	Self-declara	ation	Self-ded	claration	Self-	declara	ation	Self-	declara	ation	
	UKCA marking		Self-declaration		claration	Self-declara	ation		claration		declara			declara		
	CCC		Certified	Cer	tified	Certified	t		tified		Certified		(Certified	t	
l N	Marine use approval (☆:Certifie	d)	# ABC D\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	ДD ADC DAIM		☆	_	☆		☆		_	☆			
-	(NK, LR, ABS, DNV) Automatic tripping device		(LR, ABS, DNV) - Thermal-magnetic	(LR, ABS, DNV)	ve value detection)	Thermal-mag	notic	Electronic (effective	(o valuo dotootic=\		nal-mag	notic		nal-ma	anotic	
-	Trip button		Equipped		ipped	Equippe			pped		quippe			quippe		
Pag	e of Characteristics and dimens	sions	156		58	160			52		,pp0		66	,		
Notes	: *1 The operating character	istics a														

- *1 The operating characteristics are different between AC and DC.
 *2 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any two terminals except N-pole.
 When connected cables/busbars as shown on the right, maximum of 400VDC can be applied to 3-pole product and maximum of 500VDC to 4-pole product.

 - *3 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.
 *4 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any To Spole product, connect cables/busbals to any two terminals, and to 4-pole product, connect cables/busbals to any two terminals except N-pole.
 Not available for use with connection as shown on the right.
 Solid state relay output is available as an option. Specify if this contact output is required. Lead-wire terminal block (SLT) is equipped as standard. AS for flush plate type, an outline differs from a standard.
 Place an order with circuit breaker.
 No isolation function except 400A to 800A frame.

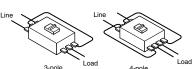

NF-S (Standard class) NF1250-SDW NF630-SEW NF800-SEW NF800-SDW NF1000-SEW NF1250-SEW NF1600-SEW NF1600-SDW 233 22 Adjustable 300 350 400 500 600 630 Adjustable 400 450 500 600 700 800 Adjustable 500 600 700 Adjustable 600 700 800 Adjustable 800 1000 1200 (700) 800 1000 1250 1600 800 900 1000 1000 1200 1250 1400 1500 1600 690 690 690 690 690 690 690 25/13 65/33 10/10 10/10 25/13 25/13 65/33 65/33 30/30 30/30 85/43 50/50 50/50 85/43 85/43 85/43 85/43 50/50 50/50 85/43 85/43 50/50 50/50 85/43 85/85 85/85 125/63 125/63 125/63 85/85 85/85 125/63 125/63 125/63 40/40 40/20 40/20 8 AC 8 AC 8 AC 8 AC 8 8 DC 8 DC 8 DC AC Yes Yes Yes Yes Yes Yes Yes Yes Available Available Available Available Available 6.000 4 000 4 000 3 000 3 000 3 000 3 000 3 000 500 500 1,000 500 500 500 500 500 7.6 9.6 20 at 0.1 20 at 0.1 20 at 0.1 3 3 3 Not Applicable Not Applicable Not Applicable 140 210 210 210 257 275 275 406 406 406 406 406 103 103 103 140 140 140 140 140 155 155 155 190 190 190 190 190 10.9 14.2 23.5 23.5 34.5 30.7 30.7 41.2 9.0 22.0 32.0 ●Busbar terminal ●Busbar terminal ●Busbar terminal Busbar terminal ●Busbar terminal ●Busbar termina Busbar termina Busbar termina Busbar terminal ●Bar stud ●Bar stud ●Bar stud Bar stud ●Bar stud Bar stud Bar stud Bar stud Bar stud Bar stud Bar stud (*3) ● (*3) • • • • ● (*3) ● (*3) (*3) • • **●** (*3) • **●** (*5) • (*5) • **●**(*6) ● (*6) **●** (*6) **●** (*6) ● (*6) • **●** (*6) ● (*6) ● (*6) ● (*6) ● (*6)

Self-declaration

Self-declaration

Certified

Electronic (effective value detection)

Equipped

Self-declaration

Self-declaration

Certified

Electronic (effective value detection)

Equipped

Self-declaration

Self-declaration

Thermal-magnetic

Equipped

Self-declaration

Self-declaration

Certified

Electronic (effective value detection

Equipped

Self-declaration

Self-declaration

magnetic

Equipped

Self-declaration

Certified

Equipped

Electronic (effective value detection) Electronic (effective value detection)

Self-declaration

Self-declaration

Certified

Equipped

Self-declaration

Self-declaration

Certified

Thermal-magnetic

Equipped

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.
2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.
3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

NF-L / NF-H / NF-R (High-performance class)

	Frame (A)		50		60		63		100		125		125		12		125	
	Model				NF63-H	IV				NF12	25-HV		NF125-L	GV	NF125	-HGV	NF125-RGV	
	Image										e acc							
Refere	Rated current In (A) nce ambient temperature 40°C (45°C f	or marine us		0	(60)		63		(15) 16 20 (3 50 (60) 63 (7	5) 80 100			16-20 20-25 32-40 35-50 53-80 70-100	45-63 90-125	16-20 20-2 32-40 35-3 53-80 70-10	50 45-63 00 90-125	16-20 20-25 25-32 32-40 40-50 50-63 63-80 80-100 100-125	
	Number of poles			4	2 3	4	2 3	4	2 3	4	2 3	4	2 3	4	2 3		2 3	
_	Rated insulation voltage U		690		690		690	_	690		690		690		69		690	
Rated short-circuit breaking capacities (kA)		690		_	2.5/2.5		2.5/2.		10/8		10/8		8/8		10/		-	
ije		500			7.5/7.5	•	7.5/7.		30/2		30/23		36/36		50/3		_	
ga		440			10/8		10/8		50/3		50/38		50/50		65/6		125/125	
- Bi	IEC 60947-2	AC 415			10/8		10/8		50/3		50/38		50/50		70/		150/150	
prea	EN 60947-2	400			10/8		10/8		50/3		50/38		50/50		75/		150/150	
ig.	(Icu/Ics)	380	/ 10/8		10/8		10/8		50/3	8	50/38	3	50/50		75/	75	150/150	
강		230	25/19		25/19		25/19)	100/7	' 5	100/7	5	90/90		100/	100	150/150	
%		200	25/19		25/19		25/19)	100/7	' 5	100/7	5	90/90		100/	100	150/150	
器		OC 250	7.5/7.5 (*5))	7.5/7.5 (*5)	7.5/7.5 ((*5)	_		_		20/20 (300)	/) (*2)	40/40 (30	0V) (*2)	_	
Rate	d impulse withstand voltage	Uimp (k\) 8		8		8		8		8		8		8		8	
	Current		AC/DC compatible	e (*1) A	AC/DC compati	ible (*1)	AC/DC compa	tible (*1)	AC		AC		AC/DC com	oatible	AC/DC co	mpatible	AC	
	Suitability for isolation		Yes	`	Yes		Yes		Yes	;	Yes		Yes		Ye		Yes	
	Reverse connection		Available		Availab	le	Availab	ole	Availa	ble	Availab	le	Availab	le	Availa	able	Available	
	Number of Without	current	15,000		15,000)	15,00	0	25,00	00	25,000	0	50,000)	50,0	000	50,000	
	erating cycles With curren				8,000		8,000		10,00		10,000		30,000		30,0		30,000	
_	Utilization category	,	Α		Α		Α		A		A		Α		A		Α	
	Pollution degree		3		3		3		3		3		3		3		3	
FMC	environment condition (environr	ent A or F		nle	Not Applic	ahle	Not Applic	rable	Not Appl	icable	Not Applic	able	Not Applic	ahle	Not App		Not Applicable	
	l. ca. i	a		100	50 75	100	50 75		90	120	90	120	105	140	105	140	105	
_ E	<u> </u>	b	130	100	130	100	130	100	130		130	120	165	140	16		165	
vera		C	68	-	68		68		68		68		68		68		68	
Overall dimensions (븨 웹		90		90		90		90		90		92		92		92	
-5		ca		20		10		1.0		110		1 1 0		0.0				
<u> </u>	Mass of front-face type (0.55 0.75		0.55 0.75		0.8 1.0		0.8 1.0	1.3	1.4 1.6	2.0	1.4 1.0		1.5 1.8	
and Su		(F) Page		inai		minai	●Screw te	rminai		erminai		rmınaı	•		•		●Screw terminal	
ectic sign	Solderless (BOX) terminal (•		•		•		•		•		•		•		•	
Installation a		(B) 98	●Round stu	ıa	●Round s	stua	●Round	stua	●Bar s	_	●Bar st		●Bar st	ua	●Bar		●Bar stud	
= -	<u> </u>	M)	0 (10)	_	• (±0)		- (40)		- (#2)	•	0 (40)	•	• (±0)		- (40)		• (40)	
e e		AL)	• (*3)	•	● (*3)	•	● (*3)	•	● (*3)	•	● (*3)	•	● (*3)	•	• (*3)	•	● (*3)	
15-5		(X) 115	• (*3)	•	• (*3)	•	• (*3)	•	• (*3)	•	• (*3)	•	• (*3)	•	• (*3)	•	• (*3)	
l a s		H1)	● (*3)	•	● (*3)	•	● (*3)	•	● (*3)	•	● (*3)	•	● (*3)	•	● (*3)	•	● (*3)	
Cassette-type accessories		VT)	• (*3)	•	● (*3)	•	● (*3)	•	● (*3)	•	● (*3)	•	● (*3)	•	● (*3)	•	● (*3)	
18 g	With lead-wire terminal block (S			•	•	•	•	•	•	•	•	•	•		•		•	
\vdash		AL) 122		\rightarrow											_		-	
1		(S)	•	-	•	-	•	-	•	-	•	-	•	-			-	
1	Enclosure Dustproof	(l) 137	•	-	•	-	•	-	•	-	•	-	•		•		-	
1	Waterproof		- •	-	- •	_	- •	-	•	-	•	-	•	_	•		-	
S	Electrical operation device (N			_			-		•	_	•		•		•		•	
je.	Mechanical Panel mount		•	•	•	•	•	•	•	•	•	•	•		•		•	
1 88	interlock (MI) (*4) Breaker moun	ing	•	-		-	•	-	•		•	-	•		•		•	
accessories	Lock cover LC		•	_			•		•		•		•		•		•	
	Handle lock HL	134	•	\perp	•		•		•		•		•		•		•	
na l	device HL-S		•		•		•		•		•		•		•)	•	
e.	External (F)	123	•		•		•		•		•		•		•)	•	
Exter	operating handle (V)		•		•		•		•		•		•		•		•	
1 -	Terminal cover (TC-L, TC-S, TTC, BTC, F			•	•	•	•	•	•	•	•	•	•		•)	•	
1		ST) 100	•		•		•		• •	•	• •	•	•		•)	-	
1		IVI)	•	•	•	•	•	•	• •	•	• •	•	•		•)	•	
\perp	IEC 35mm rail mounting adap	ers 143	•		•	_	•	_	_		_		_		-		-	
	CE marking		Self-declarati	ion	Self-declar		Self-decla	ration	Self-decla	aration	Self-declar		Self-declar		Self-dec	laration	Self-declaration	
	UKCA marking		Self-declarati	ion	Self-declar	ation	Self-decla	ration	Self-decla	ration	Self-declar	ration	Self-declar	ation	Self-dec	laration	Self-declaration	
	CCC		Certified		Certifie	d	Certifie	ed	Certifi	ed	Certifie	ed	Certifie	d	Certi	fied	Certified	
N	Marine use approval (☆:Ce	tified)			#	_			å				- ₹		☆		₹/2	
1	(NK, LR, ABS, DNV)	,	☆	-	M	_	☆	-	Ti Ti	-	☆	-	(LR, ABS, DNV)	-	(LR, ABS, DN	IV) -	(LR, ABS, DNV)	
	Automatic tripping device	е	Thermal-magn	netic -	Thermal-ma	gnetic	Thermal-ma	agnetic	Thermal-m	agnetic	Thermal-ma	gnetic	Thermal-ma	gnetic	Thermal-r	nagnetic	Thermal-magnetic	
	Trip button		Equipped		Equippe		Equipp		Equip		Equippe		Equippe		Equip		Equipped	
Pag	e of Characteristics and dir	nensions			146				7. 71		48		156		15		156	
_	s: *1 The operating chara			hwoon														
INOTES	s. I The operating chara	cieristics	are unierent pet	ween	IAC and DO	J.												


maximum of 600VDC to 4-pole product.

*3 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.

Not available for use with connection as shown on the right.

For HEV with PAL, it will be an exclusive item.

When ordering only the terminal cover, specify the model name with MP at the end.

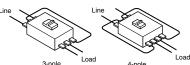

 ^{*1} The operating characteristics are different between AC and DC.
 *2 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any two terminals except N-pole.
 When connected cables/busbars as shown on the right, maximum of 500VDC can be applied to 3-pole product and maximum of 500VDC to 4-pole product.

No isolation function except 400A to 800A frame.
 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any two terminals except N-pole.

NF-L / NF-H / NF-R (High-performance class)

105		400		400		005		050		050		050		050	
125		160		160		225		250		250		250		250	
NF125-H	HEV	NF160-L	LGV	NF160-F	iGV		NF25	0-HV		NF250-L	GV	NF250-H	lGV	NF250-R	GV
	-				-		-	-							
11 390 361	1.301	1 2 1 2 1	(AS 1)	1 31 31	8.1			10 an		0.000	8.1	0.08 0.08 0	8.1	0.08 0.08 0	8.11
															100
		0 6	100	0 6	100		0	0 50		0 6	20	0 6	140	0 6	40
Assertion of the last	ace	Ann Complete	CONC	And the second	000		Anne III	7 700		And the state of t	588	Ann Company	100	And the second	100
130 B E	-58	25 E	SHE	147 E	300		20 图	SCH R		100 E	100	100 E	300		488
PHONE 1877		1000		1000			2200	E-12		1000	100	1000	100	1000	100
	- 9		-78		= 78		** 1 m	- 7			-78		=79		-79
	SELLA	P P P	TO 10	E E E	N 10		0 - 1			F F F	100	F F B	10 M	E E E	-
			tolice and		District Control			and the same				T	Acres 1	T	0.0
9-13-13				ووحواواحوا			9-13	EPTIP .		PER	٠,	10-21-31			7
Adjusta	hlo														
						125 150	160			125-160 14	0-200	125-160 14	0-200	125-160 160	0-200
16-32 32-63		125-16	60	125-16	60	175 200		250		175-25		175-25		200-250	
(1.6A step) (3.15A ste	ep) (6.25A step)					175 200 1	220			175-25		175-20	,0	200-230	5
3	4	2 3	4	2 3	4	2 3	4	2 3	4	2 3	4	2 3	4	2	3
					4		4		4		4		4		
690		690		690		690		690		690		690		690	
10/8	1	8/8		10/8		10/8		10/8		8/8		10/8		_	
			_												
50/38	8	36/36	6	50/38	3	50/38		50/38	3	36/36		50/38	3	_	
65/65	5	50/50	0	65/65	5	65/65		65/65	,	50/50		65/65	,	125/125	5
70/70		50/50		70/70		70/70		70/70		50/50		70/70		150/150	
 75/75	5	50/50	0	75/75	; T	75/75		75/75	;	50/50		75/75	,	150/150	0
75/75		50/50		75/75		75/75		75/75		50/50		75/75		150/150	
100/10	00	90/90	0	100/10	00	100/100	0	100/10	00	90/90		100/10	00	150/150	0
100/10		90/90		100/10		100/100		100/10		90/90		100/10		150/150	
	00										0 (1				J
_		20/20 (300	(V) (*2)	40/40 (300)	V) (*2)	40/40 (300V	(*2)	40/40 (300)	V) (*2)	20/20 (300\	(*2)	40/40 (300)	V) (*2)	_	
8		8		8		8		8		8		8		8	
					n n dile! -		ible /+41		Albin /+41		a a di la I -		makik ! -		
AC		AC/DC com		AC/DC com	patible	AC/DC compat	iibie (^1)		uidie (^1)	AC/DC com	Jatible	AC/DC com	patible	AC	
Yes	.	Yes		Yes		Yes		Yes		Yes		Yes		Yes	
Availab		Availal		Availab	ماد	Availabl	۵	Availab	مام	Availab	۵	Availab	مام	Availabl	١٥
25,00	00	40,00	10	40,00	0	25,000		25,000	U	25,000		25,000	U	25,000)
10,00	00	15,00	10	15,00	n	10,000)	10,000	n	10,000	1	10,000	n	10,000)
	,,,						-		0				<u> </u>		
A		A		A		A		Α		A		A		A	
3		3		3		3		3		3		3		3	
A		Not Appli	cable	Not Applic	rable	Not Applica	ahle	Not Applic	rable	Not Applic	ahle	Not Applic	rable	Not Applica	able
	115						_								ubio
105	140	105	140	105	140	105	140	105	140	105	140	105	140	105	
165		165		165		165		165		165		165		165	
68		68		68		68		68		68		68		68	
92		92		92		92		92		92		92		92	
 									2.0	1.4 1.6	2.0		1 00		1.8
1.7	2.2	1.4 1.6	2.0	1.4 1.6	2.0	1.4 1.6	2.0	1.4 1.6			2.0	1.4 1.6	2.0	1.5	1.0
1.7															
1.7 Screw terminal	Screw terminal	●Screw te		●Screw te		●Screw teri	minal	●Screw te	rminal	●Screw ter		1.4 1.6 ●Screw ter		●Busbar ter	
1.7															
1.7 Screw terminal	Screw terminal	●Screw te	erminal	•Screw te	rminal	Screw terr	minal	Screw te	rminal	Screw ter	minal	●Screw te	rminal	●Busbar ter	rminal
1.7 Screw terminal	Screw terminal Bar stud	●Screw te	erminal	●Screw te	rminal	Screw tern	minal •	●Screw te	rminal •		minal	Screw ter	rminal	●Busbar ter	rminal
1.7 Screw terminal Bar stud	Screw terminal Bar stud	Screw te	erminal	Screw te	rminal	Screw tern Bar stu	minal ud	Screw te	rminal •	Screw ter	minal ud	Screw ter Bar st	rminal	●Busbar ter ● ●Bar stu	rminal ud
1.7 Screw terminal	Screw terminal Bar stud	●Screw te	erminal	•Screw te	rminal	Screw tern	minal •	Screw te	rminal •	Screw ter	minal	Screw ter	rminal	●Busbar ter	rminal ud
1.7 Screw terminal Bar stud (*3)	Screw terminal Bar stud Graph	•Screw te	erminal etud	Screw te	rminal tud	Screw tern Bar stu (*3)	minal ud	•Screw te • •Bar st • • (*3)	rminal	Screw ter	minal ud	Screw tel	rminal tud	●Busbar ter ● Bar stu ● (*3)	rminal ud
1.7 Screw terminal Bar stud (*3) (*3)	Screw terminal Bar stud	•Screw te •Bar s • (*3) • (*3)	erminal etud	•Screw tel •Bar st • (*3) • (*3)	tud	• Screw tern • Bar stu • (*3) • (*3)	minal ud •	•Screw tel •Bar st • (*3) • (*3)	rminal	●Screw ter ●Bar str ● (*3) ● (*3)	minal ud	• Screw tel	rminal	●Busbar ter ●Bar stu ● (*3) ● (*3)	rminal ud
1.7	Screw terminal Bar stud	●Screw te ●Bar s ● (*3) ● (*3) ● (*3)	erminal etud	• Screw tel • Bar st • (*3) • (*3) • (*3)	tud •	• Screw tern • Bar stu • (*3) • (*3) • (*3)	minal ud •	●Screw tel ● Bar st ● (*3) ● (*3) ● (*3)	rminal	●Screw ter ● Bar str ● (*3) ● (*3) ● (*3)	minal ud	• Screw tel • Bar st • (*3) • (*3) • (*3)	rminal	●Busbar ter ●Bar stu ● (*3) ● (*3) ● (*3) ● (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3)	Screw terminal Bar stud	•Screw te •Bar s • (*3) • (*3)	erminal etud	•Screw tel •Bar st • (*3) • (*3)	tud	• Screw tern • Bar stu • (*3) • (*3)	minal ud •	•Screw tel •Bar st • (*3) • (*3)	rminal	●Screw ter ●Bar str ● (*3) ● (*3)	minal ud	• Screw tel	rminal	●Busbar ter ●Bar stu ● (*3) ● (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3)	Screw terminal Bar stud	●Screw te ●Bar s ● (*3) ● (*3) ● (*3) ● (*3)	erminal etud	•Screw te	tud •	• Screw teri • • • • • • • • • • • • • • • • • • •	minal ud •	Screw te Bar st (*3) (*3) (*3) (*3)	rminal tud •	• Screw ter • • • • • • • • • • • • • • • • • • •	minal ud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3) • (*3)	rminal	●Busbar ter ●Bar stu ● (*3) • (*3) • (*3) • (*3) • (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3)	Screw terminal Bar stud	•Screw te •Bar s • (*3) • (*3) • (*3) • (*3) • (*3)	erminal etud	•Screw te	tud •	• Screw tern • Bar stu • (*3) • (*3) • (*3) • (*3)	minal ud •	Screw te Bar st (*3) (*3) (*3) (*3) (*3)	rminal	• Screw ter • Bar str • (*3) • (*3) • (*3) • (*3) • (*3)	minal ud	●Screw ter ●Bar st ● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	rminal	●Busbar ter ●Bar stt ● (*3) ● (*3) ● (*3) ● (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3)	Screw terminal Bar stud	●Screw te ●Bar s ● (*3) ● (*3) ● (*3) ● (*3)	erminal etud	•Screw te	tud •	• Screw teri • • • • • • • • • • • • • • • • • • •	minal ud •	Screw te Bar st (*3) (*3) (*3) (*3)	rminal tud •	• Screw ter • • • • • • • • • • • • • • • • • • •	minal ud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3) • (*3)	rminal	●Busbar ter ●Bar stu ● (*3) • (*3) • (*3) • (*3) • (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3)	Screw terminal Bar stud	•Screw te •Bar s • (*3) • (*3) • (*3) • (*3) • (*3)	erminal etud	•Screw te	tud •	• Screw tern • Bar stu • (*3) • (*3) • (*3) • (*3)	minal ud •	Screw te Bar st (*3) (*3) (*3) (*3) (*3)	rminal tud •	• Screw ter • Bar str • (*3) • (*3) • (*3) • (*3) • (*3)	minal ud	●Screw ter ●Bar st ● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	rminal	●Busbar ter ●Bar stt ● (*3) ● (*3) ● (*3) ● (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3)	Screw terminal Bar stud Output	• Screw te	erminal etud	• Screw te	rminal	• Screw tern • • • • • • • • • • • • • • • • • • •	minal ud oud oud oud oud oud oud oud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3) • (*3) • (*3)	rminal tud •	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	minal ud	●Screw ter ●Bar st ● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	rminal	●Busbar ter ●Bar stu (*3) (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3)	Screw terminal Bar stud Output Outp	Screw te	erminal etud	• Screw te	tud	• Screw ten • Bar stt • (*3) • (*3) • (*3) • (*3)	minal oud oud oud oud oud oud oud ou	• Screw te	rminal	● Screw ter ■ Bar st ● (*3) ■ (*3) ■ (*3) ■ (*3) ■ (*3) ■ (*3)	minal ud	●Screw ter ●Bar st ● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	tud	Busbar ter Bar stt (*3) (*3) (*3) (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3)	Screw terminal Bar stud Output	• Screw te	erminal etud	• Screw te	rminal	• Screw tern • • • • • • • • • • • • • • • • • • •	minal ud oud oud oud oud oud oud oud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3) • (*3) • (*3)	rminal tud •	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	minal ud	●Screw ter ●Bar st ● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	rminal	●Busbar ter ●Bar stu (*3) (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3)	Screw terminal Bar stud Output Outp	Screw te	erminal etud	• Screw te	tud	• Screw ten • Bar stt • (*3) • (*3) • (*3) • (*3)	minal oud oud oud oud oud oud oud ou	• Screw te	rminal	● Screw ter ■ Bar st ● (*3) ■ (*3) ■ (*3) ■ (*3) ■ (*3) ■ (*3)	minal ud	●Screw ter ●Bar st ● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	tud	Busbar ter Bar stt (*3) (*3) (*3) (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te Bar s (*3) (*3) (*3) (*3)	erminal etud	• Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal ud o o o o o o o o o o o o o	• Screw te	rminal	• Screw ter • Bar str • (*3) • (*3) • (*3) • (*3)	minal ud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te Bar s (*3) (*3) (*3) (*3)	erminal etud	Screw te Bar st (*3) (*3) (*3) (*3)	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal oud oud oud oud oud oud oud ou	Screw te	minal Utud	Screw ter Bar st: (*3) (*3) (*3) (*3)	minal ud	• Screw tel • Bar st • (*3) • (*3) • (*3) • (*3)	tud	Busbar ter Bar stt (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te Bar s (*3) (*3) (*3) (*3)	erminal etud	• Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal ud o o o o o o o o o o o o o	• Screw te	rminal	• Screw ter • Bar str • (*3) • (*3) • (*3) • (*3)	minal ud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te Bar s (*3) (*3) (*3) (*3)	erminal etud	Screw te Bar st (*3) (*3) (*3) (*3)	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal oud oud oud oud oud oud oud ou	Screw te	minal Utud	• Screw ter • Bar str • (*3) • (*3) • (*3) • (*3)	minal ud	• Screw tel • Bar st • (*3) • (*3) • (*3) • (*3)	tud	Busbar ter Bar stt (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te	erminal etud	• Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3) (*3) (*4)	minal oud oud oud oud oud oud oud ou	• Screw te	minal Utud	• Screw ter • Bar str • (*3) • (*3) • (*3) • (*3)	minal ud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) (*3) (*4)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te	erminal etud	• Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal oud oud oud oud oud oud oud ou	• Screw te	minal Utud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	minal ud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te	erminal etud	• Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3) (*3) (*4)	minal oud oud oud oud oud oud oud ou	• Screw te	minal Utud	• Screw ter • Bar str • (*3) • (*3) • (*3) • (*3)	minal ud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) (*3) (*4)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te	erminal etud	• Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal oud oud oud oud oud oud oud ou	• Screw te	minal Utud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	minal ud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te	erminal etud	• Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal oud oud oud oud oud oud oud ou	Screw te	minal Utud	©Screw ter	minal ud	Screw ter Bar st (*3) (*3) (*3) (*3) (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te	erminal etud	• Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal oud oud oud oud oud oud oud ou	• Screw te	minal Utud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	minal ud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3)	Screw terminal Bar stud	• Screw te	erminal etud	• Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal ud	Screw te	minal tud	• Screw ter • Bar st • (*3) • (*3) • (*3) • (*3)	minal ud	Screw ter Bar st (*3) (*3) (*3) (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te	erminal etud	Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal Jud	Screw te	rminal tud	Screw ter Bar str (*3) (*3) (*3) (*3)	minal ud	Screw tel Bar st (*3) (*3) (*3) (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) (*3) (*3) (*3	rminal
1.7	Screw terminal Bar stud	Screw te	erminal etud	Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal Jud Jud Jud Jud Jud Jud Jud Ju	Screw te	rminal tud	©Screw ter	minal ud	Screw tel Bar st (*3) (*3) (*3) (*3) (*3) (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) (*3) (*3) (*3	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3)	Screw terminal Bar stud	Screw te	erminal etud	Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal Jud	Screw te	rminal tud	Screw ter Bar str (*3) (*3) (*3) (*3)	minal ud	Screw tel Bar st (*3) (*3) (*3) (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) (*3) (*3) (*3	rminal
1.7	Screw terminal Bar stud	Screw te	erminal etud	Screw te	tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal Jud Jud Jud Jud Jud Jud Jud Ju	Screw te	rminal tud	©Screw ter	minal ud	Screw tel Bar st (*3) (*3) (*3) (*3) (*3) (*3)	tud	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) (*3) (*3) (*3	rminal ud
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3) (*3) (*6) (*6)	© Screw terminal ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■	Screw te	erminal tud	• Screw te	rminal dud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal Jud Output Ou	Screw te	minal Lud	• Screw ter • Bar sta • (*3)	minal Jud	Screw ter Bar st (*3) (*3) (*3) (*3)	rminal dud	Busbar ter Bar stu (*3) (*3) (*3) (*3)	rminal
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3) (*6) (*6)	Screw terminal Bar stud	Screw te Bar s (*3) (*3) (*3) (*3) (*3)	erminal tud	Screw te	rminal tud	Screw ten Bar stu (*3) (*3) (*3) (*3) Self-declara	minal Jud Out Out Out Out Out Out Out O	• Screw te	rminal tud	• Screw ter • Bar str • (*3)	minal ud	• Screw tel • Bar st • (*3)	rminal tud	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) (*3) (*3) (*3	rminal ud
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3) (*6) (*6)	Screw terminal Bar stud	Screw te Bar s (*3) (*3) (*3) (*3) (*3)	erminal tud	• Screw te	rminal tud	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal Jud Out Out Out Out Out Out Out O	• Screw te	rminal tud	• Screw ter • Bar sta • (*3)	minal ud	• Screw tel • Bar st • (*3)	rminal tud	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) (*3) (*3) (*3	rminal ud
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*6) (*6) Self-decla Self-decla	Screw terminal Bar stud	Screw te Bar s (*3) (*3) (*3) (*3) (*3)	erminal tud	Screw te	ration ration	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal Jud Jud Jud Jud Jud Jud Jud Ju	Screw te	rminal tud	Screw ter Bar str (*3) (*3) (*3) (*3) (*3)	minal ud	Screw tel Bar st (*3) (*3) (*3) (*3) (*3) Self-declai Self-declai	ration ration	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) (*3) (*3) (*4)	rminal ud
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3) (*6)	Screw terminal Bar stud	Screw te Bar s (*3) (*3) (*3) (*3) (*3)	erminal tud	Screw te	ration ration	Screw ten Bar stu (*3) (*3) (*3) (*3) Self-declara	minal Jud Jud Jud Jud Jud Jud Jud Ju	• Screw te	rminal tud	• Screw ter • Bar str • (*3)	minal ud	• Screw tel • Bar st • (*3)	ration ration	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) (*3) (*3) (*3	rminal ud ud attion
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3) (*6)	Screw terminal Bar stud	Screw te Bar s (*3) (*3) (*3) (*3) (*3) Self-decla Self-decla Certific	erminal tud	Screw te	rration ration and	Screw ten Bar stu (*3) (*3) (*3) (*3) Self-declara Self-declara Certified	minal Jud Jud Jud Jud Jud Jud Jud Ju	Screw te	rminal tud	Screw ter Bar str (*3) (*3) (*3) (*3) (*3) Self-declar Self-declar Certifie	minal ud	Screw tel Bar st (*3) (*3) (*3) (*3) (*3) Self-declar Self-declar Certifice	rration ration and	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) Self-declars Self-declars Certifier	rminal ud ration ration d
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3) (*6)	Screw terminal Bar stud	Screw te Bar s (*3) (*3) (*3) (*3) (*3)	erminal tud	Screw te	rration ration and	Screw ten Bar stu (*3) (*3) (*3) (*3)	minal Jud Jud Jud Jud Jud Jud Jud Ju	Screw te	rminal tud	Screw ter Bar str (*3) (*3) (*3) (*3) (*3)	minal ud	Screw tel Bar st (*3) (*3) (*3) (*3) (*3) Self-declai Self-declai	rration ration and	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) (*3) (*3) (*4)	rminal ud ration ration d
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3) (*3) (*6) (*6) Self-decla Self-decla Certifie	Screw terminal Bar stud	Screw te	erminal tud	Screw te	ration ration and fig., DNV)	Screw ten Bar stu (*3) (*3) (*3) (*3) (*3) Self-declars Self-declars Certified	minal Jud Jud Jud Jud Jud Jud Jud Ju	Screw te	rminal	Screw ter Bar st (*3) (*3) (*3) (*3) (*3) Self-declar Self-declar Certifie	minal ud	Screw tel (*3) (*3) (*3) (*3) Self-declar Self-declar Certifie	ration ration and , DNV)	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) Self-declars Self-declars Certifier	rminal ud ration ration d , DNV)
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3) (*6) Self-decla Self-decla Certific (LR, ABS, DNV) Electronic (effective v	Screw terminal Bar stud	Screw te	erminal tud	Screw te Bar st (*3) (*3) (*3) (*3) (*3)	ration ration ed in DNV) agnetic	Screw ten Bar stu (*3) (*3) (*3) (*3) (*3) Self-declara Self-declara Certified	minal d d ation ation ation d	Screw te	ration ration agnetic	●Screw ter ●Bar str ●(*3) ●(*3) ●(*3) ●(*3) ●(*3) ●(*3) ●	minal d ation ation d DNV) gnetic	Screw tel (*3) (*3) (*3) (*3) (*3) (*3)	ration ration ded , DNV) agnetic	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) Self-declari Self-declari Certifier	rminal ud ation ation d , DNV)
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3) (*3) (*6) (*6) Self-decla Self-decla Certifie	Screw terminal Bar stud	Screw te	erminal tud	Screw te	ration ration ed in DNV) agnetic	Screw ten Bar stu (*3) (*3) (*3) (*3) (*3) Self-declars Self-declars Certified	minal d d ation ation ation d	Screw te	ration ration agnetic	Screw ter Bar st (*3) (*3) (*3) (*3) (*3) Self-declar Self-declar Certifie	minal d ation ation d DNV) gnetic	Screw tel (*3) (*3) (*3) (*3) Self-declar Self-declar Certifie	ration ration ded , DNV) agnetic	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) Self-declars Self-declars Certifier	rminal ud ation ation d , DNV)
1.7 Screw terminal Bar stud (*3) (*3) (*3) (*3) (*3) (*6) Self-decla Self-decla Certific (LR, ABS, DNV) Electronic (effective v	Screw terminal Bar stud Caracteristics Cara	Screw te	erminal tud	Screw te Bar st (*3) (*3) (*3) (*3) (*3)	ration ration ded control of the con	Screw ten Bar stu (*3) (*3) (*3) (*3) (*3) Self-declara Self-declara Certified	minal d d ation ation ation d	Screw te	ration ration agnetic	●Screw ter ●Bar str ●(*3) ●(*3) ●(*3) ●(*3) ●(*3) ●(*3) ●	minal d ation ation d DNV) gnetic	Screw tel (*3) (*3) (*3) (*3) (*3) (*3)	ration ration ded , DNV) agnetic ed	Busbar ter Bar stu (*3) (*3) (*3) (*3) (*3) Self-declari Self-declari Certifier	rminal ud ation ation d , DNV)

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.
2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.
3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

NF-H / NF-R (High-performance class)

_										
L	Frame (A)		250		00		30		00	
⊢	Model		NF250-HEV	NF400-HEW	NF400-REW	NF630-HEW	NF630-REW	NF800-HEW	NF800-REW	
	Image									
			PIPIPI	Sign		Selection of the select	Sign		4 4 4	
Re	Rated current In (A) reference ambient temperature 40°C (45°C for marin		Adjustable 80-160 (8A step 125-250 (12.5A step)	Adjustable 200 225 250 300 350 400	Adjustable 200 225 250 300 350 400	Adjustable 300 350 400 500 600 630	Adjustable 300 350 400 500 600 630	Adjustable 400 450 500 600 700 800	Adjustable 400 450 500 600 700 800	
	Number of poles		3 4	3 4	3	3 4	3	3 4	3	
	Rated insulation voltage Ui (V)		690	690	690	690	690	690	690	
	3 6	90V	10/8	35/18	-	35/18	-	15/15	-	
Ι,	<u>s</u>	500V	50/38	50/50	70/35	50/50	70/35	50/50	70/35	
-		140V	65/65	65/65	125/63	65/65	125/63	65/65	125/63	
		115V	70/70	70/70	125/63	70/70	125/63	70/70	125/63	
- [.	EN 60947-2	100V	75/75	70/70	125/63	70/70	125/63	70/70	125/63	
	(Icu/lcs)	380V	75/75	70/70	125/63	70/70	125/63	70/70	125/63	
- 1		230V	100/100	100/100	150/75	100/100	150/75	100/100	150/75	
- 1 :	8 2	V002	100/100	100/100	150/75	100/100	150/75	100/100	150/75	
		_	-	-	-	-	-	-	-	
<u> R</u>	Rated impulse withstand voltage Uimp	(kV)	8	8	8	8	8	8	8	
\vdash	Current		AC	AC	AC	AC Yes	AC Yes	AC	AC Yes	
\vdash	Suitability for isolation Reverse connection		Yes Available	Yes Available	Yes Available	Available	Available	Yes Available	Available	
		nt	25,000	6,000	6,000	6,000	6,000	4,000	4,000	
	Number of operating cycles With current (440)		10,000	1,000	1,000	1,000	1,000	500	500	
\vdash	Utilization category	VAC)	A	1,000 B	1,000 B	1,000 B	1,000 B	B	B	
h-	Rated short time with stand current lcu (kA) at	0.25c	_	5	5	7.6	7.6	9.6	9.6	
100	Pollution degree	0.235	3	3	3	3	3	3.0	3	
-	MC environment condition (environment A	or B)	A	A	A	A	A	A	A	
1		a a	105 140	140 185	140	140 185	140	210 280	210	
=		b	165	257	257	257	257	275	275	
ا ا		c	68	103	103	103	103	103	103	
	dimensions ()	ca	92	155	155	155	155	155	155	
F	Mass of front-face type (kg)		1.7 2.2	6.0 7.6	6.0	6.5 8.3	6.0	10.9 14.2	10.9	
5		Page	●Screw terminal	●Busbar terminal	●Busbar terminal	■Busbar terminal ■Busbar terminal	●Busbar terminal	●Busbar terminal ●Busbar terminal	●Busbar terminal	İ
Installation and	Solderless (BOX) terminal (SL)		• •		-		-		-	
1	Rear (B)	98	●Bar stud ●Bar stud	●Bar stud	●Bar stud	●Bar stud ●Bar stud	●Bar stud	●Bar stud ●Bar stud	●Bar stud	
1 2	Plug-in (PM)		• •	• •	•	• •	•	• •	•	
٥	Alarm switch (AL)		● (*1)	● (*1) ●	● (*1)	● (*1)	● (*1)	● (*1) ●	● (*1)	
duyt-att	Auxiliary switch (AX)	115	● (*1) ●	● (*1) ●	● (*1)	● (*1)	● (*1)	● (*1) ●	● (*1)	
1 ₫	Shunt trip (SHT)		● (*1)	● (*1)	● (*1)	● (*1) ●	● (*1)	● (*1) ●	● (*1)	
9	Undervoltage trip (UVT)		● (*1)	• •	•	• •	•	• •	•	
ق		120	• •	• •	- (40)	• (40)	0 (40)	• •	- (40)	
F	Pre-alarm (PAL)	122	•	● (*2)	● (*2)	● (*2)	● (*2)	● (*2)	● (*2)	
	Closed (S)	107		-	-	-	-	-	_	
	Enclosure Dustproof (I) Waterproof (W)	137	• - • -	-	_		-		_	
		140	•	● (*3)	● (*3)	● (*3)	● (*3)	● (*3)	● (*3)	
	Mechanical Panel mounting		• •	• •	• (3)	• •	• (5)	• •	•	
	Mechanical interlock (MI) (*4) Breaker mounting Lock cover LC Handle lock HL	136	• -	-	•	• -	•	• -	•	
	Lock cover LC		•				-		-	
ı	Handle lock HL	134	•	•	•	•	•	•	•	
- -	device HL-S		•	•	•	•	•	•	•	
	E External (F)	123	•	•	•	•	•	•	•	
- []	operating handle (V)	123	•	•	•	•	•	•	•	
	Terminal cover (TC-L, TC-S, TTC, BTC, PTC)	128	● (*5) ● (*5)	• •	•	• •	•	•	•	
-	Rear stud (B-ST)	100	• •	•	•	• •	•	• •	•	
	Plug-in (PM)		• •	•	•		-	•	•	
L		143	-	-	-	-	-	_	-	
L	CE marking		Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
\perp	UKCA marking		Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
\vdash	CCC	$\overline{}$	Certified	Certified	Certified	Certified	Certified	Certified	Certified	-
	Marine use approval (☆:Certified))	∥ B ADC DNIΛΩ -	☆ -	ជំ	☆ -	☆	☆ -	ជំ	
\vdash	(NK, LR, ABS, DNV)		(LR, ABS, DNV)							-
\vdash	Automatic tripping device			Electronic (effective value detection)					Electronic (effective value detection) Equipped	-
	Trip button Page of Characteristics and dimension	one	Equipped 158	Equipped 162	Equipped 162	Equipped 168	Equipped 168	Equipped 170	Equipped 170	
_	otes: *1 This accessory is cassette	_						170	170	


- Notes: *1 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.

 *2 Solid state relay output is available as an option. Specify if this contact output is required. Lead-wire terminal block (SLT) is equipped as standard.

 *3 Place an order with circuit breaker.

 *4 No isolation function except 400A to 800A frame.

 *5 For HEV with PAL, it will be an exclusive item.
 When ordering only the terminal cover, specify the model name with MP at the end.

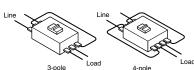

NF-U (Ultra current-limiting class) 250 NF125-UV NF250-UV NF400-UEW NF800-UEW 1-1-E Adjustable 200 225 250 15 20 30 40 50 60 75 100 125 Adjustable 400 450 500 125 150 175 200 225 250 300 350 400 600 700 800 690 690 690 690 10/10 35/35 170/170 200/200 200/200 170/170 200/200 AC AC Yes Available Yes Yes Yes Available Available Available 25.000 25,000 6,000 4,000 10 000 10.000 1 000 500 В Α Α 9.6 3 Not Applicable Not Applicable 90 120 140 140 280 210 280 240 191 297 322 322 200 68 68 200 92 90 252 252 3.7 27.6 33.7 1.35 19 2.5 16.2 25.4 1.5 ●Busbar terminal Screw terminal Screw terminal Busbar terminal ●Bar stud ●Bar stud ●Bar stud ●Bar stud ●Bar stud • (*1) • (*1) ● (*1) ● (*1) ● (*1) • (*1) • (*1) ● (*1) ● (*1) (*1) ● (*1) • (*2) (*2) **●** (*3) • (*3) Self-declaration Self-declaration Self-declaration Self-declaration Self-declaration Self-declaration Self-declaration Self-declaration

Thermal-magnetic

Equipped

Thermal-magnetic

Equipped 154

Electronic (effective value detection)

Equipped 164

Electronic (effective value detection)

Equipped 174

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.
2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.
3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

NV-C (Economy class) Harmonic Surge Ready

											J
	Frame (A)		5	50		0	(3	100	125	
<u> </u>	Model				NV6	3-CV			NV12	25-CV	
	lmage								Za ·		
	Rated current In (A)		(5) (10) (15	5) 16 20 25	(0	0)		20	(00) 00 (75) 00 100	405	
Re	eference ambient temperatur	re 40°C	(30) 32	2 40 50	`	0)		33	(60) 63 (75) 80 100	125	
	Number of poles		2	3	2	3	2	3	3	3	
	Phase line (*1)		1 <i>∲</i> 2W	3φ3W, 1φ3W, 1φ2W	1 <i>ϕ</i> 2W	3φ3W, 1φ3W, 1φ2W	1 <i>∲</i> 2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	
	d operational voltage Ue (V) (*2) AC	100-240	100-440	100-240	100-440	100-240	100-440	100-440	100-440	
High-speed type	Rated current sensitivity	(mA)	30	30,100/200/500 selectable	30	30,100/200/500 selectable	30	30,100/200/500 selectable	30,100/200/500 selectable	30,100/200/500 selectable	
lëβ≥	Max. operating time (s)	at I∆n at 5I∆n		.04	0	.1 04		.1	0.1 0.04	0.1 0.04	
<u>₹</u>	Rated current sensitivity	(mA)		-		-		-	(100/200/500 selectable)	(100/200/500 selectable)	
Time-delay type	Max. operating time (s)	(*3)		_				_	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)	
- III	Internal non-operating (s) (_		_		_	(0.1/0.5/1.0)	(0.1/0.5/1.0)	
	h leakage protection charact					e A				pe A	
Eart	h leakage indication system		Mechanical	type (button)	Mechanical	type (button)	Mechanical	type (button)	Mechanical type (button)	Mechanical type (button)	
Rated short-circuit breaking capacities (kA)		440V	-	2.5/2.5	_	2.5/2.5	-	2.5/2.5	10/5	10/5	
dies (i	IEC 60947-2	415V	-	2.5/2.5	_	2.5/2.5	-	2.5/2.5	10/5	10/5	
hort	EN 60947-2	AC 400V		5/5	-	5/5	-	5/5	10/5	10/5	
ted s	(lcu/lcs)	230V 200V		5/7.5 5/7.5		/7.5 /7.5		/7.5 /7.5	30/15 30/15	30/15 30/15	
문출		100V		5/7.5		7.5 7.5		77.5	30/15	30/15	
	d impulse withstand voltage			6		5		6	6	6	
- idio	Current	Jp ()		AC	A			C	AC	AC	
	Suitability for isolation		Y	'es		es		es	Yes	Yes	
Re	everse connection (below 23	30VAC)	Ava	ilable	Avai	lable	Ava	ilable	Available	Available	
	Number of Without			,000		000		000	10,000	10,000	
ор	erating cycles With cu	urrent		000		000		000	6,000	6,000	
<u> </u>	Utilization category			A		A		A	A	A	
EMC	Pollution degree environment condition (environm	ant A or D\		2 A		<u>2</u> A		2 A	2 A	2 A	
		a a		75		5		75	90	90	
ll lil	a ca	b		30		30		30	130	130	
Overall dimensions (mm)		C		68		8		88	68	68	
l iii		ca	9	90	9	0	9	90	90	90	
	Mass of front-face type (k		0.7	0.75	0.7	0.75	0.7	0.75	1.0	1.0	
Installation and connections		(F) Page	●Screw	terminal	●Screw	terminal		terminal	●Screw terminal	●Screw terminal	
ation	Solderless (BOX) terminal (S		• • •		• • • • • • • • • • • • • • • • • • • •	- district		-	- 	- -	
Sonr		(B) 98 (M)		nd stud		nd stud		nd stud	●Bar stud	●Bar stud	
		AL)		(*4)	•	(* <u>4</u>)		(*4)	● (*4)	• (*4)	
l g s		X		(*4)		(*4)		(*4)	● (*4)	● (*4)	
e-t-i		HT) 115		(*4)		(*4)		(*4)	• (*4)	• (*4)	
sett	Undervoltage trip (U)	VT)		(*4)		(*4)		(*4)	• (*4)	● (*4)	
Cassette-type accessories	With lead-wire terminal block (SI			•				•	•	•	
		BM) 121		(*5)		(*5)		(*5)	● (*5)	● (*5)	
		(S)		_					_	_	
	Enclosure Dustproof Waterproof ((I) 137		-		-		-	-	-	
	Electrical operation device (NF			_					•	•	
ies	Mechanical Panel mounti	ing 400		•				•	•	•	
Sor	interlock (MI) (*7) Breaker mount	136		•				•	•	•	
l ses	Lock cover LC			•				•	•	•	
External accessories	Handle lock HL	134		•	(•	•	•	
nal	device HL-S			•		•		•	•	•	
xte	External (F) operating handle (V)	123		•		<u> </u>		•	•	•	
<u>û</u>	Terminal cover (TC-L, TC-S, TTC, BTC, P	TC) 128		•				•	•	•	
	Rear stud (B-	ST) 100		•				•	•	•	
		IVI)		_		_		_	-	-	
	IEC 35mm rail mounting adapt	ers 143		•				•	-	-	
	CE marking			claration	Self-ded			claration	Self-declaration	Self-declaration	1
-	UKCA marking			claration		claration		claration	Self-declaration	Self-declaration	
-	CCC Marine use approval (☆:Cer	tified\		tified		ified	Cer	tified	Certified	Certified	
'	warine use approvai (☆:Ceri (NK, LR, ABS, DNV)	uneu)		-		-		-	_	_	
	Automatic tripping devic	e	Thermal	-magnetic	Thermal-	magnetic	Thermal	-magnetic	Thermal-magnetic	Thermal-magnetic	1
	Trip button			ipped	Equi	pped		ipped	Equipped	Equipped	
Pag	ge of Characteristics and dim	nensions				34				86	

- Notes: *1 When using 3-pole earth-leakage circuit breakers for 1-phase 2-wire system, connect cables/busbars to left and right poles, not to center pole. When using 1-phase 3-wire system, connect neutral conductor to center pole of earth leakage circuit breaker.

 *2 For time-delay type, the rated voltage is 200-440VAC.

 *3 When the operating time are 0.45, 1.0 and 2.0 seconds, the Earth Leakage circuit breaker operates between 0.15 and 0.45 seconds, between 0.6 and 1.0 seconds and between 1.2 and 2.0 seconds respectively.

 - breaker operates between 0.15 and 0.45 security, petween 0.0 and 1.0 security and between 1.2 and 2.0 seconds respectively.

 *4 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.

 *5 Standard type is SLT equipped.

- *6 Place an order with circuit breaker.
- *7 No isolation function except 400A to 630A frame.
 *8 AC100V does not acquire the CCC certification.

NV-C (Economy class) Harmonic Surge Ready

005	050	100	1 000	200
225	250	400	600	630
NV25	50-CV	NV400-CW	NV63	0-CW
72.75	- 19 - 19	9.9.9	FI	9 69
		90.00.02	90	ILIE.
		0.0.0	0.0	
			**************************************	• • •
D. Committee			-	
Charles Park	6	磁 四 終 日	10 m	3
		438		
DELL'AR		25.	25.00	and I
in n				• 00 A
	m 1	1010101	igie	
9-19-1	er e			9 89
125 150 175 200 225	250	250 300 350 400	500 600	(630)
	_	_		
3	3	3	3	3
3ø3W, 1ø3W, 1ø2W	0 +0/1/ 1 +0/1/ 1 +0/1/	0 +0/4/ 1 +0/4/ 1 +0/4/	0.40/1/ 1.40/1/ 1.40/1/	0 +0/4/ 1 +0/4/ 1 +0/4/
3φ3νν, 1φ3νν, 1φ2νν	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W
100-440	100-440	100-440	200-440	200-440
30,100/200/500	30,100/200/500	(30),100/200/500		
			_	_
selectable	selectable	selectable		
0.1	0.1	0.1	_	_
0.04	0.04	0.04	_	_
			1	
 (100/200/500 selectable)	(100/200/500 selectable)	(100/200/500 selectable)	(100/200/500 selectable)	(100/200/500 selectable)
 (0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)
(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)
	e A	Type AC		e AC
Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)
15/12	15/12	25/13	36/18	36/18
25/19	25/19	36/18	36/18	36/18
 25/19	25/19	36/18	36/18	36/18
36/27	36/27	50/25	50/25	50/25
36/27	36/27	50/25	50/25	50/25
36/27	36/27	50/25	_	_
			l.	
6	6	8	8	8
AC	AC	AC	AC	AC
Yes	Yes	Yes	Yes	Yes
Available	Available	Available	Available	Available
8,000	8,000	6,000	6,000	6,000
4,000	4,000	1,000	1,000	1,000
·				
A	A	A	A	A
2	2	3	3	3
A	A	A	A	A
		A 140	A 140	
A 105	A 105	A 140	A 140	A 140
A 105 165	A 105 165	A 140 257	A 140 257	A 140 257
A 105 165 68	A 105 165 68	A 140 257 103	A 140 257 103	A 140 257 103
A 105 165	A 105 165	A 140 257	A 140 257	A 140 257
A 105 165 68 92	A 105 165 68 92	A 140 257 103 134	A 140 257 103 155	A 140 257 103 155
A 105 165 68 92 1.7	A 105 165 68 92 1.7	A 140 257 103 134 6.1	A 140 257 103 155 6.9	A 140 257 103 155 6.9
A 105 165 68 92	A 105 165 68 92	A 140 257 103 134	A 140 257 103 155	A 140 257 103 155
A 105 165 68 92 1.7	A 105 165 68 92 1.7	A 140 257 103 134 6.1	A 140 257 103 155 6.9	A 140 257 103 155 6.9
A 105 165 68 92 1.7 • Screw terminal	A 105 165 68 92 1.7 ●Screw terminal	A 140 257 103 134 6.1 ●Busbar terminal	A 140 257 103 155 6.9 ■Busbar terminal	A 140 257 103 155 6.9 ●Busbar terminal
A 105 165 68 92 1.7 •Screw terminal - •Bar stud	A 105 165 68 92 1.7 ●Screw terminal	A 140 257 103 134 6.1 ●Busbar terminal - ●Bar stud	A 140 257 103 155 6.9 ●Busbar terminal — ●Bar stud	A 140 257 103 155 6.9 Busbar terminal — Bar stud
A 105 165 68 92 1.7 •Screw terminal - •Bar stud	A 105 165 68 92 1.7 • Screw terminal • Bar stud	A 140 257 103 134 6.1	A 140 257 103 155 6.9 ●Busbar terminal ●Bar stud	A 140 257 103 155 6.9 Busbar terminal — Bar stud —
A 105 165 68 92 1.7 •Screw terminal - •Bar stud	A 105 165 68 92 1.7 ●Screw terminal	A 140 257 103 134 6.1 ●Busbar terminal - ●Bar stud	A 140 257 103 155 6.9 ●Busbar terminal — ●Bar stud	A 140 257 103 155 6.9 Busbar terminal — Bar stud
A 105 165 68 92 1.7 • Screw terminal - • Bar stud • (*4)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • • •(*4)	A 140 257 103 134 6.1	A 140 257 103 155 6.9 ●Busbar terminal - ●Bar stud ● (*4)	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4)
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • (*4) • (*4)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4)	A 140 257 103 155 6.9 ●Busbar terminal - ●Bar stud ● (*4) ● (*4)	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4)
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4)	A 140 257 103 134 6.1	A 140 257 103 155 6.9	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4)
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • (*4) • (*4)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4)	A 140 257 103 155 6.9 ●Busbar terminal - ●Bar stud ● (*4) ● (*4)	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4)
A 105 165 68 92 1.7 • Screw terminal - • Bar stud • (*4) • (*4) • (*4)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • (*4) •(*4) •(*4)	A 140 257 103 134 6.1 ●Busbar terminal - ●Bar stud ● (*4) ● (*4) ● (*4) ● (*4)	A 140 257 103 155 6.9 ●Busbar terminal ●Bar stud ● (*4) ● (*4) ● (*4)	A 140 257 103 155 6.9
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4)	A 140 257 103 134 6.1	A 140 257 103 155 6.9 Busbar terminal - Bar stud ('4) ('4) ('4) ('4)	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*4)
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*5)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*4) (*4) (*5)	A 140 257 103 155 6.9 ■Busbar terminal - ■Bar stud ■ (*4) ■ (*4) ■ (*4) ■ (*4) ■ (*5)	A 140 257 103 155 6.9 Busbar terminal Bar stud ('4) ('4) ('4) ('4) ('4) ('5)
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4)	A 140 257 103 134 6.1	A 140 257 103 155 6.9 Busbar terminal - Bar stud ('4) ('4) ('4) ('4)	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*4)
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*5)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*4) •(*5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*4) (*4) (*5)	A 140 257 103 155 6.9 ■Busbar terminal - ■Bar stud ■ (*4) ■ (*4) ■ (*4) ■ (*4) ■ (*5)	A 140 257 103 155 6.9 Busbar terminal Bar stud ('4) ('4) ('4) ('4) ('4) ('5)
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5)	A 105 165 68 92 1.7 ●Screw terminal - ●Bar stud ● (*4) ● (*4) ● (*4) ● (*4) ● (*5)	A 140 257 103 134 6.1	A 140 257 103 155 6.9	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*4) (*5) -
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - -	A 140 257 103 155 6.9 ●Busbar terminal - ●Bar stud ● (*4) ● (*4) ● (*4) ● (*5)	A 140 257 103 155 6.9 Busbar terminal Bar stud (*4) (*4) (*4) (*4) (*5) (*5)
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5)	A 105 165 68 92 1.7 ●Screw terminal - ●Bar stud ● (*4) ● (*4) ● (*4) ● (*4) ● (*5)	A 140 257 103 134 6.1	A 140 257 103 155 6.9	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*4) (*5) -
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - -	A 140 257 103 155 6.9 ●Busbar terminal - ●Bar stud ● (*4) ● (*4) ● (*4) ● (*5)	A 140 257 103 155 6.9 Busbar terminal Bar stud (*4) (*4) (*4) (*4) (*5) (*5)
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5)	A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*4) (*5)	A 140 257 103 134 6.1	A 140 257 103 155 6.9	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*5) - - (*6)
A 105 165 68 92 1.7 ●Screw terminal - ●Bar stud ● (*4) ● (*4) ● (*4) ● (*4) ● (*5) ●	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • ('4) • ('4) • ('4) • ('4) • ('4) • ('5) •	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6)	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*4) (*5) (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6)
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5)	A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*4) (*5)	A 140 257 103 134 6.1	A 140 257 103 155 6.9	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*5) - - (*6)
A 105 165 68 92 1.7 ●Screw terminal - ●Bar stud ● (*4) ● (*4) ● (*4) ● (*4) ● (*5) ●	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • ('4) • ('4) • ('4) • ('4) • ('4) • ('5) •	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6)	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*4) (*5) (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6)
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5) •	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5) • • • • • • • • • • • • • • •	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - (*5) - - (*6) - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - (*5) - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*4) (*5) - - (*6)
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*4) (*5)	A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5)	A 140 257 103 134 6.1	A 140 257 103 155 6.9	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*4) (*5) - (*6) (*6)
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5) •	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5) • • • • • • • • • • • • • • •	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - (*5) - - (*6) - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - (*5) - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*4) (*5) - - (*6)
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*5) • • • • • • • • • • • • • •	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*5) - - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*5) - - (*6)
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*5) • • • • • • • • • • • • •	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*5) • • • • • • • • • • • • •	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6)	A 140 257 103 155 6.9 ■Busbar terminal - ■Bar stud ● (*4) ● (*4) ● (*4) ● (*5)	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*5) - - (*6) (*6)
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5) • • • • • • • • • • • • • • •	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6) - - (*6) - - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6) (*6)	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*4) (*5) - (*6)
A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*5) • • • • • • • • • • • • •	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*5) • • • • • • • • • • • • •	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6)	A 140 257 103 155 6.9 ■Busbar terminal - ■Bar stud ● (*4) ● (*4) ● (*4) ● (*5)	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*5) - - (*6) (*6)
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*4) •(*5) • • • • • • • • • • • • • • •	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6) - - (*6) - - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6) (*6)	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*5) - (*6) (*6)
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*5)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*5) • • • • • • • • • • • • • •	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*5) - - - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*5) - - - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*5) - - (*6) (*6)
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6) - - - - - - - - - - - - -	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) (*6)	A 140 257 103 155 6.9
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*5)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*5) • • • • • • • • • • • • • •	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*5) - - - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*5) - - - - (*6)	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*5) - - (*6) (*6)
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5)	A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6) - - Self-declaration	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6) - Self-declaration	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*4) (*5) - - (*6) Self-declaration
A 105 165 68 92 1.7 ● Screw terminal	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - - Self-declaration Self-declaration	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - - Self-declaration Self-declaration	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*5) - - (*6) Self-declaration Self-declaration
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5)	A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6) - - Self-declaration	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - (*6) - Self-declaration	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*4) (*5) - - (*6) Self-declaration
A 105 165 68 92 1.7 Screw terminal - Bar stud (*4) (*4) (*4) (*4) (*5) - - - TÜV approval Self-declaration Certified	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • ('4) • ('4) • ('4) • ('4) • ('5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - Self-declaration Self-declaration Certified	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*5) Self-declaration Self-declaration Certified	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*5) - - - (*6) Self-declaration Self-declaration Certified
A 105 165 68 92 1.7 ● Screw terminal	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • •(*4) •(*4) •(*4) •(*5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - - Self-declaration Self-declaration	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - - Self-declaration Self-declaration	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*5) - - (*6) Self-declaration Self-declaration
A 105 165 68 92 1.7	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • ('4) • ('4) • ('4) • ('4) • ('5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - Self-declaration Self-declaration Certified	A 140 257 103 155 6.9 Busbar terminal - Bar stud ('4) ('4) ('4) ('5) Self-declaration Self-declaration Certified -	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*5) - - - (*6) Self-declaration Self-declaration Certified
A 105 165 68 92 1.7 ● Screw terminal - ● Bar stud ● ● (*4) ● (*4) ● (*4) ● (*5)	A 105 165 68 92 1.7	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - Self-declaration Self-declaration Certified - Thermal-magnetic	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) Self-declaration Self-declaration Certified - Thermal-magnetic	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*5) (*6) - Self-declaration Self-declaration Certified - Thermal-magnetic
A 105 165 68 92 1.7 ● Screw terminal - ● Bar stud ● ● (*4) ● (*4) ● (*4) ● (*5)	A 105 165 68 92 1.7	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - Self-declaration Self-declaration Certified - Thermal-magnetic	A 140 257 103 155 6.9 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) Self-declaration Self-declaration Certified - Thermal-magnetic	A 140 257 103 155 6.9 Busbar terminal - Bar stud - (*4) (*4) (*4) (*5) (*6) - Self-declaration Self-declaration Certified - Thermal-magnetic
A 105 165 68 92 1.7 ● Screw terminal - ● Bar stud ● (*4) ● (*4) ● (*4) ● (*5)	A 105 165 68 92 1.7 •Screw terminal - •Bar stud • ('4) • ('4) • ('4) • ('4) • ('5)	A 140 257 103 134 6.1 Busbar terminal - Bar stud (*4) (*4) (*4) (*5) - - - Self-declaration Self-declaration Certified	A 140 257 103 155 6.9 Busbar terminal - ■Bar stud ● (*4) ● (*4) ● (*4) ● (*5)	A 140 257 103 155 6.9 Busbar terminal - (*4) (*4) (*4) (*5) - - - (*6) Self-declaration Self-declaration Certified

ge range	Available voltage rang	Applicable circuit voltage	Rated operational voltage	4.
1V	85-264V	100/110/200/220/230/240V	100-240V	
1V	85-484V	100/110/200/220/240/254/265/380/400/415/440V	100-440V	
1V	170-484V	200/220/240/254/265/380/400/415/440V	200-440V	
2	170-48	200/220/240/254/265/380/400/415/440V	200-440V	

<sup>Remarks: 1. Products with rated current parenthesized are produced when an order is placed.
2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.
3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.</sup>

NV-S (Standard class) Harmonic Surge Ready

	Frame (A)			30	32	50	60	63	100	125	125	
	Model Image			NV32-SV		NV63-SV			NV12	25-SV	NV125-SEV	
l _	Rated current In (1000	(5) 6 10 (15)	(32)	(5) (10) (15) 16 20	(60)	63	(15) 16 20 (30) 32 40 50	125	Adjustable 63-125	
H	eference ambient temper Number of poles		10°C	16 20 25 (30) 3	3	25 (30) 32 40 50	3	3	(60) 63 (75) 80 100 (*3) 3 4	3 4	(6.25A step) 3 4	
Potr	Phase line (*1)		AC	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W 100-440	3φ3W, 1φ3W, 1φ2W	3 <i>φ</i> 3W, 1 <i>φ</i> 3W, 1 <i>φ</i> 2W 100-440 200-440	3φ3W, 1φ3W, 1φ2W 100-440 200-440	3φ3W, 1φ3W, 1φ2W 100-440	
D D	ed operational voltage de (30,100/200/500	30,100/200/500	30,100/200/500	30.100/200/500	30,100/200/500	30,100/200/500	30,100/200/500	(30),100/200/500	
High-speed	Rated current sensitivit	y (r	mA)	selectable	selectable	selectable	selectable	selectable	selectable	selectable	selectable	
<u>-</u>	Max. operating time (s		l∆n	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	
I ≳	Rated current sensitivit	' at	5l <u>∆</u> n nA)	0.04	0.04	0.04	0.04	0.04	0.04 (100/200/500cologtable)	0.04 (100/200/500selectable)	0.04 (100/200/500selectable)	
ne-delay tvne	Max. operating time (s		(*4)		_	_		_		(0.45/1.0/2.0selectable)		
lë f	Internal non-operating (s			-	-	-	-	-	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	
	th leakage protection cha		stic		e A		Type A			e A	Type A	
Earl	th leakage indication syst	tem	4401/		Mechanical type (button)		Mechanical type (button)			Mechanical type (button)	Mechanical type (button)	
KA KI	5		440V 415V	5/5 5/5	5/5 5/5	7.5/7.5 7.5/7.5	7.5/7.5 7.5/7.5	7.5/7.5 7.5/7.5	25/25 30/30	25/25 30/30	36/36 36/36	
T-Cife	IEC 60947-2 EN 60947-2 (Icu/Ics)	1	400V	5/5	5/5	7.5/7.5	7.5/7.5	7.5/7.5	30/30	30/30	36/36	
dsh	EN 60947-2	AC	230V	10/10	10/10	15/15	15/15	15/15	50/50	50/50	85/85	
ak is	(100/100)		200V	10/10	10/10	15/15	15/15	15/15	50/50	50/50	85/85	
Dot	5 ed impulse withstand volta	a Llin	100V	10/10 6	10/10	15/15 6	15/15 6	15/15 6	50/50 –	50/50 -	85/85 6	
Hale	Current	ige Uiri	ip (kv)	AC	6 AC	AC	AC	AC	6 AC	6 AC	AC	
	Suitability for isolat	ion		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
R	everse connection (below			Available	Available	Available	Available	Available	Available	Available	Available	
0.0		out cur		10,000	10,000	15,000	15,000	15,000	25,000	25,000	25,000	
ok	perating cycles Wit Utilization catego	th curre	ent	6,000 A	6,000 A	8,000 A	8,000 A	8,000 A	10,000 A	10,000 A	10,000 A	
Rate	ed short time withstand current		at 0.25s	_	-	-	_	_	_	_	-	
-	Pollution degree			2	2	2	2	2	2	2	2	
	environment condition (envir			Α	Α	Α	Α	Α	Α	Ą	A	
Overall dimensions (mm)	<u>a</u> <u>ca</u> <u>ca</u>		a	75	75	75	75	75	90 120	90 120	105 140	
Overal		1	b c	130 68	130 68	130 68	130 68	130 68	130 68	130 68	165 68	
ij.			ca	90	90	90	90	90	90	90	92	
	Mass of front-face typ			0.75	0.75	0.75	0.8	0.8	1.1 1.4	1.1 1.4	1.9 2.5	
and sud	Front connection	(F)	Page	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	•	
Installation	Solderless (BOX) termina Rear	(SL) (B)	98	− •Round stud	− •Round stud	Round stud	− •Round stud	Round stud	●Bar stud	– ●Bar stud	– ●Bar stud	
hsta	Plug-in	(PM)	- 50	•	•	•	•	•	• Dai staa	• Dai staa	• Dai staa	
Φ "	Alarm switch	(AL)		● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5) ●	
-type	Auxiliary switch	(AX)	115	● (*5)	● (*5)	● (*5)	• (*5)	• (*5)	• (*5) •	● (*5) ●	● (*5) ●	
ette	Shunt trip Undervoltage trip	(SHT)		● (*5) ● (*5)	● (*5) ● (*5)	● (*5) ● (*5)	● (*5) ● (*5)	● (*5) ● (*5)	● (*5) ● ● (*5) ●	● (*5) ● ● (*5) ●	● (*5) ● ● (*5) ●	
Cassette	With lead-wire terminal block		120	•	•	•	•	•	• •	• •	•	
o "	Test button module	(TBM)		● (*6)	● (*6)	● (*6)	• (*6)	● (*6)	● (*6)	● (*6)	● (*6)	
	Closed	(S)	46=	-	-	-	-	-	-	-	• -	
	Enclosure Dustproof Waterproof		137		-	-	-	_	-		• -	
	Electrical operation device		140	_	_	_	_	_	•	•	•	
ries	Mechanical Panel mo	unting	136	•	•	•	•	•	• •	• •	•	
accessories	interlock (MI) (*8) Breaker mo		130	•	•	•	•	•	-	• -	-	
8	Lock cover LC Handle lock HL		134	•	•	•	•	•	•	•	•	
<u>a</u>	device HL-S	3	134	-	•	•	•	•	•	•		
External	External (F)		123	•	•	•	•	•	•	•	•	
X	operating handle (V)			•	•	•	•	•	•	•	•	
	Terminal cover (TC-L, TC-S, TTC, B Rear stud	TC, PTC) (B-ST)	128	•	•	•	•	•	•	•	•	
	Plug-in	(B-S1)	100	<u> </u>	_	_	-	_	_	-	_	
	IEC 35mm rail mounting a		143	•	•	•	•	•	-	_	_	
	CE marking			Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
	UKCA marking			Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
-	CCC Marine use approv	val.		Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	
	(NK, LR, ABS, DN			_	-	-	-	-	-	_	-	
	Automatic tripping de			Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic		
	Trip button			Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	
	ge of Characteristics and				34		184			36	190	
Note	es: *1 When using 3-po	le eart	h-leaka	ge circuit breakers	for 1-phase 2-wire	system,	*5 This acce	essory is cassette t	ype and can be ins	talled by customer	. The frame size up	

^{*1} When using 3-pole earth-leakage circuit breakers for 1-phase 2-wire system, connect cables/busbars to left and right poles, not to center pole. When using 1-phase 3-wire system, connect neutral conductor to center pole of earth leakage circuit breaker.
*2 For time-delay type, the rated voltage is 200-440VAC.
*3 In case of time delay type, rated current is produced with 20 amp. or more.
*4 When the operating time are 0.45, 1.0 and 2.0 seconds, the Earth Leakage circuit breaker operates between 0.15 and 0.45 seconds, between 0.6 and 1.0 seconds and between 1.2 and 2.0 seconds respectively.

- *5 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.
 *6 Standard type is SLT equipped.
 *7 Place an order with circuit breaker.
 *8 No isolation function except 400A to 800A frame.
 *9 100VAC does not acquire the CCC certification.

NV-S (Standard class) Harmonic Surge Ready

205 250		250	50 400 400		600 630		630		800				
225 250		50											
NV250-SV			NV250-SEV	NV400-SW	NV400)-SEW	NV630-SW		NV630-SEW		NV800-SE	EW I	
	100				GI GI GI	GI 6	8.37	iii. ii	6 28	GI, SI	6 66	e e e	1
		18			ALC: NO PERSONAL PROPERTY.	200	- Section 1		April 1985	40.00	Section Section	2 4 4	1 1
					9.0.0	• •		• •	4	• •	9		6
	55 6				-			(A)					
	Any	-		Acre Comment	The same State of	Street St. C.		(2) pro-	DE P	The same that I		P	W 1
	90% E.	E .		Ste B. 10. 0		255		[6] as		Si			n I
			75.00 E	- 450°	(43)				- A		100		
	** - T	P. C.		•	28 L Barrier			- 28 .		12.	444	N ATTEN	
	H C			- 36.95		D. (4)	225.3			D. 48	2.0	Phyriam.	<i>y</i> 1
propries		m: m? m	eieiel	0.0	0.6	0.0		0.0		196 196 196			
				P1P1P1P	4 4 5	- 31	图 图	- A -	1 10	20 8	1 25	4 4 4	
125 15	0 175	25	-0	Adjustable 125-250	250 300 350 400	Adjustable	200 225	500 600	(000)	Adjustable	300 350	Adjustable 40	0 450
200	225	23	50	(12.5A step)	250 300 350 400	250 300	350 400	500 600	(630)	400 500	600 630	500 600 700	0.08
								_					, 000
3	4	3	4	3	3	3	4	3	3	3	4	3	
0.10141		0.10141				0 :0144				0 : 014/			
3φ3W,		3¢3W,		3φ3W, 1φ3W,	3φ3W, 1φ3W,	3 <i>φ</i> 3W,		3φ3W, 1φ3W,	3φ3W, 1φ3W,	$3\phi 3W$,		3ø3W, 1ø3	3//
1φ3W,	$3\phi 4W$	1φ3W,	3 <i>ϕ</i> 4W			1φ3W,	3 <i>ϕ</i> 4W			1φ3W,	3 <i>∲</i> 4W		, ,
1φ2W	-7	1φ2W	7	1 <i>∲</i> 2W	1 <i>∲</i> 2W	1φ2W	-,	1φ2W	1 <i>ϕ</i> 2W	1φ2W	-7	1 <i>φ</i> 2W	
1 '		,		·	The state of the s	IΨZVV		·	· ·	Iψ∠VV		·	
100-440	200-440	100-440	200-440	100-440	100-440	100-	-440	200-440	200-440	200-	440	200-440)
								200 1.0	200 110			200 110	-
(30),100/	200/500	(30),100	/200/500	(30),100/200/500	(30),100/200/500	(30),100	/200/500						
selec	table	selec	table	selectable	selectable	selec	table		-	_		_	
0.	1	0.	.1	0.1	0.1	0.	.1		-	_		_	
0.0	7/	0.0	04	0.04	0.04	0.0	04	_	_			_	
										(400/57-		-	
[(100/200/500	Jselectable)	(100/200/50	uselectable)	(100/200/500selectable)	(100/200/500selectable)	(100/200/50	uselectable)	100/200/500selectable	100/200/500selectable	(100/200/500	uselectable)	100/200/500sele	ectable
								0.45/1.0/2.0selectable					
(0.1/0.	5/1.0)	(0.1/0	.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.	.5/1.0)	0.1/0.5/1.0	0.1/0.5/1.0	(0.1/0.	5/1.0)	0.1/0.5/1.	.0
,,,,,,,,,		e A		Type A	Type AC	Туре		Туре		Туре		Type AC	
Mechanical t	ype (button)	Mechanical	type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical t	type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical t	vpe (button)	Mechanical type	(button)
	,, ,												,
 36/		36		36/36	42/42		/42	42/42	42/42	42/		42/42	
36/	36	36/	/36	36/36	45/45	50	/50	50/50	50/50	50/	50	50/50	
 36/		36		36/36	45/45		/50	50/50	50/50	50/		50/50	
85/	85	85/	/85	85/85	85/85	85	/85	85/85	85/85	85/	85	85/85	
85/	85	85/	/85	85/85	85/85	85	/85	85/85	85/85	85/	85	85/85	
85/85	-	85/85	_	85/85	85/85		/85	-	-	_		_	
6	i	6	3	6	8	8	3	8	8	8		8	
A		A		AC	AC		C	AC	AC	A		AC	
Ye	es	Ye	es	Yes	Yes	l Ye	es	Yes	Yes	Υe	es	Yes	
Avail	able	Avai		Available	Available	Avai	lable	Available	Available	Avail	able	Available	е
25,0	າດດ	25,0	000	25,000	6,000	6.0	000	6,000	6,000	6,0	nn	4,000	
10,0	000	10,0	000	10,000	1,000	1,0	000	1,000	1,000	1,0	00	500	
A		A	Δ	Α	A	F	3	A	Α	Е	1	Α	
-	-	-	-	_	_		5	_	-	7.	6	9.6	
2)	2	2	2	3		3	3	3	3		3	
A	١	A	4	A	Α	A	A	A	A	Д	١	Α	
105	140	105	140	105	140	140	185	140	140	140	185	210	
105	140	105	140										
16	55	16	35	165	257	25	57	257	257	25	7	275	
68		6		68	103		03	103	103	10		103	
92	2	9	2	92	155	15	55	155	155	15	5	155	
												100	
		1.9	2.5	1.9	6.4	6.2	8.2	6.9	6.9	7.1	8.9		
1.9	2.5		terminal	•	 Busbar terminal 	■ Ruchar	terminal	●Busbar terminal	 Busbar terminal 			15.3	
			terriniai		• Dusbai terriiriai	O Dusbai	terrinia				terminal		minal
1.9 ●Screw		●Screw						-Basbar terrimia	• Dusbai terrilinai	●Busbar	terminal	15.3 ●Busbar terr	minal
			-		_	-	-	-	-	●Busbar	terminal		minal
●Screw -	terminal -	●Screw -	- r etud	– ■Bar etud	- Bar etud	- ₽ Do-	- r etud	_	-	_		●Busbar terr	
	terminal -	●Screw -	r stud	- ●Bar stud	●Bar stud		r stud	– ●Bar stud	– ●Bar stud	●Bar	stud	●Busbar terr – ●Bar stu	
●Screw -	terminal -	●Screw -	r stud	– ●Bar stud ●	●Bar stud		r stud	_	-	_	stud	●Busbar terr	
●Screw - ●Bar	terminal stud	●Screw ●Bar		•	•			– ●Bar stud	– ●Bar stud –	●Bar	stud	●Busbar terr – ●Bar stu	
•Screw	terminal stud	●Screw ●Bar ● (*5)	•	● ● (*5)	● ● (*5)	• ((*5)	- ●Bar stud ● ● (*5)	- ●Bar stud - ● (*5)	●Bar ● (stud •	Busbar terr Bar stur (*5)	
●Screw - ●Bar	terminal stud	●Screw ●Bar		•	•	• (– ●Bar stud	– ●Bar stud –	●Bar	stud •	●Busbar terr – ●Bar stu	
•Screw - •Bar • (*5) • (*5)	stud	• Screw	•	• (*5) • (*5)	• (*5) • (*5)	• ((*5) (*5)	- ●Bar stud ● ● (*5) ● (*5)	- •Bar stud - • (*5) • (*5)	●Bar ● (● (stud • *5) *5)	●Busbar terr - ●Bar stur ● (*5) (*5)	
●Screw ■Bar ● (*5) ● (*5) ● (*5)	stud	• Screw • Bar • (*5) • (*5) • (*5)	•	• (*5) • (*5) • (*5)	● (*5) ● (*5) ● (*5)	• ((*5) (*5) (*5)	- •Bar stud • (*5) • (*5) • (*5)	- Bar stud - (*5) (*5) (*5)	●Bar ● (● (● (stud *5) *5) *5)	●Busbar terr - ●Bar stu ● (*5) ● (*5) ● (*5)	
●Screw ■Bar ● (*5) ● (*5) ● (*5)	stud	• Screw	•	• (*5) • (*5)	• (*5) • (*5)	• ((*5) (*5)	- ●Bar stud ● ● (*5) ● (*5)	- •Bar stud - • (*5) • (*5)	●Bar ● (● (stud *5) *5) *5)	●Busbar terr - ●Bar stur ● (*5) (*5)	
●Screw ■Bar ● (*5) ● (*5) ● (*5) ● (*5) ● (*5)	stud	●Screw ■Bar ● (*5) ● (*5) ● (*5) ● (*5) ● (*5)	•	• (*5) • (*5) • (*5) • (*5)	• (*5) • (*5) • (*5)	• ((*5) (*5) (*5)	-	- Bar stud - (*5) (*5) (*5)	●Bar ● (● (● (stud *5) *5) *5)	●Busbar terr - ●Bar stu ● (*5) (*5) (*5)	
• Screw • Bar • (*5) • (*5) • (*5) • (*5) • (*5)	stud	●Screw ●Bai (*5) ●(*5) ●(*5) ●(*5) ●(*5)	•	(*5) (*5) (*5) (*5) (*5)	• (*5) • (*5) • (*5) • (*5)	• ((*5) (*5) (*5)	- Bar stud (*5) (*5) (*5)	- Bar stud - (*5) (*5) (*5)	●Bar ● (● (stud *5) *5) *5)	●Busbar terr - ●Bar stu ● (*5) (*5) (*5) (*5)	
●Screw ■Bar ● (*5) ● (*5) ● (*5) ● (*5) ● (*5)	stud	●Screw ■Bar ● (*5) ● (*5) ● (*5) ● (*5) ● (*5)	•	• (*5) • (*5) • (*5) • (*5)	• (*5) • (*5) • (*5)	• ((*5) (*5) (*5)	-	- Bar stud - (*5) (*5) (*5)	●Bar ● (● (● (stud *5) *5) *5)	●Busbar terr - ●Bar stu ● (*5) (*5) (*5)	
•Screw •Bar • (*5) • (*5) • (*5) • (*5) • (*5)	stud • • • • • • • • • • • • • • • • • •	• Screw • Bar • (*5) • (*5) • (*5) • (*5) • (*5)	• • • • • (*6)	(*5) (*5) (*5) (*5) (*5) (*5)	(*5) (*5) (*5) (*5) (*6)	• ((*5) (*5) (*5) (*5)	- Bar stud (*5) (*5) (*5) (*5) (*6)	- Bar stud - (*5) (*5) (*5) (*5)	●Bar	stud *5) *5) *5) *6)	Busbar terr Bar stu (*5) (*5) (*5) (*5) (*6)	
• Screw • Bar • (*5) • (*5) • (*5) • (*5) • (*5)	stud • • • • • • • • • • • • • • • • • •	• Screw • Bar • (*5) • (*5) • (*5) • (*5) • (*5)	(*6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6)	• ((*5) (*5) (*5)	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud - (*5) (*5) (*5) (*5) (*6) -	●Bar ● (● (stud *5) *5) *5) *6)	●Busbar terr - ●Bar stu ● (*5) (*5) (*5) (*5)	
•Screw •Bar • (*5) • (*5) • (*5) • (*5) • (*5)	stud • • • • • • • • • • • • • • • • • •	• Screw • Bar • (*5) • (*5) • (*5) • (*5) • (*5)	• • • • • (*6)	(*5) (*5) (*5) (*5) (*5) (*5)	(*5) (*5) (*5) (*5) (*6)	• ((*5) (*5) (*5) (*5)	- Bar stud (*5) (*5) (*5) (*5) (*6)	- Bar stud - (*5) (*5) (*5) (*5)	●Bar	stud *5) *5) *5) *6)	Busbar terr Bar stu (*5) (*5) (*5) (*5) (*6)	
•Screw •Bar • (*5) • (*5) • (*5) • (*5) • (*5)	stud • • • • • • • • • • • • • • • • • •	• Screw • Bar • (*5) • (*5) • (*5) • (*5) • (*5)	(*6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) (*6)	• (• (• ((*5) (*5) (*5) (*5)	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud - (*5) (*5) (*5) (*5) (*6)	•Bar • (stud *5) *5) *5) *6)	Busbar terr Bar stu (*5) (*5) (*5) (*5) (*6)	
•Screw •Bar • (*5) • (*5) • (*5) • (*5) • (*5)	stud • • • • • • • • • • • • • • • • • •	• Screw • Bar • (*5) • (*5) • (*5) • (*5) • (*5)	(*6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*5) (*6)		(*5) (*5) (*5) (*5) (*6) 	- Bar stud (*5) (*5) (*5) (*6)	- •Bar stud - • (*5) • (*5) • (*5) • (*6)	• Bar	stud *5) *5) *5) *6) *6)	Busbar terr Bar stu (*5) (*5) (*5) (*5) (*6)	
•Screw •Bar • (*5) • (*5) • (*5) • (*5) • (*5)	stud • • • • • • • • • • • • • • • • • •	• Screw • Bar • (*5) • (*5) • (*5) • (*5) • (*5)	(*6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) (*6)		(*5) (*5) (*5) (*5)	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud - (*5) (*5) (*5) (*5) (*6)	•Bar • (stud *5) *5) *5) *6) *6)	Busbar terr Bar stu (*5) (*5) (*5) (*5) (*6)	
•Screw •Bar • (*5) • (*5) • (*5) • (*5) • (*5)	terminal stud	• Screw • Baar • (*5) • (*5) • (*5) • (*5)	(*6)	(*5) (*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*5) (*6) 		(*5) (*5) (*5) (*5) (*6) (*7)	- Bar stud - (*5) - (*5) - (*5) - (*6) (*7)	- Bar stud - (*5) (*5) (*5) (*6) (*6) (*7)	• Bar	stud *5) *5) *5) **6) *7)	Busbar terr Bar stu (*5) (*5) (*5) (*6) (*6) (*7)	
•Screw •Bar • (*5) • (*5) • (*5) • (*5) • (*5)	stud • • • • • • • • • • • • • • • • • •	• Screw • Bar • (*5) • (*5) • (*5) • (*5) • (*5)	(*6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*5) (*6)		(*5) (*5) (*5) (*5) (*6) 	- Bar stud (*5) (*5) (*5) (*6)	- •Bar stud - • (*5) • (*5) • (*5) • (*6)	• Bar	stud *5) *5) *5) **6) *7)	Busbar terr Bar stu (*5) (*5) (*5) (*5) (*6)	
•Screw •Bar • (*5) • (*5) • (*5) • (*5) • (*5)	terminal stud	• Screw • Baar • (*5) • (*5) • (*5) • (*5)	(*6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6)		(*5) (*5) (*5) (*6) 	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud - (*5) (*5) (*5) (*5) - (*6) (*7)		stud *5) *5) *5) *6) *7)	Busbar terr Bar stu (*5) (*5) (*5) (*6) (*6) (*7)	
Screw Bar (*5) (*5) (*5) (*5) (*5) (*5)	terminal stud	Screw Ban (*5) (*5) (*5) (*5)	*6) 	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) 		*5) (*5) (*5) (*6)	- Bar stud - (*5) - (*5) - (*5) - (*6) (*7) - (*7)	- Bar stud (*5) (*5) (*5) (*5) (*6) (*7) (*7)	•Bar • (stud *5) *5) *5) *6) 7)	Busbar terr Bar stu (*5) (*5) (*5) (*6) (*6) (*7)	
•Screw •Bar •(*5) •(*5) •(*5) •(*5) •(*5)	terminal stud	●Screw ●Bat ● (*5) ● (*5) ● (*5) ● (*5) ● (*5)	*6) 	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) 		(*5) (*5) (*5) (*6) - - (*7)	- Bar stud - (*5) - (*5) - (*6)	- •Bar stud - • (*5) • (*5) • (*5) • (*6)		**5) **5) **5) **6)*7)	Busbar terr Bar stu (*5) (*5) (*5) (*6) (*7)	
Screw	terminal stud	Screw Salar (*5) (*5) (*5) (*5) (*5)	**6) 	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) 		(*5) (*5) (*5) (*6) - - (*7)	- Bar stud - (*5) - (*5) - (*6)	- •Bar stud - • (*5) • (*5) • (*5) • (*6)		**5) **5) **5) **6)*7)	Busbar terr Bar stu (*5) (*5) (*5) (*6) (*6) (*7)	
Screw Bar (*5) (*5) (*5) (*5)	terminal stud stud **6)	Screw Ban (*5) (*5) (*5) (*5)	**6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) (*7)		*5) *5) **5) -(*6) -	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud - (*5) (*5) (*5) (*5) (*5) (*6) - (*6) - (*7) (*7)		*5) *5) *5) *6)*7)	Busbar terr Bar stu (*5) (*5) (*5) (*6) (*7)	
Screw	terminal stud stud **6)	Screw Salar (*5) (*5) (*5) (*5) (*5)	**6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) 		(*5) (*5) (*5) (*6) - - (*7)	- Bar stud - (*5) - (*5) - (*6)	- •Bar stud - • (*5) • (*5) • (*5) • (*6)		*5) *5) *5) *6)*7)	Busbar terr Bar stu (*5) (*5) (*5) (*6) (*7)	
Screw	terminal stud **6)	Screw	*60	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7)		*5) *5) *6) *6)	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud - (*5) (*5) (*5) (*5) (*5) (*6) - (*6) - (*7) (*7)		stud 55) 55) 66) 77)	Busbar terr Bar stu (*5) (*5) (*5) (*5) (*6) (*7)	
•Screw	terminal stud	Screw	*6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) 		**5) **5) **5) **6)	- Bar stud - (*5) - (*5) - (*6) (*7) - (*7)	- •Bar stud - • (*5) • (*5) • (*5) • (*6)		stud 155 155 166 177 177 186 187 187 187 187	Busbar terr - - - - - - - - - - - -	
Screw	terminal stud	Screw	*6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7)		*5) *5) *6) *6)	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud - (*5) (*5) (*5) (*5) (*5) (*6) (*7) (*7)		stud 155 155 166 177 177 186 187 187 187 187	Busbar terr Bar stu (*5) (*5) (*5) (*5) (*6) (*7)	
Screw - - - - - - - - - - - - -	stud	Screw	**6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) 		"*5) "*5) "*5) "*6)	- Bar stud - (*5) - (*5) - (*6)	- •Bar stud - • (*5) • (*5) • (*5) • (*6) • (*7) •		stud 1	Busbar terr - Bar stu - (*5) (*5) (*5) (*6) (*7)	
•Screw •Bar •(*5) •(*5) •(*5) •(*5) •(*5)	terminal stud **6)	• Screw • Bai • (*5) • (*5) • (*5) • (*5) • (*5)	**60	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7)		"5) "5) "5) "6) "6) "76) "76) "77) "77) "77) "77)	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud - (*5) (*5) (*5) (*5) (*5) (*7) (*6) - (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7)		**************************************	Busbar terr Bar stu (*5) (*5) (*5) (*6) (*6) (*7)	
Screw - - - - - - - - - - - - -	terminal stud **6)	Screw	**60	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) 		"*5) "*5) "*5) "*6)	- Bar stud - (*5) - (*5) - (*6)	- •Bar stud - • (*5) • (*5) • (*5) • (*6) • (*7) •		**************************************	Busbar terr - Bar stu - (*5) (*5) (*5) (*6) (*7)	
Screw	terminal stud **6)	Screw	*6)	(*5) (*5) (*5) (*5) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7)		**5) **5) **6)	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud (*5) (*5) (*5) (*5) (*5) (*5) (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7		stud 15) 15) 15) 16) 16) 17) 18) 19) 19) 19) 19) 19) 19) 19) 19) 19) 19	Busbar terr - Bar stu (*5) (*5) (*5) (*5) (*6) (*7)	
Screw - - - - - - - - - - - - -	terminal stud	Screw	*6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) 		**5) **5) **6)	- Bar stud - (*5) - (*5) - (*6)	- Bar stud - (*5) (*5) (*5) (*5) (*7) (*6) - (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7)		stud 15) 15) 15) 16) 16) 17) 18) 19) 19) 19) 19) 19) 19) 19) 19) 19) 19	Busbar terr - Bar stu (*5) (*5) (*5) (*6) (*7)	
Screw	terminal stud	Screw	*6)	(*5) (*5) (*5) (*5) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7)		**5) **5) **6)	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud (*5) (*5) (*5) (*5) (*5) (*5) (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7		stud 15) 15) 15) 16) 16) 17) 18) 19) 19) 19) 19) 19) 19) 19) 19) 19) 19	Busbar terr - Bar stu (*5) (*5) (*5) (*5) (*6) (*7)	
Screw - - - - - - - - - - - - -	stud	Screw	*6)	(*5) (*5) (*5) (*5) (*5) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7)		"5) "5) "5) "6)	- Bar stud	- Bar stud - (*5) (*5) (*5) (*5) - (*6) (*7)		stud 55) 55) 66) 17)	Busbar terr Bar stu (*5) (*5) (*5) (*6) (*7)	d
Screw - - - - - - - - - - - - -	stud	Screw	*6)	(*5) (*5) (*5) (*5) (*5) (*6)	(*5) (*5) (*5) (*5) (*6) 		"5) "5) "5) "6)	- Bar stud - (*5) - (*5) - (*6)	- Bar stud - (*5) (*5) (*5) (*5) (*7) (*6) - (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7)		stud 55) 55) 66) 17)	Busbar terr - Bar stu (*5) (*5) (*5) (*6) (*7)	d
Screw	terminal stud **6)	Screw	**6)	(*5) (*5) (*5) (*5) (*6) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7)	• () • () • () • () • () • () • () • ()	"5) "5) "5) "6) "75) "75) "75) "75) "75) "77) "77) "77	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud (*5) (*5) (*5) (*5) (*5) (*5) (*6) (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7)		stud 55) *5) *5) *6)	Busbar terr Bar stu (*5) (*5) (*5) (*6) (*6) (*7) Self-declara	ation
Screw	terminal stud **6)	Screw	*6)	(*5) (*5) (*5) (*5) (*5) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7) Self-declaration	• () • () • () • () • () • () • () • ()	**5) **5) **5) **6)*7)	- Bar stud (*5) (*5) (*5) (*6) - (*6) (*7) - (*77) - (*77) - (*78) - (*79	- Bar stud	Bar () () () () () () () () () () () () ()	stud 15) 15) 15) 16) 17) 19 19 19 19 19 19 19 19 19 19 19 19 19	Busbar terr - Bar stu - (*5) (*5) (*5) (*5) (*6) Self-declara Self-declara	ation
Screw	terminal stud **6)	Screw	**6)	(*5) (*5) (*5) (*5) (*6) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7)	• () • () • () • () • () • () • () • ()	"5) "5) "5) "6) "75) "75) "75) "75) "75) "77) "77) "77	- Bar stud - (*5) - (*5) - (*5) - (*6)	- Bar stud (*5) (*5) (*5) (*5) (*5) (*5) (*6) (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7)		stud 15) 15) 15) 16) 17) 19 19 19 19 19 19 19 19 19 19 19 19 19	Busbar terr Bar stu (*5) (*5) (*5) (*6) (*6) (*7) Self-declara	ation
Screw	terminal stud **6)	Screw	*6)	(*5) (*5) (*5) (*5) (*5) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7) Self-declaration	• () • () • () • () • () • () • () • ()	**5) **5) **5) **6)*7)	- Bar stud (*5) (*5) (*5) (*6) - (*6) (*7) - (*77) - (*77) - (*78) - (*79	- Bar stud	Bar () () () () () () () () () () () () ()	stud 15) 15) 15) 16) 17) 19 19 19 19 19 19 19 19 19 19 19 19 19	Busbar terr - Bar stu - (*5) (*5) (*5) (*5) (*6) Self-declara Self-declara	ation
Screw	terminal stud **6)	Screw	*6)	(*5) (*5) (*5) (*5) (*5) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7) Self-declaration	elf-dec	"5) "5) "5) "6) "6) "7) "7) "7) "8) "8) "8) "9) "9) "10) "10) "10) "10) "10) "10) "10) "10	- Bar stud (*5) (*5) (*5) (*6) - (*6) (*7) - (*77) - (*77) - (*78) - (*79	- Bar stud	Bar () () () () () () () () () () () () ()	stud 15) 15) 15) 16) 17) 19 19 19 19 19 19 19 19 19 19 19 19 19	Busbar terr - Bar stu - (*5) (*5) (*5) (*5) (*6) Self-declara Self-declara	ation
Screw	terminal stud **6)	Screw	*6)	(*5) (*5) (*5) (*5) (*5) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7) Self-declaration	elf-dec	**5) **5) **5) **6)*7)	- Bar stud (*5) (*5) (*5) (*6) - (*6) (*7) - (*77) - (*77) - (*78) - (*79	- Bar stud	Bar () () () () () () () () () () () () ()	stud 15) 15) 15) 16) 17) 19 19 19 19 19 19 19 19 19 19 19 19 19	Busbar terr - Bar stu - (*5) (*5) (*5) (*5) (*6) Self-declara Self-declara	ation
●Screw ●Bar ● (*5) ● (*5) ● (*5) ● (*5) ● (*5) ● (*5) ● (*7	terminal stud **6)	Screw Strew (*5) (*5) (*5) (*5) (*5) (*5) (*5) (*5	*6)	• (*5) • (*5) • (*5) • (*5) • (*5) • (*6) •	(*5) (*5) (*5) (*5) (*6) (*7) (*7) Self-declaration Self-declaration	Self-dec	"5) "5) "5) "6) "7) "7) "7) "7) "8) "8) "8) "9) "9) "9) "10) "10) "10) "10) "10) "10) "10) "10	- Bar stud	- Bar stud (*5) (*5) (*5) (*5) (*5) (*5) (*7) (*6) (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7)	Bar () () () () () () () () () (stud '5) '5) '5) '5) '6) '7) laration laration	Busbar terr Bar stu (*5) (*5) (*5) (*5) (*6)	ation ation
• Screw • Bar • (*5)	terminal stud **6)	Screw Strew (*5) (*5) (*5) (*5) (*5) (*5) (*5) (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7	*6)	(*5) (*5) (*5) (*5) (*5) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7) (*7) Self-declaration Certified Thermal-magnetic	• () • () • () • () • () • () • () • ()	**5) **5) **5) **6)	- Bar stud	- Bar stud	Bar () () () () () () () () () (stud 55) 55) 66) 77) 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	Busbar terr - Bar stu - (*5) (*5) (*5) (*5) (*6) Self-declara Self-declara Certified	ation ation i
• Screw • Bar • (*5)	terminal stud **6)	Screw Strew (*5) (*5) (*5) (*5) (*5) (*5) (*5) (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7	*6)	(*5) (*5) (*5) (*5) (*5) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7) (*7) Self-declaration Certified Thermal-magnetic	• () • () • () • () • () • () • () • ()	**5) **5) **5) **6)	- Bar stud	- Bar stud	Bar () () () () () () () () () (stud 55) 55) 66) 77) 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	Busbar terr - Bar stu - (*5) (*5) (*5) (*5) (*6) Self-declara Self-declara Certified	ation ation i
●Screw ●Bar ● (*5) ● (*5) ● (*5) ● (*5) ● (*5) ● (*5) ● (*7	stud stud **Go proval alaration and fified magnetic pped	Screw Strew (*5) (*5) (*5) (*5) (*5) (*5) TÜV ap Self-dec Cert	*6)	(*5)	• (*5) • (*5) • (*5) • (*5) • (*5) • (*5) • (*6) • (*7) • • • • • • • • • • • • • • • • • • •	Self-dec Self-dec Ectronic (effective Equi)	**5) **5) **5) **6)	- Bar stud - (*5) - (*5) - (*5) - (*6) (*77) - (*77) (*77) -	- Bar stud (*5) (*5) (*5) (*5) (*5) (*5) (*6) (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7)	Bar () () () () () () () () () (stud "5) "5) "6) "6) "6) "77) Indication laration field e value detection) pped	Busbar terr - Bar stu (*5) (*5) (*5) (*6) (*7) - Self-declara Self-declara Certified Equipper	ation ation i
• Screw • Bar • (*5)	terminal stud **6)	Screw Strew (*5) (*5) (*5) (*5) (*5) (*5) TÜV ap Self-dec Cert	*6)	(*5) (*5) (*5) (*5) (*5) (*6) (*6)	(*5) (*5) (*5) (*5) (*6) (*7) (*7) (*7) Self-declaration Certified Thermal-magnetic	Self-dec Self-dec Ectronic (effective Equi)	**5) **5) **5) **6)	- Bar stud	- Bar stud (*5) (*5) (*5) (*5) (*5) (*5) (*6) (*7) (*7) (*7) (*7) (*7) (*7) (*7) (*7)	Bar () () () () () () () () () (stud "5) "5) "6) "6) "6) "77) Indication laration field e value detection) pped	Busbar terr - Bar stu - (*5) (*5) (*5) (*5) (*6) Self-declara Self-declara Certified	ation ation i

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.

2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.

3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

4. Rated operational voltage 100-440V 200-440V Applicable circuit voltage 100/110/200/220/240/254/265/380/400/415/440V 200/220/240/254/265/380/400/415/440V Available voltage range 85-484V 170-484V

NV-H / NV-R (High-performance class) Harmonic Surge Ready

	Frame (A)		50	60	63	100	125	125	225	250	250	
	Model			NV63-HV		NV12	25-HV	NV125-HEV	NV25	50-HV	NV250-HEV	
	Image						,,					
Re	Rated current In (A) eference ambient temperatu	ıre 40°C	(15) 16 20 (30) 32 40 50	(60)	63	(15) 16 20 (30) 32 40 50 (60) 63 (75) 80 100 (*3)	125	Adjustable 63-125 (6.25Astep)	125 150 175 200 225	250	Adjustable 125-250 (12.5A step)	
	Number of poles Phase line (*1)		3 3φ3W, 1φ3W, 1φ2W	3 3φ3W, 1φ3W, 1φ2W	3 3φ3W, 1φ3W, 1φ2W	3 4 3\phi 3W, 1\phi 3W, 3\phi 4W 1\phi 2W	3 4 3φ3W, 1φ3W, 1φ2W 3φ4W	3 4 3\phi3W, 1\phi3W, 3\phi4W 1\phi2W	3 4 3φ3W, 1φ3W, 3φ4W 1φ2W	3 4 3φ3W, 1φ3W, 3φ4W 1φ2W	3 3φ3W, 1φ3W, 1φ2W	
	d operational voltage Ue (V)	(*2) AC	100-440	100-440	100-440	100-440 200-440	100-440 200-440	100-440	100-440 200-440	100-440 200-440	100-440	
High-speed type	Rated current sensitivity	(mA)	selectable	selectable	selectable	30,100/200/500 selectable	selectable	(30),100/200/500 selectable	30,100/200/500 selectable	selectable	(30),100/200/500 selectable	
į₽̈́δ	Max. operating time (s)	at l∆n at 5l∆n	0.1	0.1 0.04	0.1 0.04	0.1 0.04	0.1	0.1	0.1	0.1	0.1	
≥	Rated current sensitivity	(mA)	-	-	-			(100/200/500selectable)	(100/200/500selectable)		(100/200/500selectable)	
[음 g												
Time-delay type	Max. operating time (s)	(*4)	-	-	-		(0.45/1.0/2.0selectable)		(0.45/1.0/2.0selectable)		(0.45/1.0/2.0selectable)	+
	Internal non-operating (s)		-	Tuno A	-	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	+
	h leakage protection charac		N. #	Type A	tton)		De A	Type A		De A	Type A	+
Ean	h leakage indication systen			chanical type (but						Mechanical type (button)		
<u></u> = ₹	.	440V	10/8	10/8	10/8	50/38	50/38	65/65	65/65	65/65	65/65	
circ	IEC 60947-2	415V	10/8	10/8	10/8	50/38	50/38	70/70	70/70	70/70	70/70	
hort-	EN 60947-2	AC 400V	10/8	10/8	10/8	50/38	50/38	75/75	75/75	75/75	75/75	
ed si	(Icu/Ics)	230V	25/19	25/19	25/19	100/75	100/75	100/100	100/100	100/100	100/100	
Rated short-circuit breaking capacities (kA)		200V	25/19	25/19	25/19	100/75	100/75	100/100	100/100	100/100	100/100	
<u> </u>	<u> </u>	100V	25/19	25/19	25/19	100/75 –	100/75 –	100/100	100/100 –	100/100 -	100/100	-
Hate	d impulse withstand voltage	Ulmp (KV)	6	6	6	6	6	6	6	6	6	
	Current		AC	AC	AC	AC	AC	AC	AC	AC	AC	
	Suitability for isolation		Yes	Yes	Yes _	Yes _	Yes _	Yes _	Yes _	Yes –	Yes _	
- Re	everse connection (below 2	current	-	-		25,000	25,000					-
on		current	15,000 8,000	15,000 8,000	15,000 8,000	10,000	10,000	25,000 10,000	25,000 10,000	25,000	25,000 10,000	
υp	Utilization category	urreni	8,000 A	8,000 A	8,000 A	10,000 A	10,000 A	10,000 A	A	10,000 A	A	
Pato	d short time withstand current Icu	(kA) at 0.25c	-	-	_	-	-	-	-	-	-	+
nate	Pollution degree	(NA) at 0.235	2	2	2	2	2	2	2	2	2	
EMC	environment condition (environ	mont A or B)	A	A	A	A	A	A	A	A	A	
		a	75	75	75	90 120	90 120	105 140	105 140	105 140	105	+
Overall dimensions (mm)		b	130	130	130	130	130	165	165	165	165	
Over	□	C	68	68	68	68	68	68	68	68	68	
l e	쁘ᆙ 겍	ca	90	90	90	90	90	92	92	92	92	
H	Mass of front-face type (0.75	0.8	0.8	1.1 1.4	1.1 1.4	1.9 2.5	1.8 2.5	1.8 2.5	1.9	
P "	Front connection	(F) Page	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	•	●Screw terminal	Screw terminal	•	
Installation and connections			-	-	-	-	_	_	-	_	_	
stallation	Rear	(B) 98	●Round stud	●Round stud	●Round stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	
121 8	Plug-in (I	PM)	•	•	•	•	•	•	•	•	•	
n.		AL)	● (*5)	● (*5)	● (*5)	● (*5) ●	● (*5) ●	● (*5)	● (*5) ●	● (*5) ●	● (*5)	
e.g	Auxiliary switch (AX)	● (*5)	● (*5)	● (*5)	● (*5) ●	● (*5) ●	● (*5) ●	● (*5) ●	● (*5) ●	● (*5)	
te-l	Shunt trip (S	115 HT)	● (*5)	● (*5)	● (*5)	● (*5) ●	● (*5) ●	● (*5) ●	● (*5) ●	● (*5) ●	● (*5)	
assette-	Undervoltage trip (L	JVT)	● (*5)	● (*5)	● (*5)	● (*5) ●	● (*5) ●	● (*5) ●	● (*5) ●	● (*5) ●	● (*5)	
Cassette-type accessories			•	•	•	• •	• •	•	• •	• •	•	
<u> </u>		BM) 121	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	
	Closed	(S)	_	-	-	_	-		-	-	_	1
	Enclosure Dustproof	(l) 137	_	-	-	_	_	• -	-	-	•	<u> </u>
	Waterproof		-	-	-		_	• -	-	-	•	<u> </u>
ο̈	Electrical operation device (N			_	_	•	•	•	•	•	•	+
External accessories	Mechanical Panel moun		•	•	•	• •	• •	•	• •	• •	•	1
SS	interlock (MI) (*7) Breaker mour	ıuıy	•	•	•	• -	• -	• -	• -	• -	•	
80	Lock cover LC Handle lock HL	134	•	•	•		•	•	•	•	•	
<u>=</u>	device HL-S	134	•				•	•	•	•	•	
l E	External (F)		•	•			•	•	•		•	
x le	operating handle (V)	123	-	•	•		•	•	•		•	
Ιш	Terminal cover (TC-L, TC-S, TTC, BTC,	PTC) 128	•	•	•	•	•	• (*9)	•		• (*9)	
		CT)	•	•	•	•	•	• (3)	•		• (3)	
		PM) 100		_	_	_	_	_	_	_	_	<u> </u>
	IEC 35mm rail mounting adap		•	•	•	_	_	-	-	_	-	
	CE marking	,								Self-declaration	Self-declaration	
	UKCA marking									Self-declaration		
	CCC		Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	
	Marine use approval											
	(NK, LR, ABS, DNV)		_	_	_	_	_	_	_	_	_	
	Automatic tripping devi	ce	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Electronic (effective value detection)	Thermal-magnetic	Thermal-magnetic	Electronic (effective value detection)	
	Trip button		Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	
Pac	ge of Characteristics and di	mensions		184			36	190		88	190	
	s: *1 When using 3-pole	earth-leaks	age circuit breake	ers for 1-phase 2-	wire system	*5 7	This accessory is	cassette type ar	nd can be installe	ed by customer T	he frame size up	

connect cables/busbars to left and right poles, not to center pole. When using 1-phase 3-wire system, connect neutral conductor to center pole of earth leakage circuit breaker.

- 12 For time-delay type, the rated voltage is 200-440VAC.
 13 In case of time delay type, rated current is prodused with 20 amp. or more.
 14 When the operating time are 0.45, 1.0 and 2.0 seconds, the Earth Leakage circuit breaker operates between 0.15 and 0.45 seconds, between 0.6 and 1.0 seconds and between 1.2 and 2.0 seconds respectively.
- This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.

 Standard type is SLT equipped.

 No isolation function.

 100VAC does not acquire the CCC certification.

 For HEV with PAL, it will be an exclusive item.

 When ordering only the terminal cover, specify the model name with MP at the end.

NV-H / NV-R (High-performance class) Harmonic Surge Ready

40	00	630	800		
NV400		NV630-HEW	NV800-HEW		
	iLit	••••	111		
Adjustable 200 225	250 300 350 400	Adjustable 300 350 400 500 600 630	Adjustable 400 450 500 600 700 800		
3	4	3	3		
3φ3W, 1φ3W, 1φ2W	3φ4W	3φ3W, 1φ3W, 1φ2W	3¢3W, 1¢3W, 1¢2W		
(30), 100/200/		200-440	200-440		
0.	1	-	-		
0.0		-	-		
(100/200/500) selectable)	(100/200/500 selectable)	(100/200/500 selectable)		
(0.45/1		(0.45/1.0/2.0)	(0.45/1.0/2.0 selectable)		
(0.1/0.		(0.1/0.5/1.0)	(0.1/0.5/1.0)		
Туре		Type AC	Type AC		
Mechanical t		Mechanical type (button)	Mechanical type (button)		
65/		65/65	65/65		
70/		70/70	70/70		
70/		70/70	70/70		
100/		100/100	100/100		
100/	100	100/100	100/100		
100/		_	-		
3		8	8		
A		AC	AC		
	es	Yes	Yes		
		-	-		
6,0		6,000	4,000		
1,0	00	1,000	500		
	3	В	В		
		7.6	9.6		
		3	3		
110		A	A		
140	185	140	210		
25		257	275		
10		103	103		
15	55	155	155		
6.6	8.2	7.1	15.3		
●Busbar		●Busbar terminal	●Busbar terminal		
-		_	_		
●Bar		●Bar stud	●Bar stud		
		• (17)	•		
	*5)	● (*5)	● (*5)		
• (^b)	● (*5)	● (*5)		
 • (*5)	● (*5)	● (*5)		
		•	•		
		•	•		
• (*6)	● (*6)	● (*6)		
	-	_	_		
•	_	•	•		
•		•	•		
		● (*7)			
• (• (*7)		
		•	•		
)	•	•		
 		-	-		
		•	•		
)	•	•		
		•	•		
		•	•		
		•	•		
+		•	•		
-		-	-		
		-	-		
 Self-ded		Self-declaration	Self-declaration		
 Self-dec	claration	Self-declaration	Self-declaration		
Cert		Certified	Certified		
-	-	-	-		
Electronic (effective	e value detection)	Electronic (effective value detection)	Electronic (effective value detection)		
 Electronic (ellectiv					
· Faili	upeu	Equipped	Equipped		
Equi	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	466	1000		
19	94	198	200		

6.	Rated operational voltage	Applicable circuit voltage	Available voltage range
	100-440V	100/110/200/220/240/254/265/380/400/415/440V	85-484V
	200-440V	200/220/240/254/265/380/400/415/440V	175-484V

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.

2. The setting is set to 500mA and delivered when not specifying the rated current sensitivity and the time of time-delay type of operation to 2.0 seconds.

3. Specify "FP-LT" when using a flush plate product with a leadwire terminal block.

4. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.

5. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

NF-MB

Frame (A)	30	32	5	0	100	225
Model		2-SV	NF63-CV	NF63-SV	NF125-SV	NF250-SV
Rated current In (A)	A 200/220V 400/440V kW kW 25 5.5 11 16 3.7 7.5	A 200/220V 400/440V kW kW 32 7.5 15	A 200/220V 400/440V kW kW 45 11 22 40 - 18.5 32 7.5 15	A 200/220V 400/440V kW kW 7.1 1.5 - 5 - 2.2 4 0.75 1.5	A 200/220V 400/440V kW kW 100 - 55 90 22 45 71 18.5 37	A 200/220V 400/440V kW kW 225 55 110 200 175 45 90
Rated motor capacity (kW) Reference ambient temperature 40°C (45°C for marine use)	12 - 5.5 10 2.2 - 8 - 3.7 7.1 1.5 - 5 - 2.2 4 0.75 1.5		32 7.5 15 25 5.5 11 16 3.7 7.5 12 - 5.5 10 2.2 - 8 - 3.7	4 0.75 1.5	63 15 30 45 11 22 (40) - 18.5 32 7.5 15 (25) 5.5 11 (16) 3.7 7.5	1/5 45 90 150 37 75 125 30 -
Number of poles	0	3		3	(12.5) - 5.5	
Number of poles Rated insulation voltage Ui (V)	3 500	500	3 500	500	3 500	3 500
		2.5/2.5	2.5/2.5	7.5/7.5	25/25	36/36
		2.5/2.5	2.5/2.5	7.5/7.5	30/30	36/36
IEC 60947-2 AC 415V 41		5/5	5/5	7.5/7.5	30/30	36/36
夏皇 (Icu/Ics) 380V		5/5	5/5	7.5/7.5	30/30	36/36
<u> </u>		7.5/7.5	7.5/7.5	15/15	50/50	85/85
Rated impulse withstand voltage Uimp (kV		8	8	8	8	8
Current	AC	AC	AC	AC	AC	AC
Suitability for isolation	Yes Available	Yes	Yes	Yes Available	Yes	Yes Available
Reverse connection Number of Without current	Available 10,000	Available 10,000	Available 10,000	Available 15,000	Available 25,000	Available 25,000
operating cycles With current (440VAC		6,000	6,000	8,000	10,000	10,000
Utilization category	A A	A	A	A	A	A
Pollution degree	3	3	3	3	3	3
EMC environment condition (environment A or B		Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable
	75	75	75	75	90	105
a b c ca	130	130	130	130	130	165
S S S S S S S S S S S S S S S S S S S	68	68	68	68	68	68
[€	90	90	90	90	90	92
Mass of front-face type (kg)	0.65	0.65	0.65	0.7	1.0	1.6
Front connection (F) Page Solderless (BOX) terminal (SL) Rear (B) Plug-in (PM)	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	Screw terminal	Screw terminal
Rear (B) 98	●Round stud	●Round stud	●Round stud	●Round stud	●Bar stud	●Bar stud
Plug-in (PM)	• Critouria staa	•	•	•	•	• Dai olda
Φ ω Alarm switch (AL)	● (*1)	● (*1)	● (*1)	● (*1)	● (*1)	● (*1)
S.O Auvilian (avitab (AV)	● (*1)	● (*1)	● (*1)	● (*1)	● (*1)	● (*1)
Shunt trip (SHT)	● (*1)	● (*1)	● (*1)	● (*1)	● (*1)	● (*1)
Undervoltage trip (UVT)	● (*1)	● (*1)	● (*1)	● (*1)	● (*1)	● (*1)
With lead-wire terminal block (SLT) 120	•	•	•	•	•	•
Closed (S)	•	•	•	•	•	•
Enclosure Dustproof (I) 137	•	•	•	•	•	•
Waterproof (W)	•	•	•	•	• (***)	• (+0)
Electrical operation device (NFM) 140	-	-	-	-	• (*3)	• (*3)
Mechanical interlock (MI) (*2) Breaker mounting Lock cover LC Handle lock HL 134 device HL-S External operating handle (V) 123	•	•	•	•	•	•
Lock cover LC		•	•		•	
Handle lock HL 134	•	•	•	•	•	•
device HL-S	-	•	•	•	•	
External (F)	•	•	•	•	•	•
operating handle (V) 123	•	•	•	•	•	•
Terminal cover (TC-L, TC-S, TTC, BTC, PTC) 128	•	•	•	•	•	•
Rear stud (B-ST)	•	•	•	•	•	•
Plug-in (PM)	•	•	•	•	•	•
IEC 35mm rail mounting adapters 143	•	•	•	•	-	_
CE marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	TÜV approval
UKCA marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
ccc	Certified	Certified	Certified	Certified	Certified	Certified
Marine use approval (☆:Certified) (NK, LR, ABS, DNV)	ά	☆	☆	☆	☆	☆
Automatic tripping device	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic
Trip button	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped

*1 The operating characteristics are different between AC and DC.
 This accessory is cassette type and can be installed by customer.
 The frame size up to 250A can be closely installed, except for those with UVT.

 *2 No isolation function.
 *3 Place an order with circuit breaker.

Remarks: 1. The motor circuit breakers do not have an applicable rated motor capacity. Select a motor circuit breaker based on the total load current of the motor.

2. Products with rating parenthesized are produced when an order is

Please specify MB

^{2.} Products which rating parenthesized are produced when an order is placed.

3. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.

4. The circuit breaker has the rated short circuit breaking capacity specified in the shaded cells.

5. Please refer to "Table 4-17", of Page 79 for details.

UL Certified Circuit Breakers

UL 489 Listed Molded Case Circuit Breakers

Frame (A)					50			100			12	25	
	Model			N	IF50-SMU	NF50-SVFU	NF100-CVFU	NF100-SRU	NF100-HRU	NF125	5-SVU	NF125	5-HVU
	lmage				P P P P				5	2 0 0 2 7 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			
Re	Rated current ference ambient tem	perature	e 40°C	(6) 7 (8) 1 (25) 30 (3	(0.5) (1) (1.5) (2) (3) 4 5 (6) (7) (8) 10 35) (40) 50 (13) 15 20 25 30 (35) 40 50	(3) 5 10 15 20 30 40 50	60 (70) 75 (80) (90) 100	(1) (2) 3 5 10 15 20 (25) 30 40 50 60 (70) 75 (80) (90) 100	(1) (2) 3 5 10 15 20 (25) 30 40 50 60 (70) 75 (80) (90) 100	15 20 30 40 50 60 (70) 75 (80) (90) 100	125	15 20 30 40 50 60 (70) 75 (80) (90) 100	125
	Number of po		10.00	1	2 3	2 3	2 3	2 3	2 3	2 3	2 3	3	3
7		Rated voltage	AC (V) DC (V)	60	240	240	240	240	480	480	480	600Y/347	600Y/347
(kA)	}	voltage	600Y/347V	60		_	_		_			18	18
breaking capacities	UL 489		480V				_		18(10) (*10)	30	30	50	50
gci	CSA C22.2 No.5	AC	240V	5	10	14	14	35(25) (*10)	50(25) (*10)	50	50	100	100
ab			120V	10	-	-	-	-	-	-	-	-	-
Ö		DC	60V	10	_	_	_	_	_	_	_	_	_
Ξ			on voltage Ui (V)		440	440	600	500	500	690	690	690	690
ea		T LALOO II TOOMAN	690V		-	-	-	-	-	8/4	8/4	10/5	10/5
ļ ģ			500V		_	_	7.5/4	10/5	18/9(10/5) (*10)	18/9	18/9	25/13	25/13
G.			440V		_	7.5/4	10/5	15/8	25/13(15/8) (*10)	30/15	30/15	50/25	50/25
.₽	IEC 60947-2	AC	415V		_	10/5	10/5	15/8	25/13(15/8) (*10)	30/15	30/15	50/25	50/25
Į.	EN 60947-2 (Icu/Ics)		400V	-	10/7.5	10/5	10/5	15/8	25/13(15/8) (*10)	30/15	30/15	50/25	50/25
-R	(100/103)		380V		_	10/5	10/5	_	-	30/15	30/15	50/25	50/25
Rated short-circuit			230V	10/7.5	10/7.5	15/8	15/8	35/18(25/13) (*10)	50/25(25/13) (*10)	50/25	50/25	100/50	100/50
Ba		DC	250V		_	-	-	-	-	-	-	-	-
			60V	10/7.5		-	-	-	-	-	-	-	-
Rate	d impulse withstand v	oltage U	Jimp (kV)		6	6	8	8	8	8	8	8	8
	Current (*1	1)		AC/DC	AC	AC	AC	AC	AC	AC	AC	AC	AC
				compatible	Vac	Vac	Vee	Vaa	Vaa	Vee	Vee	Vaa	Vee
	Suitability for is				Yes Available	Yes –	Yes Available	Yes Available	Yes Available	Yes Available	Yes Available	Yes Available	Yes Available
	Reverse conne Utilization cate			,	A	_ A	Available	Available	Available	Available	Available	Available	Available
-	Pollution deg				3	3	3	3	3	3	3	3	3
FMC	environment condition (e		ent A or B)	Not	t applicable		Not Applicable		_				
(E)	. a . k	ca J	a a	18	36 54	36 54	50 75	50 75	50 75	90	90	90	90
ls (iii	<u> </u>	≤C >	b		124	120	150	120	120	160	160	160	160
Overall dimensions (r		1	С		44 (*7)	68	68	68	74	68	68	68	68
i ii	ٔ لكا ا	┧	ca		70 (*7)	90	90	96	102	90	90	90	90
	Mass of front-face			0.15	0.3 0.45	0.3 0.45	0.55 0.8	0.5 0.75	0.55 0.8	1.0 1.1	1.0 1.1	1.1	1.1
and	Screw termin				● (*8)	•	•	•	•	•	•	•	•
ation	Solderless term					-	•	•	•	•	•	•	•
Installation and connections	Solderless term Solderless term Bar Power symply solderless in	(BAI		<u> </u>		-	● (*4)	• (*E)	• (*E)	• (*E)	• (*E)	• (*E)	• (*E)
	Alarm switch	ad bar (SL/BA			- (*8)	- ● (*6)	● (*4, 5) ● (*6)	● (*5) ●	● (*5) ●	● (*5) ● (*6)	● (*5) ● (*6)	● (*5) ● (*6)	● (*5) ● (*6)
, ype	Auxiliary switch	(A)	X)	-	● (*8)	• (*6)	• (*6)			● (*6)	● (*6)	● (*6)	• (*6)
te-1	Shunt trip	(SH			● (*8)	● (*6)	● (*6)		-	● (*6)	● (*6)	● (*6)	● (*6)
Cassette-type coessories (*2)	Undervoltage trip	(UV			-	• ()	● (*6)			● (*6)	● (*6)	● (*6)	● (*6)
ခွင့် မရ	With lead-wire terminal b				_	•	•	•	•	•	•	•	•
_	Mechanical interloc	\rightarrow			-	_	-	-	-	_	_	-	-
(*2,	Handle lock	(HI			•	•	•	•	•	•	•	•	•
ries	device	(HL-	·S)			•	•	•	•	•	•	•	•
cessories (*2)	External	(1				•	•	•	•	•	•	•	•
	operating handle		V)		_	•	•	•	•	•	•	•	• (0.5)
External ac		1 (0	C) 127				• (*9)	_	-	• (*9)	• (*9)	• (*9)	● (*9)
tern	Terminal Large terminal co			-		(*2)	(*0)	•	•	(*2)	(*2)	(*2)	(*2)
Ĭ	IEC 35mm rail mountin			Stand	lard accessory	- (*3) Standard accessory	- (*3) Standard accessory	Standard accessory	Standard accessory	- (*3) -	- (*3)	- (*3)	- (*3)
	CE markin		143		f-declaration	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	– TÜV approval	TÜV approval	TÜV approval
-	UKCA mark				f-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
-	CCC	ıı ıy			Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified
	Automatic tripping	a device	9		mal-magnetic		Thermal-magnetic						
	Trip butto		-		-	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped
Pag	e of Characteristics a		ensions		202	204	206	208	208	2		2	
						DC for products	Pomarke		ith rated current				

- Notes: *1 The trip action characteristics differ between AC and DC for products that are compatible with both AC and DC.
 *2 These accessories differ from the general and CE/CCC products in specifications. Please consult us for details.
 *3 The standard structure conforms to IP20 (finger protection).
 *4 The circuit breakers with busbar terminals have insulation barriers.
 - *5 Circuit breakers for power supply solderless load screw terminal (SL/AMP-N) are available. In this case, a busbar terminal is not provided on the load side.
 - This accessory is cassette type and can be installed by customer. The breakers can be closely installed, except for those with UVT and NF50-SVFU model.
 - *7 Dimensions indicated is as below.




- Refer to page 203. No isolation function.
- *10 Rated short-circuit breaking capacities parenthesized are applied to below rated current 15A.

- Remarks: 1. Products with rated current parenthesized are produced
 - when an order is placed.

 2. The circuit breaker has the rated short-circuit breaking
 - capacity specified in the shaded cells.

 The 3-pole circuit breakers can be used on single-phase

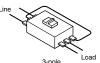

US UL Standard 489 UL File No.E167691 Body UL File No.E108284 Accessories

UL 489 Listed Molded Case Circuit Breakers

	Frame (A	1)		=			50		
Model				NF250	D-CVU	NF25	0-SVU	NF250)-HVU
Image									
	Rated current			125 150 175	250	125 150 175	250	125 150 175	250
Re	eference ambient ten Number of p		e 40°C	200 225 3	3	200 225	3	200 225	3
-	Number of p	Rated	AC (V)	240	240	480	480	3 600Y/347	600Y/347
₹ §		voltage		-		460	-	0001/34/	0001/34/
×		- Tanaga	600Y/347V	_	_	-	-	18	18
iğ.	UL 489 CSA C22.2 No.5	1	480V	-	-	35	35	50	50
) ac	CSA C22.2 NO.5	AC	240V	35	35	65	65	100	100
l ag			120V	-	-	-	-	-	-
short-circuit breaking capacities		DC	60V	-	-	-	-	-	-
ăĸi		Hated insulat	ion voltage Ui (V)	600	600	690	690 8/4	690	690
bre			690V 500V	10/8	10/8	8/4 25/13	25/13	10/5 36/18	10/5 36/18
l Ħ			440V	15/12	15/12	36/18	36/18	50/25	50/25
l is	IEC 60947-2	AC	440V	25/19	25/19	36/18	36/18	50/25	50/25
=	EN 60947-2	^0	400V	25/19	25/19	36/18	36/18	50/25	50/25
l s	(lcu/lcs)		380V	25/19	25/19	36/18	36/18	50/25	50/25
8			230V	36/27	36/27	65/33	65/33	100/50	100/50
Rated		DC	250V	-	-	-	-	-	-
۱ "		DC	60V	_	-	-	-	-	_
Rate	d impulse withstand		Jimp (kV)	8	8	8	8	8	8
	Current (*			AC	AC	AC	AC	AC	AC
	Suitability for is			Yes	Yes	Yes	Yes	Yes	Yes
	Reverse conn			Available	Available	Available	Available	Available	Available
-	Utilization cat			A 3	A 3	A 3	A 3	A 3	A 3
EMC	Pollution de environment condition (ont A or B)	Not applicable	Not applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable
		ca J	a	105	105	105	105	105	105
la all		جَعِ	b	185	185	185	185	185	185
Over		ПІ	С	68	68	68	68	68	68
Overall dimensions (mm)		L ca		92	92	92	92	92	92
	Mass of front-face	type (k	g)	1.6	1.6	1.6	1.6	1.6	1.6
Installation and connections	Screw termi			•	•	•	•	•	•
달달	Solderless term			•	•	•	•	•	•
lag c	Bar	(BA		- (+0)	• (40)	• • • • • • • • • • • • • • • • • • • •	• (40)	• (40)	• (+0)
ج ا	Power supply solderless I			●(*6) ●(*5)	●(*6)	●(*6) ●(*5)	●(*6) ●(*5)	●(*6)	●(*6) ●(*5)
, ype	Alarm switch Auxiliary switch	(A	L)	●(*5) ●(*5)	●(*5) ●(*5)	●(*5) ●(*5)	●(*5) ●(*5)	●(*5) ●(*5)	●(*5) ●(*5)
Cassette-type accessories (*2)	Shunt trip	(SF		●(*5)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)
asse esso	Undervoltage trip	(U)		●(*5)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)
ပြိ မွ	With lead-wire terminal I			•	•	•	•	•	•
	Mechanical interloc		/II) 136	-	-	-	-	-	-
1 5	Handle lock	(H		•	•	•	•	•	•
l ië	device	(HL	-5)	•	•	•	•	•	•
3880	External		(F) 123	•	•	•	•	•	•
300	operating handl		V) 123 C) 127	● ● (*4)	● ● (*4)	● ● (*4)	● ● (*4)	● ● (*4)	● ● (*4)
<u>a</u>	Terminal Large terminal of		111	• (4)	• (4)	• (4)	• (4)	• (4)	• (4)
External accessories (*2)	cover Small terminal c			• (*3)	• (*3)	- (*3)	- (*3)	- (*3)	- (*3)
تن	IEC 35mm rail mounti			- (- /	- (- /	-	-	-	-
	CE markir			TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval
	UKCA mark			Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
	CCC			Certified	Certified	Certified	Certified	Certified	Certified
	Automatic trippin		е	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic
	Trip butto			Equipped	Equipped	Equipped	Equipped	Equipped	Equipped
Pag	e of Characteristics	and dim	ensions	2	12	2	12	2	12
					100				

- *1 The operating characteristics are different between AC and DC.
 *2 These accessories differ from the general products in specifications.
 Please consult us for details.

- Please consult us for details.
 The standard structure conforms to IP20 (finger protection).
 No isolation function.
 This accessory is cassette type and can be installed by customer. The breakers can be closely installed, except for those with UVT.
 Circuit breakers for power supply solderless load screw terminal (SL/AMP-N) are available. In this case, a busbar terminal is not provided as the lead side. on the load side.

Remarks: 1. Products with rated current parenthesized are produced

when an order is placed.

2. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

3. The 3-pole circuit breakers can be used on single-phase

US UL Standard 489 UL File No.E167691 Body UL File No.E108284 Accessories

UL 489 Listed Molded Case Circuit Breakers

	Frame (A			40	00	60	30
	Model	'/		NF400-SWU	NF400-HWU	NF630-SWU	NF630-HWU
	Image						
Re	Rated current eference ambient ten	In (A)	e 40°C	250 300 350 400	250 300 350 400	500 600 630	500 600 630
- 110	Number of p		0 40 0	3	3	3	3
	Trainibo. o. p	Rated	AC (V)	600Y/347	600Y/347	600Y/347	600Y/347
₹		voltage	DC (V)	_	_	_	_
s s	400		600Y/347V	20	25	20	25
iji.	UL 489 CSA C22.2 No.5	AC	480V	35	65	35	65
ac	CSA C22.2 NO.5	AC	240V	65	100	85	100
l g			120V	-	-	_	_
Rated short-circuit breaking capacities (kA)		DC	60V	-	-	-	-
a <u>ķ</u>		Rated insulat	ion voltage Ui (V)	690	690	690	690
) Te			690V	10/10(5/5)(*4)	15/10	10/10	15/10
1 =			500V	30/30(25/25)(*4)	42/42	30/30	42/42
ig.	IEC 60947-2	40	440V	42/42(36/36)(*4)	65/65	42/42	65/65
1 년	EN 60947-2	AC	415V 400V	45/45(36/36)(*4)	70/70 70/70	45/45 45/45	70/70 70/70
<u>ē</u>	(Icu/Ics)		380V	45/45(36/36)(*4) 50/50(42/42)(*4)	70/70	50/50	70/70
ő			230V	85/85(65/65)(*4)	100/100	85/85	100/100
ate			250V	83/63(03/63)(4)	-	-	-
L		DC	60V				
Rate	d impulse withstand	oltage I		8	8	8	8
- 1010	Current		5p (1.1.)	AC	AC	AC	AC
	Suitability for is			Yes	Yes	Yes	Yes
	Reverse conn	ection		Available	Available	Available	Available
	Utilization cat			A	A	A	A
	Pollution de			3	3	3	3
	environment condition (Not Applicable	Not Applicable	Not Applicable	Not Applicable
(E	i Lau F	ca _c	a	140	140	210	210
verall		Ħ	b	257	257	275	275
Overall dimensions (mm)	ᅵ빌ᆙᄹ	Ш	С	103 155	103 155	103 155	103 155
ē	Mass of front-face	tupo (k	ca ca	5.7	5.7	9.6	9.6
Ð				- -	- -	9.0	9.0
on ar	Solderless term			•			_
allatic	Bar Power sunnly solderless	(BA		● (*5)	●(*5)	●(*5)	● (*5)
Installation and connections	Power supply solderless I			●(*5)	-	●(*5)	
	Alarm switch	(A	L)	● (*3)	● (*3)	●(*3)	● (*3)
Jr.	Auxiliary switch	(A		●(*3)	●(*3)	●(*3)	●(*3)
Cassette-type accessories	Shunt trip	(SF	11)	● (*3)	●(*3)	● (*3)	●(*3)
ass	Undervoltage trip	(U\		•	•	•	•
0 "	With lead-wire terminal t			•	• (*4)/**	• (*4)/**	•
Š	Mechanical interloc		/II) 136	●(*1)(*2) ●(*6)	●(*1)(*2)	●(*1)(*2)	●(*1)(*2) ●(*6)
Orie	Handle lock device	(H		● (*6)	● (*6)	● (*6)	●(*6)
SS			EV	<u> </u>	<u>-</u>	<u> </u>	-
Ö	External		123 V)	•	•	•	•
External accessories	operating handl		C) 127	● (*1)	● (*1)	_	_
Ľ	Terminal Large terminal c		111	•	•	•	•
l 🖁	cover Small terminal c			=	_	_	-
L"	IEC 35mm rail mounti		ers 143	-	-	-	-
	CE markir			TÜV approval	TÜV approval	TÜV approval	TÜV approval
	UKCA mark	king		Self-declaration	Self-declaration	Self-declaration	Self-declaration
	CCC			Certified	Certified	Certified	Certified
	Automatic trippin		Э	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic
L_	Trip butto			Equipped	Equipped	Equipped	Equipped
Pag	e of Characteristics	and dim	ensions	214	214	216	216
						والمراجع والم والمراجع والمراجع والمراجع والمراجع والمراجع والمراجع والمراع	

Remarks: 1. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

2. The 3-pole circuit breakers can be used on single-phase circuits.

US UL Standard 489 UL File No.E167691 Body UL File No.E108284 Accessories

Notes: *1 No isolation function.
*2 Not acquire the TÜV certification.
*3 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.

*4 The values in parentheses apply to the circuit breakers with solderless terminals.

<sup>The values in parentnesse apply to the circuit breakers with soldeness terminals.
The circuit breakers with busbar terminals have insulation barriers.
Please consult us. (Models which are not UL or TUV certified but can be locked in the ON and OFF positions are available.)
Not available for 630A.</sup>

UL 489 Listed Earth Leakage Circuit Breakers (Harmonic Surge Ready)

Frame (A)	50	N1/400 01/511	100	NV400 LIDIL	N11/405		25	- 10.01
Model	NV50-SVFU	NV100-CVFU	NV100-SRU	NV100-HRU	NV125	o-8VU	NV125	o-HVU
lmage	STATE OF THE PARTY	82 · 5 · 6 · 6 · 6 · 6 · 6 · 6 · 6 · 6 · 6						
Rated current In (A)	(5) (10) 15 20	60 (70) 75	5 10 15 20 5 10 15 20 (25) 30 40 50	5 10 15 20 (25) 30 40 50	15 20 30 (40)		15 20 30 (40)	
Reference ambient temperature 40°C	30 40 50	(80) (90) 100	(25) 30 40 50 60 (70) 75 (80) (90) 100	60 (70) 75 (80) (90) 100	50 60 75 100	125	50 60 75 100	125
Number of poles	2 3	3	2 3	3	3	3	3	3
Phase line (*1)	1φ2W 3φ3W, 1φ2W 120-240	3φ3W, 1φ2W 120-240	1φ2W 3φ3W,1φ2W 120-240	3φ3W,1φ2W 120-240-480	3φ3W, 1φ2W 120-480	3ø3W, 1ø2W 120-480	3¢3W, 1¢2W 120-480	3φ3W, 1φ2W 120-480
Rated operational UL 489								
EN 60947-2	100-240 100-440	100-440	100-230	100-230-400-440	100-440	100-440	100-440	100-440
Rated current sensitivity I△n mA Pickup current, UL 1053 Max. operating time (s) at 5l△n (*4)	30 50 30 50 100	30 50 100/200/500 selectable	30 50 30 50 100/300/500 selectable	30 50 100/300/500 selectable	30 50 100/200/500 selectable	30 50 100/200/500 selectable	30 50 100/200/500 selectable	30 50 100/200/500 selectable
Pickup current, UL 1053	75% of I∆n	75% of I∆n	75% of I∆n	75% of I∆n			75% of I∆n	
		0.04	0.04 0.04	0.04	0.04	0.04	0.04	0.04
Earth leakage protection characteristic	Type A	Type A	Type A	Type A	Тур			e A
Earth leakage indication system	Display window		Mechanical type (button)					
±€ UL 489 460 480V	-	-	-	18(10) (*10)	30	30	50	50
UL 489 CSA C22.2 No.5 AC 240V 120V 120V 120V 120V 120V 120V 120V 12	14	14 14	35(25) (*10)	50(25) (*10)	50	50	100	100
120V 2 g 440V	14 - 7.5/4	14	35(25) (*10)	50(25) (*10)	50 30/15	50 30/15	100 50/25	100 50/25
EC 60947-2 440V 400V	- 7.5/4 - 10/5	10/5	-	25/13(15/8) (*10) 25/13(15/8) (*10)	30/15	30/15	50/25	50/25
EN 60947-2 AC 230V	15/8 15/8	15/8	35/18(25/13) (*10)	50/25(25/13) (*10)	50/15	50/15	100/50	100/50
## BEC 60947-2 AC 400V 230V 100V	15/8 15/8	15/8	35/18(25/13) (*10)	50/25(25/13) (*10)	50/25	50/25	100/50	100/50
Rated impulse withstand voltage Uimp (kV)		6	8	8	6	6	6	6
Suitability for isolation	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Reverse connection (below 240VAC)	-	Available	 Available 	Available	Available	Available	Available	Available
Utilization category	A	A	A	Α	Α	А	Α	Α
Pollution degree	2	2	2	2	2	2	2	2
EMC environment condition (environment A or B)		A	A	A	Α	A	Α	Α
	36 54	75	50 75	75	90	90	90	90
	120	150	120	120	160	160	160	160
Denoto C ca	68	68 90	68	74 102	68	68	68	68 90
Mass of front-face type (kg)	90	0.9	96 0.55 0.85	0.95	90	90 1.2	90	1.2
		0.9	0.55 0.65	0.95	1.2	1.2	1.2	1.2
Screw terminal (AMP-N) Page Solderless terminal (SL) Bar (BAR) 98 Power supply solderless load bar (SL)BAR)		•	•	•	•	•	•	•
Bar (BAR) 98	_	● (*5)	•	•	•	•	•	•
	-	●(*5, *6)	●(*6)	● (*6)	●(*6)	● (*6)	● (*6)	●(*6)
Φ Ω Alarm switch (AL)	- ●(*8)	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)
Auxiliary switch (AX)	- ● (*8)	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)
b Shunt trip (SHT)	- ● (*8)	●(*8) ●(*8)	●(*8) ●(*8)	●(*8) ●(*8)	●(*8) ●(*8)	●(*8) ●(*8)	●(*8) ●(*8)	●(*8) ●(*8)
Alarm switch Auxiliary switch Shunt trip Undervoltage trip With lead-wire terminal block (SLT) With lead-wire terminal block Test button module Test button module TEST button module	- •	●(*8)	●(*8)	●(*8)	●(*8)	●(*8) ●	●(*8)	●(*8) ●
Test button module (TBM) 121	- (*9)	•	•	•	● (*9)	●(*9)	● ●(*9)	●(*9)
Mechanical interlock (MI) 136	-	_	_		-	-		
Handle lock (HL)	•	•	•	•	•	•	•	•
device (HL-S) 134	•	•	•	•	•	•	•	•
Handle lock (HL) 134	•	•	•	•	•	•	•	•
External (V) 123 (V)	•	•	•	•	•	•	•	•
g operating flandie (C) 127	-	●(*11)	-	-	●(*11)	●(*11)	●(*11)	●(*11)
Teminal Large terminal cover (TC-L) cover Small terminal cover (TC-S) 128	0 (40)	(40)	• (40)	• (40)	(40)	(40)	(40)	(#2)
Small terminal cover (TC-S) Small terminal cover (TC-S) IEC 35mm rail mounting adapters 143	●(*3) Standard accessory	- (*3) Standard accessory	●(*3) Standard accessory	●(*3) Standard accessory	- (*3)	- (*3)	- (*3)	- (*3)
CE marking	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approvet	TÜV approvet	TÜV approval	TÜV approval
UKCA marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration			Self-declaration	
CCC	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified
Automatic tripping device	Thermal-magnetic	Thermal-magnetic	Hydraulic-magnetic	Hydraulic-magnetic	Thermal-magnetic		Thermal-magnetic	
Trip button	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	
Page of Characteristics and dimensions	204	206	208	208	21		2	
Notes: *1 When using 3-note earth-leak		share O wire Por	narks: 1 Products with ra	atad aurrant paranthagiza				a al

Notes: *1 When using 3-pole earth-leakage circuit breakers for 1-phase 2-wire system, connect cables/busbars to left and right poles, not to center

- system, connect cables/busbars to left and right poles, not to center pole.

 *2 These are different from general models in specifications. Consult us for the details.

 *3 The standard structure conforms to IP20 (finger protection).

 *4 The maximum operating time is 0.1 according to UL 1053.

 *5 The circuit breakers with busbar terminals have insulation barriers.

 *6 Circuit breakers for power supply solderless load screw terminal (SL/AMP-N) are available. In this case, a bar terminal is not provided on the load side.

 *7 Circuit breakers for 100VAC do not have obtained CCC certificate.
- Circuit breakers for 100VAC do not have obtained CCC certificate.
- This accessory is cassette type and can be installed by customer. The breakers can be closely installed, except for those with UVT and NV50-SVFU model.
- Standard type is SLT equipped.
 Rated short-circuit breaking capacities parenthesized are applied to below rated current 15A.
- *11 No isolation function.

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.

2.	Rated operational voltage	Applicable circuit voltage	Available voltage range
	120-240V (UL)	120/240V	66-264V
	120-240-480V (UL)	120/240/480V	66-528V
	240V (UL)	240V	132-264V
	100-230V (IEC)	100/110/200/220/230V	85-253V
	100-240V (IEC)	100/110/200/220/230/240V	85-264V
	100-230-400-440V (IEC)	100/110/200/220/	
	100-230-400-440V (IEC)	230/240/254/265/	85-484V
	. ,	380/400/415/440V	
	230-400-440V	230/240/254/265/	195-484V
	(IEC)	380/400/415/440V	100 4041

US UL Standard 489 UL File No.E167691 Body UL File No.E108284 Accessories

UL 489 Listed Earth Leakage Circuit Breakers (Harmonic Surge Ready)

Frame (A)						2	50			
Model					NV250		NV25	D-SVU	NV25	D-HVU
Image										
Re	Rated current eference ambient ten		ure 4	10°C	125 150 175 200 225	250	125 150 175 200 225	250	125 150 175 200 225	250
	Number of p				3	3	3	3	3	3
	Phase line				3ø3W, 1ø2W	3ø3W,1ø2W	3ø3W, 1ø2W	3φ3W, 1φ2W	3ø3W, 1ø2W	3ø3W, 1ø2W
Data	ed operational UL 48	9			120-240	120-240	120-480	120-480	120-480	120-480
	ige AC V IEC 60 EN 60	0947-2	2		100-440	100-440	100-440	100-440	100-440	100-440
8	Rated current sens	itivity	l∧n	mΔ	30 50 100/300/500	30 50 100/300/500		30 50 100/200/500		
High-speed type	i iaieu cuitetti SellS		тДП		selectable	selectable	selectable	selectable	selectable	selectable
liβ	Pickup current, UL				75% of I∆n	75% of I∆n	75% of I∆n	75% of I∆n	75% of I∆n	75% of I∆n
					0.04	0.04	0.04	0.04	0.04	0.04
	h leakage protection			stic	Тур			e A		e A
Eart	h leakage indication	systen			Mechanical type (button)	Mechanical type (button)		Mechanical type (button)		
₹	UL 489			480V	-	-	35	35	50	50
s (k	CSA C22.2 No.5	AC		240V	35	35	65	65	100	100
short-circui capacities (00A 022.2 NU.5			120V	35	35	65	65	100	100
shor			-	440V	15/12	15/12	36/18	36/18	50/25	50/25
Spe	IEC 60947-2 EN 60947-2	AC		400V	25/19	25/19	36/18	36/18	50/25	50/25
Rated breaking of	(lcu/lcs)	AC	- 2	230V	36/27	36/27	65/33	65/33	100/50	100/50
pre l	(Icu/Ics)		Γ.	100V	36/27	36/27	65/33	65/33	100/50	100/50
	d impulse withstand	voltage	e Uim	(kV) מר	6	6	6	6	6	6
	Suitability for is			- /	Yes	Yes	Yes	Yes	Yes	Yes
Re	everse connection (b			AC)	Available	Available	Available	Available	Available	Available
	Utilization cat			, ,	A	A	A	A	A	A
	Pollution de				2	2	2	2	2	2
EMC	environment condition (ment	A or B)	Ā	A	A	A	A	Ā
		, ca _			105	105	105	105	105	105
E (IIII)		<u> </u>		b	185	185	185	185	185	185
Over		ЛΙ		c	68	68	68	68	68	68
Overall dimensions (╚ `	4		ca	92	92	92	92	92	92
_	Mass of front-face	tyne			1.2	1.2	1.8	1.8	1.8	1.8
Ð			AMP-N)	Page	•	•	•	•	•	•
Installation and connections	Solderless term		(SL)	i age	•	•	•	•	•	•
ne di	Bar		BAR)	98	•	•	•	•	•	•
nsta So	Power supply solderless I		SL/BAR)	00	● (*6)	●(*6)	●(*6)	●(*6)	●(*6)	●(*6)
	1		(AL)		●(*8)	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)
/pe (*2)	Auxiliary switch		(AX)	1 1	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)
e-t)	Shunt trip		SHT)	115	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)
Cassette-ty	Undervoltage trip		UVT)	1	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)	●(*8)
ass	With lead-wire terminal		SLT)	120	•	•	•	•	•	•
ျပ္ပည္တိုင္တ	Test button module		TBM)	121	● (*9)	●(*9)	●(*9)	●(*9)	•(*9)	●(*9)
	Mechanical interloc		(MI)	136	-	-	-	-	-	-
(*2)	Handle lock		(HL)		•	•	•	•	•	•
accessories (*2)	device		HL-S)	134	•	•	•	•	•	•
ŏñó		-1,	(F)		•	•	•	•	•	•
Sess	External		(V)	123	•	•	•	•	•	•
aoc	operating handl	le	(C)	127	● (*11)	● (*11)	●(*11)	●(*11)	●(*11)	●(*11)
nal	Terminal Large terminal of	cover (7	TC-L)		•	•	•	•	•	•
External	cover Small terminal c		TC-S)	128	●(*3)	●(*3)	- (*3)	- (*3)	- (*3)	- (*3)
ű	IEC 35mm rail mounti			143	Standard accessory	Standard accessory	-	-	-	
-	CE markir		-1010		TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval
-	UKCA mark				Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
-	CCC	riily			Certified	Certified	Certified	Certified	Certified	Certified
-	Automatic trippin	a dovi	ico		Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic
-	Trip butto		ice_			Equipped			Equipped	Equipped
Da-			imar	oiors	Equipped		Equipped	Equipped		
Pag	ge of Characteristics	and di	ırnen	ISIONS	21	12	2	12	2	12

Notes: *1 When using 3-pole earth-leakage circuit breakers for 1-phase 2-wire system, connect cables/busbars to left and right poles, not to center

- system, connect cables/busbars to left and right poles, not to center pole.

 *2 These are different from general models in specifications. Consult us for the details.

 *3 The standard structure conforms to IP20 (finger protection).

 *4 The maximum operating time is 0.1 according to UL 1053.

 *5 The circuit breakers with busbar terminals have insulation barriers.

 *6 Circuit breakers for power supply solderless load screw terminal (SL/AMP-N) are available. In this case, a bar terminal is not provided on the load side.

 *7 Circuit breakers for 100VAC do not have obtained CCC certificate.

 *8 This accessory is cassette type and can be installed by customer. The breakers can be closely installed, except for those with UVT and NV50-SVFU model.

 *9 Standard type is SLT equipped.

- Standard type is SLT equipped.
 Rated short-circuit breaking capacities parenthesized are applied to below rated current 15A.
- *11 No isolation function.

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.

Rated operational voltage	Applicable circuit voltage	Available voltage range
120-240V (UL)	120/240V	66-264V
120-240-480V (UL)	120/240/480V	66-528V
240V (UL)	240V	132-264V
100-230V (IEC)	100/110/200/220/230V	85-253V
100-240V (IEC)	100/110/200/220/230/240V	85-264V
100-230-400-440V (IEC) 100-440V (IEC)	100/110/200/220/ 230/240/254/265/ 380/400/415/440V	85-484V
230-400-440V (IEC)	230/240/254/265/ 380/400/415/440V	195-484V

US UL Standard 489 UL File No.E167691 Body UL File No.E108284 Accessories

UL 1077 Recognized Circuit Breakers for Control boards

	Frame (A)	30		50	100	30		50	100
	Model	NF30-FAU	NF50-FAU	NF50-FHU	NF100-FHU	NV30-FAU	NV50-FAU	NV50-FHU	NV100-FHU
	Image			FORE		67.7	657	FOFIE	E:EE
	Phase line (*1)				-	1¢2W 3¢3W 1¢2W	1¢2W 3¢3W 1¢2W	1¢2W 1¢3W 1¢2W 1¢2W	3φ3W 1φ3W 1φ2W
	Number of poles	2 3	2 3	2 3	3	2 3	2 3	2 3	3
	Rated current In (A)			3 5 10 15 20 30 40 50	60 75 100			5 10 15 20 30 40 50	60 75 100
Re	ference ambient temperature 40°C		5 10 15 20		00 73 100		5 10 15 20	3 10 13 20 30 40 30	00 73 100
	Motor protection rated current (*12)	5 10 15 20 30	30 40 50	2 4 6.3 03 0.4 0.6 0.8 1.2 1.4 2 2.5 4 7.1 8 12 16 25 32 45	-	5 10 15 20 30	30 40 50	- 1.4 2.5 4 6.3 7.1 16 25 32 45	-
Dec.	Rated current sensitivity IAm (mA)				-	30	30	30 50 100	30 50 100
High-speed type	Pickup current sensitivity UL1053				-	75% of I∆n	75% of I∆n	75% of I∆n	75% of I∆n
					-	0.04	0.04	0.04	0.04
	th leakage protection characteristic				-	Type AC	Type AC	Type AC	Type AC
	Earth-leakage indication system				-	Mechanical type(button)		Mechanical type(button)	
short-circuit capacities (kA)	Rated AC(V)	240	240	240	240	240	240	240	240
# * S	UL 1077 voltage DC(V)	60	60	-	_	_	-	_	-
HS :E	CSA C22.2 No.235 AC 240V	2.5(*2)	2.5(*2)	5	5	2.5(*2)	2.5(*2)	5	5
불	DC 60V	1.5	1.5	-	-	-	-	-	-
Sa s	Rated insulation voltage (V)	250	250	500	500	230	230	230	230
ing	IEC 60947-2 EN 60947-2 AC 400 V			1.5/1	-			_	-
Rated s breaking c	(lcu/lcs) AC 230 V	2.5/1(*3)	2.5/1(*3)	5/2	5/2	2.5/1(*3)	2.5/1(*3)	5/2	5/2
ق	DC 60 V	1.5/1	1.5/1	_	-	_	-	_	-
Rate	d impulse withstand voltage Uimp (kV)	2.5	2.5	4	4	2.5	2.5	4	4
	Current	AC/DC compatible	AC/DC compatible	AC	AC	AC	AC	AC	AC
	Suitability for isolation	_	_	_	-	_	-	_	-
	Reverse connection	-	-	-	-	-	-	-	-
	EMC environment condition (environment A or B)	Not applicable	Not applicable	Not applicable	Not applicable A	A	A	A	A
	Utilization category	A		A A 2		A 2	A	A	A
<u> </u>	Pollution degree	2			2		2	2	2
Overall dimensions (mm)	a ca a	40 60	40 60	50 75	75	40 60	40 60	50 75	75
veral		72	72	96	97.5	72	72	96	97.5
lo sie	비 웹	57	57	60	60	57	57	60	60
- 5	Mass of front-face type (kg)	73.5 0.14 0.2	73.5 0.16 0.22	76 0.25 0.37	76 0.51	73.5 0.16 0.22	73.5 0.18 0.24	76 0.3 0.43	76 0.57
_	Adapter for IEC 35mm rail	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped
latio	Mounting screws	●(*4)	€quipped ●(*4)	€quipped ●(*4)	€quipped ●(*4)	●(*4)	€quipped ●(*4)	●(*4)	€quipped ●(*4)
Installation	Front-plate attachment	●(*5)	●(*5)	(4)	(4)	●(*5)	●(*5)		(4)
Connection	Front type Page 98	•	•	•	•	•	•	•	•
es	Alarm switch (AL)	•	•	●(*7)	●(*8)	•	•	● (*7)	●(*8)
ا <u>ه</u> به	Auxiliary switch (AX) 115	•	•	●(*7)	●(*8)	•	•	●(*7)	●(*8)
Inter	Shunt trip (SHT)	•	•	●(*7)	●(*8)	_	-		- '
_ g	With lead-wire terminal block (SLT) 120	•	•	•	•	•	•	•	•
38	Lock cover (LC)	● (*10)	●(*10)	●(*11)	●(*11)	●(*10)	●(*10)	●(*11)	●(*11)
External	Handle lock device (HL)	●(*10)	●(*10)	●(*11)	●(*11)	●(*10)	●(*10)	●(*11)	●(*11)
38s	Terminal (TC-L)	_	_	●(*11)	●(*11)	_	-	•	•
ľω̈́g	Small terminal cover (TC-S) 128	•	•	•	•	•	•	•	•
	Rear terminal cover (RTC)	•	•	-		•	•		-
	CE marking	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval
	UKCA marking	Self-declaration		Self-declaration		Self-declaration	Self-declaration		Self-declaration
<u></u>	CCC	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified
<u></u>	Automatic tripping device	Thermal	Thermal		Hydraulic-magnetic	Thermal	Thermal	Hydraulic-magnetic	Hydraulic-magnetic
	Trip button	-(*6)	-(*6)	-(*6)	-(*6)	_	_	_	-
Pag	e of Characteristics and dimensions	218	218	220	220	218	218	220	220
Notes	: *1 If using a 3-pole Earth-leakage	circuit-breakers	s a 1-pole 2-phase	device, connect the	e left and right pole	s and not the centr	al pole. If using as	1-pole 3-phase, co	nnect the neutral

^{*1} If using a 3-pole Earth-leakage circuit-breakers as a 1-pole 2-phase device, connect the left and right poles and not the central pole. If using as 1-pole 3-phase, connect the neutral wire to the central pole. (1\(\phi\)3W cannot be used with UL.)
*2 Rated short-circuit breaking capacity of rated current 5A is 1.5kA.
*3 Rated short-circuit breaking capacity of rated current 5A is 1.5/1kA.
*4 Mounting screws are not attached.
*5 Front-plate attachment is possible without nut bolting from back. (Mounting screws are not attached.) In this case a terminal screw can be bolted from the back of molded-case circuit breaking. *5 Front-plate attachment is possible without nut bolting from back.(Mounting screws are not attached.) In this case a terminal screw can be bolted from the back of molded breaker.

*6 When alarm switch (AL) is installed, this product has a trip-button. (When Shunt trip device (SHT) + alarm switch (AL) is installed, this product don't have a trip-button.)

*7 Lead wires are normally extended laterally.

Grooves are provided standard on the face of the breaker, allowing the extension of the lead wires along them.

*8 Lead wires are usually extended load side.

*9 In case of UL1053, operating time is 0.1s.

*10 It is recognition of UL (cURus) CSA. It is not recognition of CCC, TÜV, UKCA.

*11 Not acquire UL (cURus), CCC, TÜV, UKCA.

*12 Only sensitivity current 30mA or 50mA can be manufactured at Motor protection rated currents.

Detailed 2 Specifications 5

Measuring Display Unit Breakers

MDU Breakers

		ame (A))				50		40				00	
		Model			NF250-SE	v with MDU	NF250-HE	V with MDU	NF400-SEW with MDU	NF400-HEW with MDU	NF800-SEW with MDU	J NF800-HEW with MDU	NF800-SEW with MDU	NF800-HEW with MDU
	!	mage							D					
Re	Rated of			e 40°C	Adjustable 125-250 (12.5A step)				Adjustable 200 225 250 300 350 400		Adjustable 300 350 400 500 600 630		Adjustable 400 450 500 600 700 800	
	Numb	er of po	oles		3	4	3	4	3 4	3 4	3 4	3 4	3 4	3 4
	Ph	ase line)					3-p	oole type: 3ø3W 4-	pole type: 3ø4W (3		used as a 1ø2W ur	nit.)	
-	Rated insula	tion vol	tage Ui	(V) 690V		6 /8	90	0/8	10/10	90 10/10	10/10	15/15	90 10/10	15/15
Rated short-circuit breaking capacities (kA)	JIS C 8201-2- JIS C 8201-2- IEC 60947-2 (Icu/Ics)		AC	500V 440V 415V 400V 380V 230V 200V	18 36 36 36 36 85	/6 /18 /36 /36 /36 /36 /36 /85	30 50 70 75 75 100	6/23 6/23 6/50 6/75 6/75 6/75 6/100 6/100	30/30 42/42 50/50 50/50 50/50 85/85 85/85	50/50 65/65 70/70 70/70 70/70 100/100 100/100	30/30 42/42 50/50 50/50 50/50 85/85 85/85	50/50 65/65 70/70 70/70 70/70 100/100 100/100	30/30 42/42 50/50 50/50 50/50 85/85 85/85	50/50 65/65 70/70 70/70 70/70 100/100
Rat	GB/T 14048.2 (lcu/lcs)		AC	415 V 400 V 380 V	36. 36.	/36 /36 /36	75 75	6/75 6/75	50/50 50/50 50/50	70/70 70/70 70/70	50/50 50/50 50/50	70/70 70/70 70/70	50/50 50/50 50/50	70/70 70/70 70/70
Rate	d impulse with	stand v	oltane I	230 V Jimp (kV)	85.	/85	100 8	/100	85/85	100/100 3	85/85	100/100	85/85 3	100/100
, idio		Current		5p ()		/	C		A	C		A	.C	
	Suitabilit Revers						es -			es -		/es		es -
	Number of	e comine		ut current			,000			000		,000		000
(operating cycl		With curre	ent(440VAC)		10	,000		1,0	000	1,	,000		00
Rate	Utilizat d short-time resi	ion cate		kΔ (0.25c)			A -			<u>3</u>		I 7.6	3 	0.6
Tiale		ion deg		KA (0.233)			3	-		3	,		3	7.0
EMC	environment co	-					A			Α			Α	
Overall dimensions (mm)	< a	-	ca >	a b	105	140	105 65	140	140 185	140 185	210 280	210 280	210 280 75	210 280
Overal		្រៃវ្រ	1	С			65 68			03			03	
ije ije		, 1	Ш	ca			92			55			55	
Mass	of front-face ty MDU mour	pe (Brea iting me	ker mou ethod (*	nting) (kg) 1)	1.8	2.3	1.8	2.3 Externa	6.2 8 I mounting, panel mo	6.2 8 ounting, breaker mou	10.7 13.8 Inting, breaker mou	10.7 13.8 nting unit separate ins	11.1 14.4 stallation	11.1 14.4
Installation and connections	Front		(F) Page	•	•	•	•			Busbar	• r terminal		
<u>131</u> 80	Rear (*2)		(B) 98	Bar stud	Bar stud	Bar stud	Bar stud			Bai	r stud		
<u> </u>	Alarm switch			L)	●(*3)	•	●(*3)	•	•(*3)	
Cassette-type accessories (*4)	Auxiliary swi Shunt trip	tch	(A		●(*3) ●(*3)	•	●(*3) ●(*3)	•	•(*3)	
te-t	Undervoltage	e trip	(UV		•	•	• (3)	•		0)			3)	
sset	MDU transmiss				●(*3)	•	●(*3)	•	•(•(*3)	
Cas	With lead-wire t			11.)	•	● P	AL 1a	•		AL 1a		● P/	AL 1a	
ď	output (*5)	Cause of	fault (TI) 122						a, OAL 1a		● PAL 1a	a, OAL 1a	
	Electrical operat		e (*6) (NF mountir		Can be in		the case of pa		_			the case of panel n		0
	Mechanical interlock (MI) (*7)		edded ty		Can be in							the case of panel n		9.
	IIIICIIOCK (WII) (/)		r mounti		●(*8)	-	●(*8)	_	●(*8) –	●(*8) -	●(*8) -	●(*8) –	●(*8) –	●(*8) –
	Handle lock		<u>LC</u> HL	134			•		-	<u>-</u>			<u>-</u>	
jes	device	Н	IL-S				the case of pa					the case of panel n		
ssor	External		(F) (V)	_				anel mounting. anel mounting.				the case of panel n		
Sce	operating handle		(v)) (*7)	123				anel mounting.				the case of panel n		
External accessories			(*7)											
erne		Т	C-L		• (*9) (*10)	● (*10)	• (*9) (*10)	●(*10)				panel mounting, brollation (except NF40		
Ĭ			C-S		(*9)	●(*10)	• (*9) (*10)	●(*10)		broaner mounting	arm coparato mota		70 TIETT WILL WILL	/
	Terminal			128	(*10)	, ,		1						
	cover	Т	TC		• (*9) (*10)	• (*9) (*11)	• (*9) (*10)	• (*9) (*11)			•	(*10)		
İ		-	BTC		(*9)	●(*10)	(*9)	●(*10)	• 0	an he installed on	v on the nower su	pply side in the cas	e of external moun	tina
	Poor	tud (B-		100	(*10)	(10)	(*10)	• (10)		_	J cir ale power su	pp.y oldo ili tilo cas		a.
		markin		100	_	Self-de	claration	_	Self-ded	claration		Self-ded	claration	
	UKC	A marki				Self-de	claration		Self-ded	claration		Self-ded	claration	
	Automatic	CCC	n device	9	Flectroni		tified ve value i	detection)	Cert Electronic (effective	tified /e value detection)			tified /e value detection)	
		p buttor			_100110111	Equ	ipped	2010011011)	Equi	pped		Equi	pped	
Pag	e of Characte			ensions			22		22				26	

- Notes: *1 When the panel mounting is specified, the breaker comes with panel fittings and mounting screws, and the 2m long connecting cable (standard) is supplied. (The connecting cable length, 0.5m, 3m, 5m or 10m, can be specified.) When the breaker mounting separate unit is specified, the 2m long connecting cable (standard) is supplied. (The connecting cable length, 0.5m, 3m, 5m or 10m, can be specified.) Note that the cutout size in the breaker front plate varies depending on the MDU
 - mounting method.

 The 250A frame models come with the studs in the package. In the case of the 400 and 800A frame models, the studs are fitted before shipment. Specify the mounting

 - *3 These are cassette-type devices and can be installed by the user.
 *4 When the following devices are installed on the built-in display type, the built-in display unit must be separately mounted.
 2504 frame: Accessories with SLT or module on the right pole side
 2006 frame: Accessories with SLT or module on the right pole side 400/800A frame: Accessories on right pole side
- *5 The breaker with alarm contact output is provided with the module on the right side and requires a control power supply (common to 100 to 240VAC/DC, 50/60Hz, 5VA). The PAL output does not operate if the MDU is connected and the control power is not applied to the MDU. The output method of PAL of the alarm contact output can be set to "self-holding" or "automatic reset" from the MDU. The default setting is "automatic reset."

 *6 The breaker with alarm contact output (PAL), (TI) is not available.

 *7 It does not have an isolation function except for 400 to 800A frame models.

 *8 It can be manufactured only in the case of panel mounting.

 *9 For a 250A frame model with breaker mounting and PAL, the cover dedicated for the MDU is used. When placing an order only for the terminal cover, add MP to the end of the model name. (Example: TCL-2SV3MP)

 *10 In the case of external mounting, the cover dedicated for the MDU is used. When placing an order only for the terminal cover, add -MDUB to the end of the model name. (Example: TCL-2SV3-MDUB)

- *11 250A frame 4-pole models are not provided with TTC for external mounting.

Measuring Display Unit Breakers (Circuit Breakers with Measuring Display Unit)

- Three major features of Measuring Display Unit Breakers
 - 1. Saving of space and labor for installation
 - 2. Improved and diversified functions
 - 3. Provision of total cost advantages


Measuring Display Unit Breakers with built-in VT and CT and Measuring Display Unit realize measurement, display and transmission of electric circuit information in small space with less installation and wiring work and provide total cost

The Measuring Display Unit Breakers full of functions in small bodies are suitable for monitoring and protection of electric circuits and maintenance of equipment. A wide variety of models applicable to various networks supports the customers' energy saving activities through detailed energy control as energy saving supporting devices.

Simply realizing measurement and monitoring of electric circuits for supporting various types of energy saving control

The circuit breakers measure and display the load current, line voltage, electric power, electric energy, harmonic current, leak current and power factor to realize detailed energy control. They support customers' energy saving control.

Installation type

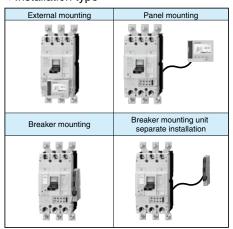

Communication type

	External mounting	Panel mounting	Breaker mounting	Breaker mounting unit separate installation
CC-Link	0	0	0	0
Pulse Output	0	0	0	0
MODBUS RTU	0	0	-	_
No Transmission	0	0	0	0

Measuring Display Unit cable list

Type name	Cable length
MDU-DP-CB-05M	0.5m
MDU-DP-CB-2M	2m
MDU-DP-CB-3M	3m
MDU-DP-CB-5M	5m
MDU-DP-CB-10M	10m

Measuring Display Unit list

Model type	Type name	Remarks
CC-Link communication	MDU-BC OOO	• The model names do not include OOO.
MODBUS communication	MDU-BM OOO	In the case of external mounting, specify the A frame type in OOO. For example, when the circuit breaker NF400-SEW with MDU and the Measuring Display Unit with CC-Link
Electric energy pulse output	MDU-BP OOO	communication are combined, the model name is MDU-BC400. If 800A frame is used, specify 800 in $\bigcirc\bigcirc\bigcirc$.
No transmission	MDU-BN OOO	In the case of panel mounting and breaker mounting unit separate installation, specify the cable length (0.5m, 2m, 3m, 5m or 10m) in OOO. For example, when the Measuring Display Unit with CC-Link communication is installed on the panel with a 3m cable, the model name is MDU-BC-PANEL 3M.

Visibility and operability improvement

Improved visibility

When an alarm or fault occurs, the LCD backlight changes from white to red.





When an alarm occurs (selectable from On and blinking)



Vertical

The display direction can be switched



Horizontal (built-in display)



Improved operability

The multi-function display screen reduces the number of operations.



can be quickly displayed from the



displayed in one window and can be seen at a glance



(Example) phases 1 and 2

the number of repeated operations can be reduced. (Up to 8 elements in four windows can be set.)

Specifications for Measuring Display Units (MDU)

The measurement and display items vary depending on the model and A frame.

	Display	Storage (*4)	With electric energy pulse output	With CC-Link communication	With MODBUS communication	Remarks		
urement/stored item (a	accuracy)(*1)(*2)(*3				(*5)			
		Each phase	0	-	-	0	0	
	Present value	Total (average) (*7)	_	-	-	0	0	
Load current		Max. phase	_	-	-	0	0	
(±1.0%)	Present demand	Each phase	0	-	-	0	0	
(21.070)	value (*6)	Max. phase	0	-	_	0	0	
		alue of all phases	0	0	_	0	0	
	Time of occurrence	of max. demand value of all phases	0	0	-	0	0	
	Present value	Between each two lines	0	-	-	0	0	
Line voltage		Total (average) (*7)	0	-	-	0	0	
(±1.0%)	Max. value betw		0	0	-	0	0	
	Time of occurren	ce of max. value between all lines	0	0	-	0	0	
		Fundamental wave of each phase	0	-	-	0	0	
	Present value	Individual harmonic current of each phase	0	-	_	0	0	
		Total harmonic current of each phase (*8)	0	-	-	0	0	
	Max. fundamental wave value of all phases		0	0	-	0	0	
		f max. fundamental wave value of all phases	0	0	-	-	-	
Harmonic current		vidual harmonic current of all phases	0	0	-	0	0	
(±2.5%)	Time of occurrence of ma	ax. value of individual harmonic current of all phases	0	0	-	0	0	
	Domand value	Total harmonic current of each phase (*8)	0	-	-	0	0	
	Demand value	Max. total demand value of all phases	0	0	-	0	0	
	(*6)	Time of occurrence of max. total demand value of all phases	0	0	-	0	0	
	Total distortion r	ate of each phase	0	-	-	-	-	
		nt of each phase	0	-	-	-	-	
	Present value		0	-	-	0	0	
Electric power		Present value	0	-	-	0	ō	1
(±1.5%)	Demand value	Max. value	0	0	-	0	Ö	1
(= , - ,	(*6)	Time of occurrence of max. value	0	0	-	0	0	1
	Present value	or occurrence of max. value	0	-	_	0	0	
Reactive power		Present value	0	-	-	0	0	1
(±2.5%)	Demand value	Max. value	0	0	_	0	0	1
(12.070)	(*6)	Time of occurrence of max. value	0	0	_	0	0	
Integrated vali			0	0	0	0	0	Value accumulated to the present after the previous reset
			0	-	_	0	0	value accumulated to the present after the previous reset
(±2.0%)	Amount for last one house			0	_	0		
(*9)		Max. value of amount for one hour Time of occurrence of max. value of amount for one hour					0	
			0	0		0	0	W
Reactive energy Amount for las				0		0	0	Value accumulated to the present after the previous reset
(±3.0%)	Amount for last one house			-	-	0	0	
(*9)	Max. value of amount for one hour			0	-	0	0	
(-/		e of max. value of amount for one hour	0	0	-	0	0	
ause of fault (*10)	Fault current (ad	ccuracy: ±15%)	0	0	-	0	0	Information on and causes of faults after the previous reset or the latest fault
(10)	Cause of fault		0	0	-	0	0	(Continuous monitoring)
Power factor	Present value		0	-	-	0	0	
(±5.0%)	Max. value		0	0	-	0	0	
		nce of max. value	0	0	-		-	
requency (±2.5%)	Present value		0	-	-	0	0	
Phase sequence	-		0	-	-	0	0	Except 250A frame
	Tripping status of		-	-	-	0	0	When the alarm switch for MDU transmission (option) is installed
Status of breaker	ON/OFF status		-		-	0	0	When the auxiliary switch for MDU transmission (option) is installed
Julius of Dicarci		s of tripping of breaker	-	0	-	0	0	When the alarm switch for MDU transmission (option) is installed
		s of opening/closing of breaker	_	0	-	0	0	When the auxiliary switch for MDU transmission (option) is installed
	PAL, OVER,		0	_	_	_	0	The LC display, transmission and contact output of the PAL function of
	IDM_AL, ILA_A	L, IUB_AL						250A frame model are activated when the PAL module (option)
Breaker alarms (*11)	Neutral wire ope	en phase alarm (NLA)	0	-	-	-	-	The neutral wire open phase alarm is displayed only. When the phase wire system is set to 1-phase 3-wire system, the function is turned on Rated operating overvoltage: 135VAC Operating time: 1s
	Time setting		0	-	-	0	0	It is necessary to re-set at the initial setting and after power failure (no power failure compensation)
		·						The default setting is 2min.
	Demand time lin	nit setting (*6)	0	0	-	0	0	The time limit can be set in one-minute increments in the range from 0 to 15min.
	IDM_AL (curren	t demand alarm)	0	0	_	0	0	The default setting of the function is OFF. Function: ON/OFF
			0	0				Pickup current: 50 to 100% (in 1% steps) Demand time limit: Can be set to 1 to 10min (1min steps), 15, 20, 25 or 30min. The default setting of the function is OFF. Function: Can be set to ON or OFF.
Initial setting	ILA_AL (current	ILA_AL (current open phase alarm)			-	0	0	Pickup current: Fixed to 10% (no setting) Operating time: 30s (no setting) The default setting of the function is OFF.
	IUB_AL (current	tunbalance alarm)	0	0	-	0	0	Function: Can be set to ON or OFF. Pickup current: Fixed to 30% (no setting) Operating time: 30s (no setting)
	Phase switching		0	0	-	0	0	The default setting is "no phase switching."
		elf-holding/automatic reset) setting	0	0	-	0	0	The default setting is "automatic reset."
	Phase wire syst	em	0	0	-	0	0	The default setting is "3-phase 3-wire" for 3-pole breakers or "3-phase 4-wire" for 4-pole breaker
	Electric energy		0	0	-	0	0	, , , , , , , , , , , , , , , , , , , ,
		arbitrary setting	0	0	-	0	0	
	Display direction		0	0			_	The default setting is "horizontal" for mounting on breaker and mounting on panel or
						_	1	"horizontal" for built-in display and separate mounting of built-in display unit.

- *1 The term "each phase" for load current and harmonic current refers to the 1st, 2nd, 3rd or N-th phase. However, the N-th phase applies only to 4-pole breakers.

 The term "between each two phases" for line voltage refers to "between 1 and 2," "2 and 3," "3 and 1," "1 and N," "2 and N" or "3 and N." However, "between 1 and N," "between 2 and N" and "between 3 and N" apply only to 4-pole breakers.

 This unit measures data every 0.25s. Therefore, it may not measure the operating current even when a low-order circuit breaker operates.

 2 The term "each max. value" refers to the largest value during the period from the start of use (the previous reset) to the present.

 3 Each max. value cannot be individually cleared.

 4 In the nonvolatile memory, the integrated values of electric energy and reactive energy are stored at power failure and every 30minutes, the fault current and its cause are stored upon occurrence of the fault, each set value is stored when it is set, and others are stored every 30minutes.

 5 Every time the electric energy is integrated into a pulse unit (the unit can be set to any of 1kWh, 10kWh, 100kWh, 100kWh and 1000kWh), a pulse is output. The pulse can be counted with a PLC.

 6 The demand time limit cannot be set individually. The setting is common.

 7 When the phase wire system is set, the average values of load current and line voltage are calculated as shown below.

 Average present value of voltage.

Phase wire system	Average present value of current	Average present value of voltage						
1-phase 2-wire system	Average present value of current = current of the 3rd phase	Average present value of voltage = voltage between 2 and 3						
1-phase 3-wire system	Average present value of current = (current of the 1st phase + current of the	Average present value of voltage = (voltage between 1 and 2 + voltage between 2						
i-priase 3-wire system	3rd phase)/2	and 3)/2						
3-phase 3-wire system	Average present value of current = (current of the 1st phase + current of the	Average present value of voltage = (voltage between 1 and 2 + voltage between 2						
3-phase 4-wire system	2nd phase + current of the 3rd phase)/3	and 3 + voltage between 3 and 1)/3						

Specifications for Measuring Display Units (MDU)

Item		Specifications					
Data update	cycle	250ms (harmonic current: 2s)					
	Voltage circuit	440V (3-phase 4-wire system is applicable only to 4-pole models.)					
Macaurament	Current circuit	Load current/harmonic current: 250A/400A/630A/800A (Automatically discriminated. Determined according to the A frame of breaker.					
Measurement rating input	Electric power	3×Measurement rating current ×440V (power factor 1)					
	Reactive power	√3×Measurement rating current ×440V (power factor 0)					
	Frequency	50Hz/60Hz (Automatic discrimination of frequency)					
		Current, Voltage: ±1.0% (of Measurement rating input)					
		Electric power: ±1.5% (of Measurement rating input)					
		Reactive power: ±2.5% (of Measurement rating input)					
		Harmonic current: ±2.5% (of Measurement rating input)					
Tolerances		ower factor: ±5.0% for an electric angle of 90°					
		requency: ±2.5% of actual value					
		Electric energy: ±2.0% of actual value (voltage range from 100V to 440V, range from 5 to 100% of current rating, power factor 1)					
		Reactive energy: ±3.0% of actual value (voltage range from 100V to 440V, range from 10 to 100% of current rating, power factor 0)					
		Fault current: ±15% of actual value (*1)					
Demand time	e limit setting range	0 to 15min (in 1min steps)					
	(1) Wh (integrated value),	Stored in the nonvolatile memory					
Power failure	varh (integrated value) (2) Max. value	* Wh and varh are stored at power failure and every 30min. The max. value is stored every 30min. The setting data is stored when the data is set.					
compensation	(3) Setting data	What are the stored at power tallate and every collins. The mast value is stored every collins. The setting data is stored when the data is set.					
	Clock	No power failure compensation					
Clock accura	асу	Error: approx. 1min/month					
Outside dime	ensions (unit: mm)	See "Features and outline."					
Control power		Common to 100 to 240VAC/DC, 50/60Hz (allowable voltage range: 85% to 110%), 12VA					
		Rush current flows transiently when the control power supply is turned on. (Rush current max. value 2A, current carrying time 1ms (240VAC)					
		(1) Use under the conditions specified in "2. Normal Service conditions" and "3. Mounting and Connections" in "8. Handling and Maintenance."					
		(2) Do not use in places with high temperature, high humidity, direct sunlight, or where static electricity is generated.					
Conditions fo	or use	When connecting electrical wires such as connection cables, transmission lines, and communication lines between the MDU breaker and the MDU, be careful not to generate static electricity. It may lead to malfunction and shortened service life.					

Notes: *1 The measurement of fault current caused by instantaneous tripping of the 250A frame breaker is enabled when the alarm switch for MDU transmission (option) is installed on the MDU breaker body

Electric energy pulse output

Item	Specifications		
Output element	Solid state relay (SSR),		
Output element	no-voltage a contact (Ca and Cb terminals: no polarity)		
Contact capacity	Common to 24VDC and 100 to 200VAC, 20mA		
Output pulse unit	1, 10, 100, 1000 or 10000kWh/pulse (selectable) (*1)		
Output pulse width	0.34 to 0.45s		
Max. wiring length	100m		

Notes: *1 The default setting is 1kWh/pulse

MODBUS communication

Item	Specifications		
Communication system	RS-485/2-wire system/half-duplex communication		
Communication	MODBUS-RTU communication		
protocol	(binary data transfer)		
Synchronization system	Asynchronous		
Connection system	Multi-drop wiring		
Transmission rate	2,400, 4,800, 9,600, 19,200, 38,400bps		
Bit length	8bits		
Stop bit	1bit or 2bits		
Parity bit	ODD, EVEN, NONE		
Slave address	1 to 127		
Decrease a time	Response is sent 1 sec or less after the		
Respons e time	completion of receipt of query data.		
Termination resistance	120Ω 1/2W		
Max. transmission distance	1,200m		
Max. number of connected units	31units/system		
Transmission line	SPEV(SB)-MPC-0.2×1P or more		
Transmission line	(Fujikura Dia Cable, Ltd.) or its equivalent		

lote: MODBUS communication is applicable to mounting on breaker and

CC-Link communication

Specifications

ILEIII	Specifications							
Communication speed	10M/5M/2.5M/625k/156kbps							
Communication system	Broadcast polling system							
Synchronization system	Frame synchronization system							
Coding system	NRZI							
Transmission format	Conforming to HDLC							
Number of occupied stations	Remote device occupying one station							
	Meet the following conditions.							
	Up to 42 units can be connected when only MDU breakers are used.							
	Condition 1 for number of connected units							
Number of connected	$[(1 \times a) + (2 \times b) + (3 \times c) + (4 \times d)] \le 64$							
Number of connected	a: Number of units occupying 1 station, b: Number of units occupying 2 stations							
units	c: Number of units occupying 3 stations, d: Number of units occupying 4 stations							
	Condition 2 for number of connected units							
	$[(16 \times A) + (54 \times B) + (88 \times C)] \le 2304$							
	A: number of units with 1 remote I/O station ≤ 64, B: number of remote device stations ≤ 42, C: number of local stations ≤ 26							
Station No.	Set in the range from 1 to 64. (Set the station No. without fail.)							
CC-Link version	CC-Link Ver.1.10							
Max. total cable length and cable length between stations	Master station Remote I/O station or remote device station Cable length Cable compatible with CC-Link Ver.1.10 (110-ohm termination resistance is used.) Local station or intelligent device station Local station or intelligent device station Local station or intelligent device station Cable length Cable length Cable length Cable length Cable length Cable compatible with CC-Link Ver.1.10 (110-ohm termination resistance is used.)							
	Cable length between stations 0.2m or more							
	Max. total cable length 1200m 900m 400m 160m 100m							
Connecting cable	Cable compatible with CC-Link Ver.1.10 (shielded 3-core twisted pair cable) * Cables made by different manufacturers can be used if the cables are compatible with Ver.1.10. the website of CC-Link Partner Association (http://www.cc-Link.org/)							

Note: For more information, refer to the website of CC-Link Partner Association (http://www.cc-Link.org/).

Cautions when Using Measuring Display Unit Breakers (common instructions) Measuring accuracy

- (1) Electric current measurement accuracy
 - The MDU electric current measurement accuracy is \pm 1.0% of In of the circuit breaker.
 - For example, the permissible difference of NF400-SEW with MDU is 4.0A ($400A \times 1.0\%$), so the permissible difference from a current of 0A to 400A would be \pm 4.0A.
 - If the measurement value is less than 1.0%, the display value is cut off to 0A. However, if the current is 0.4% or more of the rated value, the electric power and electric energy are measured.
- (2) When the current is cut off, the current is displayed as 0 A. However, if the current is 0.4% or more of the measurement rated current, the electric energy is measured.
- (3) The accuracy of power factor is the percentage to electrical angle of 90°. A power factor of 50% or less is displayed as a reference value.
- (4) The accuracy of electric energy is ±2.0% of the true value in the case of WS-V Series Measuring Display Unit Breakers in the range of measurement rated voltage (100V to 440V) × current (measurement rated current of 5 to 100%).

How to use Measuring Display Unit Breaker on single-phase 2-wire circuity

Connect the breaker as shown in the right figure.

The phase 1 on the load side is charged. Insulate it.


As measurement data, use the current of the phases 2 and 3 and the voltage between the phases 2 and 3.

Although the current of the phase 1 and the voltage between the phases 1 and 2 and the phases 3 and 1 are measured, ignore the measurements. The Measuring Display Unit is designed for 3-phase 3-wire and single-phase and 3-wire circuits.

On W & WS Series Measuring Display Unit Breakers, the average values of load current and line voltage are calculated from the values of the phases 1, 2 and 3 (between the phases). Ignore these measurement values.

Also when the breaker is used on a single-phase 3-wire circuit, ignore these values.

When using any WS-V Series Measuring Display Unit Breaker, set the phase and wire type.

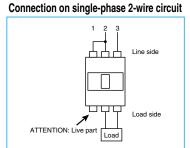

Phase sequence of Measuring Display Unit Breaker

The phase sequence of Measuring Display Unit Breaker can be set by using the phase switching function as shown below.

When the breaker is installed vertically with the power supply side upward (see the right figure), the phase sequence is set as stated below

No phase switching: 1, 2, 3 and N from the left (default) With phase switching: 3, 2, 1, and N from the left

Set the phase sequence in accordance with the installation and wiring methods.

Notes (1) The phase N is provided only on 4-pole circuit breakers.

(2) Note that the position of the phase N is unchanged regardless of the phase switching setting.

Reverse connection of Measuring Display Unit Breaker

The Measuring Display Unit Breakers cannot be connected with the power supply and load sides set reversely.

Installation of Measuring Display Unit Breaker in close contact

The Measuring Display Unit Breakers must not be installed in close contact.

- (1) In the case of external mounting or panel mounting, install the breaker body securing a wiring space of 30mm or more on the right side of the breaker to connect the connecting cables and fitting the connecting cable connectors.
- (2) In the case of breaker mounting or breaker mounting unit separate installation, install the breaker body securing a wiring space of 40mm or more on the right side of the breaker to connect the connecting cables.

Cautions when using Measuring Display Unit Breaker (For Measuring Display Unit) Transmission method

- (1) One of No transmission, with pulse output, with CC-Link communication and with MODBUS communication should be specified.
- (2) When With transmission is selected, data which can be transmitted depends on the function of the Measuring Display Unit Breaker body. The transmission options cannot be installed or changed later. Specify the options when issuing the initial order
- (3) For the maximum number of connected units and transmission distance for each transmission type, see the following tables for CC-Link communication and MODBUS communication.

Installation of Measuring Display Unit

- (1) When the installation of Measuring Display Unit on panel has been specified, the breaker will come with the panel mounting parts, mounting screws and 2m connecting cable (standard). (The 0.5, 3, 5 or 10m connecting cable can be specified.)
- (2) If the installation position of the Measuring Display Unit is changed from the panel to the body or vice versa, the Measuring Display Unit and the breaker body must be returned to the manufacturer for modification.


Measuring Display Unit Breaker with CC-Link communication and MODBUS communication (External mounting type)

(1) In the case of CC-Link and MODBUS, front plate cutout is not possible.


Change of display direction for breaker mounting

< WS-V Series Measuring Display Unit Breaker>


- (1) When installing the Measuring Display Unit on the breaker body installed in the horizontal direction, the direction of the display can be changed according to the installation direction.
- (2) The display direction is set on the display unit.

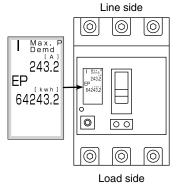

Default display direction

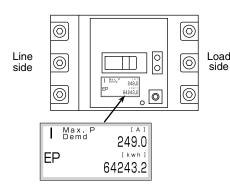

Installation with line side on left

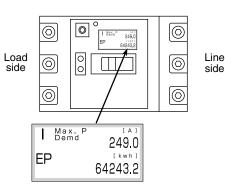

Installation with line side on right

<View setting (vertical or horizontal)>


[Default value: V-VIEW (horizontal display)]


- Select VIEW on the LCD setting selection screen. (Screen [1])
- Press ENTER to switch to the view setting display screen.
 (Screen [2])


Setting value switches through V-VIEW ⇔ H-VIEW1 ⇔ H-VIEW2 ⇔ V-VIEW....

Press ENTER to decide the setting.

 Select YES on the allow changes screen and press ENTER to decide the setting. (Screen [3])

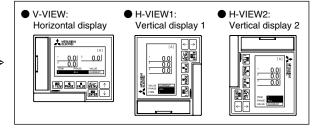

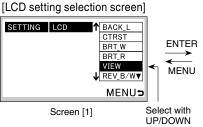

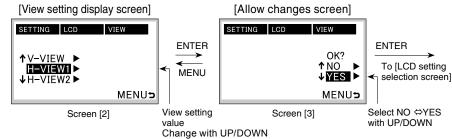


DC High-Voltage Circuit Breakers

DC High-Voltage Circuit Breakers

	Frame	(A)			50				
	Mod	lel			NF63-HDV				
Rated current In (A) Reference ambient temperature 40°C					15 20 30	0 40 50			
	Number o	of pole	s		2 3				
Rate	ed insulation	voltag	je Ui	(V)	600	690			
Rated short-circuit breaking capacities (kA)	IEC 60947-2 EN 60947-2		DC-	400V	10/5	-			
Rated s breaking c	(Icu/Ics)			600V	-	5/5			
Rated i	mpulse withstan	nd voltag	je Uim	p (kV)	8				
	Curre				DO	_			
	Suitability fo				Ye				
	Reverse co				Availal				
Ope	rating tempe				-10~+4				
		/ithout		_	100				
operat		With c		nt	150				
	Pollution	degre	е		3				
Ê	< a ≯	< Ci	a .c.	а	50	75			
Overall dimensions (mm)	l i—i∗	14	٦.	b	13	·			
O isi	⊟	ᅦ		С	68				
	بكار			ca	90)			
	Mass of fron	t type	(kg)		0.5	0.7			
р. _с	Front (F)				•				
Cassette-type Installation and accessories connection	Rear (B)				(Round stud)	● (Round stud) *3			
Stall	Flush plate				-	-			
Ĕ	Plug-in (PM	l)			•	-			
s s	Alarm switc	n switch (AL)			•)			
J. S	Auxiliary sw	ritch (A	AX)		•				
ssc	Shunt trip (SHT) *	4		•)			
SSI	Undervoltag	ge trip	(UV	Γ) *4	•				
a Ö	With lead-wire	terminal	block	(SLT)	•				
			L	С	•				
	Handle lo		Н	L		·			
S	GEVICE		HL	-S		·			
External accessories			F ty	/pe	•				
988	Externa	al	V ty	/pe		·			
Sce	operating h	andle	S ty	/pe	_				
ă			C ty	уре	_				
L a	Terminal co	ver			•				
x	IEC35mm mo	unting r	rail ad	apter	● (Option)				
ш	BOX for MC	CB			_				
	Electrical oper	ation de	evice (NFM)	-				
	Mechanical Interlock (MI)				=				
	CE ma	rking			Self-declaration				
	UKCA m	arking	1		Self-declaration				
	CC				Certified				
Α	utomatic trip	ping d	evice		Thermal-r	nagnetic			
	Trip bu				•	, -			
Page o	of Characteristic		dimen	sions	23	0			
					available only shown in the follow	ing figure			

*1 Connection methods are available only shown in the following figure.

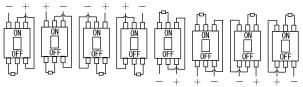

- *2 To reduce a current value as follows when the ambient temperature is over 40°C.
 The average value of the ambient temperature during 24hours shall not exceed 35°C.
 To use a wire having a heat resistance suitable for the temperature when using at high temperature.
 50°C...90% or less
 60°C...70% or less
 70°C...65% or less
 (To use less than 6 hours per day, when the ambient temperature is 70°C.Long time use at 70°C causes life time reduction.)
 *3 This product is shipped from the factory only in an assembled state, cannot be mounted by users.
 *4 A shunt trip device (SHT) and an undervoltage trip device (UVT) is not available over 60°C
- *4 A shunt trip device (SHT) and an undervoltage trip device (UVT) is not available over 60°C of the ambient temperature.

Remark:*1 The time constant of the circuit is 5ms or less.

Frame (A)					125	225	250			
	N	/lodel			NF125-HDVA NF250-HDVA					
Refere		urrent In ent temper		40°C	125	125 150 175 200 225	250			
		er of pole				4				
	ed insulat	tion voltag	ge Ui	(V)		1000				
Rated short-circuit breaking capacities (kA)				1000V	10/5					
	mpulse with	nstand voltag	ge Uin	np (kV)		8				
	С	urrent				DC				
	Suitabilit	y for isola	tion			Yes				
	Reverse	connect	ion			Available *1				
Wo	rking aml	oient temp	erat	ure		-25~+40°C *2,*3				
Nun	nber of	Without	curr	ent		8,000				
operat	ing cycles	With c	urre	nt		1,000				
	Pollut	ion degre	е			2				
Ê	<mark>k a ⇒</mark>	< Ci	a .c.	а		140				
Overall dimensions (mm)	اصالا	⊼ lä	Ħ	b		165				
o Si	⊔	⊒∐⊩ ધી		С		68				
	لكا	√ Վ		ca	92					
		front type	(kg)		2.0					
.tjo	Front typ				•					
Connection	Rear typ				● *4					
ပိ		type (PM)			_					
Cassette-type accessories		h (AL) (Norma			● *2					
orie		itch (AX) (Norn	nal/Mic	ro load)		● *2				
ette	Shunt trip					● *3				
ass		age trip (U\			● *3					
შ"	Lead-wire	e terminal b	_	<u>` </u>	● *2					
	Hand	lla laak	$\overline{}$	_C		● *2				
S	Handle lock device		$\overline{}$	1L		● *2				
ō			_	L-S		● *2				
ess		ernal		ype		● *3				
S		ng handle				● *3				
<u>8</u>		er (TC-L, TC-LL				● *2				
				dapter	-					
X	BOX for MCCB				-					
Electrical operation device (NFM)					-					
Mechanical Interlock (MI)										
CE marking					Self-declaration					
	UKCA marking				Self-declaration					
.		CCC			*5					
<u> </u>		tripping d	ievic	е	Thermal-magnetic					
D		button	-11		000	Equipped	000			
rage o	Page of Characteristics and dimensions				232	232	232			

*1 Although wiring method as right figure is described on MCCB, other wiring method mentioned in below Wiring diagram chart is also available.

wiring	Wiring diagram chart										
Normal / Reverse connection	Non-grounded system (Protection + Disconnection)	Grounded system (Protection)	Grounded system (Protection + Disconnection)	Other non-gr (Protection +	ounded system Disconnection)						
Normal connection											
Reverse connection		The state of the s			48						
Normal connection		Torn Torn		1000 1000 1000 1000							
Reverse connection	644 644			(1)(1)							
Applicable voltage (V)	s 1000	s 1000	≤750	≤ 1	100						



- Wires between terminals are prepared by a customer.

 Wires should be selected according to the rated current. Otherwise, there is a risk to change the operating characteristics and unnecessary operation of MCCB.

 2 (Tio reduce a current value as follows when the ambient temperature is over 40°C.

 The average value of the ambient temperature during 24 hours shall not exceed 35°C.

 To use a wire having a heat resistance suitable for the temperature when using at high temperature.

 50°C...90% or less
 60°C...70% or less
 60°C...70% or less
 20°Caution using at ambient temperature 70°C

 *To use less than 6 hours per day at 70°C. Otherwise, it will cause life time reduction.

 *There is a risk of tripping during switching operation or due to vibration and shock. In such case, please make the breaker "Feset" after a while.

 3 Caution using at low ambient temperature

 *To use in an environment without frost and ice.

 *3 Shunt trip device (SHT), undervoltage trip device (UYT) and external operating handle (F type, V type), should be used at standard operating condition. In case of external operating handle (F type, V type), those can be used at up to 60°C with reducing a current values according to the above *20.

 *4 In case of rear type, rear terminal cover is included as standard and it must be used.

 *5 Circuit breakers for NF250-HDVA have obtained CCC certificate. Please consult us for details.

 *6 It is only shipped with MCCB. Please specify "TC-LL" when ordering, If the wire size 150mm² is used, please use cramp terminal CB150-S8 (with or wihout insulation tape).

Remark:*1 Time constants of circuit are as follows:

Range of current	Time constant
Rated current	2ms or less
Short circuit current	5ms or less

DC High-Voltage Circuit Breakers

	Frame (A)			00	80	1		
	Model			D-HDW	NF800-			
	Rated current In (A)		NF400	5-F1DVV	141-800-	HDW		
Reference ambient temperature 40°C				350 400	500 600 630 700 800			
	Number of poles		3	4	3	4		
	Rated insulation voltage Ui (V)	800	1000	800	1000		
Rated short-circuit breaking capacities (kA)	(v) IEC 60947-2 EN 60947-2 EN 60947-2 GB/T14048.2 (Icu/Ics)		ov –	10/5	-	10/5		
Rat breaki		75		10/10	10/10	10/10 *6		
Rated	impulse withstand voltage U	imp (k\)	8	8			
	Current				C			
	Suitability for isolation			Ye				
Reve	rse connection (terminals unr			Avai				
	mber of Without cu			000	300			
opera	ting cycles With curr	ent		000	50			
	Pollution degree		3	2	3			
Overall dimensions (mm)	a ca	i		185	210	280		
erall				257 109 *1 161 *1		275		
o sue		_ (109 *1		
		С			161 *1			
Connection	Front type (F)			terminal	Busbar terminal			
	Rear type (B)			tud *2	Bar stud *2			
Cassette-type accessories (Option)	Alarm switch (AL)			*3	● *3			
5 g &	Auxiliary switch (AX)			*3	● *3			
ette	Shunt trip (SHT)			*3	● *3			
SE SO	Undervoltage trip (UVT)			*4	● *4			
0 "	With lead-wire terminal bloc		•	•	•			
8		LC		<u>-</u>		=		
External accessories (Option)	Handle lock device	HL			•			
ess (n		HL-S			=			
9 5		F typ		•	•			
<u>6</u> 0	External operating handle	V typ		•	•			
E		S typ			-			
l 🛣		C typ		- 		CO DTO 45)		
<u> </u>	Terminal cover CE marking		● (1C-L, 1	● (TC-L, TTC,BTC *5) ● (TC-L, TTC,BTC *5)				
	UKCA marking			Self-declaration Self-declaration				
<u> </u>	CCC				tified			
<u> </u>	Automatic tripping device							
	Trip button			Thermal-magnetic Equipped				
Pan	e of Characteristics and dimer	nsions	2		23	4		
Page of Characteristics and dimensions				234 234				

Notes: *1. Dimensions are different from NF400-SW/SEW/HEW or NF800-SEW/HEW.

*2. Order with the breaker.


*3. Available to install at customer site.

*4. Only Reset type is available. (Non-reset type is not available.)

*5. BTCs for NF400-HDW or NF800-HDW are exclusive.

*6. GB/T 14048.2 is not applied.

Remark: *1. Right diagrams as wiring method are shown on breaker, others shown in "Wiring diagrams" are also available. *2.Time constants of circuit are as follows:

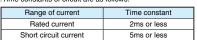





Wiring diagrams

For 3 pole									
Normal / Reverse connection	Non-grounded system (Protection + Disconnection)	Grounded system (Protection)		nded system + Disconnection)		ounded system Disconnection)			
Normal connection						© 000 000 000 000 000 000 000 000 000 0			
Reverse connection									
Applicable voltage (V)	≤ 750	≤ 750	≤5	00	≤ 7	50			

For 4 po	le						
Normal / Reverse connection	Non-grounded system (Protection + Disconnection)	Grounded system (Protection)	Grounded system (Protection + Disconnection)		Grounded system (Protection + Disconnection) Grounded system (Protection + Disconnection)		tern ion)
Normal connection					© 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
Reverse connection			0 p.F.				(A)
Normal connection			© 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	# # # # # # # # # # # # # # # # # # #	1000 1000 1000 1000 1000 1000 1000 100		900
Reverse connection	1040 1040 1040 1040 1040 1040 1040 1040					5000 6000 6000 6000	E 3 E 5 E 5 E 5 E 5 E 5 E 5 E 5 E 5 E 5
Applicable voltage (V)	≤ 1000	≤ 1000	≤ 750			≤ 1000	

Detailed Specifications 7

Miniature Circuit Breakers

							M	СВ		
Model			BH-D6	;			BH-D10			BH-DN
Image										
Number of poles [P]	1	2	3	4(3+N)*1	2(1+N)*1	1	2	3	4(3+N)*1	2 (1+N) ^{*1}
Instantaneous tripping		Type B	, C, D*2	•	Type B, C ^{*2}		Type E	, C, D*2	•	Type C ^{*2}
Rated insulation voltage Ui [V]			440					40		230
Rated current In [A] at ambient temperature 30°C	0.5, 1, 1.6, 2, 3, 4, 6, 10, 13, 16, 20, 25, 32, 40, 50, 63 (2, 3, 4, 6, 10, 13, 16, 20, 25, 32, 40		0.5, 1, 1.6, 2, 3, 4, 6, 10, 13, 16, 20, 25, 32, 40, 50, 63			6, 10, 16, 20				
Rated IEC 60898-1 230V	6		_		6	10		_		4.5
circuit CD/T 10062 1 AC 230/400	6				-	10		_		_
capacity (lcn) 400V	-		6		_	_		10		_
Number of Without current	8,000		10,000			20,000				
operating cycles With current		8,000			10,000			20,000		
Dimensions a ca a	18	36	54	72	36	18	36	54	72	18
[mm] - a - - c - b			87				8	7		88
			44					4		44
			70				· · · · · ·	0		70
Type of overcurrent release		Thermal-magnetic					magnetic		Thermal-magnetic	
Mounting			C35mm					mm rail		IEC35mm rail
Applicable wire size	<u> </u>	1	to 25m					5mm ²		1 to 10mm ²
Mass [kg]	0.15	0.3	0.45	0.55	0.25	0.15	0.3	0.45	0.55	0.12
Alarm switch (AL)			•							_
Accessories Auxiliary switch (AX)			•							_
(optional) Shunt trip (SHT)			•			•			_	
Handle lock device (HL)			•			•			_	
Terminal connection			Solderle			Solderless			Solderless	
Based on standard	IEC 60			3-1, GB/T 1	0963.1	IEC 608	98-1, EN 60		Т 10963.1	IEC 60898-1, EN 60898-1, GB/T 10963.1
CE marking			lf-declar				Self-declaration			Self-declaration
UKCA marking	1	Se	lf-declar			Self-declaration			Self-declaration	
ccc	-		Certifie					tified	-	Certified
Marine use approval		C	CS ^{*3} , D	NV				, DNV	-	_
Page of Characteristics and dimension			236				2	36		237

*1 N pole is a switched neutral pole (without overcurrent release device).
*2 Type B: (3 In <, \leq 5 In), Type C: (5 In <, \leq 10 In), Type D: (10 In <, \leq 20 In)
*3 Except for 4 poles breaker.

			For DC		
Mode	l		BH-D10		
Image)				
Number of poles [P]			1	2	
Instantaneous tripping	9		Type I	B, C ^{*4}	
Rated insulation volta	ge U_i [V]	25	50	
Rated current In [A] at ambient temperatu	ıre 30°C		0.5, 1, 1.6, 2, 3 16, 20, 25, 3	3, 4, 6, 10, 13, 2, 40, 50, 63	
Rated IEC 60898-2	DC	125V	10	ı	
snort- circuit EN 60898-2		250V	-	10	
Capacity GB/1 10963.2	AC	230/400V	6	ı	
[kA]		400V	_	6	
Number of	Without	current	8,000		
operating cycles	With current		4,000		
Dimensions a [mm]	ca	а	18	36	
		b	87		
_H b		С	44		
	<u>'_</u>	ca	70		
Type of overcurrent re	lease		Thermal-magnetic		
Mounting			IEC35mm rail		
Applicable wire size			1 to 25mm ²		
Mass [kg]			0.15	0.3	
Alarm swit	. ,			<u> </u>	
Accessories Auxiliary s		X)			
(optional) Shunt trip)	
Handle loc	k device	(HL))	
Terminal connection			Solde		
Based on standard			IEC 60898-2, EN 60898-2, GB/T 10963.2		
CE marking			Self-declaration		
UKCA marking			Self-ded		
CCC			Cert		
Marine use approval			CC	CS	
Page of Characteristics		nensions	23	36	

Notes: *4 Type B: $(4 \text{ In } <, \le 7 \text{ In})$, Type C: $(7 \text{ In } <, \le 15 \text{ In})$ for DC Type B: $(3 \text{ In } <, \le 5 \text{ In})$, Type C: $(5 \text{ In } <, \le 10 \text{ In})$ for AC

Tightening torque

rightening torque							
Screw size	Tightening torque (N⋅m)	Model					
M5	2.1±0.4	BH-D6, BH-D10, BV-D, KB-D SHTA400-05DLS, SHTD048-05DLS					
M4	1.3±0.2	BH-DN, BV-DN, BV-DN6					
M3.5	0.9±0.1	AL-05DLS, AX-05DLS, ALAX-05DLS AX2-05DLS					



Detailed Specifications 7

Miniature Circuit Breakers

			RCCB		
Мо	del		BV-D		
Image					
Number of poles [F	P]		2(1+N)*1	4(3+N)*1 *3	
Rated current In [A at ambient tempera			25, 4	0, 63	
Rated operational v	voltage Ue	[VAC]	230	230/400	
Rated residual operat	ting current	l∆n [mA]	30,	300	
Max. operating time	e at 5l∆n [s]	0.0)4	
Pulsating current se	ensitivity		Тур	e A	
Residual operation			Dependent or	n line voltage	
Dimensions	ca	а	36	72	
[mm]	a b c	b	8	5	
		С	44		
		ca	7	0	
Mass [kg]			0.2	0.35	
Rated frequency [H	lz]		50/	60	
Short-circuit protec	tive device		BH-	·D6	
Rated making and bre	aking capaci	ty Im [A]	500(ln 25,40A), 630(ln 63A)		
Rated conditional short-	-circuit curren	t Inc [kA]	6		
Rated residual making and	breaking capa	city I∆m [A]	500(In 25,40A), 630(In 63A)	
Rated conditional residual s	short-circuit curr	ent I∆c [kA]	6		
Reverse connection	n		Available		
Number of	Without cu	ırrent	8,0	00	
operating cycles	With curre	nt	8,000		
Type of overcurrent	release		-		
Mounting			IEC35mm rail		
Applicable wire size			1 to 25mm ²		
Terminal connection			Solderless		
Based on standard			IEC 61008-1, IEC 61008-2-2, EN 61008-1, GB/T 16916.1, GB/T 16916.22		
CE marking			Self-declaration		
UKCA marking			Self-declaration		
CCC			Certified		
Page of Characteris	tics and din	nensions	238		
Notes: *1 N pole is a switched neutral pole (without overcurrent release device)					

				RC	ВО		
	Model			BV-DN	BV-DN6		
	Image			7			
Number of	poles [P]			2(1-	+N) ^{*1}		
Rated curre at ambient	ent In [A] temperature 30°	°C		6, 10, 16, 20, 25, 32, 40	3, 6, 10, 16, 20, 25, 32, 40		
Rated oper	ational voltage l	Je [V	AC]	2	30		
Rated residu	al operating curre	nt l∆r	n [mA]	30, 10	00, 300		
Max. opera	ting time at 5l∆r	n [s]		0.	04		
Pulsating c	urrent sensitivity	,		Тур	oe A		
Residual or	peration			Dependent of	n line voltage		
Rated short- circuit capacity [kA]	IEC 61009-1 EN 61009-1 GB/T 16917.1 (Icn)	AC	230V	4.5	6		
Tripping cha	aracteristics			Тур	e C*2		
Dimensions	a r	a C	а	36			
[mm]		<u>~</u>	b	88			
			44				
			ca	70			
Mass [kg]			•	0.19			
Rated frequ	iency [Hz]			50/60			
Rated residual r	naking and breaking c	apacity	I∆m [A]	500			
Reverse co	nnection			Available			
Ni. and na naf	Without current	t		20,	20,000		
Number of operating cycles	With current			20,000 (In 6,10,16,20A) 15,000 (In 25A) 10,000 (In 32,40A)			
Type of ove	rcurrent release	;		Thermal-magnetic			
Mounting				IEC35mm rail			
Applicable wire size				1 to 1	6mm ²		
Terminal connection				Sold	erless		
Based on standard				IEC 61009-2-2, IEC 61009-1, EN 61009-1, GB/T 16917.1, GB/T 16917.22			
CE marking				Self-declaration			
UKCA mark	king			Self-de	claration		
CCC				Cer	tified		
Page of Cha	aracteristics and	dimer	nsions	2	39		

- Notes: *1 N pole is a switched neutral pole (without overcurrent release device).

 *2 Type C: (5 ln <, ≦ 10 ln)

 *3 For use to three phase 4-wire type. When wiring to three phase 4-wire, connect the neutral line to the neutral pole. Not available for use to three phase 3-wire type.

		Isolating switch						
Model		KB-D						
Image								
Number of poles [P]		1	2	3	4(3+N)*4			
Utilization category			AC-	-22A				
Rated operational current le [/at ambient temperature 30°C	A]		32, 6	53, 80				
Rated insulation voltage Ui [V]	_	250		440				
Rated operational voltage Ue [230		400				
Rated short time withstand current				le, 1s				
Rated short-circuit making capacity		20 imes le						
Rated impulse withstand voltage U	imp [KV]	6						
Dimensions ca mm]	а	18	36	54	72			
l,,	b	87						
	С	44						
	ca	70						
Mass [kg]		0.09	0.18	0.27	0.36			
Reverse connection		Available						
Number of operating cycles Without current		20,000						
· • · · · · · · · · · · · · · · · · · ·	it	3,000 2						
Pollution degree				_				
Mounting		IEC35mm rail						
Applicable wire size		1 to 25mm ²						
Terminal connection		Solderless IEC 60947-3, EN 60947-3, GB/T 14048.3						
Based on standard		Self-declaration						
CE marking UKCA marking		Self-declaration Self-declaration						
CCC		Self-declaration Certified						
Marine use approval				5, DNV				
Page of Characteristics and dim	ansions			40				
Notes: */ Connect the neutral li		noutral pala		10				

^{*4} Connect the neutral line to the neutral pole. *5 Except for 4 poles breaker.

Accessories for Miniature Circuit Breakers

Functions of Accessories

Accessory	Function
AL Alarm switch	Electrically indicates the trip status of the circuit breaker.
AX Auxiliary switch	Electrically indicates the On/Off status of the circuit breaker.
SHT Shunt trip	Electrically trips the circuit breaker from a remote location. Permissible working voltages are 70 to 110% of the AC rated voltage or 70 to 125% of the DC rated voltage.
HL Handle lock device	Device for locking the circuit breaker in the OFF position.

■Equipping of Accessories

Accessory	BH-D6	BH-D10	BH-DN, BV-DN, BV-DN6, KB-D, BV-D
AL	0	0	
AX	0	0	
SHT	0	0	_
HL	0	0	

^{○:} Accessory equipped

Specifications

Туре		AL	AX	AL+AX	AX+AX		
		AL-05DLS AX-05DLS		ALAX-05DLS	AX2-05DLS		
Contact	Configuration	1C	1C	2C	2C		
Contact	Contact capacity	400VAC, 2A	230VAC, 5A 120VE	OC, 0.4A 48VDC, 1.5A	24VDC, 4A		
Function	Line	-	_	AX	AX		
Function	Load	AL	AX	AL	AX		
Connection		Screw terminal					
Compliance standard		IEC 60947-5-1					

Type	SHT					
туре	SHTA400-05DLS	SHTD048-05DLS				
Cut-off switch	Equi	pped				
Voltage	110-400VAC	24-48VDC				
Input power requirement	110VAC 60VA 230VAC 250VA 400VAC 750VA	24VDC 75VA 48VDC 300VA				
Operating time [ms]	<20					
Connection	Solderless terminal					
Compliance standard	IEC 60947-2					

^{*} Secure a sufficient input power supply so that the voltage will not drop below the permissible lower working voltage (70% of the lowest rated voltage).

^{*} The operating time denotes the time from when the rated voltage is applied to SHT until the time the main contact of the breaker starts to open.

	HL	Reference diagram	Padlock
Туре	HLF-05BHD		B


Please use on the left pole for 2 pole breaker, on the center pole for 3 pole breaker, on the second pole or third pole from the left for 4 pole breaker. (OFF lock only) This device can be also used as a lock cover that can prohibit operation to ON position readily without any lock. One lot contains 10 pieces.

^{-:} Accessory not equipped


■Combinations of Accessories

	AL	
	AX	
	2AX	0 0 0
	ALAX	0 0
Accessory connection combinations	SHT	
	AX+SHT	
	AL+SHT	
	2AX+SHT	
	ALAX+SHT	0 0
□ Breaker	L+AX O AX+AX SHT	




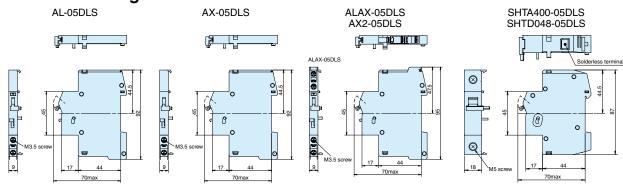


Connection of Line and Load Side

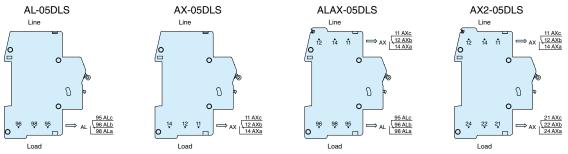

■Installation of Accessories (AX, AL, SHT)

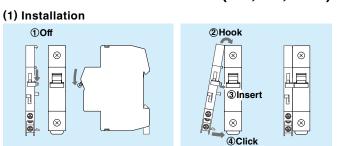

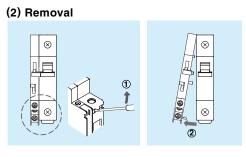

Detailed 2 Specifications 8

Circuit Protectors

	Fra	me (A)			3	30			
		lodel		СР30-ВА			CP30-HU		
	In	mage		770.00		Canada Para Para Para Para Para Para Para P			
	er of poles		1	2	3	1	2	3	
	insulation vol	Itage Ui (V) tand voltage Uimp (kV)		250 2.5			250 2.5		
	current (A)	tana voltage omip (kv)	0.1 0.2	25 0.3 0.5 1 2 3 5 7 10 15	20 30		0.1 0.25 0.3 0.5 1 2 3 5		
	4077	Rated AC (V) Voltage (V) DC (V)	65	250 125		65	250 125		
	UL 1077 CSA C22.2	10	00	2.5kA at 250V	-	2.5kA at 250V	10kA at 250V	10kA at 250V	
ŧ	No.235 (*11)	DC	2.5kA at 65V	2.5kA at 125V		10kA at 125V 10kA at 65V	10kA at 125V	- TOKA at 250 V	
A cir	IEC 60934	Rated insulation voltage Ui (V)	2.010 1 00 0	250		10101 at 001	250		
Rated short-circuit capacity (kA)	EN 60934 GB/T 17701	AC		2.5kA at 230V		2.5kA at 230V 10kA at 120V	10kA at	230V	
paci	(Icn)	DC	2.5kA at 60V	2.5kA at 120V	-	10kA at 60V	10kA at 120V	-	
R B	IEC 60947-2	Rated insulation voltage Ui (V)		250		2.5/2.5kA at 230V	250		
	EN 60947-2 (lcu/lcs)	AC		2.5/2.5kA at 230V		10/10kA at 120V	10/10kA	at 230V	
AC-D	C common us	DC	2.5/2.5kA at 60V AC/DC com	2.5/2.5kA at 120V	_ _ (*1)	10/10kA at 60V	10/10kA at 120V ompatible	_ _ (*1)	
_	se connection		7.0,20 0011	Available	\ '/	710,50 0	Available	\ '/	
	ion degree			2 A			2 A		
	tion category environment o	condition				Not Applicable			
`	onment A or E ambient temp			Not Applicable 40 (T40)			40 (T40)		
Numb		Without current		10,000			10,000		
	ting cycles	With current		6,000			6,000		
Opera	ting characte	ristics		ous type (I); Medium type ype (S), (SD); Fast type (Instantaneous typ	e (I); Medium type (M), (M	ID); Slow type (S)	
				neous type (I): magnetic o	only [MO]		neous type (I): magnetic o	nly (MO)	
Mode	of tripping		Medium type (M), (MD) Slow type (S), (SD) Fast type (F)	: hydraulic-magnetic [HM]		Medium type (M),(MD) :	hydraulic-magnetic (HM)		
Dime	nsions [mm]	a	17.5	35	52.5	17.5	35	52.5	
a		b Screw SQ		73 98			73 		
		С		65		65 65			
	od of operation	ca	Q.+	65 ype (IEC 60934 / EN 609	24)				
	ee behaviour	1		-free (IEC 60934 / EN 609		S-type (IEC 60934 / EN 60934) Trip-free (IEC 60934 / EN 60934)			
Mass	(kg)	Screw	0.08	0.16	0.23	0.08	0.16	0.23	
		SQ nall terminal cover (TC-S)	0.09 ● Standard IP20 (front	0.17 , terminal covers closed)	0.25 [Certified of TÜV] (*10)	Standard IP20 (free	ont, terminal covers close		
	Inertial delay		• (Medium, Slow type: AC o	nly)	• (Medium, slow type: AC or	nly)	
S	Alarm switch Auxiliary swit			● (1c) (*9) ● (1c) (*9)			● (1c) ● (1c)		
sorie	Shunt trip (Sh	HT)		• (for relay type) (*3)			• (for relay type) (*3)		
Accessories	•	al cover (TC-L) nounting brackets (FP)		• (*6), (*10), (*14) • (*6), (*10), (*14)			● (*6) ● (*6)		
Ac		wiring termnal (BT)		• (*4), (*6), (*10), (*14)			• (*6)		
		conductor for terminal (WB)		• (*10)			•		
		rminal cover (TC)		● (*6), (*10)			● (*6)		
8			20/	A or less : Screw terminal 30A : Screw termnal M5	M4				
Connection	Main body			b terminal 6.3mm (#250)(ring clamp terminal (SQ)			Screw terminal M4		
Con	Alarm switch Shurt trip	/ Auxiliary switch /	Spi	Screw terminal M3.5 ring clamp terminal (SQ)	(*9)	Screw terminal M3.5			
Main	body mounting	g method	Fli	Srface, IEC rail mounting ush panel mounting (option	on)	Fli	Surface, IEC rail mounting ush panel mounting (optio	n)	
CE m	arking		EN EN 6	60934 : TÜV approval (* 60947-2 : Self-declaration 60947-3 : TÜV approval	11) (*5)	EN 60934: TÜVapproval EN 60947-2: Self-declaration (*5) EN 60947-3: TÜV approval (*3)			
			EN	60934 : Self-declaration (*11)	E	N 60934 : Self-declaration	1	
	marking		EN 6	60947-2 : Self-declaration 60947-3 : Self-declaration	(*5) (*3)		60947-2 : Self-declaration 60947-3 : Self-declaration		
		ety (☆ approval)		Certified (*5), (*11)	->- (*7\ /NIZ\ /*14\				
	R, ABS, DNV		_	☆ (*7) (NK) (*14)	☆ (*7) (NK) (*14)				

- 1 The 3-pole products are for AC use only.
 2 Contact us for operating characteristics other than those mentioned above.
 3 In poles equipped with a shunt tripping mechanism, the overcurrent tripping element is not operative (switched shunt tripping).
 4 For back-face wiring terminals, specify if it will be used with 30A, or 20A or less.
 5 UL (cURus), CCC, and CE, UKCA marking are displayed on standard products.
 6 It is recognition of UL (cURus), CCC, and TUV.
 7 Support for special order.

 - Support for special order
 A spring clamp terminal is only available for current 0.1 to 20A.
 In case of spring clamp terminal for AX and AL, specify if it will be used with the normal open contact or the normal close contact.
 In case of spring clamp terminal, it is not available.
 In case of spring clamp terminal rated 20A, it is not available.
 Male tab terminals are UL (cURus) only. Not subject to CCC, CE marking, UKCA marking.
 Retractable small terminal cover is not equipped.
 In the case of AC/DC shared models, tripping operating characteristics differ between AC and DC.

 - *14 Not supported when male tab terminal is selected for terminal shape.

- Remarks: 1. Products for non-standard conditions are special order. (Low temperature,
 - 1st and 2nd-degree moisture fungal treatment, corrosion-resistant)

 2. Although a buzzing sound may occur when an instantaneous type becomes 80% or more of the rated current for AC use, performance is not effected. Please take this point into consideration when selecting units for
 - use in quiet environments.

 3. Please use in environments free of high temperatures, humidity, dust, corrosive gas, vibration, and impact.

 - Also, do not use it in a circuit with inrush current or harmonics. Problems may result.

 4. Reverse connection of power supply and load is possible.

 5. Due to the automatic reset structure, the handle does not indicate the trip position. However, only the alarm switch shows the structure that displays the "trip position" between ON and OFF.

 - The standard small terminal cover supports IP20 from the front when the cover is closed. (TÜV certified)
 When using in a harmonic circuit, multiply the load current by 1.4 before selecting and checking the rated current of the circuit protector.

Internal circuits and examples of application

	Available	Operating characteristics							
Internal circuit	model	Instantaneous type	Fast type Mediu		m type			shunt	
	model	I	F	М	MD	S	SD	trip	
Serial type	CP30-BA CP30-HU*1	•	•	•	•	•	•	-	
Serial type with auxiliary switch	CP30-BA CP30-HU*1	•	•	•	•	•	•	-	
Serial type with alarm switch	CP30-BA CP30-HU*1	•	•	•	•	•	•	-	
Relay type shunt trip (with SHT)	CP30-BA CP30-HU*1	-	-	-	-	-	-	•	

^{*1.} CP30-HU is not available for fast type(F) and slow speed type(SD).

Internal accessories

Auxiliary switch (AX)

Operates in conjunction with the main circuit operating mechanism to electrically retrieve the ON/OFF status of protector.

Alarm switch (AL)

Operates in conjunction with the main circuit operating mechanism to electrically retrieve the tripping status of protector.

Remarks (1) When the handle of CP30-BA is constrained in the ON status, it does not issue the alarm signal even if it is tripped.

(2) The alarm switch will be reset when the body is reset or turned on.

Shunt trip (SHT)

A parallel relay type protector, which can break the circuit instantaneously when receiving an external signal

Inertial delay device

The inertial delay device is designed to avoid unnecessary operation caused by inrush current of transformer or lamp load. The device can withstand unrepeated one pulse of crest value 20 times higher than the rated current (pulse time = 8 ms). It can be added to circuits having high, medium and low speed operating characteristics. (It cannot be added to instantaneous or DC types.)

Ratings of alarm switches (AL) and auxiliary switches (AX) For CP30-BA, CP30-HU

				AC		DC			
Cla	ssification		Voltage		nt (A)	Voltage	Curre	rrent (A)	
			(V)	Resistive load	Inductive load	(V)	Resistive load	Inductive load	
Ratings of	For	Max.	(250)	(1)	(0.5)	50	1	0.5	
items other	general	iviax.	125	3	1	30	2	1	
than those	load	Min.		0.1A/15VA	C	0.1A/15VDC			
shaded in Table 1	For minute load	Max.	125	0.5	-	30	0.5	-	
Table I		Min.	1mA/24VDC, 2mA/12VDC, 5mA/6VDC						
Ratings	For general	Max.	125	3	-	30	0.5	-	
of items	load	Min.		0.1A/15VA	C		0.1A/15VE	C	
shaded in	For minute	Max.	125	0.1	-	30	0.1	-	
Table 1	load	Min.		1mA/24	VDC, 2mA/	12VDC, 5mA/6VDC			

Remarks: 1. The switches having the ratings in parentheses are manufactured at the customer's request. (Specify the voltage). Such switches do not conform to UL (cURus), CCC or CE, UKCA marking requirements.

Ratings of shunt trip (SHT) coils

For CP30-BA, CP30-HU

Hatings						
	Time rating					
100-200	100-200 Compatible with 100 to 200VAC and 100VDC					
24-48	Compatible with 24 to 48VDC	10 sec or less				

Coil resistance, resi	stance and impedance	(at25°C)
Voltage (V)	Impedance for AC (Ω)	DC resistance for DC (Ω)
24-48	-	160
100-200	2400	2100

Remarks: 1. The allowable range is 70 to 110% of the rated voltage for AC and 75 to 120% of the rated voltage for DC.

2. The time rating is 10 seconds or less. Configure the circuit on which voltage

will not be applied for more than 10 seconds.

Operation of auxiliary switch and alarm switch

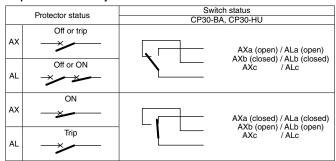


Table 1 List of numbers of internal accessories which can be fitted

Table 1 List of numbers of internal accessories which can be fitted ●AL ○AX ●AL or AX ■SHT																				
Type name	AX		AX More than one			AL		_ AL+AX			SHT		AL+SHT or AX+SHT		AL+AX+SHT					
Type Harrie	1P	2P	3P	1P	2P	3P	3P	1P	2P	3P	1P	2P	3P	1P	2P	3P	1P	2P	3P	3P
CP30-BA CP30-HU	0			-	00		000	•			-	0					-			

Remark: 1. All accessories should be fitted on the internal accessory terminal block.

Installation and connection


Installation method	With screws	On IEC rails	With embedded fittings
Appearance	To the second se	To the second se	Circuit protectors with AL, AX and/or SHT cannot be installed by this method.
CP30-BA	•	•	●'1
CP30-HU	•	•	•

 $^{^{\}star}1. \;$ In case of male tab terminal or spring clamp terminal, it is not available.

Installation posture

The operating characteristics of electromagnetic (instantaneous) type circuit protectors are not affected by the installation posture. However, when installing a fluid electromagnetic (high, medium or low speed) type circuit protector, pay attention to the installation angle because the operating current value is changed under the influence of the gravity applied to the iron core in the oil dash pot.

Generally, it is recommended to use the circuit protectors in the vertical direction.

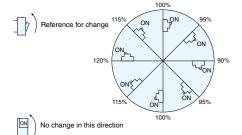

■Electric wires which can be connected and applicable screw terminals

CP30-BA, CP30-HU

Classification	Shape of termi	nal	Electric wire size used (mm²)	Applicable screw terminals	Tightening torque (N • m)
	Threaded terminal	20 A or less M4	0.25-1.65	R1.25-4 R1.25-5	M4 1.2±0.2
Body	(standard specification)	20 A or less W4	1.04-2.63	R2-4 R2-5	M4 1.2±0.2
Войу	Cross recessed	30A M5	2.63-6.64	R5.5-4 R5.5-5	M5 2±0.2
	or slotted	SUA IVIS	6.64-10.52	*8-5NS (made by JST)	WIS 2±0.2
Alarm and auxiliary	Wire retaining screw (square	M3.5	0.25-1.65	R1.25-3.5	0.8±0.1
switch terminals	washer) Cross recessed or slotted	ivio.5	1.04-2.63	R2-3.5	0.0±0.1

 $^{^{\}star}\text{Use}$ the screw terminal 8-5NS made by JST.

Low Voltage Air Circuit Breakers (AE-SW Series)

	Frame	(A)		630	1000	1250	1600	2000	2000	2500	3200	4000
	Mode	el		AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA	AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA
Image						AE1600-SV	V (Drawout typ	SV V	Notinge Air Circuit Breaker	●See the ca	atalog of Low Volt Y-0622, for the de	•
Rated cur	rent (CT	rating) l	n (A)	630 (*1)	1000	1250	1600	2000	2000 (*1)	2500	3200	4000
	nbient te narine u	empératu ise 45°C)	re 40°C)	315-346.5-378-409.5- 441-472.5-504-535.5- 567-598.5-630 (*1)	500-550-600- 650-700-750- 800-850-900- 950-1000	625-687.5-750- 812.5-875-937.5- 1000-1062.5- 1125-1187.5-1250	800-880-960- 1040-1120-1200- 1280-1360-1440- 1520-1600	1300-1400-1500- 1600-1700-1800- 1900-2000	1000-1100-1200- 1300-1400-1500- 1600-1700-1800- 1900-2000 (*1)	1625-1750-1875-	2080-2240-2400-	2600-2800-3000-
	mber of							3, 4 (*2)				
Rated ins				222	1000	1050	1000	1000	2000	0500	2000	1000
Rated curr				630	1000	1250 1600 2000 65			2000 2500 3200 400 75			4000
\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	17-2, EN 6	50947-2	690VAC			65					75 75	
Rated breaking capacity (as symmetrial RNS) NR 'PL' DN, TC' DN	/-GL, BV, AB	S, DNV, CCS	690VAC 600VAC 240-500VAC			65				35		
as signate		= % lcu	210 0001110		100%							
Rated short-time withstand of			1s		65 75							
Suita	bility for	isolation		Yes								
Reve		nnection						Available				
Number of	With ra	ted 690V	'AC In (*9)			000		1500	1500 1000			500
operating	curre		'AC In (*10)		10	000		8000	8000 8000 5000			
cycles (*7) (*8)	zation c		rrent (*10)		25000 (*11) 20000 (*11)							
	llution o				B 							
EMC environment			nent A or B)					A (*12)				
		Fixed	3-pole			410×340×290				410×4	75×290	
Outline dimension	(mm)	type	4-pole			410×425×290				410×6	05×290	
Height (H) x width (W) >	depth (D)	Drawout	3-pole			430×300×375				430×435×375		430×439×375
		type	4-pole			430×385×375				430×565×375		430×569×375
		Fixed	3-pole	35		35	35	44	51	52	54	73
Weight (kg)	H	type	4-pole	42 56	42	43	43 56	54 62	64 81	64 81	67 85	92 101
(Without Acces	sory)	Drawout type	3-pole 4-pole	70		70	70	75	101	101	106	127
(*13)		Cradle	3-pole	70		24	10	27		3	34	46
		only	4-pole			28		32		0	42	58
	CE mar	king						Self-declaration				,
	KCA ma							Self-declaration				
	C (☆:Ce			φ								
Marine a								LR, DNV, BV, AB				
Automa	atic tripp	ing device	ce				Electronic	e (effective value	detection)			

- ●When the MCR is provided, the breaking capacity may be changed. See the catalog of Low Voltage Air Circuit Breakers, Y-0622. ●See the catalog of Low-voltage Air Circuit Breakers, Y-0622, for the details of the accessories.
- Notes: *1 AE630-SW and AE2000-SW having low rating types are available. See the catalog of Low Voltage Air Circuit Breakers, Y-0622, for the details.
 - - The 4-pole products do not have obtained the marine approval.

 4 (HN) means the neutral poles current capacity is 50% of the rated current, for 4poles.

 4 (FN) means the neutral poles current capacity is 100% of the rated current, for 4poles.

 5 (a) shows the value for 4P FN type.

 Marine approval value is 138kA.

 Marine approval value is 138kA.

 - The number of operating cycles is the guideline for the life of the open/close operation in the standard operation environment. These are not guaranteed values.
- *8 Electrical operating cycles are included in mechanical operating cycles.
 *9 This is the guideline for the life of the open/close operation when periodic inspection
- and maintenance are performed and consumable parts are not replaced.

 *10 This is the guideline for the life of the open/close operation when periodic inspection and maintenance are performed and consumable parts are replaced.
- This value is max. operating cycle for just ACB body without any accessories. (The max. operating cycles for the accessories like AX, MD,CC, SHT and UVT are
- This product is designed on the basis of environment A. When used under environment B, it might cause electromagnetic interference, and the user would be asked to do countermeasures to reduce these interference.
- *13 These weights include an electronic relay, but don't include other accessories.

Features

- Higher reliability by High operating durability (Mechanical)
- Increase of rated short-time withstand current Combination of the Electronic trip relay (ETR) with MCR (*1) enables increase of the choice coordination range.
- Applicability to increase and decrease of load and improvement of protection coordination

The electronic tripping system enables detailed setting of tripping characteristics. The system uses RMS detection resistant to distorted waves.

 More improved Electronic trip relay (ETR) and transmission functions To flexibly meet various requirements, functions suitable for purposes can be

selected effectively. In addition, improved measuring functions are provided, so that the circuit breakers are applicable to CC-Link and MODBUS transmission and helpful in establishing various electrical circuit measurement monitoring systems and energy-saving systems in combination with measuring display unit breakers.

*1 MCR is an abbreviation for marking current release. It has INST characteristic only when the circuit breaker in the OFF state turns ON (closes). The circuit breaker will lose the INST characteristic after closing, and it will have LTD and STD characteristics.

Various connections

Various connections for panel structures are available. (See the following figure.)

Connections


Connections Model	Horizontal	Vertical (*1) (VT)	Front (FT)	Vertical terminal adapter (VTA)	Front terminal adapter (FTA)
Fixed type (FIX)			_		
	(Standard)	FIX-VT		(FIX-VTA)	(FIX-FTA)
Drawout type (DR)					
	(Standard)	(DR-VT)	(DR-FT)	(DR-VTA)	(DR-FTA)

AE6300-SW models, vertical terminal only is available.

Low Voltage Air Circuit Breakers (AE-SW Series)

_	(4)		1000	5000	2000					
Fram Mo			4000 AE4000-SW	5000 AE5000-SW	6300 AE6300-SW					
Ima (Refe	age		AE6300-SW (Drawout type)	Low Voltage Ar Circuit Breakers Control of	●See the catalog of Low Voltage Air Circuit Breakers, Y-0622, for the details.					
Rated current (CT rating) I	ln (A)	4000	5000	6300					
Rated current settin (Reference ambien (For marine	temperatu	ire 40°C)	2000-2200-2400-2600-2800-3000-3200-3400- 3600-3800-4000	2500-2750-3000-3250-3500-3750-4000-4250- 4500-4750-5000	3150-3465-3780-4095-4410-4725-5040-5355-5670- 5985-6300					
Number	of poles			3, 4 (HN, FN) (*2) (*3)						
Rated insulatio										
Rated current of	neutral po	le (A)	2000 (4000) (*4)	3150 (6300) (*4)						
IEC 60947-2, E JIS C 8201-2-1 NK, LR, DNV-6	N 60947-2	690VAC	<u>85</u> 85							
1 5 5 2 1 1 S C 8201-2-1	EC 60947-2, EN 60947-2 IS C 8201-2-1 Ann.1 Ann.2 K, LR, DNV·GL, BV, ABS			130 (*5)						
ated	s = % lcu	240-300VAC		100%						
Rated short-time withstand current (kA		1 s	100 (*6)							
Suitability f		_	Yes							
Reverse of			nes Available							
	rated 690	VAC In (*9)	Available 1000							
operating cur	rent 690	VAC In (*10)	-							
cycles (*7) (*8) With	out rated cu	rrent (*10)		10000 (3P) /5000 (4P)						
Utilization				В						
Pollution				3						
EMC environment condit	_ `			A (*12)						
Outline discoursion ()	Fixed type	3-pole		414×874×290 414×1004 (1134) ×290 (*4)						
Outline dimension (mm) Height (H) x width (W) x depth (I		4-pole 3-pole		414×1004 (1134) ×290 (4) 480×889×375						
Trioignic (11) x widen (11) x depair (type	4-pole		480×1019 (1149) ×375 (*4)						
	Fixed	3-pole	141	141	148					
	type	4-pole	159 (179) (*4)	159 (179) (*4)	166 (188) (*4)					
Weight (kg)	Drawout	3-pole	194	194	208					
(without Accessory) (*13)	type	4-pole	223 (247) (*4)	223 (247) (*4)	238 (269) (*4)					
(10)	Cradle	3-pole	98	98	107					
	only	4-pole	113 (127) (*4)	113 (127) (*4)	121 (138) (*4)					
	arking			Self-declaration						
UKCA				Self-declaration						
CCC (☆:		find)	AN 12 AN 12							
Marine approv Automatic tri				☆ (NK, LR, DNV, BV, ABS) Electronic (effective value detection)						
Automatic th	Philip nevi			LIBORIOTIIO (BIIBORIVE VAIUE UBRECHIOTI)						

■Electronic trip relay (ETR) Type code

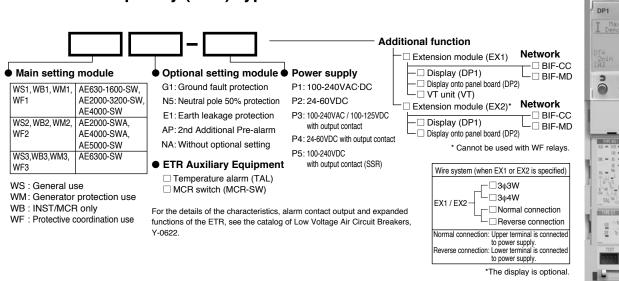

Earth Leakage Relays

								Inte	erchangeable I	eakage rela	vs (*1)				
		adal		Floor	ا عام ا ممالا	h a lal di ma a	Maaba		<u> </u>	, , ,	nonic surge	ready	Harm	nonic surge	ready
	M	odel		Electr	ical self-l	hold type	Mecha	nical self-	hold type	Elect	rical self-ho	ld type	Mecha	nical self-h	old type
			Hole diameter mm		NV-ZB	A		NV-ZSA	4		NV-ZHA			NV-ZLA	
			15	ZT15E		-	ZT15B		_		ZT15B			ZT15B	
			30	ZT30E		_	ZT30B				ZT30B			ZT30B	
Mode		of ZCT combin		ZT40E	1	-	ZT40B	3			ZT40B			ZT40B	
	((*5)	60 80	-		ZT60B ZT80B	-	_	ZT60B ZT80B		ZT60B ZT80B			ZT60B ZT80B	
			100	-		ZT100B	-		ZT100B		ZT100B			ZT100B	
			100			211000	-		211000		211000			211000	
	Image			0			0								
										0			0		
		Phase line ty	/ре						3φ4W, 3φ3W	, 1 <i>ø</i> 3W, 1 <i>ø</i> 2	2W				
			JIS	120	• 240 sel	ectable		• 240 sele • 415 sele			-			-	
Col	Control voltage VAC UL/JIS (*2) UL/CE (*3)			_			-			• 240 selec • 440 selec			• 240 select • 440 select 480		
	High speed	Rated sens	itivity current mA	30 100 • 200 • selectab	500	00 • 200 • 500 selectable	30 100 • 200 • selectab	500	00 • 200 • 500 selectable						
	type	Max. ope	erating time (s)		0.1			0.1]					
JIS	Delay Rated sensitiv		itivity current mA	100 • 200 • 500 selectable		100 • 200 • 500 selectable (200 • 500 • 1000 selectable)		_		_					
	type	Operating time (s) (4)				electable	0.3 • 0	.8 • 1.6 se	electable						
			ng time (s) or longer than (s)	(0.1 • 0.5 •	1.1	C	0.1 • 0.5 •	1.1					20.50	
	High speed	ed		_							30 50			30 50	
UL/JIS	type High		erating time (s) eitivity current mA	-						100 - 0	0.1 200 • 500 se	laatabla	100 - 0	0.1 00 • 500 se	laatabla
OLUJIO	speed		ating time (s) (*4)	-				_						.45 • 1.0 se	
	Delay type		ng time (s) or longer than (s)	1						0.1 • 0.45 • 1.0 selectable - • 0.1 • 0.5			- • 0.1 • 0.5		
	High		itivity current mA								0 • 100 sele			0 • 100 sele	
	speed type	Max. operati	ng time (s) at 5l∆n				-		0.04 100 • 300 • 500 selectable 300 • 500 • 1000 selectable		0.04 100 • 300 • 500 selectable 300 • 500 • 1000 selectable				
UL/CE	Delay	Rated sens	itivity current mA	-											
	type		j time (s) at 2l∆n (*4)							0.45 • 1.0 selectable		0.45 • 1.0 selectable			
			erating time (s) at 2l∆n						0.1 • 0.5		0.1 • 0.5				
	Ea	rth leakage in	dication	Ele	ctric type	(LED)	Mechanical type (button)		Electric type (LED)		Mechanical type (button)				
		Resetting me		Push button or control power switch off Push button or control power (conbined with earth leakage indicator) Push button or control power switch off			Push buttoned with earth indicator)								
		Configu			1c		1a1c		1a1c			1a1c			
ಕ	<u> </u>	ntinuous curre	этт сарасіту А	-	5	cosφ=0.4	-	5	cosφ=0.4		5	cosφ=0.4	-	5	cosφ=0.4
contact					cosφ=1	L/R=0.007		cosφ=1	L/R=0.007		cosφ=1	L/R=0.007		cosφ=1	L/R=0.007
				120VAC 240VAC	5 5	2 2	120VAC 240VAC	5 3	3 2	120VAC 240VAC	5 5	2 2	120VAC 240VAC	5 3	3 2
Built-in		Contact ca	pacity A	24VDC	5	2	415VAC	2	1	24VDC	5	2	480VAC	1	1
Б Д						•	30VDC	4	3	Use auxiliary	relay for 440	VAC contact.	30VDC	3	3
							100VDC 200VDC	0.4	0.4						
			Front	•	Clamp ter	rminal		Clamp teri			Clamp term	inal	•	Clamn term	inal
	Conr	nection	Rear	–	p .coi			Clamp teri			Clamp term		Clamp terminal Clamp terminal		
St	andard a	ttachment (Fr	ont connection)					p		ng screw					
	Mass kg Relay External Terminal cover			0.3			0.4			0.4			0.4		
				• (TC-ZI	,		● (TC-ZS	SA)	•	(TC-ZSA) ((*6)	•	(TC-ZSA) ((*6)	
acce			C 35mm rail (DIN rail) Fixture	+ '	● (DIN-Z	BA)		_			-			-	
dard		ax. consumpti	,		_		-		3 UL1053 Recognized component (File No.E196562)			UL1053 Recognized component			
Conforming standard		European Cl	E marking		_			_		Declar	ation for coll IEC 60947- EN 60947-	nformity 2	Declar	e No.E1969 ation for col IEC 60947-	nformity 2
Conform		UKCA m	arking		_					Declar	ation for co IEC 60947-	nformity 2	EN 60947-2 Declaration for conformity IEC 60947-2		
Notes: *1 Interchangeable leakage relays can			be easily combined with other releva			and our ZCT Hawaiis and the		EN 60947-2			EN 60947-2 s shown in parentheses are special-				

Notes: *1 Interchangeable leakage relays can be easily combined with other relays and our ZCT. However, products with 30mA sensitivity (excluding NV-ZHA/ZLA) can only be used in combination with ZT15B, ZT30B and

Remarks: 1. Relays with rates shown in parentheses are special-

order. 2. NV-ZBA/ZSA

Control voltage	Available voltage range	Example of applicable circuit voltage
120V	80-132V	100 • 110V • 120V
240V	160-264V	200 • 220 • 240V
415V	320-484V	400 • 415 • 440V

3.NV-ZHA/ZLA

Control voltage	Available voltage range	Example of applicable circuit voltage
120V	80-132V	100 • 110 • 120V
240V	160-264V	200 • 220 • 230 • 240V
440V	304-484V	380 • 400 • 415 • 440V
480V	368-528V	460 • 480V

with 30mA sensitivity (excluding NV-ZHA/ZLA) can only be used in combination with ZT15B, ZT30B and ZT40B.

*2 Indicates the UL-standard control voltage. UL (cURus) and JIS standards are indicated together. For JIS voltage indications, 100*200V changeover, con-415V changeover; 200*415V changeover; and 460V and 480V are described together. When ordering, specify "UL/JIS".

*3 Indicates the UL-standard control voltage, UL (cURus) and CE*UKCA standards are indicated together. For CE*UKCA voltage indications, 120*230V changeover is 120*240V changeover; 230*440V changeover is 240*440V selectable, which are described together. When ordering, specify "UL/CE".

*4 When operating times are 0.3 and 0.45sec, 0.8 and 1.0sec and 1.6sec, the relay operates between 0.15 and 0.45sec, 0.6 and 1.0sec and 1.0sec respectively.

^{0.45}sec, 0.6 and 1.0sec and 1.2 and 2.0sec, respectively.

Can be combined with an interchangeable ZCT equipped with a primary conductor. Refer to the next page for details.

^{*6} Not UL-certified.

Interchangeable ZCT

Type		ZT15B	ZT30B	ZT40B	ZT60B	ZT80B	ZT100B					
Aperture diameter (mm)		15	30	40	60	80	100					
Mass (kg)		0.2	0.4	0.6	2.0	2.6	3.3					
Rated short time current (kA)			50 (peak value)									
Dimensions (mm) a		48	68	85	140	160	185					
	b	52	52	52	90	90	90					
	С	70	90	100	150	169	190					
	d	25	50	50	100	100	100					
	е	40	40	40	70	70	70					

ZCT aperture diameter and wire size

	ZCT aperture diameter (mm)	15	30	40	60	80	100			
	ZCT aperture diameter (mim)		Max. 600V rated wire size in mm ² (current in amperes)							
4 (0	Polyvinyl-chloride insulated wire	14 (88)	60 (217)	150 (395)	325 (650)	600 (992)	800 (1185)			
1 <i>∲</i> 2w	Cross-linked polyethylene insulated cable	2 (33)	38 (190)	60 (260)	250 (655)	400 (870)	600 (1140)			
1 <i>∲</i> 3w	Polyvinyl-chloride insulated wire	8 (61)	38 (162)	100 (298)	250 (556)	500 (842)	725 (1095)			
3 <i>∲</i> 3w	Cross-linked polyethylene insulated cable	2 (33)	22 (135)	60 (260)	200 (560)	325 (760)	600 (1140)			
3 <i>ϕ</i> 4w	Polyvinyl-chloride insulated wire	8 (61)	38 (162)	100 (298)	150 (395)	325 (650)	600 (992)			
	Cross-linked polyethylene insulated cable	_	14 (105)	38 (190)	100 (365)	250 (655)	400 (870)			

Interchangeable ZCTs with primary conductors

Туре		ZTA600A	ZTA1200A	ZTA2000A				
Number of poles			3					
Rated voltage (VAC)		600						
Rated short time current (kA)			100 (peak value)					
Tene L	а	227	227	360				
	b	256	298	250				
	ba	366	444	594				
	С	42	78.5	79.5				
ca ca	ca	125	176	214				
Mass (kg)		6.5	11	27				

ELRs with a ZCT with primary conductors

Frame (A) 600 1200 2000 3200											
Frame (A)		600	1200	3200							
	ZBA				NV-ZBA3200						
Time	ZSA	Interchangeable ELD	Interchangeable ELR and interchangeable ZCTs with primary conductors								
Type	ZHA	interchangeable ELR									
	ZLA		NV-ZLA3200								
Number of poles			;	3							
Rated voltage (VAC)		600									
Rated short time current (kA)		100 (peak value)									
	а	227	227	360	490						
	b	256	298	250	320						
	ba	366	444	594	868						
	С	42	78.5	79.5	111						
ca	ca	125	176	214	290						
Mass (kg)		6.5	11	27	54						

			Control voltage (VAC)	Rated current sensitivity (mA)	Max. operating time (s)	Inertial non-operating time (s)	
	LEst sessed to ses	ZBA	120 • 240 (*1)	100 • 200 • 500 (*1)			
	High-speed type	ZSA	120 • 240 (*1) 240 • 415 (*1)	100 • 200 • 500 (*1)	0.1	_	
		ZBA	120 • 240 (*1)	100 • 200 • 500 (*1)	0.3 • 0.8 • 1.6 (*1)	0.1 • 0.5 • 1.1	
Specification of ELRs		ZSA	120 • 240 (*1) 240 • 415 (*1)	100 • 200 • 500 (*1) (200 • 500 • 1000 (*1))	0.3 • 0.8 • 1.6 (*1)	0.1 • 0.5 • 1.1	
LLIIO	Time-delay type (High-speed • Time-delay type)			100 • 200 • 500 (*1)	0.1 • 0.45 • 1.0 (*1)	- • 0.1 • 0.5	
		ZHA	120 • 240 (*1) 240 • 440 (*1)	100 • 300 • 500 (*1) 300 • 500 • 1000 (*1)	0.45 • 1.0 (*1) (at 2l∆n)	0.1 • 0.5 (at 2l∆n)	
		ZLA	120 • 240 (*1)	100 • 200 • 500 (*1)	0.1 • 0.45 • 1.0 (*1)	- • 0.1 • 0.5	
			240 • 440 (*1) 480	100 • 300 • 500 (*1) 300 • 500 • 1000 (*1)	0.45 • 1.0 (*1) (at 2l∆n)	0.1 • 0.5 (at 2l∆n)	

Note: *1 Selectable.



Special-purpose Breakers

Mag Only (Instantaneous Tripping Circuit Breakers)	62
2) DC MCCBs and DSN Switches	63
3) 400Hz MCCBs	63
4) MCCB and ELCB for special environment	64

1. Mag Only (Instantaneous Tripping Circuit Breakers)

Standard magnetic trip current

	-				
	NF32-SV NF63-CV/SV/HV	AC-DC	Rated current x 10 (AC)		
Fixed	NF125-CV/SV/HV	AC-DC			
Fixed	NF250-CV/SV/HV	AC-DC		(C) (C)	
	NF400-CW/SW NF630-CW/SW	AC-DC			
	NF800-SEW	AC	High: Rated current x 10 Low: Rated current x 2		
	NF800-SDW	DC	High: 8000A	Low: 3200A	
Adjustable	NF1000-SEW NF1250-SEW	AC	High: Rated current x 10 Low: Rated current x 2		
	NF1600-SEW	AC	High: Rated current x 10 Low: Rated current x 2		
	NF1250-SDW NF1600-SDW	DC	High: 8000A Low: 3200A		

Remarks: 1. The size, weight, accessories, etc., are all identical to the same-designation C, S and H series breakers.

Minimum and max magnetic trip current

ixed

Model	Rated	Current	Instantaneous trip	ping current(A)	Model	Rated	Current	Instantaneous trip	ping current(A)
Wodel	current(A)	Current	min-max	standard	iviodei	current(A)	Current	min-max	standard
	3		9-300	30		125		375-3150	1250
	5		15-300	50		150		450-3150	1500
	10		30-300	100	NF250-CV	175		525-3150	1750
NF32-SV	15		45-300	150	NF250-SV	200		600-3150	2000
	20		60-300	200		225		675-3150	2250
	30		90-300	300		250		750-3150	2500
	32		96-320	320		125		375-3150	1250
	10		30-500	100		150		450-3150	1500
	15		45-500	150	NF250-HV	175		525-3150	1750
	20		60-500	200		200		600-3150	2000
NF63-CV NF63-SV NF63-HV	30		90-500	300		225	AC-DC	675-3150	2250
	40		120-500	400		250		750-3150	2500
	50		150-500	500	NF400-CW	250		900-4000	2500
	60		180-600	600		300		900-4000	3000
	63		189-630	630	1NF400-CVV	350		1050-4000	3500
	60		180-1600	600		400		1200-4000	4000
NF125-CV	75		225-1600	750		250		900-5600	2500
NF 125-CV	100		300-1600	1000		300		900-5600	3000
	125	AC-DC	600-1600	1250		350		1050-5600	3500
	15		60-1600	150	NF630-CW	400		1200-5600	4000
	20		120-1600	200		500		2000-6300	5000
	30]	120-1600	300		600		2400-6300	6000
	40]	200-1600	400		630		2520-6300	6300
NF125-SV	50]	200-1600	500		500		2000-5000	5000
	60]	400-1600	600	NF630-SW	600		2400-6000	6000
	75		400-1600	750		630		2520-6300	6300
	100		400-1600	1000		•		`	
	125		600-1600	1250	1				
	15	1	60-1600	150	1				
	20]	120-1600	200					
	30	1	120-1600	300	1				
	40]	200-1600	400					
NF125-HV	50]	200-1600	500					
		1			1				

600

750

1000

1250

Adjustable(tripping current)

100

125

Model	Current	Max	Rated	Instantaneous tripping current(A)					
iviodei			current(A)	Lo	2	3	Hi		
NF800-SDW		800	(700)	2800	4200	5600	7000		
INFOUG-SDW	DC		800	3200	4800	6400	8000		
NF1250-SDW		1000	1000			6400	8000		
NF 1250-5DW		1250	1250	3200	4800				
NF1600-SDW		1600	1600						

400-1600

400-1600

600-1600


Adjustable(rated current)

		<u>'</u>	
Model	Current	Rated current(A)	Instantaneous tripping current(%)
NF800-SEW		400 450 500 600 700 800	
NF1000-SEW	1	500 600 700 800 900 1000	200 250 300 350 400
NF1250-SEW	AC	600 700 800 1000 1200 1250	500 600 700 800 1000
NF1600-SEW]	800 1000 1200 1400 1500 1600	

2. DC MCCBs and DSN Switches

Breaking is more difficult with direct currents because the current value never reaches zero. While ordinary DC breakers are suitable for low voltages, special-voltage DC breakers are recommended for voltages in excess of 250VDC. Breakers for 550V are all 4-pole models. The size, shape, drilling plan, accessories, etc., are all identical to the S Series breakers with the same designations.

Wiring diagram for DC usage.

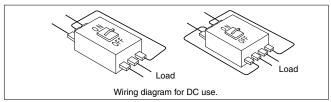

Remark: 1. The tripping characteristics will change if the wiring differs from the one shown here.

Model	NF63-SV		NF12	:5-SV	NF250-SV		NF400-SW		NF630-SW		NF800-SDW		NF125	0-SDW	NF1600-SDW		
Number of poles	3	4	3	4	3	4	3	4	3	4	3	4	3	3	3	4	
Rated voltage (VDC)	400	550	440	550	500	600	500	600	500	600	500	600	500	600	500	600	
Rated breaking capacity (kA) IEC 60947-2 (lcu/lcs)	2/2		10/	/10	20	/20	40/40		40/40		40/40		40/20	20/20	40/	/20	

Remark: 1. Time constant: 10ms or below.

2. NF1250-SDW 3P and NF1600-SDW 3P/4P are Mag Only (Instantaneous Tripping Circuit Breakers).

DC side

These breakers are designed as thyristor-Leonard system DC side breakers. They protect the thyristor from short circuiting when there is a power or

communication failure (Mag Only breakers can also be used for this purpose). Use these breakers in combination with fast fuses for even greater protection.

Model	NF12	25-SV	NF25	0-SV	NF40	0-SW	NF63	0-SW	NF800	-SDW	NF125	0-SDW	NF1600-SDW	
Number of poles	2	3	2	3	2	3	2	3	2	3	2	3	2	3
Rated voltage (VDC)	250	440	300	500	250	480	250	480	250	480	250	480	250	480
Rated breaking capacity (kA) IEC 60947-2 (lcu/lcs)	40/40	10/10	20/	20	20	20	20/20		20/20		20	20	20/	/20
Instantaneous trip current min.)	3 times ra	ted current	3 times rat	ed current	900A		1000A		1400A		250	00A	320	00A

DSN switches

These are standard MCCBs without the automatic tripping element. The tripping capacity is about six times the rated current.

The appearance, size, drilling plan and available accessories are all identical to similar standard S and C Series MCCBs.

Model	DSN63-CV		DSN1:	25-CV	DSN2	50-CV	DSN4	00-CW	DSN630-CW	DSN800-CW
Rated current (A)	63		12	25	2	50	4	00	630	800
Number of poles	2	3	2	3	2	3	2	3	3	3
Rated voltage (AC/DC)	500/250		500/	250	500	/250	600	/250	600/250	600/250
Max. switching current (AC/DC)	378/155		750/	310	1500	0/625	2400	/1000	3780/1575	4800/2000

Model	DSN	32-SV	DSN6	3-SV	DSN1	25-SV	DSN1	25-SG	V D	SN160)-SGV	DSN2	50-SV	DSN	250-SG	/ DSN	1400-	SW	DSN6	30-SW	DSN8	00-SW	DSN10	000-SW	DSN12	250-SW	DSN16	600-SW
Rated current (A)	3	32	6	3	12	5	1	25	Т	16	0	2	50		250		400		63	30	8	00	10	00	12	50	16	000
Number of poles	2	3	2	3	2 3	4	2	3 4	1 2	2 3	4	2 :	3 4	2	3 4	2	3	4	3	4	3	4	3	4	3	4	3	4
Rated voltage (AC/DC)	500	/250	500/	250	690/	250	690)/300	Т	690/	300	690	/250	69	0/300	69	0/25	0	690	/250	690	/250	690	/250	690	/250	690	/250
Max. switching current (AC/DC)	192	2/80	378/	155	750/	310	750)/315	Т	960/	400	1500	/625	15	00/625	240	0/10	000	3780	/1575	4800	/2000	6000	/2500	7500	/3125	9600	/4000

3. 400Hz MCCBs

Standard MCCBs cannot be used in 400Hz circuits. When standard MCCBs are used in high-frequency circuits (eq. 400Hz), the instantaneous characteristics are shifted higher. The 400Hz MCCB is recommended for use in 400Hz circuits.

Specifications

The appearance, size, rated interrupting capacity, drilling plan, accessories, etc., are all identical to the standard S and H Series breakers of the same designation.

Model		NF	125-	·SV	N	IF125	5-HV	1	VF250)-SV	NF	250)-HV	NF	100-8	SW	NF400	-SEW	NF630	-SW (*1)	NF63	0-SEW	NF80	0-SEW	NF125	0-SEW	NF160	0-SEW
Rated current (A)							32, 40, 0, 100		125, 175,			25, ² 75, 2			5, 25 0, 35			-350 stable	400	, 500		-500 stable		-600 stable		-800 stable		1200 stable
Number of poles		2	3	4	2	3	4	2	2 3	4	2	3	4	2	3	4	3	4	3	4	3	4	3	4	3	4	3	4
Rated insulation voltag	e (V)																6	90										
	690VAC		8/8			10/	8	Т	8/8	3		10/	8	1	0/10	1	10	/10	10	/10	10	/10	10	/10	25.	/13	25	/13
Rated breaking capacity	500VAC		18/18	В	П	30/2	23	П	30/3	30		50/3	38	3	30/30	1	30	/30	30	/30	30	/30	30	/30	65	/33	65	/33
(kA)	440VAC		25/25	5	П	50/3	38	Т	36/3	36		65/6	35	-	12/42	!	42	/42	42	/42	42	/42	42	/42	85	/43	85	/43
IEC 60947-2 (lcu/lcs)	400VAC		30/30	0		50/3	38	Τ	36/3	36		75/7	75	-	15/45		50	/50	50	/50	50	/50	50	/50	85	/43	85	/43
	230VAC		50/50	0		100/	75		85/8	85/85		100/100		85/85		85/85		85/85 85/85		/85	85/85		125	63	125	5/63		

Note: *1 Instantaneous trip current : Rated current x 14 (Fix)

4. MCCB and ELCB for special environment

Our MCCBs and ELCBs are manufactured based on the normal operating conditions. When using our MCCBs and ELCBs under different conditions, MCCBs and ELCBs for special environment are also available.

Normal operating conditions

Ambient temperature -------10°C~40°C

Average temperature does not exceed 35°C in 24°C hours

Current-temperature conpensation ratio when exceeding 40°C

50°C 0.9 times

60°C 0.7 times

- Relative humidity Below 85% and no condensation
- Altitude······Below 2,000m
- Atmosphere.....No excessie water vapor, oil vapor, smoke, dust, solt, corrosive substance, impact and vibration

Space	ial environment	Special purpose	Specification	Model						
Spec	iai enviioriment	Special pulpose	Specification	MCCB	ELCB	Circuit protector				
Low temp.	Cold storage warehouses	Low temp. breakers		NF-C/S/H series (*1, *2)	NV32-SV NV63-CV/SV/HV NV125-CV/SV/HV NV250-CV/SV/HV	СР30-ВА				
High temp. High humid.	Chemical plants	Tropical treatment breakers	Under high humidity, withstand voltage and other electrical performance may be reduced. Moisture proof, mildew proof and corrosion resist breakers are available.	NF-C/S/H series (*3, *4, *5, *6, *7)	NF-C/S/H series (*3, *4, *5, *6, *7)	СР30-ВА				
Corrosive gas Salt	Petrochemical plants	Corrosion resist breaker		NF-C/S/H series (*3, *4, *5, *6, *7)	NF-C/S/H series (*3, *4, *5, *6, *7)	CP30-BA				
Dust			In case dusty environment, boxed breakers are recommended in the same of the s	_						

- *1 SHT and UVT are not applicable.
 *2 Electronic breakers are not applicable.
 *3 250A frame electronic breakers are not applicable.
 *4 AL, AX, SHT, UVT, TBL for 1000, 1200A frame ELCBs are not applicable.
 *5 ELCBs for special voltage are not applicable.
 *6 AL and AX for minute load are not applicable.
 *7 UVT are not applicable.




Selection

1 Construction and Operation	66
1) Construction of MCCB	66
2) Construction of ELCB	68
2 Selection of MCCB and ELCB	69
1) Selecting Procedure	69
2) Features and Performance	70
3) Current-carrying Capacity and Operating Temperature	72
4) Application of Circuit Breaker According to Breaking Capacity	74
5) Selection of Circuit Breaker for Electric Lamp or Heater Circuit	
6) Selection of Circuit Breaker for Motor Branch Circuit	77
7) Selection of Motor Protection Breaker	79
8) Selection of Circuit Breaker for Inverter Circuit	80
9) Selection of Circuit Breaker for Transformer Primary Side	81
10) Combination for Selective Breaking	85
11) Combinations for Cascade Breaking	
12) International Standard Conformance List	89
3 Selection of ELCB	92
1) Electric Shock Protection	92
2) ELCB Grounding Method	
3) Rated Voltage and Number of Poles	94
4) Earth Fault Protection Coordination and Combination of Devices	95

1. Construction of MCCB

Arc-Extinguishing Device

MCCBs feature excellent arcextinguishing performance by virtue of the optimum combination of grid gap, shape, and material.

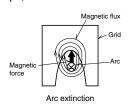

On electronic molded case circuit breakers, the instantaneous tripping current can be adjusted only by turning the knob. Therefore, optimum


characteristics for load can be obtained.

Adjustable Instantaneous Tripping Current





The contacts open and close rapidly, regardless of the moving speed of the handle, minimizing contact wear and ensuring safety.

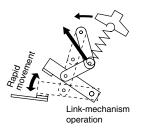

Molded case Molded case (Cover) (Base) Contact Overcurrent **Tripping Device** Detects overcurrent and trips the circuit breaker. Terminal

Trip Button (Push to Trip)

Enables tripping mechanically from outside, for confirming the operation of the accessory switches and the manual resetting function.

Handle

1. Trip indication

The automatically tripped condition is indicated by the handle in the center position between ON and OFF, the yellow (or white) line cannot be seen in this position.

Resetting after tripping is performed by first moving the handle to the OFF position to engage the mechanism, then returning the handle to ON to reclose the circuit.

3. Trip-Free

Even if the handle is held at ON, the breaker will trip if an overcurrent flows.

Fig. 4.1 Construction



Handle indication

4. Contact On Mechanism

Even in the worst case in which welding occurs owing to an overcurrent, the breaker will trip and the handle will maintain to ON, indicating the energizing state.

4-pole Breaker

- The 4-pole breaker is designed for 3-phase 4-wire circuits. A neutral pole without an overcurrent tripping element is provided at the right end. The construction and operation are the same as class S, H and U breakers (Electronic molded case circuit breakers with frame size of 1600A or less have overcurrent tripping elements on the neutral poles.)
- Since the four poles are simultaneously opened and closed, the user will not fail in turning on the neutral pole or carelessly open the pole.
- (The standard construction is designed to close the neutral pole earlier and open it later than the voltage pole.)





Fig. 4.2 4-pole Breaker

(NF250-SV)

Over-current Tripping Devices

Thermal-Magnetic Type

NF32-SV, NF63-CV/SV/HV, NF125-CV/SV/HV, NF250-CV/SV/HV NF400-CW/SW, NF630-CW/SW, NF800-SDW, etc.

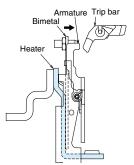


Fig. 4.3

- 1. Time-Delay Operation An overcurrent heats and warps the bimetal to actuate the trip bar.
- 2. Instantaneous Operation If the overcurrent is excessive, the amature is attracted and the trip bar actuated.

Thermal-Magnetic Type (NF1250-SDW)

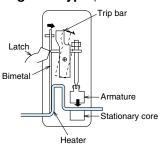


Fig. 4.4

- 1. Time-Delay Operation An overcurrent heats and warps the bimetal to actuate the trip bar.
- 2. Instantaneous Operation If the overcurrent is excessive, magnetization of the stationary core is strong enough to attract the armature and actuate the trip bar.

Hydraulic-Magnetic Type (NF50-FHU etc.)

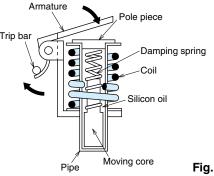


Fig. 4.5

- 1. Time-Delay Operation
 - At an overcurrent flow, the magnetic force of the coil overcomes the spring, the core closes to the pole piece, attracts the armature, and actuates the trip
 - The delay is obtained by the viscosity of silicon oil.
- 2. Instantaneous Operation
 - If the overcurrent is excessive, the armature is instantly attracted, without the influence of the moving core.

Principle of Electronic Trip Relay (ETR) Operation

(NF125-SEV/HEV, NF250-SEV/HEV, etc.) / NF400-SEW~NF800-CEW NF1000-SEW~NF1600-SEW, etc.

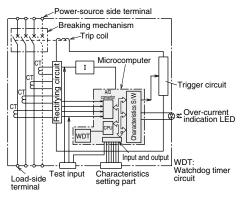


Fig. 4.6.1

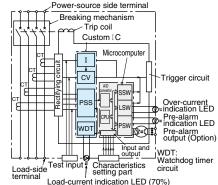


Fig. 4.6.2

- 1. The current flowing in each phase is monitored by a current transformer (CT).
- 2. Each phase of the transformed current undergoes full-phase rectification in the rectifier circuit.
- 3. After rectification, each of the currents are converted by a peakconversion and an effective-value conversion circuit.
- 4. The largest phase is selected from the converted currents.
- 5. Each time-delay circuit generates a time delay corresponding to the largest phase.
- 6. The trigger circuit outputs a trigger signal.
- 7. The trip coil is excited, operating the switching mechanism.

Number of tripping devices


Descriptions (e.g. 2P1E and 2P0E) are not given in the number of poles fields of some models. For these models, the same number of overcurrent tripping devices as the number of poles is provided in the circuit breakers. 2 poles: 2P2E, 3 poles: 3P3E, 4 poles: 4P4E or 4P3E

(Some 4-pole models do not have overcurrent tripping devices for the neutral poles.)

2. Construction of ELCB

Arc-Extinguishing **Device**

ELCBs feature excellent arc-extinguishing performance by virtue of the optimum combination of grid gap, shape, and material.

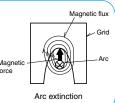

Trip Button (Push to Trip)

Enables tripping mechanically from outside, for confirming the operation of the accessory switches and the manual resetting function.

Overcurrent Tripping Device

The use of the proven mechanism of ELCBs ensures reliable detection of overcurrent.

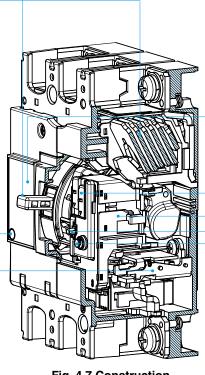


Fig. 4.7 Construction

Switching Mechanism

The contacts open and close rapidly, regardless of the moving speed of the handle, minimizing contact wear and ensuring safety.

Window Frame

Since the handle, trip button, test button, leakage display button and nameplate are located in one area, it is easy to cut the panel.

Sensitivity Switching Device

The rated sensitivity current can be easily changed.

A 3-stage switching device for 100, 200 and 500mA and a 2-stage switching device for 200 and 500mA are available.

Leakage Display

Target type with display button. The display is automatically reset by the handle.

Test Button

The button has excellent durability and performance to withstand inspection at start.

Leakage Tripping Device

- The semiconductor circuit unit, which is the most important part of the device, is an electronic type using highly reliable ICs.
- For improvement of the function for removing harmonic and surge components, two filters are provided to prevent unnecessary operations.
- ●The ZCT detects any minute current. It is covered with a magnetic shield and never operates unnecessarily owing to motor starting current.

Rated operational voltage	Applicable circuit voltage	Available voltage range
100-240V	100/110/200/220/230/240V	80 to 264V
100-440V	100/110/200/220/240/254/265/380/400/415/440V	80 to 484V
200-440V	200/220/240/254/265/380/400/415/440V	160 to 484V
100-200-415V	100/110/200/220/240/254/265/380/400/415/440V	80 to 484V
200-415V	200/220/240/254/265/380/400/415/440V	160 to 484V

Operation

- 1. When an earth fault occurs, voltage is induced on the secondary side of the ZCT.
- 2. Factors of unnecessary operations, i.e. surge and noise components, are removed from the induced voltage.
- 3. The signal level is discriminated, and, when the level exceeds the specified level, the electromagnetic device is excited to trip the circuit breaker body.

Overload and short-circuit

The use of the proven mechanism of ELCBs ensures reliable detection of overcurrent and earth fault to break the circuit.

Revision to EN and GB/T Standards

Products for European markets must conform to the CE Marking Directives. To affix the CE mark to a product, it is necessary that the product conforms to European Standard (EN Standard).

Products for China must conform to Chinese GB/T Standard to affix the CCC mark.

The third edition (2003) of EN Standard for circuit breakers, EN 60947-2, and GB/T Standard GB/T 14048.2 (2008) prescribe that the functions of earth leakage circuit breakers should normally work even in open phase condition. Products based on the previous EN Standard (second edition) have not been approved since June. 2006. Products based on the previous GB/T Standard (2001) have not been approved since January, 2011.

☆WS-V Series Earth Leakage Circuit Breakers (conforming to CE) and CCC Standards) and UL 489 Listed Molded Case Circuit Breakers with earth leakage protection conform to the third edition of EN 60947-2 and GB/T 14048.2 2008 as 3-phase power supply earth leakage circuit breakers.

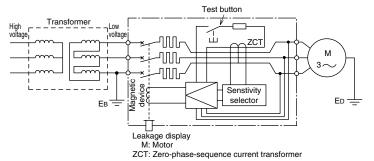


Fig. 4.8 Circuit configuration of ELCB (NV63-SV)

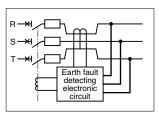


Fig. 4.9 Circuit diagram in 3-phase power supply ELCB

1. Selecting Procedure

MCCB (NF))	
Circuit used Applicable standard	Phase and wire type, voltage, DC or AC, frequency, standard	● Applicable phase and wire type 2 poles: 1-phase 2-wire 3 poles: 1-phase 2-wire, 1-phase 3-wire, 3-phase 3-wire 4 poles: 3-phase 4-wi ● Specification list (pages 18 to 59) ■ List of received certifications (page 89)
		•
Determination of rated current	Kind and size of electric wire Kind and working conditions of load Selection conditions in internal standard and electrical equipment technical standards	Relationship between temperature and electric wire (page 72) Selection of circuit breaker for motor branch circuit (page 77) Selection of circuit breaker for electric lamp or electric heater circuit (page 75) Selection of motor protection breaker (page 79) Selection of circuit breaker for inverter circuit (page 80) Selection of circuit breaker on transformer primary side (page 81)
		•
Determination of interrupting capacity	Transformer capacity Electric wire thickness and length	●Application based on breaking capacity (page 74) ●Table of combinations for cascade breaking (page 87)
		.
Examination of coordination	Selective breaking	●Operating characteristic curve (pages 146 to 246) ●Table of combinations for selective breaking (page 85)
		•
Determination of model	Use	●Circuit Breakers for special purpose (page 61 to 64)
Installation method	Connection and molded case circuit breaker	●Installation and connection (pages 98 to 106) ●Boxed Circuit Breakers (page 137)
		•
Accessories	Internal accessories and external accessories Electric operation	 Internal accessories (pages 108 to 122) External accessories (pages 123 to 143) Electrical Operated Circuit Breakers (pages 140 to 142)
ELCB (NV) Circuit used Applicable standard	Phase and wire type, voltage, DC or AC, frequency, standard	●Specification list (pages 18 to 59) ●List of received certifications (page 89)
		•
Determination of rated current	Kind and size of electric wire Kind and working conditions of load Selection conditions in internal standard and electrical equipment technical standards	Relationship between temperature and electric wire (page 72) Selection of circuit breaker for motor branch circuit (page 77) Selection of circuit breaker for electric lamp or electric heater circuit (page 75) Selection of circuit breaker for inverter circuit (page 80) Selection of circuit breaker on transformer primary side (page 81)
Determination of interrupting capacity	Transformer capacity Electric wire thickness and length	●Application based on breaking capacity (page 74) ●Table of combinations for cascade breaking (page 87)
Determination of rated current sensitivity	Purpose of protection Obligation of installation	 Purpose of protection (page 92) Selection of rated sensitivity current of circuit breaker for inverter circuit (page 80) Method of switching between rated voltage and rated sensitivity current (page 262)
		↓
Examination of	Selective breaking Ground fault protection coordination	●Operating characteristic curve (pages 146 to 246) ■Table of combinations for selective breaking (page 85) ■Combinations of ground fault protection coordination and devices (page 95)
coordination		■
	Use	●Circuit Breakers for special purpose (page 61 to 64)
Determination of model		Oricuit Breakers for special purpose (page 61 to 64) Installation and connection (pages 98 to 106) OBOXED Circuit Breakers (page 137)
Determination of model	Connection and molded case circuit breaker	

2. Features and Performance

Features of MCCB

Molded Case Circuit Breakers (NF)

1)Time-delay trip function

This function conforms to the allowable current and time characteristics of electric wire and prevents operation caused by the staring current of a load device. When the overcurrent is large, the operating time is short, and when the overcurrent is small, the operating time is long.

In the case of electronic type

The electronic time-delay trip function includes a long time limit trip function conforming to the allowable current and time characteristics of conductor and a short time limit trip function for selective breaking for branch MCCB. The short time limit function operates after a delay of some cycles (0.06 to 0.3s) at overcurrent exceeding the short time limit tripping current. These functions can be adjusted by the knob.

2 Instantaneous trip function


This function breaks the circuit immediately when short-circuit current flows. A circuit breaker on which the instantaneous tripping current is adjustable has the advantage that coordination in operation with other protective devices, such as electromagnetic switches and low-voltage air circuit breakers, can be easily obtained. The instantaneous operating time (total interrupting time) can be divided as shown in Fig. 4-10.

3Operating characteristic curve

The operating characteristic curve indicates the relationship between magnitude of overcurrent and operating time. The maximum-minimum operating characteristic curve indicates that the operating time is in the range. Figs. 4-11 and 4-12 show examples of operating characteristic curves.

Table 4-1 Overcurrent trip operating time (IEC 60947-2)

Rated current of circuit breaker	Operating time
(A)	for 130% current
63 or less	Within 1h.
Over 63	Within 2h.

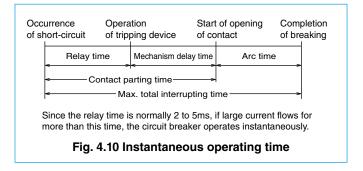

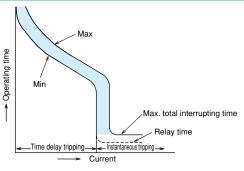


Fig. 4.11 Example of operating characteristic curve

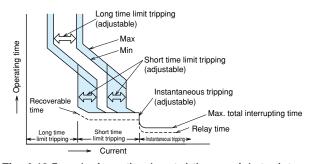


Fig. 4.12 Example of operating characteristic curve of electronic type

Motor Protection Breakers

- •The motor protection breakers are circuit breakers to be used to protect general induction motors. They prevent motors being burnt not only by short-circuit current of circuits, but also by overcurrent caused by overload operation and locking of motors.
- •The Motor Protection Breakers are finely classified according to rated current so that the breakers can be applied to various types of motors.
- •Although their time-delay trip and instantaneous trip functions are almost the same as those of MCCB, they are designed to operate within 2 seconds to 30 seconds at 600% of the rated current in consideration of protection from motor starting current and locked current.
- ●There are many kinds of motors, and the motors have various allowable characteristics for overcurrent. Therefore, when applying a motor breaker, it is necessary to compare the allowable characteristics and the operating characteristics of the motor breaker.
- Note that, particularly, submersible motors may not be protected by ordinary motor breakers because their allowable locked time is short.
- •When the motor starting current is large and the starting time is long and when the frequency of intermittent operation is high, motor breakers are unsuitable. In such a case, the use of a combination of an electromagnetic switch and MCCB (combination starter) is recommended.

Conventional short-circuit

Characteristics of MCCB for DC circuits


When a 2-pole MCCB (250VDC or less) is used on a DC circuit, connect the poles in series.

When a 3- or 4-pole MCCB is used, refer to page 63 (for special DC voltage) or pages 18 to 25 (for DC). For DC high voltage, refer to pages 47 to 48.

If the breaker is not connected as specified, its tripping characteristics and breaking performance will change, and it cannot be used.

Current-limiting characteristic

The current limiting refers to reduction of estimated short-circuit current depending on the circuit to prevent flow of the larger short-circuit current. The use of a class S, H or R which has excellent current-limiting characteristic or class U enables to reduce the passing energy at shortcircuiting and protect the devices in the electric circuit from

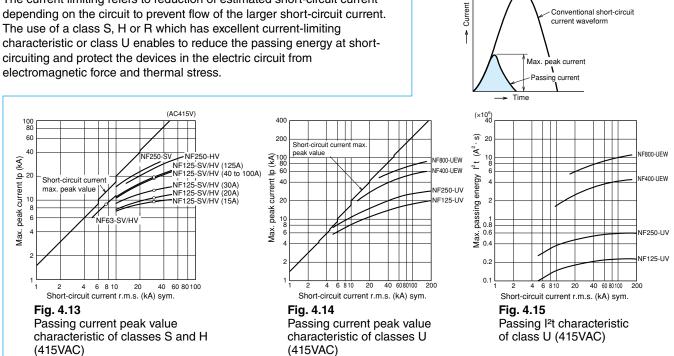

Performance

Short-circuit breaking performance

Short-circuit current corresponding to the rated interrupting capacity is interrupted.

Outline of short-circuit test (IEC 60947-2)

- 1) Rated limit short-circuit interrupting capacity (Icu) Operating duty: O - 3min - CO
- 2 Rated service short-circuit interrupting capacity (Ics) Operating duty: O - 3min - CO - 3min - CO Upper limit of temperature rise of terminal after breaking: 80K or less
 - O duty: The circuit breaker in the ON status carries and interrupts short-circuit current.
 - CO duty: A shorted circuit is formed, and the circuit breaker is turned on to carry and interrupt short-circuit current.

Opening/closing performance

Table 4-2 shows the durability against opening and closing. See the durability against opening and closing as reference when using a circuit breaker as a switchgear.

The durability against tripping by SHT (shunt tripping device), UVT (undervoltage tripping device) and trip button is 10% of the total durability against opening and closing.

Note: Opening and closing operations are regarded as one time.

> If a circuit breaker is regularly used to trip, the life of the circuit breaker will be significantly reduced.

Table 4-2 Durability of MCCB against opening and closing (IEC 60947-2)

Rated current		Durability agair	nst opening and	closing (times)
(A)	and closing (times/hour)	With current flow	Without current flow	Total
100 or less	120	1500	8500	10000
101 to 315	120	1000	7000	8000
316 to 630	60	1000	4000	5000
631 to 2500	20	500	2500	3000
2501 or more	10	500	1500	2000

3. Current-carrying Capacity and Operating Temperature

Operating current vs. ambient temperature

Rated current of circuit breakers is adjusted for the rated ambient temperature. This is because circuit breakers are often installed in a casing as a switchboard or a control board, and temperature of the installed place of the breaker becomes higher than ambient temperature of the wires. If temperature of the installation site of circuit breakers greatly differ from the rated ambient temperature, it is necessary to correct rated current according to the temperature correction curve (shown in the Paragraph of characteristics and outside shape in the catalog). Load current can be increased up to the rated current corrected according to ambient temperature.

However, set current rating with enough allowance while taking fluctuation of power voltage and load current into consideration so that maximum operating current may not exceed the rated current.

(1) Cautionary instructions for using heat resistive wire

For using insulated wires of higher heat resistance than that of 600V PVC insulated wire (allowable temperature 60°C), it is necessary to take the following points into consideration.


For circuit breakers, size of test wire is stipulated by each test current in IEC60947-1.

The values are calculated figures when bus bars (that are defined by IEC60947-1) are connected and tested in open-air usage environment. If size of connection wire is thinner than the test wire size, temperature of the breaker terminals increases and overcurrent tripping operation characteristic may change in some cases. (Operating time becomes shorter usually.) So please select the size of the connected wire so that the maximum usage current does not exceed the value in Fig. 4-16 with correction rate. At motor load, for example, influence of change in operation characteristic by difference in size of connection wire is insignificant and can be disregarded because the load current is far lower than the rated current of the circuit breaker.

Since the temperature test conditions for circuit breakers with IEC60947-1 are different from the state that the circuit breakes are mounted inside panels, please make sure that the circuit breakers are tested with the actual usage assembly inside panels.

Table 4-3 IEC 60947-1 Size of test wire

	test current A)	Conductor size (mm²)
0 <	≤ 15	2.5
15	20	2.5
20	25	4.0
25	32	6.0
32	50	10
50	65	16
65	85	25
85	100	35
100	115	35
115	130	50
130	150	50
150	175	70
175	200	95
200	225	95
225	250	120
250	275	150
275	300	185
300	350	185
350	400	240
400	500	150(2)
500	630	185(2)

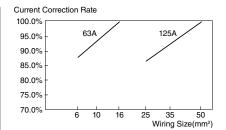

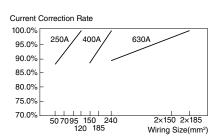


Fig. 4.16 Current Correction Example at IEC60947-1

(2) Connection of aluminum conductors

- When aluminum conductors are connected, be careful to prevent the contact resistance (due to the oxidized film of aluminum) from being increased.
- The surface of the connection point of the aluminum conductors shall be properly treated by plating (zinc displacement-Copper-Silver) or by joint compound. If the treatment is done only by joint compound, reliability is low, this should be limited to when plating is impossible (eg. at site).
- For aluminum cables, use compression terminals that are exclusively for aluminum cables.
- The compression portion of the terminal shall be provided with taping, and the aluminum wire shall not be exposed to the atmosphere.

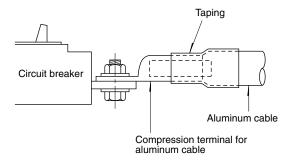


Fig. 4.17 Example of connection of aluminum conductor

(3) Maximum operating current of installation without clearance between breakers

In case of installation without clearance between breakers, because malfunction failures can result by heat of breaker, use the operating current not to exceed the below value.

Table 4-4

			Мо	del		Maximum operating current
BH-D6 CP30-BA NF32-SV NF63-SV NF125-CV NF125-SV NF125-HV NF125-RGV NF160-SGV NF250-CV NF250-SV NF250-HV	BH-D10 CP30-HU NF63-CV NF63-HV NF125-SGV NF125-LGV NF125-HGV NF160-LGV NF250-LGV NF250-SGV NF250-HGV	BH-DN NF125-SEV NF125-HEV NF160-HGV NF250-RGV	BV-DN	NV32-SV NV63-SV NV125-CV NV125-SV NV125-HV NV250-CV NV250-SV NV250-HV	NV63-CV NV63-HV NV250-SEV NV250-HEV	80% of rated current
NF400-CW NF400-REW NF630-CW NF630-REW NF800-CEW NF800-REW	NF400-SW NF400-UEW NF630-SW NF800-SDW NF800-UEW	NF630-SEW	NF400-HEW NF630-HEW NF800-HEW		NV400-SW NV400-SEW NV400-HE NV630-SW NV630-SEW NV630-HE NV800-HEW	

4. Application of Circuit Breaker According to Breaking Capacity

													•	•	
	MCCB (Ni ble 4-5 230V/	-					correlation betwee				cities is intended		uiting just und	er the se	S, H and R econdary
3pl	n trans. capacity (kVA)	30 oı	rless	50 t	o 75	100	150	to 300		500 to	1500		2000 to 30	000	
1ph	n trans. capacity (kVA)	20 oı	rless	30 t	o 50	75	100 to 150		200 t	o 300			-		
ca	Breaking pacity (kA) (sym)	2	.5 !	5 7 I	7.5	10 1 I	5 :	25 3 I	0 35	36 H	50 8	35 10	00 12 I I	5 15	50 170 200
	30 • 32	NF30-FAU (*1)	NF3	2-SV											
	50 • 60 • 63	NF50-FAU (*1)	NF6	3-CV	NF6	3-SV	NF63-HV								
	100 • 125				NE1	25-CV				IF125-SV	NF125-SEV	NF125-HEV	NF125-R	GV	NF125-UV
(A)					191 12	25-0 V				11 125-01	NF12	5-HV	141 125-11	av	1VI 125-0V
Frame	225 • 250				ı	NF250-C	V			NF25 NF250		NF250-HV NF250-HEV	NF250-R	GV	NF250-UV
	400					N	IF400-CW				NF400-SW/SEW	NF400-HEW	NF400-REW	NF40	00-UEW
	600 • 630					N	IF630-CW				NF630-SW/SEW	NF630-HEW	NF630-REW		
	800					N	F800-CEW				NF800-SEW	NF800-HEW	NF800-REW	NF80	00-UEW
	1000 to 4000						NF1000	-SEW~N	F1600-S	SEW					

^{*1} The breaking capacity of NF30-FAU and NF50-FAU having a rated current of 5A is 1.5kA.

Table 4-6 440VAC

Tra	ns. capacity (kVA)	30 or less	50 to 100	1	50 to 30	0	500 to	1000		1500	to 2000		2500	0 to 5000
cap	Breaking pacity (kA) (sym)	1.5 2	2.5	7.5 1	10 1: I I	5 20 I	0 2	5	30 3	536 t	50 6	65 8	5 12 L L	5 200
	30 • 32	NF32-SV												
	50 • 60 • 63	NF63-CV	NF63-SV	NF63-HV										
	100 • 125	N	NF125-CV		N	IF125-S\			NF125			NF12	25-RV	NF125-UV
€		'	VI 125 0 V			N	F125-SE	EV		NF125				
	225 • 250		NF250-CV				NF25	50-SV		NF25	0-HV	NF25	:0 BV	NF250-UV
Frame	225 • 250		NF250-CV				NF25	0-SEV		NF250	-HEV	INFZ	00-nv	NF250-0 V
ű.	400		NF4	00-CW				N	IF400-S\	V/SEW	NF400-HEW	NF400)-REW	NF400-UEW
	600 • 630			NF63	80-CW					NF630-SW/SEW	NF630-HEW	NF630)-REW	
	800			NF800	0-CEW					NF800-SEW	NF800-HEW	NF800	-REW	NF800-UEW
	1000 to 4000				NF100	0-SEW~	NF1600	-SEW						

ELCB (NV)

Table 4-7 230VAC

3ph trans. capacity (kVA)

Class C, FAU Series Classes S, H and R (The correlation between transformers and interrupting current is intended for short-circuiting just under the secondary voltage of 3-phase standard transformer, 210V or 420V, or the voltage of single-phase 3-wire transformer, 210V.

1ph	trans. capacity (kVA)	20 or less	3	30 to	50	75	ו	200 t	to 300				
	Breaking pacity (kA) (sym)	15 2	5 5 I	7. I	5 1	0	15 	25 	30 3	5 36 I I	50 	85 10)0 I
	30 • 32	NV30-FAU (*1)	Ν	1V32-SV	′			_					
	50 • 60 • 63	NV50-FAU (*1)	NV63	3-CV	NV6	3-SV	NV63-H\	′					
ne (A)	100 • 125			NV12	5-CV					NV125-SV NV125	NV125-F 5-SEV	NV125-HEV	
Frame	225 • 250			N	V250-C	V					IV250-SV V250-SEV	NV250-HV NV250-HEV	
	400				Ν	IV400-C	:W				NV400-SW/SEW	NV400-HEW	
	600 • 630				Ν	IV630-C	W				NV630-SW/SEW	NV630-HEW	
	800						NV800	-SEW				NV800-HEW	

^{*1} The interrupting current of NF30-FAU and NF50-FAU having a rated current of 5A is 1.5kA.

Table 4-8 440VAC

Trar	ns. capacity (kVA)	30 or less	50 to 100)	150) to 300	500	to 1000		1500 to 200	00	2500 to 5000
сар	Breaking acity (kA) (sym)	2.	5 5	5 7.5	10	15 	25	30	35 3	6 5	60 65 70	85 125
	30 • 32	NV3	2-SV									
	50 • 60 • 63	NV63-CV	NV63-S\	/ N'	V63-HV						_	
	100 • 125		NV125-CV					NV125-H	HV .			
3	100 • 125		144125-04			N'	/125-SV	N	V125-SEV	NV125-HI	ΞV	
Frame	225 • 250			IV250-CV				NV250)-SV	NV250-H	IV	
<u>'ā</u>	225 • 250		IN.	10250-00				NV250	-SEV	NV250-HI	ΞV	
"	400		N	V400-CW					NV400-	SW/SEW	NV400-HEW	
	600 • 630			NV	630-CW					NV630-SW/SEW	NV630-HEW	
	800				N	V800-SEW					NV800-HEW	

In some lighting apparatuses, the service life of circuit breakers may be reduced by the influence of inrush current applied when the lamps are turned on. Periodically check for abnormal temperature rise of the circuit breaker in such an apparatus.

5. Selection of Circuit Breaker for Electric Lamp or Heater Circuit

The maximum working current is 0.8 times the rated current of each circuit breaker.

MCCB (NF)

Table 4-9 230VAC

Please refer to the detailed specifications of the rated current that can be manufactured with each

Max. working	Rated current		Bre	aking ca	apacity (kA) 230	VAC	C (Ic	u sym)					
current (A)	of circuit breaker (A)	5 7.	.5 1	0 1	15 2	5 3	0 3	36 5	0 8	35 1	00 12	5 15	0 170 200
12	15												_
16	20	NF32-SV							NE40E LI	11.7			
24	30		NEC		NIEGO LIV	N	IF12	25-SV	NF125-H	IV			
32	40		NF63	3-5V	NF63-HV								
40	50	NF63-CV									NF125-R	۱G۷	NF125-UV
48	60						NIE	405 014		NF125-HV			
60	75							125-SV 125-SEV	NF125-HV	NF125-HEV			
80	100	NF125-C	V				INI	123-3LV	NF125-SEV	INI IZJ-IILV			
100	125								NF125-3EV				
120	150												
140	175							l N	F250-SV	NF250-HV			
160	200	NF250-	·CV					1		NF250-HEV	11111250-1	GV	NF250-UV
180	225							INI	230-3LV	INI ZOUTIL V			
200	250							ļ.,					
240	300								NF400-SW	NF400			NF400
280	350	NF4	100-CW						NF400-SEW	-HEW	NF400-R	EW	-UEW
320	400												-OLVV
400	500	NF	30-CW						NF630-SW	NF630	NF630-R	FW	
480	600							NF630-SEW	-HEVV			NF800	
560	700	NF8	00-CEW	,				NF800-SEW	NF800	NF800-R	FW	-UEW	
640	800			555 5211	-HEW								
800	1000				000-SEW								
960	1200	NF1250-SEW											
1120	1400			NF16	600-SEW								
1280	1600												

Table 4-10 440VAC

Please refer to the detailed specifications of the rated current that can be manufactured with each model name.

Max. working	Rated current				Bre	aking capacity	(kA)	440	VAC (Icu sym)						
current (A)	of circuit breaker (A)	2	.5	5 7	.5 1	0 2	25 3	30 3	6 45 5	50 70	85		125 1	50 200	
12	15						>								
16	20	NF32-SV	NF32-SV				NF125-SV		NF125-HV						
24	30			NECO CV	NF63-HV		12		NL 159-UA						
32	40	NF63-CV		111103-31	INFO3-IIV	NF125-SV	😕							NF	
40	50	NF63-CV	NF63-CV			NF 125-5 V	_>	> >			NF12	25-RGV		125-UV	
48	60						lé.	NF125-HV NF125-SEV	NF125-HV	NF125-RGV				125-04	
60	75						55.5	25-	NF125-HEV	NF125-HEV					
80	100	NF125-CV					毕	声点	INI 125-IILV	INI 125-11LV					
100	125							-2							
120	150														
140	175							50-SV	NF250-H	1\/				NF	
160	200	NF.	250-C	;V			1	250-	NF250-H		N	IF250-RGV		250-UV	
180	225						SI	EV	NI 230-11	_				250-01	
200	250														
240	300								NF400-SW	NF400-					
280	350		NF40	0-CW	'				NF400-SEW	HEW	NF	100-REW	NF	400-UEW	
320	400														
400	500		NF63	0-CW	,				NF630-SW	NF630-	NF	30-REW			
480	600		141 00						NF630-SEW	HEW	141 (DOO TIEVV	— NF	300-UEW	
560	700	1	NF800	D-CEV	V				NF800-SEW	NF800-	NF8	300-REW			
640	800		•••••							HEW		700 11211			
800	1000					000-SEW									
960	1200		NF1250-SEW												
1120	1400				NF16	800-SEW									
1280	1600														

Table 4-12 440VAC

ELCB (NV)

Table 4-11 230VAC

Please refer to the detailed specifications of the rated current that can be manufactured with each model name.

Max. working	Rated current				g capacity (kA										
current (A)	(A)	2.5	7	.5 1	10 1 1	5 I	25 I	30 I	36 5	50 8 I	35 10 I	00 125 I			
12	15								•						
16	20	NV32-SV		NV32-SV						NV125-	-HV				
24	30					NV63-HV				144125	-1 I V				
32	40				=										
40	50	NV63-CV		NV6	3-SV										
48	60										NV125-				
60	75									NV125-HV NV125-SEV	HV NV125-				
80	100		NV	125-CV				N	V125-SV	144 125 024	HEV				
100	125														
120	150														
140	175								NIV.	/250-SV	NV250- HV				
160	200		1	NV250-CV					1	250-SEV	NV250-				
180	225										HEV				
200	250														
240	300	·	·		·					NIV/400 CW/	NIV / 400				
280	350			NV400-C\	W					NV400-SW NV400-SEW	NV400 -HEW				
320	400		NV630-CW NV630-SW												
400	500														
480	600			14 7 0 3 0 - 0 1	**					NV630-SEW	-HEW				
560	700			NV	300-SEW						NV800				
640	800			1400	JOO OL 11						-HEW				


Please refer to the detailed specifications of the rated current that can be manufactured with each

Breaking capacity (kA) 440VAC (Icu sym) Max. working current (A) Rated current (A) 125 2.5 70 85 current (A) 12 15 NV32-SV 16 20 NV125-SV NV125-HV NV63-SV NV63-HV 24 30 NV63-CV 32 40 NV63-CV 40 50 60 48 NV125-HV NV125-NV125-SV NV125-HV NV125-SEV HEV 75 60 NV125-SEV NV125-HEV NV125-CV 100 80 125 100 120 150 140 175 NV250-SV NV250-HV NV250-SEV NV250-HEV NV250-CV 160 200 180 225 200 250 NV400-240 300 NV400-SW 280 350 NV400-CW HEW NV400-SEW 320 400 400 500 NV630-SW NV630 NV630-CW NV630-SEW 480 600 -HEW 560 700 NV800 NV800-SEW 640 -HEW 800

6. Selection of Circuit Breaker for Motor Branch Circuit

(direct-to-line starting or Y-∆ starting)

Motor is protected from overload by

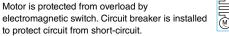



	For	4-pole	Electromagne	etic		•			В	reak	ing capaci	ty (k	A) 230VAC (lcu s	sym)							
		otor	contactor		7.5		15		25		30(*1)		50		85		100		150(*2)		200	
	Outpu (kW)	t Full- load current (A)	Model	Heater nominal (A)	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating
	0.1	0.7 1.2	N10-N21	0.7 1.3	NF32-SV	(3)	NF63-SV	(3)	NF63-HV	(10)			NF125-SV	(15)			NF125-HV	(15)			NF125-UV	(15)
l Bu	0.4	2.1	N10-N21	2.1	NF32-SV	5	NF63-SV	5	NF63-HV	(10)			NF125-SV	(15)			NF125-HV	(15)			NF125-UV	(15)
starting	0.75		N10-N21				NF63-SV						NF125-SV	(15)			NF125-HV	(15)			NF125-UV	` ′
ne	1.5	_	N10-N25				NF63-SV							(15)			NF125-HV	15				
<u>-</u>	2.2		N10-N35				NF63-SV						NF125-SV	20			NF125-HV	20			NF125-UV	20
\$	3.7	15	N18-N35	15	NF32-SV	30	NF63-SV	30	NF63-HV	30			NF125-SV	30			NF125-HV	30			NF125-UV	30
Direct-to-line	5.5	22	N25·N35· N50·N65	22	NF63-CV	50	NF63-SV	50	NF63-HV	50			NF125-SV	50			NF125-HV	50			NF125-UV	50
	7.5	29	N35-N50-N80	29	NF63-CV	60	NF63-SV	60	NF63-HV	60			NF125-SV	60			NF125-HV	60			NF125-UV	60
	11	44	N50-N95	42							NF125-CV	75	NF125-SV	75			NF125-HV	75			NF125-UV	75
ļ	15	55	N65-N125	54							NF125-CV	100	NF125-SV	100			NF125-HV	100			NF125-UV	100
1	5.5	22	_	22	NF63-CV	50	NF63-SV	50	NF63-HV	50			NF125-SV	50			NF125-HV	50			NF125-UV	50
	7.5	29	_	29	NF63-CV	60	NF63-SV	60	NF63-HV	60	NF125-CV	60	NF125-SV	60			NF125-HV	60			NF125-UV	60
	11	44	_	42							NF125-CV	75	NF125-SV	75			NF125-HV	75			NF125-UV	75
	15	55	_	54							NF125-CV	100	NF125-SV	100			NF125-HV	100			NF125-UV	100
17	18.5	67	N80-N125	67							NF125-CV	100	NF125-SV	100			NF125-HV	100			NF125-UV	100
	22	85	N95-N150	82							NF250-CV	150			NF250-SV	150	NF250-HV	150			NF250-UV	150
gn gc	30	110	N125-N220	105							NF250-CV	175			NF250-SV	175	NF250-HV	175			NF250-UV	175
starting -	37	130	N150-N220	125							NF250-CV	225			NF250-SV	225	NF250-HV	225			NF250-UV	225
sta	45	164	N180-N400	150											NF400-SW							
Y-∆ ne s	55	195	N220-N400	180											NF400-SW							
ĺ	75	267	N300·N400·(N600)	250											NF630-SW							
——— Y-∆ starting Direct-to-line starting	90	320	N300-N400-(N600-N800)	330											NF630-SW							
9	110	385	N300-N400-(N600-N800)	330									NF800-CEW	600	NF630-SEW	600	NF630-HEW	600	NF630-REW	600	NF800-UEW	600
ï	132	470	(N600·N800)	500															NF1000-SEW	700		
	160	580	(N600·N800)	500															NF1250-SEW	800		
1	200	720	(N800)	600															NF1600-SEW	1000		

Notes *1 The breaking capacity of NF250-CV is 36kA. *2 The breaking capacity of NF1000- to 1600-SEW is 125kA.

Table 4-14 400/440VAC for 3-phase induction motor

Table 4-13 200/220VAC for 3-phase induction motor

MCCB (NF)

	For	4-pole	Electromagne	etic							Brea	king	capacity (k/	A) 4	15VAC (Icu s	ym)						
	n	notor	contactor		2.5		7.5		10		25		30(*1)		50(*2)		70		150(*3)		200	
	Outp (kW	ut Full- load curren (A)	Model	Heater nominal (A)	Model	Rating	Model	Rating		Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating
1	0.2	0.6	N10-N21	0.7					NF63-HV				NF125-SV		NF125-HV	(15)						(15)
	0.4		N10-N21	1.3					NF63-HV				NF125-SV		NF125-HV	(15)						(15)
	0.7	5 1.9	N10-N21	1.7	NF32-SV				NF63-HV				NF125-SV	(15)	NF125-HV	(15)						(15)
	1.5		N10-N21	3.6					NF63-HV				NF125-SV	(15)	NF125-HV	(15)						(15)
ρ	2.2	4.6	N10-N21	5					NF63-HV				NF125-SV		NF125-HV	(15)					NF125-UV	(15)
starting	3.7		N11-N35	6.6					NF63-HV				NF125-SV		NF125-HV	20					NF125-UV	20
	5.5		N18-N35	11					NF63-HV						NF125-HV	30					NF125-UV	30
ne	7.5	15	N20-N35 • N50	15	NF32-SV	30	NF63-SV	30	NF63-HV	30			NF125-SV	30	NF125-HV	30					NF125-UV	30
Direct-to-line	11	22	N25 • N35 • N50 • N65	22	NF63-CV	50	NF63-SV	50	NF63-HV	50			NF125-SV	50	NF125-HV	50					NF125-UV	50
9	15	28	N35 • N50-N80	28	NF63-CV	60	NF63-SV	60	NF63-HV	60			NF125-SV	60	NF125-HV	60					NF125-UV	60
Ξ	18.	5 34	N50-N95	35					NF125-CV				NF125-SV	60	NF125-HV	60					NF125-UV	60
	22	42	N50-N95	42					NF125-CV	75			NF125-SV	75	NF125-HV	75					NF125-UV	75
	30	55	N65-N125	54					NF125-CV				NF125-SV	100	NF125-HV	100					NF125-UV	100
	37	65	N80-N150	67					NF125-CV	100			NF125-SV	100	NF125-HV	100					NF125-UV	100
1	45	82	N95-N150	82							NF250-CV	125	NF250-SV	125			NF250-HV	125			NF250-UV	125
1	5.5	5 11	_	11	NF63-CV	30	NF63-SV	30	NF63-HV	30			NF125-SV	30	NF125-HV	30					NF125-UV	30
	7.5	_	_	15					NF63-HV						NF125-HV	40					NF125-UV	40
	11		_	22	NF63-CV								NF125-SV		NF125-HV	50					NF125-UV	50
	15	28	-	28	NF63-CV	60	NF63-SV	60	NF125-CV	60			NF125-SV	60	NF125-HV	60					NF125-UV	60
	18.	5 34	-	35	NF63-CV	60	NF63-SV	60	NF125-CV	60			NF125-SV	60	NF125-HV	60					NF125-UV	60
	22	42	-	42					NF125-CV	75			NF125-SV	75	NF125-HV	75					NF125-UV	75
	30	55	-	54					NF125-CV	100			NF125-SV	100	NF125-HV	100					NF125-UV	100
ng	37	65	-	67					NF125-CV	100			NF125-SV	100	NF125-HV	100					NF125-UV	100
Y-∆ starting ng →	45	82	_	82							NF250-CV	150	NF250-SV	150			NF250-HV	150			NF250-UV	150
₩ <u></u>	55	96	N125-N220	105							NF250-CV	175	NF250-SV	175			NF250-HV	175			NF250-UV	175
—— Y-∆ starting	75	134	N150-N220	125							NF250-CV	225	NF250-SV	225			NF250-HV	225			NF250-UV	225
î Ē	90	160	N180-N400	150									NF250-SEV	225			NF250-HEV	225	NF400-REW	225	NF400-UEW	225
sta	110	192	N180-N400	180											NF400-SW	350	NF400-HEW	300	NF400-REW	300	NF400-UEW	300
l e	132	2 233	N220-N400	250											NF400-SW	400	NF400-HEW	400	NF400-REW	400	NF400-UEW	400
Direct-to-line	160	290	N300 • N400 • (N600)	250											NF630-SW	500	NF630-HEW	500	NF630-REW	500	NF800-UEW	500
꽃	20	360	N300 • N400 • (N600 • N800)	330											NF630-SW	600	NF630-HEW	600	NF630-REW	600	NF800-UEW	600
9	220	389	N300 • N400 • (N600 • N800)	-											NF630-SW	600	NF630-HEW	600	NF630-REW	600	NF800-UEW	600
👼	250	430	(N600 • N800)	500															NF630-REW			
1	300	500	(N600 • N800)	500											NF800-SEW	700	NF800-HEW	700	NF800-REW	700	NF800-UEW	700

Notes *1 The breaking capacity of NF250-SV and NF250-SEV is 36kA. *2 The breaking capacity of NF400-SW is 45kA. *3 The breaking capacity of NF400- to 800-REW is 125kA.

Remarks:
1. Circuit breakers are selected under the starting conditions shown in the right table.
2. Protection coordination is examined under the condition of cold start at 40°C.
3. The ratings in parentheses apply to cases where thermal relays with saturating reactor are used.
4. Although the inrush current upon switching to Δ connection fluctuates depending on the residual magnetic flux at star

- Almought the inflash content upon switching to Zoriffection fluctuates depending of the residual magnetic flux at star starting. A connection closing phase or power supply transformer capacity, in most cases, the inrush current is less than the values shown in the right table.
 The maximum starting current is the effective value of current (value after transient phenomena disappear) at the time when the rotator starts to rotate.
 It was assumed that the Y-Δ starting would be performed by the open transition method which is a general method but is known to carry large transient inrush current.

Starting			

Motor capacity	Starting time	Startup inrush curren	t (x full-load current)		
wotor capacity	(600%)	Direct-to-line starting	Y-∆ starting		
0.2 to 7.5kW	10s	12 times	16 times		
11 to 55	10	12	17		
75 to 300	10	14	18		

ELCB (NV)

Table 4-15 200/220VAC for 3-phase induction motor

	For 4	-pole	Electromagnetic	Electromagnetic		Breaking capacity (kA) 230VAC (Icu sym)												
	mo		contactor		7.5		15(*1)		25		30(*2)		50		85		100	
	Output (kW)	Full- load current (A)	Model	Heater nominal (A)	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating
1	0.1	0.7 1.2	N10-N21	0.7 1.3	NV63-CV	(5)	NV32-SV	(15)	NV63-HV	(15)			NV125-SV	(15)			NV125-HV	(15)
.E	0.4	2.1	N10-N21	2.1	NV63-CV	5	NV32-SV	(15)	NV63-HV	(15)			NV125-SV	(15)			NV125-HV	(15)
starting	0.75	3.7	N10-N21	3.6	NV63-CV	10	NV32-SV	(15)	NV63-HV	(15)			NV125-SV	(15)			NV125-HV	(15)
	1.5	6.4	N10-N25	6.6	NV63-CV	15	NV32-SV	15	NV63-HV	15			NV125-SV	15			NV125-HV	(15)
Direct-to-line	2.2	9.1	N10-N35	9	NV63-CV	20	NV32-SV	20	NV63-HV	20			NV125-SV	20			NV125-HV	20
₽	3.7	15	N18-N35	15	NV63-CV	30	NV32-SV	30	NV63-HV	30			NV125-SV	30			NV125-HV	30
늉	5.5	22	N25 • N35 • N50 • N65	22	NV63-CV	50	NV63-SV	50	NV63-HV	50			NV125-SV	50			NV125-HV	50
<u>:</u>	7.5	29	N35 • N50-N80	29	NV63-CV	60	NV63-SV	60	NV63-HV	60			NV125-SV	60			NV125-HV	60
4	11	44	N50-N95	42							NV125-CV	75	NV125-SV	75			NV125-HV	75
1	15	55	N65-N125	54							NV125-CV	100	NV125-SV	100			NV125-HV	100
1	5.5	22	-	22	NV63-CV	50	NV63-SV	50	NV63-HV	50			NV125-SV	50			NV125-HV	50
	7.5	29	_	29	NV63-CV	60	NV63-SV	60	NV63-HV	60	NV125-CV	60	NV125-SV	60			NV125-HV	60
	11	44	-	42							NV125-CV	75	NV125-SV	75			NV125-HV	75
	15	55	-	54							NV125-CV	100	NV125-SV	100			NV125-HV	100
- B	18.5	67	N80-N125	67							NV125-CV	100	NV125-SV	100			NV125-HV	100
starting starting	22	85	N95-N150	82							NV250-CV	150			NV250-SV	150	NV250-HV	150
starting starting	30	110	N125-N220	105							NV250-CV	175			NV250-SV	175	NV250-HV	175
_ "	37	130	N150-N220	125							NV250-CV	225			NV250-SV	225	NV250-HV	225
<u>≻ ≝</u>	45	164	N180-N400	150									NV400-CW	400	NV400-SW	300	NV400-HEW	250
₽	55	195	N220-N400	180									NV630-CW	500	NV400-SW	300	NV400-HEW	300
Y-Z Direct-to-line	75	267	N300 • N400 • (N600)	250									NV630-CW	600	NV400-SEW	400	NV400-HEW	400
je	90	320	N300 • N400 • (N600 • N800)	330											NV630-SEW	500	NV630-HEW	500
1 4	110	385	N300 • N400 • (N600 • N800)	330											NV630-SEW	600	NV630-HEW	600
Notos	*4 T	h a la ua	aking capacity of NIV/22-9	21/:- 1	01.4 *0 Th		aldan aanaa	4 6 !	11/250_CV ic	2014	`	•		•				

Notes *1 The breaking capacity of NV32-SV is 10kA. *2 The breaking capacity of NV250-CV is 36kA.


Table 4-16 400/440VAC for 3-phase induction motor

	For 4-pole		Electromagnetic							Bre	aking capacit	ty (k/	A) 415VAC (Id	u sy	m)					
	mo		contactor		2.5		5		7.5		10		25		30(*1)		50(*2)		70	
	Output (kW)	Full- load current (A)	Model	Heater nominal (A)	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating
1	0.2	0.6	N10-N21	0.7	NV63-CV	(5)	NV32-SV	(5)	NV63-SV	(5)	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)		
	0.4	1.1	N10-N21	1.3	NV63-CV	(5)	NV32-SV	(5)	NV63-SV	(5)	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)		
	0.75	1.9	N10-N21	1.7	NV63-CV	5	NV32-SV	5	NV63-SV	5	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)		
	1.5	3.2	N10-N21	3.6	NV63-CV	10	NV32-SV	10	NV63-SV	10	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)		П
starting	2.2	4.6	N10-N21	5	NV63-CV	10	NV32-SV	10	NV63-SV	10	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)		
art	3.7	7.5	N11-N35	6.6	NV63-CV	20	NV32-SV	20	NV63-SV	20	NV63-HV	20			NV125-SV	20	NV125-HV	20		
	5.5	11	N18-N35	11	NV63-CV	30	NV32-SV	30	NV63-SV	30	NV63-HV	30			NV125-SV	30	NV125-HV	30		
Direct-to-line	7.5	15	N20-N35 • N50	15	NV63-CV	30	NV32-SV	30	NV63-SV	30	NV63-HV	30			NV125-SV	30	NV125-HV	30		
ģ	11	22	N25 • N35 • N50 • N65	22	NV63-CV	50			NV63-SV	50	NV63-HV	50			NV125-SV	50	NV125-HV	50		
늉	15	28	N35 • N50-N80	28	NV63-CV	60			NV63-SV	60	NV63-HV	60			NV125-SV	60	NV125-HV	60		
<u>.e</u>	18.5	34	N50-N95	35							NV125-CV	60			NV125-SV	60	NV125-HV	60		
7	22	42	N50-N95	42							NV125-CV	75			NV125-SV	75	NV125-HV	75		
	30	55	N65-N125	54							NV125-CV	100			NV125-SV	100	NV125-HV	100		
	37	65	N80-N150	67							NV125-CV	100			NV125-SV	100	NV125-HV	100		
	45	82	N95-N150	82									NV250-CV	125	NV250-SV	125			NV250-HV	125
1	5.5	11	-	11	NV63-CV	30	NV32-SV	30	NV63-SV	30	NV63-HV	30			NV125-SV	30	NV125-HV	30		
	7.5	15	-	15	NV63-CV	40			NV63-SV	40	NV63-HV	40			NV125-SV	40	NV125-HV	40		
	11	22	-	22	NV63-CV	50			NV63-SV	50	NV63-HV	50			NV125-SV	50	NV125-HV	50		
	15	28	-	28	NV63-CV	60			NV63-SV	60	NV125-CV	60			NV125-SV	60	NV125-HV	60		П
	18.5	34	-	35							NV125-CV	60			NV125-SV	60	NV125-HV	60		
<u>U</u>	22	42	-	42							NV125-CV	75			NV125-SV	75	NV125-HV	75		
starting	30	55	-	54							NV125-CV	100			NV125-SV	100	NV125-HV	100		
Į.	37	65	-	67							NV125-CV	100			NV125-SV	100	NV125-HV	100		
S	45	82	-	82									NV250-CV	150	NV250-SV	150			NV250-HV	150
\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	55	96	N125-N220	105									NV250-CV	175	NV250-SV	175			NV250-HV	175
starting	75	134	N150-N220	125									NV250-CV	225	NV250-SV	225			NV250-HV	225
sta	90	160	N180-N400	150											NV250-SEW	225		225	NV250-HEW	225
≗	110	192	N180-N400	180													NV400-SW	350	NV400-HEW	300
훈	132	233	N220-N400	250													NV400-SW	400	NV400-HEW	400
Direct-to-line	160	290	N300 • N400 • (N600)	250		\Box											NV630-SEW	500	NV630-HEW	500
↓ 🕆	200	360	N300 • N400 • (N600 • N800)	330													NV630-SEW	600	NV630-HEW	600
	** *		alina appaint of NIVOEO	01/	110/050 05		201 A +0 TI		1.1			4=1								

Notes *1 The breaking capacity of NV250-SV and NV250-SEV is 36kA. *2 The breaking capacity of NV400-SW is 45kA.

 $\label{eq:Remark:1} \textbf{Remark:} \quad \textbf{1.} \ \, \textbf{For the selecting conditions, please refer to the remarks on page 73.}$

Example of Y- Δ starting current waveform (crest value envelope)

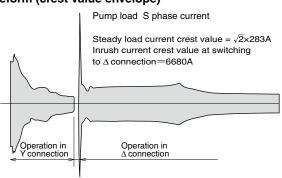

7. Selection of Motor Protection Breaker

Motor Protection Breakers

In principle, the operating characteristic curve of a selected motor breaker must be lower than the heat characteristic of the motor. The following table shows the rated capacities of standard squired-cage 3-phase motors (4-pole) made by Mitsubishi Electric. The starting conditions are shown in the table.

Table 4-17 for 3-phase induction motor

able	4-1/ 1	or 3-pnase	induction motor					
Model	Motor F	Protection Breaker	NF32-SV	NF63-CV	NF63-SV	NF125-SV	NF250-SV	
Rat brea		200/230V	7.5	7.5	15	50	85	
capaci		415/440V	2.5	2.5	7.5	30	36	
	600% s time li		2	32A or less: 2 40A or more: 7			5	
		inrush limit (%)	1200	1200	1200	1200	1100	
	of moto		Rated current	Rated current	Rated current	Rated current	Rated current	Model for combination with
200/2	220V	400/440V						electromagnetic contactor
		0.4						
0.	2							
		0.75						
0.								N10-N21
0.7	75	1.5	4	4	4			
		2.2	5	5	5]	
1.	5		7.1	7.1	7.1			
		3.7	8	8	8			N11-N35
2.	2		10	10	10		1	
		5.5	12	12	12	(12.5)		N18-N35
3.	7	7.5	16	16	16	(16)		N20-N35 N50
5.	5	11	25	25	25	(25)		N25 • N35 N50 • N65
7.	5	15	32	32	32	32		N35 N50-N80
		18.5		40	40	(40)		NITO NOT
1	1	22		45	45	45	1	N50-N95
15		30			1	63		N65-N125
18		37	1			71		N80-N125
22		45	1			90		N90-N125
		55	1			100		
		55					1	N125-N220
30)						125	7
3		75					150	N150-N400
4		90	1				175	N180-N400
							200	
5	5	110					225	N220-N400
٥.	•	110	1		1	1		

Remarks: 1. Fot the rated curent in parentheses, breakers will be manufactured to order.

Cautions

- (1) Note that any circuit breaker operates when the startup inrush current, starting current and starting time exceed the conditions shown in the above table. Particularly, high-efficiency motors generally have higher starting current and lower starting torque compared to general-purpose motors, and motor breakers cannot be used for such motors.
- (2) Note that a circuit breaker may operate when an electromagnetic contactor is opened or closed while a motor is running.
- (3) Select a motor breaker having rated current approx. 1.0 to 1.1 times higher than the full load current of motor.


^{2.} The approximate values of inrush current at direct-to-line starting are shown below. Up to 7.5kW: 1000% 11kW or more: 1200% 75kW or more: 1400% When the starting current is large and the starting power factor is low, a combination with an electromagnetic switch selected in accordance with "Table of selection of circuit breaker for motor branch circuit" shown on page 77 is suitable.

8. Selection of Circuit Breaker for Inverter Circuit

Install MCCB or ELCB on the primary side (power supply side) of the inverter. If it is installed on the secondary side, it may cause electronic circuit trouble or overheating.

Selection of Circuit Breaker for Inverter Circuit

Since current containing harmonic components will flow, the rated current of circuit breaker must be approx. 1.4 times the inverter input current.

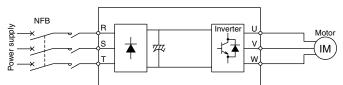

Note The life cycle of the circuit breaker for the circuit on the inverter primary side will be reduced under the influence of transient inrush current. Install a switch.

Table 4-18 3-phase 200V class


Inverter input capacity	Rated current of circuit breaker	Inverter input capacity	Rated current of circuit breaker
kVA	Α	kVA	A
5.5	30	41	175
9	40	52	225
12	50	66	300
17	75	80	350
20	100	100	500
28	125	110	500
34	150	132	600

Table 4-19-1

Selection of rated sensitivity current of Earth Leakage Circuit **Breaker for Inverter Circuit**

Select the rated sensitivity current as stated below.

Circuit breakers for harmonics and surge: Rated sensitivity current I∆n ≥ 10 x {Ig1 + Ign + Ig2 + Igm} General circuit breakers: Rated sensitivity current $I\Delta n \ge 10 \times \{Ig1 + Ign + 3 \times (Ig2 + Igm)\}$

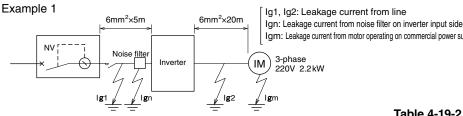

Iam: Leakage current from motor operating on commercial power supply Example 2

50mm²×5m 50mm²×20m 3-phase Inverter IM 220V 22kW

Examples of leakage current from line when IV cable is wired in close contact with ground (wiring in metallic conduit)

(3-phase 220V 60Hz)

Wire size	Leakage current/km
mm ²	mA
6	135
10	140
16	169
25	176
35	203
50	205
70	241
95	247

Table 4-19-2 Example of leakage current from 3-phase induction motor (220V 60Hz)

Motor output (kW)	Leakage current (mA)
2.2	0.2
3.7	0.29
5.5	0.32
7.5	0.42
11	0.55
15	0.63
18.5	0.72
22	0.8
30	0.96
37	1.1

Example of selection 1

		Breaker for harmonics and surge	General breaker
Leakage current	lg1	$135 \times \frac{5}{1000} = 0.675$	$135 \times \frac{5}{1000} = 0.675$
Leakage current	lgn	0 (without	noise filter)
Leakage current	lg2	$135 \times \frac{20}{1000} = 2.7$	$135 \times \frac{20}{1000} \times 3 = 8.1$
Leakage current	Igm	0.18	$0.18 \times 3 = 0.54$
Total leakage current	lg	3.555	11.465
Rated sensitivity current (> Ig	× 10)	100	200

Example of selection 2

		Breaker for harmonics and surge	General breaker
Leakage current	lg1	$205 \times \frac{5}{1000} = 1.025$	$205 \times \frac{5}{1000} = 1.025$
Leakage current	lgn	0 (without i	noise filter)
Leakage current	lg2	$205 \times \frac{20}{1000} = 4.1$	$205 \times \frac{20}{1000} = 12.3$
Leakage current	Igm	0.72	$0.72 \times 3 = 2.16$
Total leakage current	lg	5.845	15.485
Rated sensitivity current (> Ig	× 10)	100	500

- Remarks: 1. Circuit breakers for harmonics and surge can detect earth fault on the secondary side of inverter only when the operating frequency is 120Hz or less. In the case of star connection by neutral point grounding method, the sensitivity current for earth fault on the inverter secondary side is degraded. In this case, for protective ground for load device,
 - apply Class C grounding (10Ω or less).

 2. For general circuit breakers, the leakage current from the line between inverter and motor shall be calculated as three times the leakage current at the commercial frequency in consideration of harmonic content.
 - 3. For the model names of circuit breakers for harmonics and surge, refer to the specification list in Section 2 of this document. Models not for harmonics and surge are general

9. Selection of Circuit Breaker for Transformer Primary Side

- Notes 1. The life cycle of the circuit breaker for the circuit on the transformer primary side will be significantly reduced under the influence of excited inrush current. Install a switch to open and close the circuit.
 - 2. Select a circuit breaker based on the example of excited inrush current of each transformer. When using a circuit breaker for a transformer, check the magnitude of excited inrush current with the transformer manufacturer.

Single-phase 210V

Table 4-20-1 MCCB

. ,	Rated		mple of transformer excited inrush curre	ent ①		ble of transformer excited inrush cur	rent ②		ole of transformer excited inrush cu	rrent ③
Transformer capacity kVA	primary	Crest value of first wave (multiple)	Model	Rating A	Crest value of first wave (multiple)	Model	Rating A	Crest value of first wave (multiple)	Model	Rating A
5	23.8	45	NF125-CV(*1) NF125-CV, NF125-SV, NF125-HV NF125-SEV, NF125-HEV	60 100 50	37	NF63-CV(*1) NF125-CV(*1) NF125-CV, NF125-SV	50 60 75	24	NF63-CV(*1) NF63-CV, NF63-SV NF125-CV(*2) NF125-SV	30 50 (50) 50
7.5	35.7	45	NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	150 125	37	NF125-SEV NF125-CV(*1) NF250-CV, NF250-SV	50 75 125	24	NF63-CV(*1) NF125-CV(*1)(*2) NF125-CV, NF125-SV	50 60(50) 75
10	47.6	43	NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	200 125	37	NF125-CV(*1) NF250-CV, NF250-SV NF250-SEV	100 150 125	24	NF125-CV(*1) NF125-CV, NF125-SV	60 100
15	71.4	43	NF400-CW NF400-SW NF400-SEW, NF400-HEW	400 300 200	35	NF250-CV, NF250-SV NF250-SEV	225 125	23	NF125-CV(*1) NF250-CV, NF250-SV	100 150
20	95.2	43	NF400-SW NF400-SEW, NF400-HEW	400 200	35	NF400-SW NF400-SEW	350 200	23	NF250-CV, NF250-SV NF250-SEV	200 125
30	143	37	NF400-SEW, NF400-HEW NF630-SW	200 500	34	NF400-SEW	200	23	NF400-SW NF400-SEW	300 200
50	238	35	NF630-SEW(*1) NF1000-SEW	300 500	34	NF630-SEW	300	23	NF400-SEW(*1) NF630-SEW	300 300
75	357	30	NF800-SEW(*1) NF1250-SEW	400 600	29	NF800-SEW(*1)	400	22	NF630-SEW	400
100	476	27	NF1000-SEW	800	28	NF1600-SEW	800	20	NF800-SEW(*1)	600
150	714	24	_	-	24	_	-	19	NF1600-SEW	800
200	952	21	_	-	22	-	_	19	_	-
300	1429	17	_	-	18	_	-	16	_	-
500	2381	_	_	_	17	_	_	_	_	-

Table 4-20-2 ELCB

	D	Exar	nple of transformer excited inrush curre	ent ①	Examp	ole of transformer excited inrush cur	rent (2)	Examp	ole of transformer excited inrush cu	rrent ③
Transformer capacity kVA	Rated primary current A	ry Crest		Rating	Crest	Model	Rating A	Crest	Madal	Rating A
5	23.8	45	NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	100 50	37	NV125-CV, NV125-SV NV125-SEV	75 50	24	NV63-CV, NV63-SV NV125-CV NV125-SV NV125-SEV	50 60 50 50
7.5	35.7	45	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	150 125	37	NV125-SEV NV250-CV, NV250-SV	50 125	24	NV125-CV, NV125-SV NV125-SEV	75 50
10	47.6	43	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	200 125	37	NV250-CV, NV250-SV NV250-SEV	150 125	24	NV125-CV, NV125-SV NV250-CV, NV250-SV	100 125
15	71.4	43	NV400-CW NV400-SW NV400-SEW, NV400-HEW	400 300 200	35	NV250-CV, NV250-SV NV250-SEV	225 125	23	NV250-CV, NV250-SV NV250-SEV	150 125
20	95.2	43	NV400-SW NV400-SEW, NV400-HEW	400 200	35	NV400-SW NV400-SEW	350 200	23	NV250-CV, NV250-SV NV250-SEV	200 125
30	143	37	NV400-SEW, NV400-HEW NV630-SEW	200 300	34	NV400-SEW	200	23	NV400-SW NV400-SEW	300 200
50	238	35	-	-	34	NV630-SEW	300	23	NV630-SEW NV800-SEW	300 400
75	357	30	_	-	29	1	-	22	NV630-SEW	400
100	476	27	-	_	28	-	_	20	_	_
150	714	24	_	-	24	_	-	19	_	_
200	952	21	-	-	22	-	_	19	_	-
300	1429	17	-	-	18	-	-	16	_	-
500	2381	_	_	-	17	_	_	_	_	-

Notes *1 Examples of selection of high-instantaneous circuit breakers (special models) for primary side of transformer.

Remarks: 1. For the circuit breakers whose rated current is adjustable, the rated current values are shown.

^{*2} The circuit breakers with rating in parentheses are special models.

^{2.} The crest value of the first wave of excited inrush current shall be calculated based on the multiple for the crest value of the first wave in the table, and the calculated value shall not exceed the lower limit crest value of instantaneous tripping current of circuit breaker. The circuit breakers are selected on condition that the transformer rated current value does not exceed 0.9 times the circuit breaker rated current. If the multiple for the crest value of the first wave is different from that shown in the table, a circuit breaker must be separately selected.

Single-phase 420V

Table 4-21-1 MCCB

Transformer	Rated		nple of transformer excited inrush curre	ent ①		le of transformer excited inrush cur	rent ②		ole of transformer excited inrush cur	rent ③
capacity kVA	primary	Peak value of first wave (multiple)	Model	/ `	Peak value of first wave (multiple)	Model	, · ·	Peak value of first wave (multiple)	Model	Rating A
5	11.9	45	NF63-CV(*1) NF63-CV, NF63-SV, NF63-HV NF125-CV, NF125-SV, NF125-HV	30 50 50	37	NF32-SV NF63-CV, NF63-SV NF125-SV	15 15 15	24	NF32-SV, NF63-CV, NF63-SV NF125-SV	15 40 15
7.5	17.9	45	NF63-CV(*1) NF125-CV, NF125-SV, NF125-HV	50 75	37	NF63-CV(*1) NF63-CV, NF63-SV NF125-CV, NF125-SV	40 60 60	24	NF32-SV, NF63-CV, NF63-SV NF125-SV NF125-CV(*2)	30 30 (50)
10	23.8	43	NF125-CV(*1) NF125-CV, NF125-SV, NF125-HV	60 100	37	NF63-CV(*1) NF125-CV, NF125-SV	50 75	24	NF63-CV(*1) NF63-CV, NF63-SV NF125-CV(*2) NF125-SV	30 50 (50) 50
15	35.7	43	NF125-CV(*1) NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	100 150 125	35	NF125-CV(*1) NF125-CV, NF125-SV	60 100	23	NF63-CV(*1) NF125-CV(*1)(*2) NF125-CV, NF125-SV	50 60(50) 75
20	47.6	43	NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	200 125	35	NF125-CV(*1) NF250-CV, NF250-SV NF250-SEV	100 150 125	23	NF125-CV(*1) NF125-CV, NF125-SV	60 100
30	71.4	37	NF250-SEV, NF250-HEV NF400-CW NF400-SW	125 350 250	34	NF250-CV, NF250-SV NF250-SEV	225 125	23	NF125-CV(*1) NF250-CV, NF250-SV	100 150
50	119	35	NF400-SW NF400-SEW, NF400-HEW	400 200	34	NF400-SW NF400-SEW	400 200	23	NF250-SEV	150
75	179	30	NF400-SEW, NF400-HEW NF630-SW NF630-SEW, NF630-HEW	200 500 300	29	NF400-SEW	200	22	NF400-SW NF400-SEW	400 200
100	238	27	NF400-SEW(*1) NF630-SW NF630-SEW, NF630-HEW	300 600 300	28	NF400-SEW(*1) NF630-SEW	300 300	20	NF400-SEW	350
150	357	24	NF630-SEW(*1)	400	-	_	-	19	NF400-SEW(*1) NF630-SEW	400 400
200	476	21	NF800-SEW(*1)	600	22	NF800-SEW(*1)	600	19	NF800-SEW(*1)	600
300	714	17	NF1250-SEW	800	18	NF1600-SEW	800	16	NF1250-SEW	800
500	1190	-	-	-	17			_		-

Table 4-21-2 ELCB

T (Rated	Exar	nple of transformer excited inrush curre	ent ①	Examp	le of transformer excited inrush curr	ent ②	Examp	le of transformer excited inrush cu	rrent ③
Transformer capacity kVA	primary	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A
5	11.9	45	NV63-CV, NV63-SV, NV63-HV NV125-CV NV125-SV. NV125-HV	50 60 50	37	NV32-SV NV63-CV, NV63-SV NV125-SV	15 15 15	24	NV32-SV NV63-CV, NV63-SV NV125-SV	15 15 15
7.5	17.9	45	NV125-CV, NV125-SV, NV125-HV	75	37	NV63-CV, NV63-SV NV125-CV, NV125-SV	60 60	24	NV32-SV NV63-CV, NV63-SV NV125-SV	30 30 30
10	23.8	43	NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	100 50	37	NV125-CV, NV125-SV NV125-SEV	75 50	24	NV63-CV, NV63-SV NV125-CV NV125-SV	50 60 50
15	35.7	43	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	150 125	35	NV125-CV, NV125-SV NV125-SEV	100 50	23	NV125-CV, NF125-SV NV125-SEV	75 50
20	47.6	43	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	200 125	35	NV250-CV, NV250-SV NV250-SEV	150 125	23	NV125-CV, NF125-SV NV125-SEV	100 60
30	71.4	37	NV250-SEV, NV250-HEV NV400-CW NV400-SW	125 350 250	34	NV250-CV, NV250-SV NV250-SEV	225 125	23	NV250-SV, NV250-SV NV250-SEV	150 125
50	119	35	NV400-SW NV400-SEW, NV400-HEW	400 200	34	NV400-SW NV400-SEW	400 200	23	NV250-SEV	150
75	179	30	NV400-SEW, NV400-HEW NV630-SEW, NV630-HEW	200 300	29	NV400-SEW	200	22	NV400-SW NV400-SEW	400 200
100	238	27	NV630-SEW, NV630-HEW NV800-SEW, NV800-HEW	300 400	28	NV630-SEW NV800-SEW	300 400	20	NV400-SEW	350
150	357	24	-	-	24	-	-	19	NV630-SEW NV800-SEW	400 400
200	476	21	-	-	22	_	_	19	_	-
300	714	17	-	-	18	_	-	16	-	-
500	1190	_	-	_	-	_	_	_	_	_

Notes *1 Examples of selection of high-instantaneous circuit breakers (special models) for primary side of transformer.
*2 The circuit breakers with rating in parentheses are special models.

Remarks: 1. For the circuit breakers whose rated current is adjustable, the rated current values are shown.

^{2.} The peak value of the first wave of excited inrush current shall be calculated based on the multiple for the peak value of the first wave in the table, and the calculated value shall not exceed the lower limit peak value of instantaneous tripping current of circuit breaker. The circuit breakers are selected on condition that the transformer rated current value does not exceed 0.9 times the circuit breaker rated current. If the multiple for the peak value of the first wave is different from that shown in the table, a circuit breaker must be separately selected.

■3-phase 210V

Table 4-21-3 MCCB

- (Rated		nple of transformer excited inrush curre	ent ①	ting value of A value of first wave (multiple) 26 NF32-SV, NF63-CV, NF63-SV 20 18 NF. 27 20 20 18 NF32-SV, NF63-SV 20 20 18 NF. 28 NF32-SV NF63-SV 50 18 NF. 29 NF32-SV NF63-SV 50 18 NF. 20 NF63-CV(*1) 30 NF63-CV, NF63-SV 50 NF. 20 NF63-CV, NF63-SV 50 NF. 20 NF63-CV, NF63-SV 60 18 NF. 21 NF63-CV, NF63-SV 60 NF. 22 NF125-CV, NF125-SV 60 NF. 23 NF125-CV, NF125-SV 100 NF. 24 NF125-CV, NF125-SV 100 NF. 25 NF125-CV, NF125-SV 100 NF. 26 NF125-CV, NF125-SV 100 NF. 27 NF125-CV, NF125-SV 100 NF. 28 NF125-CV, NF125-SV 100 NF. 29 NF125-CV, NF125-SV 100 NF. 20 NF125-CV, NF250-SV 125 NF. 20 NF250-CV, NF250-SV 125 NF. 21 NF400-SEV 125 NF. 22 NF400-SEW 125 NF. 23 NF400-SEW 125 NF. 24 NF400-SEW 125 NF. 25 NF400-SEW 125 NF. 26 NF250-SEW 125 NF. 27 NF400-SEW 125 NF. 28 NF400-SEW 125 NF. 29 NF400-SEW 125 NF. 20 13 NF800-SEW 700 12 NF. 20 13 NF800-SEW 700 12 NF. 20 13 NF800-SEW 700 12 NF. 20 13 NF800-SEW 700 12 NF.	le of transformer excited inrush cur	rent ③			
Transformer capacity kVA	primary current A	Peak value of first wave (multiple)	Model	A	value of first wave	Model		value of first wave	Model	Rating A
5	13.7	25	NF32-SV NF63-CV, NF63-SV, NF63-HV NF125-SV, NF125-HV	20 20 20	26			18	NF32-SV, NF63-CV, NF63-SV NF125-SV	20 20
7.5	20.6	25	NF63-CV(*1) NF63-CV, NF63-SV, NF63-HV NF125-CV(*2) NF125-SV, NF125-HV	30 50 (50) 50	26	NF63-CV, NF63-SV	50	18	NF32-SV, NF63-CV, NF63-SV NF125-CV(*2) NF125-SV	30 (50) 30
10	27.5	24	NF63-CV(*1) NF63-CV, NF63-SV, NF63-HV NF125-CV(*1) NF125-CV, NF125-SV, NF125-HV	40 60 50 60	26	NF63-CV, NF63-SV	60	18	NF63-CV, NF63-SV NF125-CV(*2) NF125-SV	50 (50) 50
15	41.2	24	NF63-CV(*1) NF125-CV, NF125-SV, NF125-HV	50 100	26			18	NF63-CV(*1) NF63-CV, NF63-SV NF125-CV, NF125-SV	50 60 60
20	55.0	20	NF125-CV(*1) NF125-CV, NF125-SV, NF125-HV	75 100	26	NF125-SEV	75	18	NF125-CV(*1) NF125-CV, NF125-SV	75 100
30	82.5	20	NF125-CV(*1) NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	100 150 125	26	,		18	NF125-CV(*1) NF250-CV, NF250-SV	100 150
50	137	20	NF250-SEV, NF250-HEV NF400-CW NF400-SW	175 350 250	23	NF400-SW	300	16	NF250-CV, NF250-SV NF250-SEV	200 175
75	206	21	NF400-SW NF400-SEW, NF400-HEW	400 250	18			14	NF400-SW NF400-SEW	300 250
100	275	21	NF400-SEW(*1) NF630-SW NF630-SEW, NF630-HEW	350 600 350	17	NF400-SEW	350	13	NF400-SW NF400-SEW	350 300
150	412	17	NF630-SEW, NF630-HEW	500	14	NF630-SEW	500	13	NF630-SW NF630-SEW	500 500
200	550	16	NF800-SEW(*1)	700					NF800-SEW	700
300	825	16	NF1600-SEW	1000	_				NF1000-SEW	1000
500	1375	_	_	_	11	NF1600-SEW	1600	11	NF1600-SEW	1600

Table 4-21-4 ELCB

T	Rated		nple of transformer excited inrush curre	ent ①		ole of transformer excited inrush curr	rent ②		ble of transformer excited inrush cur	rent ③
Transformer capacity kVA	nrimon	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A
5	13.7	25	NV32-SV NV63-CV, NV63-SV, NV63-HV NV125-SV, NV125-HV	20 20 20	26	NV32-SV NV63-CV, NV63-SV NV125-SV	20 20 20	18	NV32-SV NV63-CV, NV63-SV NV125-SV	20 20 20
7.5	20.6	25	NV63-CV, NV63-SV, NV63-HV NV125-CV NV125-SV, NV125-HV	50 60 50	26	NV63-CV, NV63-SV NV125-CV NV125-SV	50 60 50	18	NV32-SV NV63-CV, NV63-SV NV125-SV	30 30 30
10	27.5	24	NV63-CV, NV63-SV, NV63-HV NV125-CV, NV125-SV, NV125-HV	60 60	26	NV63-CV, NV63-SV NV125-CV, NV125-SV	60 60	18	NV63-CV, NV63-SV NV125-CV NV125-SV	50 60 50
15	41.2	24	NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	100 50	26	NV125-CV, NV125-SV NV125-SEV	100 50	18	NV63-CV, NV63-SV NV125-CV, NV125-SV	60 60
20	55.0	20	NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	100 75	26	NV125-SEV NV250-CV, NV250-SV	75 125	18	NV125-CV, NV125-SV NV125-SEV	100 75
30	82.5	20	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	150 125	26	NV250-CV, NV250-SV NV250-SEV	200 125	18	NV250-CV, NV250-SV NV125-SEV	150 125
50	137	20	NV250-SEV, NV250-HEV NV400-CW NV400-SW	175 350 250	23	NV400-CW NV400-SW NV400-SEW	400 300 200	16	NV250-CV, NV250-SV NV250-SEV	200 175
75	206	21	NV400-SW NV400-SEW, NV400-HEW	400 250	18	NV400-SEW NV400-SW	250 350	14	NV400-SW NV400-SEW	300 250
100	275	21	NV630-SEW, NV630-HEW NV800-SEW, NV800-HEW	350 400	17	NV400-SEW	350	13	NV400-SW NV400-SEW	350 300
150	412	17	NV630-SEW, NV630-HEW 500		14	NV630-SEW NV800-SEW	500 500	13	NV630-SEW NV800-SEW	500 500
200	550	16		_	13	-	-	12	NV800-SEW	700
300	825	16	-	_	13	_		12	_	_
500	1375	_	=	_	11	-	-	11	_	_

Notes *1 Examples of selection of high-instantaneous circuit breakers (special models) for primary side of transformer.

Remarks: 1. For the circuit breakers whose rated current is adjustable, the rated current values are shown.

^{*2} The circuit breakers with rating in parentheses are special models.

^{2.} The peak value of the first wave of excited inrush current shall be calculated based on the multiple for the peak value of the first wave in the table, and the calculated value shall not exceed the lower limit peak value of instantaneous tripping current of circuit breaker. The circuit breakers are selected on condition that the transformer rated current value does not exceed 0.9 times the circuit breaker rated current. If the multiple for the peak value of the first wave is different from that shown in the table, a circuit breaker must be separately selected.

■3-phase 420V

Table 4-21-5 MCCB

Transformer	Rated		nple of transformer excited inrush curre	ent ①		ole of transformer excited inrush cur	rent ②		ple of transformer excited inrush cur	rent ③
capacity		Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A
5	6.9	32	NF32-SV NF63-CV, NF63-SV, NF63-HV NF125-SV, NF125-HV	10 10 15	26	NF32-SV, NF63-CV, NF63-SV	10	18	NF32-SV, NF63-CV, NF63-SV NF125-SV	10 15
7.5	10.3	32	NF32-SV NF63-CV, NF63-SV, NF63-HV NF125-SV, NF125-HV	15 15 15	26	NF32-SV, NF63-CV, NF63-SV NF125-SV	15 15	18	NF32-SV, NF63-CV, NF63-SV NF125-SV	15 15
10	13.7	31	NF32-SV NF63-CV, NF63-SV, NF63-HV NF125-CV(*2) NF125-SV, NF125-HV	20 20 (50) 20	26	NF32-SV NF63-CV, NF63-SV NF125-SV	20 20 20	18	NF32-SV NF63-CV, NF63-SV NF125-SV	20 20 20
15	20.6	31	NF63-CV(*1) NF63-CV, NF63-SV, NF63-HV NF125-CV, NF125-SV, NF125-HV NF125-SEV, NF125-HEV	40 60 60 50	26	NF63-CV(*1) NF63-CV, NF63-SV NF125-CV, NF125-SV	30 50 50	18	NF32-SV, NF63-CV, NF63-SV NF125-CV(*2) NF125-SV	30 (50) 30
20	27.5	26	NF63-CV(*1) NF63-CV, NF63-SV, NF63-HV NF125-CV(*1) NF125-CV, NF125-SV, NF125-HV	40 60 50 60	26	NF63-CV(*1) NF63-CV, NF63-SV NF125-CV, NF125-SV	40 60 60	18	NF63-CV(*1) NF63-CV, NF63-SV NF125-CV, NF125-SV	40 50 50
30	41.2	24	NF63-CV(*1) NF125-CV(*1) NF125-CV, NF125-SV, NF125-HV	50 50 100	26	NF125-CV(*1) NF125-CV, NF125-SV	60 100	18	NF63-CV(*1) NF125-CV, NF125-SV	50 75
50	68.7	22	NF125-CV(*1) NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	100 150 125	23	NF125-CV(*1) NF250-CV, NF250-SV	100 150	16	NF125-CV, NF125-SV	100
75	103	15	NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	150 125	18	NF250-CV, NF250-SV NF250-SEV	175 125	14	NF250-CV, NF250-SV	150
100	137	15	NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	200 175	17	NF250-CV, NF250-SV NF250-SEV	200 175	13	NF250-CV, NF250-SV	175
150	206	15	NF400-CW NF400-SW NF400-SEW, NF400-HEW	400 300 250	14	NF400-SW NF400-SEW	300 250	13	NF400-CW NF400-SW NF400-SEW	400 250 250
200	275	14	NF400-SW NF400-SEW, NF400-HEW	350 350	13	NF400-SW/SEW	350/350	12	NF400-SW NF400-SEW	350 350
300	412	10	NF630-CW NF630-SW NF630-SEW, NF630-HEW	600 500 500	13	NF630-SEW	500	12	NF630-SW NF630-SEW	500 500
500	687	15	NF800-SEW(*1) NF1250-SEW	800 800	11	NF800-SEW	800	11	NF800-SEW	800

Table 4-21-6 ELCB

Transformer	Rated	Exar	nple of transformer excited inrush curre	ent ①		ole of transformer excited inrush cur	rent ②		ole of transformer excited inrush cur	rrent ③
capacity kVA	primary current A	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A
5	6.9	32	NV32-SV NV63-CV, NV63-SV NV63-HV NV125-SV, NV125-HV	15 10 15(10) 15 15	26	NV32-SV NV63-CV, NV63-SV NV125-SV	15 10 15(10) 15	18	NV32-SV NV63-CV, NV63-SV NV125-SV	15 10 15(10) 15
7.5	10.3	32	NV32-SV NV63-CV, NV63-SV, NV63-HV NV125-SV, NV125-HV	15 15 15	26	NV32-SV NV63-CV, NV63-SV NV125-SV	15 15 15	18	NV32-SV NV63-CV, NV63-SV NV125-SV	15 15 15
10	13.7	31	NV32-SV NV63-CV, NV63-SV, NV63-HV NV125-CV NV125-SV, NV125-HV	20 20 50 20	26	NV32-SV NV63-CV, NV63-SV NV125-SV	20 20 20	18	NV32-SV NV63-CV, NV63-SV NV125-SV	20 20 20
15	20.6	31	NV63-CV, NV63-SV, NV63-HV NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	60 60 50	26	NV63-CV, NV63-SV NV125-CV NV125-SV	50 60 50	18	NV32-SV NV63-CV, NV63-SV NV125-SV	30 30 30
20	27.5	26	NV63-CV, NV63-SV, NV63-HV NV125-CV, NV125-SV, NV125-HV	60 60	26	NV63-CV, NV63-SV NV125-CV, NV125-SV	60 60	18	NV63-CV, NV63-SV NV125-CV NV125-SV	50 60 50
30	41.2	24	NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	100 50	26	NV125-CV, NV125-SV NV125-SEV	100 50	18	NV125-CV, NV125-SV	75
50	68.7	22	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	150 125	23	NV250-CV, NV250-SV NV250-SEV	150 125	16	NV125-CV, NV125-SV	100
75	103	15	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	150 125	18	NV250-CV, NV250-SV NV250-SEV	175 125	14	NV250-CV, NV250-SV	150
100	137	15	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	200 175	17	NV250-CV, NV250-SV NV250-SEV	200 175	13	NV250-CV, NV250-SV	175
150	206	15	NV400-CW NV400-SW NV400-SEW, NV400-HEW	400 300 250	14	NV400-SW NV400-SEW	300 250	13	NV400-CW NV400-SW NV400-SEW	400 250 250
200	275	14	NV400-SW NV400-SEW, NV400-HEW	350 350	13	NV400-SW NV400-SEW	350 350	12	NV400-SW NV400-SEW	350 350
300	412	10	NV630-CW, NV630-SW NV630-SEW, NV630-HEW	600 500	13	NV630-SEW NV800-SEW	500 500	12	NV630-SEW	500
500	687	15	-	_	11	-	_	11	-	_

^{*1} Examples of selection of high-instantaneous circuit breakers (special models) for primary side of transformer.

*2 The circuit breakers with rating in parentheses are special models.

ks: 1. For the circuit breakers whose rated current is adjustable, the rated current values are shown.

2. The peak value of the first wave of excited inrush current shall be calculated based on the multiple for the peak value of the first wave in the table, and the calculated value shall not exceed the lower limit peak value of instantaneous tripping current of circuit breaker. The circuit breakers are selected on condition that the transformer rated current value does not exceed 0.9 times the circuit breaker rated current. If the multiple for the peak value of the first wave is different from that shown in the table, a circuit breaker must be separately selected.

20

20

20

25

20

125

125

125

25

6

10

13

13 20

7.5

7.5 25

85

85

50

50 125

15

10. Combination for Selective Breaking

Combinations of main circuit breaker for coordination and branch circuit breakers capable of selective breaking and the breaking capacity (sym kA) for selective breaking at the installation point of the branch circuit breaker are shown below.

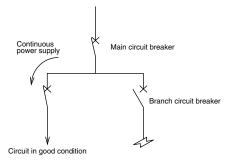


Table 4-22-1 Combination for selective breaking

40VAC (IEC 6	Main	_,					-	rou-it	hrea!	or			sym	ı.K/
shorted in	reaker	_	>	>	>	>			break		_	_	> >	>
Rate of ultimate short-circuit breaking or each breaker		NF125-SEV	NF125-HE	NF250-SE	NF250-HE	NF400-SE	NF400-HEW	NF630-SEW	NF630-HEW	NF800-CEW	NF800-SEW	NF800-HEW	NF1000-SEW NF1250-SEW	NF1600-SEW
Branch reaker	Icu(kA)	36	65 65	36	65 65	42	65	불 42	원 65	36	불 42	65	步 步 85	<u>날</u> 85
NF32-SV	2.5	1.5	1.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
NV32-SV	5	1.5	1.5	2.5	2.5	5	5	5	5	5	5	5	5	5
NF63-SV														
NV63-SV	7.5	1.5	1.5	2.5	2.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5
NF63-HV	10	1.5	1.5	2.5	2.5	7.5	7.5	10	10	10	10	10	10	10
NV63-HV												_		
NF125-SV NF125-SEV NV125-SV NV125-SEV	25	-	-	2.5	2.5	5	5	10	10	10	10	10	10	22
NF125-SGV	36	-	-	2.5	2.5	7.5	7.5	15	15	15	15	15	15	36
NF125-LGV	50	-	-	2.5	2.5	7.5	7.5	15	15	15	15	15	15	42
NF125-HV	50	_	_	2.5	2.5	7.5	7.5	18	18	18	18	18	18	50
NV125-HV NF125-HGV	65		_	2 5	2.5	7 5	7.5	15	15	15	15	15	15	42
NF125-HGV NF160-SGV	65 36	-	-	2.5	2.5	7.5 6.4	6.4	15 10	15	15 10	15	15	15 10	25
NE160-LGV	50	-	-	-	-	6.4	6.4	10	10	15	15	15	15	25
NF160-HGV	65	-	-	-	-	6.4	6.4	10	10	15	15	15	15	25
NF250-SV NF250-SEV NV250-SV NV250-SEV	36	-	-	-	-	-	-	10	10	10	10	10	10	22
NE250-SGV	36	-	-	-	-	-	-	10	10	10	10	10	10	25
NF250-LGV	50	-	-	-	-	-	-	10	10	15	15	15	15	25
NF250-HV NF250-HEV NV250-HV	65	-	-	-	-	-	-	10	10	10	10	10	10	22
NV250-HEV	0.5							40	40	45	45	45	45	-
NF250-HGV NF400-SW	65	-	-	_	-	-	-	10	10	15	15	15	15	25
NV400-SW	42	-	-	-	-	-	-	-	-	13	13	13	13	20
NF400-SEW	40							0.5	0.5	10	10	10	10	20
NV400-SEW	42	_	_	_	_	_	_	9.5	9.5	13	13	13	13	20
NF400-HEW NV400-HEW	65	-	-	-	-	-	-	9.5	9.5	10	10	10	13	20
NF400-REW	125	-	-	-	-	-	-	9.5	9.5	10	10	10	13	20
NF630-SEW NF630-SEW NV630-SW NV630-SEW	42	-	-	-	-	-	-	-	-	-	-	-	-	20
NF630-HEW NV630-HEW NF63-CV	65	-	-	-	-	-	-	-		-	-	-	-	20
NV63-CV	2.5	1.5	1.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	7.5	2.5
NF125-CV NV125-CV	10	-	-	2.5	2.5	5	5	10	10	10	10	10	15	10
NF250-CV NV250-CV NF400-CW	15	-	-	-	-	-	-	7.5	7.5	7.5	7.5	7.5	7.5	15
NV400-CW NF630-CW	25	-	-	-	-	-	-	-	-	10	10	10	13	20
NV630-CW	36	-	-	-	-	-	-	-	-	-	-	-	-	20
NF125-RGV	125	-	-	2.5	2.5	15	15	30	30	30	42	50	50	85
NF125-UV	200	-	-	2.5	2.5	15	15	30	30	30	42	50	50	85
R NE250-HGV	125	-	-	-	-	-	-	15	15	15	25	25	25	85
NF250-UV U NF400-UEW	200	-	-	_	-	-	-	15 9.5	15 9.5	15 15	25 15	25 15	25 15	85 25
UNTHOU-UEVV	200	_	_	-	_	μ-	_	9.5	9.5	15	15	15	10	20

Note *1 Rated currents of branch breakers are 50A or less.

NF800-UEW

Remarks: 1. It is considered that the instantaneous tripping characteristic values of main circuit breakers have been set to the maximum values.

	VAC (IEC 6		-2)											sym	ı.kA
5	Pate	Main breaker						Ci	rcuit	break	er				
cap	Pated ultimate on-circuit breaking of each breaker ch		NF125-SEV	NF125-HEV	NF250-SEV	NF250-HEV	NF400-SEW	NF400-HEW	NF630-SEW	NF630-HEW	NF800-CEW	NF800-SEW	NF800-HEW	NF1000-SEW NF1250-SEW	NF1600-SEW
Brand	cn "e,	lcu(kA)	50	100	85	100	85	100	85	100	50	85	100	125	125
	NF32-SV	7.5	1.5	1.5	2.5	2.5	5	5	7.5	7.5	7.5	7.5	7.5	7.5	7.5
	NV32-SV	10	1.5	1.5	2.5	2.5	10	10	10	10	10	10	10	10	10
	NF63-SV NV63-SV	15	1.5	1.5	2.5	2.5	10	10	10	10	10	10	10	10	10
	NF63-HV NV63-HV	25	1.5	1.5	2.5	2.5	10	10	20	20	25	25	25	25	25
	NF125-SV NF125-SEV NV125-SV NV125-SEV	50	-	-	2.5	2.5	7.5	7.5	15	15	18	18	18	18	50
	NF125-SGV	85	-	-	2.5	2.5	7.5	7.5	15	15	18	18	18	18	85
	NF125-LGV	90	-	-	2.5	2.5	7.5	7.5	15	15	18	18	18	18	85
	NF125-HV NV125-HV	100	-	-	2.5	2.5	10	10	25	25	35	35	35	35	100
	NF125-HGV	100	-	-	2.5	2.5	7.5	7.5	15	15	18	18	18	18	85
	NF160-SGV	85	-	-	_	-	6.4	6.4	10	10	10	10	10	10	50
NF	NF160-LGV	90	_	-	-	-	6.4	6.4	10	10	10	10	10	10	50
NF.	NF160-HGV	100	_	-	_	-	6.4	6.4	10	10	10	10	10	10	50
S • L • H	NF250-SV NF250-SEV NV250-SV NV250-SEV	85	-	-	-	-	-	-	10	10	10	10	10	10	50
• NV	NF250-SGV	85	-	-	-	-	-	-	10	10	10	10	10	10	50
IN V	NF250-LGV	90	-	-	-	-	-	-	10	10	10	10	10	10	50
S • H	NF250-HV NF250-HEV NV250-HV NV250-HEV	100	-	-	-	-	-	-	10	10	10	10	10	10	50
	NF250-HGV	100	_	-	_	-	-	-	10	10	10	10	10	10	50
	NF400-SW NV400-SW	85	-	-	-	-	-	-	-	-	13	13	13	13	20
	NF400-SEW NV400-SEW	85	-	-	-	-	-	-	-	-	13	13	13	13	20
			 	_	_		_	_	_			_	_		+

13 13

13 13 13 13 20

50 85 85

50 85 85

18 50 50

18 50 50

15 15 15

10

65

9.5 9.5 13 13 13

7.5

2.5 2.5 22 22 65

7.5 7.5 7.5 10 10

7.5 10 15 15 15 15 15

> 7.5 7.5 7.5 7.5

65 65

2.5 2.5

2.5 2.5 22 22

2.5 2.5 6 6 6 6 6 6

2.5

NF400-HEW

NV400-HEW NF400-REW

NF630-SW NF630-SEW

NV630-SW NV630-SEW NF630-HEW

NV630-HEW NF63-CV

NV63-CV NF125-CV

NV125-CV

NF250-CV

NV250-CV NF400-CW

NV400-CW NF630-CW

NV630-CW

NF125-RGV

NF125-UV

NF250-RGV

NF250-UV

NF400-UEW

NF800-UEW

TYPE B, C, D BH-D10

TYPE B, C, D

BH-D6

Ċ

С

100

150

85

100

7.5 1.5 1.5 2.5 25 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5 7.5

30

36

50

50

150

200

150

200

200

200

6

10

For the selectivity in the overcurrent range, separately check the coordination on the operating characteristic curve.

Table 4-22-2 Combination for selective breakingwith AE-SW Series

440VAC (IEC 60947-2)
----------	-------------	---

	UVAC (IE		J-1-2						011	S	/m.kA
Sho	aled	Main breaker			Low-volt	_		_	_	>	
'apa	ated ultimate city of each breaking anch aker		-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA	AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA
\	each king		AE630-SW	1000	1250	1600	2000	2000	2500	3200	4000
Bra	nch orealfer	/									
brea	aker	Icu(kA)	65	65	65	65	65	85	85	85	85
	NF32-SV	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
	NV32-SV	5	5	5	5	5	5	5	5	5	5
	NF63-SV	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5
	NV63-SV NF63-HV										
	NV63-HV	10	9(10)	10	10	10	10	10	10	10	10
	NF125-SV										
	NV125-SV	25	7(25)	20(25)	25	25	25	25	25	25	25
	NF125-SEV										
	NV125-SEV	36	7(36)	20(36)	25(36)	30(36)	36	36	36	36	36
	NF125-SGV	36	9(36)	20(36)	36	36	36	36	36	36	36
	NF125-LGV	50	9(50)	20(50)	36(50)	50	50	50	50	50	50
	NF125-HV	50	9/50)	30(50)	50	50	50	50	50	50	50
	NV125-HV	30	9(50)		30	30	50	50	30	30	30
	NF125-HGV	65	9(65)	20(65)	36(65)	65	65	65	65	65	65
	NF160-SGV	36	9(36)	15(36)	25(36)	36	36	36	36	36	36
	NF160-LGV	50	9(50)	15(50)	25(50)	42(50)	42(50)	50	50	50	50
	NF160-HGV	65	9(65)	15(65)	25(65)	42(65)	42(65)	65	65	65	65
NF	NF250-SV										
1	NF250-SEV	36	7(36)	14(36)	19(36)	25(36)	25(36)	36	36	36	36
s	NV250-SV										
Ĺ	NV250-SEV NF250-SGV	20	7(00)	15/00	0E(00)	20	20	20	20	20	20
•	NF250-SGV NF250-LGV	36 50	7(36)	15(36)	25(36)	36	36	36 50	36 50	36 50	36 50
H •	NF250-LGV NF250-HV	50	7(50)	15(50)	25(50)	42(50)	42(50)	50	50	50	50
ΝV	NF250-HEV										
l S	NV250-HEV	65	7(65)	15(65)	25(65)	42(65)	42(65)	65	65	65	65
•	NV250-HV										
Н	NF250-HGV	65	7(65)	15(65)	25(65)	42(65)	42(65)	65	65	65	65
	NF400-SW		. (55)	.5(00)							
	NV400-SW	42	-	-	18(42)	24(42)	24(42)	33(42)	42	42	42
	NF400-SEW		a(:-:	4=/	40/:	0.47:	04/:			4-	
	NV400-SEW	42	9(42)	15(42)	18(42)	24(42)	24(42)	30(42)	39(42)	42	42
	NF400-HEW	65	0(05)	15/05	10/05	04/05	04/05	20/25	20/25;	65	65
	NV400-HEW	65	9(65)	15(65)	18(65)	24(65)	24(65)	30(65)	39(65)	65	65
	NF400-REW	125	9(65)	15(65)	18(65)	24(65)	24(65)	30(75)	39(75)	80	80
	NF630-SW										
	NF630-SEW	42	_	_	_	24(42)	24(42)	30(42)	37(42)	42	42
	NV630-SW	72	-	_	_	2-(42)	L-1(42)	30(42)	3,(42)	72	72
	NV630-SEW										
	NF630-HEW	65	_	15(65)	18(65)	24(65)	24(65)	30(65)	37(65)	48(65)	48(65)
	NV630-HEW			,,	,,	,,	,/	,,	,	,,	(/
	NF800-SEW	42	_	_	18(42)	24(42)	24(42)	30(42)	37(42)	42	42
	NV800-SEW										
	NF800-HEW	65	-	-	18(65)	24(65)	24(65)	30(65)	37(65)	48(65)	48(65)
	NV800-HEW								_	_	
	NF63-CV	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
	NV63-CV										
NF	NF125-CV NV125-CV	10	9(10)	10	10	10	10	10	10	10	10
-1	NF250-CV										
C	NV250-CV	15	9(15)	15	15	15	15	15	15	15	15
NV	NF400-CW										
- 1	NV400-CW	25	-	15(25)	18(25)	25	25	25	25	25	25
С	NF630-CW										
	NV630-CW	36	-	-	-	24(36)	24(36)	30(42)	36	36	36
	NF800-CEW	36	_	_	18(36)	24(36)	24(36)	30(42)	36	36	36
	NF125-RGV	125	35(65)	65	65	65	65	85	85	85	85
NF	NF125-UV	200	50(65)	65	65	65	65	85	85	85	85
-	NF250-RGV	125	9(65)	50(65)	65	65	65	85	85	85	85
R	NF250-UV	200	9(65)	65	65	65	65	85	85	85	85
Ü	NF400-UEW	200	9(65)	15(65)	18(65)	29(65)	29(65)	48(75)	85	85	85
	NF800-UEW	200	-	-	18(65)	24(65)	24(65)	30(75)	37(75)	68(75)	68(75)
Vlote	e *1 The ve	من ممینا	4h a 4ahl						l 41- O		

230VAC (IEC 60947-2)

A.	aled Ultimate city of bree	Main			Low-volt	age air c	ircuit bre	aker AE-	SW		/m.kA
Can	alley ultimate privoir breaking each breaker	breaker	>	_	_	_	4			۶	≸
, Va	City of ball		AE630-SW	AE1000-SW	WS-09	AE1600-SW	AE2000-SW	AE2000-SW	MS-00	AE3200-SW	AE4000-SWA
	each king		630	5	AE1250	160	500	500	AE2500-	320	9
Bra	nch Oreake.		- AE	AE	AE	AE	YE YE	AE	AE	AE	Ÿ
brea	aker	lcu(kA)	65	65	65	65	65	85	85	85	85
	NF32-SV	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5
	NV32-SV	10	9(10)	10	10	10	10	10	10	10	10
	NF63-SV		0(10)								
	NV63-SV	15	9(10)	15	15	15	15	15	15	15	15
	NF63-HV		_ ,,								
	NV63-HV	25	9(25)	25	25	25	25	25	25	25	25
	NF125-SV										
	NV125-SV	50	9(50)	45(50)	50	50	50	50	50	50	50
	NF125-SEV		_ ,,								
	NV125-SEV	85	9(65)	45(65)	50(65)	50(65)	50(65)	85	85	85	85
	NF125-SGV	85	16(65)	45(65)	65	65	65	85	85	85	85
	NF125-LGV	90	16(65)	45(65)	65	65	65	85	85	85	85
	NF125-HV										
	NV125-HV	100	9(65)	50(65)	65	65	65	85	85	85	85
	NF125-HGV	100	16(65)	45(65)	65	65	65	85	85	85	85
	NF160-SGV	85	9.4(65)	25(65)	40(65)	65	65	85	85	85	85
	NF160-LGV	90	9.4(65)	25(65)	40(65)	65	65	85	85	85	85
	NF160-HGV	100	9.4(65)	25(65)	40(65)	65	65	85	85	85	85
	NF250-SV		()	()	10(00)						
NF	NF250-SEV										
S	NV250-SV	85	9(65)	20(65)	22(65)	42(65)	42(65)	50(85)	85	85	85
•	NV250-SEV										
L	NF250-SGV	85	9.4(65)	25(65)	40(65)	65	65	85	85	85	85
H	NF250-LGV	90	9.4(65)	25(65)	40(65)	65	65	85	85	85	85
•	NF250-HV	30	3.4(03)	23(03)	40(03)	0.5	0.5	- 65	0.5	- 00	0.0
ΝV	NF250-HEV										
-	NV250-HV	100	9(65)	25(65)	40(65)	65	65	85	85	85	85
s •	NV250-HV										
Н	NF250-HGV	100	0.4(65)	05/05)	40/05)	CF.	C.F.	0.5	85	85	85
		100	9.4(65)	25(65)	40(65)	65	65	85	65	65	65
	NF400-SW NV400-SW	85	-	-	20(65)	30(65)	30(65)	48(75)	70(75)	85	85
	NF400-SEW										
	NV400-SEW	85	9(65)	15(65)	20(65)	30(65)	30(65)	48(75)	70(75)	85	85
	NF400-SEW										
	NV400-HEW	100	9(65)	15(65)	20(65)	30(65)	30(65)	48(75)	70(75)	85	85
		150	0(65)	1E(CE)	20/65)	20/05)	20/65)	40/7E)	70/75)	OF.	0.5
	NF400-REW NF630-SW	150	9(65)	15(65)	20(65)	30(65)	30(65)	48(75)	70(75)	85	85
	NF630-SEW										
		85	-	-	-	24(65)	24(65)	30(75)	40(75)	60(75)	60(75)
	NV630-SW NV630-SEW										
	NF630-SEW										
		100	-	15(65)	18(65)	24(65)	24(65)	30(75)	40(75)	60(75)	60(75)
	NV630-HEW NF800-SEW										
	NV800-SEW	85	-	-	18(65)	24(65)	24(65)	30(75)	40(75)	60(75)	60(75)
	NF800-HEW										
		100	-	-	18(65)	24(65)	24(65)	30(75)	40(75)	60(75)	60(75)
	NV800-HEW										
	NF63-CV	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5
	NV63-CV NF125-CV										
NF	NF125-CV NV125-CV	30	9(30)	15(30)	18(30)	24(30)	24(30)	30	30	30	30
-1	NF250-CV										
С		36	9(36)	15(36)	18(36)	24(36)	24(36)	36	36	36	36
• NV	NV250-CV NF400-CW										
-1		50	-	15(50)	20(50)	27(50)	27(50)	42(50)	50	50	50
С	NV400-CW										
	NF630-CW	50	-	-	-	24(50)	24(50)	30(50)	40(50)	50	50
	NV630-CW				40/50						F.0
	NF800-CEW	50	-	-	18(50)	24(50)	24(50)	30(50)	40(50)	50	50
	NF125-RGV	150	65	65	65	65	65	85	85	85	85
NF I	NF125-UV	200	65	65	65	65	65	85	85	85	85
R	NF250-RGV	150	9(65)	65	65	65	65	85	85	85	85
•	NF250-UV	200	9(65)	65	65	65	65	85	85	85	85
U	NF400-UEW	200	9(65)	15(65)	18(65)	29(65)	29(65)	48(75)	85	85	85
1	NF800-UEW	200	-	-	18(65)	24(65)	24(65)	30(75)	37(75)	68(75)	68(75)

^{*1} The values in the table represent the max. rated current for both Series AE-SW air circuit breakers and branch breakers, and the selective co-ordination applies when the air circuit breakers instantaneous pick up is set to maximum.

*2 The numerals shown in parentheses are for AE-SW with MCR. (When set MCR.)

sym.kA

11. Combinations for Cascade Breaking

The following tables show the combinations of circuit breakers capable of cascade breaking and the cascade breaking capacities (symmetrical values, sym kA). The criteria conform to IEC 60947-2.

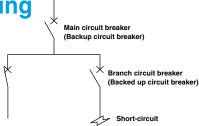


Table 4-23-1 440VAC (IEC 60947-2)

NF-S • NV-S • NF-H • NV-H NF-C • NV-C NF-R • NF-U NF1000-SEW, NF1250-SEW, NF1600-SEM NV400-HEW NV800-SEW NV125-RGV VF630-SW, NV630-SW NV400-SW NV400-CW NV630-CW NV125-HV NV125-SV NV250-HV NF400-HEW, VF630-HEW, NF800-SEW, VF800-HEW, NF400-REW VF800-REW NF800-CEW NF400-UEW 125-SV, I NF160-HGV NF250-HGV NF630-CW, NF125-SGV NF160-LGV NF250-SGV NF250-LGV NF400-CW, NF250-RGV 125-HV, NF250-SV, NF400-SW, VF250-HV, NF250-CV, 125-UV NF250-UV 25-1 Ē 드 트 Ē Branch breaker 200 125 200 200 50 65 NF32-SV 125 35 50 2.5 NV32-SV 7.5 7.5 7.5 7.5 NF63-SV 14 14 15 15 15 15 15 15 15 10 10 10 50 125 50 50 10 NV63-SV 7.5 14 10 10 10 NF63-HV _ NV63-HV NF125-SV NV125-SV 50 50 125 200 NF NF125-SGV NF125-LGV 125 200 NF125-HV 125 200 NV125-HV 125 200 200 85 NF125-HGV S NF160-SGV 50 50 125 200 85 85 NF NF160-LGV 125 200 NF160-HGV 125 200 200 200 NF250-SV 125 200 NF NV250-SV NF250-SGV 125 200 NF250-LGV NF250-HV NV250-HV NF250-HGV NF400-SEW NV400-SW NV400-SEW NF630-SW NF630-SEW NV630-SW NV630-SEW NF63-CV _ NV63-CV NF125-CV NF

30 30 30

42 50 50 42 50 50 42

Note Rated currents of main breakers are maximum values.

NV125-CV NF250-CV

NV250-CV

NF400-CW

NV400-CW

NV630-CW

NV

_

125 200 50

Ia	ble 4-23-2		UVA	4U ((15(<i>-</i> 00	J34	1-2)																										syn	1.k/
\	M	ain aker										NF-S	• NV-	S•N	F-H•	NV-F	1									N	IF-C	• NV-	С		N	IF-R •	NF-U	J	
Bra	Raded United Reserving Control of the Control of th	akei	NF125-SV, NV125-SV	NF125-SGV	NF125-LGV	NF125-HV, NV125-HV	NF125-HGV	NF160-SGV	NF160-LGV	NF160-HGV	NF250-SV, NV250-SV	NF250-SGV	NF250-LGV	NF250-HV, NV250-HV	NF250-HGV	NF400-SW, NV400-SW	NF400-HEW, NV400-HEW	NF400-REW	NF630-SW, NV630-SW	NF630-HEW, NV630-HEW	NF630-REW	NF800-SEW, NV800-SEW	NF800-HEW, NV800-HEW	NF800-REW	NF1000-SEW, NF1250-SEW, NF1600-SEW	NF250-CV, NV250-CV	NF400-CW, NV400-CW	NF630-CW, NV630-CW	NF800-CEW	NF125-RGV, NV125-RGV	NF125-UV	NF250-RGV	NF250-UV	NF400-UEW	NF800-UEW
	aker	lcu(kA)	50	85	90	100	100	85	90	100	85	85	90	100	100	85	100	150	85	100	150	85	100	150	125	36	50	50	50	150	200	150	200	200	200
	NF32-SV	7.5	42	50	50	50	50	10	10	10	10	10	10	10	10	-	_	_	_	-	-	-	-	_	_	_	_	_	-	125	200	35	50	_	_
	NV32-SV	10	42	50	50	50	50	35	35	35	35	35	35	35	35	14	14	14	14	14	14	-	-	_	_	25	14	14	-	125	200	35	50	_	-
	NF63-SV	15	42	85	85	85	85	35	35	35	35	35	35	35	35	30	30	30	30	30	30		_	_	_	25		<u> </u>	_	125	200	85	125	_	-
	NV63-SV	15	42	85	85	85	85	35	35	35	35	35	35	35	35	30	30	30	50	- 50	_	-	-	_	_	25	_		_	125	200	85	125	_	⊢
	NF63-HV	25	50	85	90	100	100	50	50	50	50	50	50	50	50	50	50	50	50	50	50	_	_	-	-	-	30	30	_	125	200	85	125	_	-
	NV63-HV NF125-SV	50	_	85	90	100	100	85	85	85	_	85	85	85	85	85	85	85	85	85	85	_	_	_		_	_	_	_	125	200	125	200	200	125
	NV125-SV																																		
NF	NF125-SGV	85	-	-	-	100	-	-	-	-	-	-	-	-	-	-	-	-	_	-	-	-	-	-	-	-	-	-	-	125	200	125	200	200	125
S	NF125-LGV	90	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125	200	125	200	200	200
•	NF125-HV	100	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	_	125	200	125	200	200	12
ΝV	NV125-HV																																		
	NF125-HGV	100	_	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125	200	125	200	200	200
S	NF160-SGV	85	-	-	-	-	-	-	_	-	-	-	-	-	-	-	-	-	-	-	-	_	_	-	-	-	-	-	-	_	-	125	200	200	125
NF	NF160-LGV	90	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125	200	200	200
1	NF160-HGV	100	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125	200	200	200
L	NF250-SV	0.5	_		_		_	_	_	-	-	_	_				_	_	_	_	_	_	_	-	1	_	_	_	_	_		125	200	200	125
NF	NV250-SV	85	_	_	_	_	_	_	_	_	-	_	_	_	_	_	_	_		_	_	_	_	_	_	_	_	_	_	_	_	125	200	200	125
1	NF250-SGV	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125	200	200	125
Н	NF250-LGV	90	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125	200	200	200
NV	NF250-HV NV250-HV	100	-	_	_	-	-	-	_	_	-	-	-	_	-	-	_	_	-	_	-	_	_	-	-	-	-	-	-	_	_	125	200	200	200
Н	NF250-HGV	100	_	_	_	_	T -	_	_	_	_	_	_	_	_	_	_	_	_	_	_	-	-	_	_	_	_	_	_	-	_	125	200	200	200
	NF400-SW																																		
	NF400-SEW																																		
	NV400-SW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	100	-	-	-	-	-	-	-	-	200	200
	NV400-SEW																																		
	NF630-SW	\vdash	-			-														-														-	\vdash
	NF630-SEW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	100	-	-	-	-	-	-	-	-	-	200
	NV630-SW																																		
	NV630-SEW																																		
	NF63-CV	7.5	35	50	50	50	50	10	10	10	10	10	10	10	10	_	_	_	_	_	_	_	_	_	_	_	_	_	_	125	200	35	50	_	-
	NV63-CV																																		
NF 	NF125-CV NV125-CV	30	35	85	85	85	85	50	50	50	50	50	50	50	50	50	50	50	50	50	50	50	-	-	-	-	-	-	-	125	200	85	125	50	-
C NV	NF250-CV NV250-CV	36	-	-	-	-	-	-	-	-	50	50	50	50	50	50	50	50	50	50	50	50	-	-	-	-	-	-	-	-	-	125	200	200	50
C	NF400-CW NV400-CW	50	-	-	-	-	-	-	-	-	-	-	-	-	-	85	85	85	85	85	85	85	85	85	85	-	-	-	-	-	-	-	-	200	200
	NF630-CW	50			_														85	85	85	85	85	85	85										200

Note Rated currents of main breakers are maximum values.

12. International Standard Comformance List 12.1UL and CSA Approval Product

UL (Underwriter's Laboratories) Standards: UL 489, UL 1077

UL is an organization in the US which establishes safety standards, i.e. UL Standards, conducts safety verification test based on the UL Standards, issues the certificates to approved products and allows the manufacturers to attach the certification mark to the products. The UL certification mark has been spread widely in the US. Some states and cities oblige manufacturers to receive the UL certification. When devices, control panels and machines are exported to the US, these products must be UL certified. UL certified products have received UL Recognition or UL Listing in conformity to UL Standards (UL 489, UL1077) and allowed to be used in control panels and machines to be exported to the US.

? : UL Recognition

Refers to component certification for products designed to be built in other products and devices. UL recognized products can be used in control panels, machine tools and control units.



Refers to product certification for products which can be sold directly to end-users and used by end-users. These products can be used also as built-in components in control panels, machine tools and control units. Some models vary in external dimensions and terminal structure from standard models. Please refer to the page of UL listed products for details.

CSA (Canadian Standard Association) Standards: CSA C22.2 No.5

The CSA Standards are product safety standards established by CSA. In Canada, the safety of electric products is regulated by the state laws, and some state laws prescribe that circuit breakers shall be certified by the CSA Standards. Therefore, when devices, control panels and machines are exported to Canada, these products must be CSA certified. UL certified products have received CSA certification from the testing body UL and allowed to be used in control panels and machines to be exported to Canada. UL has been authorized as a testing, certification and quality certification body by SCC, and CSA certified products tested by UL have been approved by the safety regulations in all states of Canada. It is allowed to attach the following certification marks to products certified by both UL and CSA. (It is also allowed to attach the separate marks for the US and Canada as before.)

Recognition for US and Canada

UL and CSA recognition of components by testing body UL



UL and CSA recognition of components by testing body UL

12.2CCC (China Compulsory Certification) Approval Product

Low-voltage circuit breakers are designated as products to be compulsorily certified in China. To export such products to China and sell them in China, it is necessary to obtain the CCC certification.

ng



12.3 Corresponding to CE Marking and UKCA Marking Corresponding to low voltage directives (CE marking) and

to low voltage regulations (UKCA marking)

(1)When using a low voltage circuit breaker as a component and indicating conformity with the EC Directives. The CE Marking is required when a low voltage circuit breaker is distributed as a single device in EU. However, when the CE Mark is indicated on a machine tool or a control unit, it is unnecessary to affix the CE Mark to the low-voltage circuit breaker used as a built-in component. When the CE





Mark is indicated on a machine tool or a control unit, it is recommended to use a product certified by a third party shown in Item (3) (TÜV certified product) as a low voltage circuit breaker.

(2)Measures for export of low voltage circuit breaker as single unit

When exporting a low-voltage circuit breaker as a single unit in EU, the circuit breaker is covered by the Low Voltage Directive. The certification of conformity with the Low Voltage Directive is self-declared as a rule. The applicable product standards are shown below.

EN 60947-2 Low-voltage switchgear and controlgear-Part 2: Circuit-breakers

EN 60934 Circuit-breakers for equipment (CBE)

(3)Models certified by third party (TÜV certified products)

When the CE Mark is indicated on a machine tool or a control unit, it is recommended to use a low voltage circuit breaker certified by a third party (TÜV certified product) as a built-in component.

Corresponding to RoHS directives (CE marking) and to the regulations regarding RoHS hazardous items (UKCA marking)

The Directive prescribes that products shall not emit high-intensity radio waves to the outside and shall not be affected by external electromagnetic waves. Molded case circuit breakers (electronic type) and earth leakage circuit breakers are covered by the EMC Directive. These products have been designed for environment A. Use of these products in environment B may cause unwanted electro magnetic disturbances in which case the user may be required to take adequate mitigation measures.

Corresponding to EMC directives (CE marking) and to EMC regulations (UKCA marking) Low voltage circuit breakers are components used in equipment, such as machine tools and control units, and are not covered by any machinery directive. When the CE Mark is indicated on a machine tool or a control unit, it is recommended to use a low voltage circuit breaker certified by a third party (TÜV certified product) as a built-in component.

Corresponding to Machinery directives (CE marking) and to Machinery regulations (UKCA marking)

Low voltage circuit breakers are components that are used for manufacturing machines or control equipment, and machinery directive is not applicable.

Molded Case Circuit Breakers and Motor Protection Breakers

				North A	American Saf	ety Mar	k			Compulsory Mar	k	Third Party Mark	Classification Society (*1)
Specifications	Class	Applicable Models and Assignments		UL Stand				Standards	ccc	CE	UKCA	TÜV Rheinland	NK
Ороблюционо	Oldoo	·		USA	4		Ca	anada	China	Europe	United Kingdom	Germany	
			71 °	(III)	c FL us	c(VI	.)us	® ®	(W)	< €	CA	TOWNSHAM	Japan
		NF63-CV, NF125-CV	-	-	-	-		-	•	●(Self-declaration)	●(Self-declaration)	-	•
	С	NF250-CV	-	-	-	-		-	•	•	●(Self-declaration)	•	•
		NF400-CW, NF630-CW, NF800-CEW	-	-	-	_		-	•	●(Self-declaration)	●(Self-declaration)	-	•
		NF32-SV, NF63-SV, NF125-SV	-	-	-	-		-	•	●(Self-declaration)	●(Self-declaration)	-	•
		NF125-SEV	-	-	-	-		-	•	●(Self-declaration)	●(Self-declaration)	-	-
		NF250-SV	-	-	-	-		-	•	•	●(Self-declaration)	(Except for 4P)	•
		NF125-SGV, NF160-SGV, NF250-SGV, NF250-SEV	-	-	-	_		-	•	●(Self-declaration)	●(Self-declaration)	-	-
	S	NF400-SW, NF630-SW NF400-SEW, NF630-SEW NF800-SEW, NF800-SDW	-	-	-	-	,	-	•	●(Self-declaration)	●(Self-declaration)	-	•
		NF1000-SEW, NF1250-SEW	-	-	-	_		-	•	●(Self-declaration)	●(Self-declaration)	_	•
		NF1600-SEW	-	-	-	_		-	•	●(Self-declaration)	●(Self-declaration)	-	_
		NF1250-SDW, NF1600-SDW	-	-	-	_		-	_	●(Self-declaration)	●(Self-declaration)	-	_
		NF63-HV	-	-	-	_		-	•	●(Self-declaration)	●(Self-declaration)	-	•
		NF125-HV	-	-	-	-		-	•	●(Self-declaration)	●(Self-declaration)	-	•
		NF125-HEV	-	-	-	_		-	•	●(Self-declaration)	●(Self-declaration)	-	-
		NF250-HV	-	-	-	_		-	•	●(Self-declaration)	●(Self-declaration)	_	•
General	L/H/R	NF125-LGV, NF125-HGV, NF160-LGV, NF250-LGV, NF250-HGV, NF250-HEV, NF125-RGV, NF250-RGV	-	-	-	-		-	•	●(Self-declaration)	●(Self-declaration)	-	-
		NF400-HEW, NF400-REW NF630-HEW, NF630-REW NF800-HEW, NF800-REW	-	-	-	-		-	•	●(Self-declaration)	●(Self-declaration)	-	•
		NF125-UV	-	-	-	_		-	_	●(Self-declaration)	●(Self-declaration)	-	•
	U	NF250-UV, NF400-UEW	-	-	-	_		-	-	●(Self-declaration)	●(Self-declaration)	-	•
		NF800-UEW	-	-	-	_		-	-	●(Self-declaration)	●(Self-declaration)	-	-
	Motor Protection	NF32-SV MB, NF63-CV MB, NF63-SV MB, NF125-SV MB	-	-	-	-		-	•	●(Self-declaration)	●(Self-declaration)	-	•
	Protection	NF250-SV MB	-	-	-	_		-	•	•	●(Self-declaration)	•	•
	HDV	NF63-HDV(2P)	-	-	-	_		-	_	●(Self-declaration)	●(Self-declaration)	-	-
	HDV	NF63-HDV(3P)	-	-	-	_		-	-	●(Self-declaration)	●(Self-declaration)	-	-
	LIDVA	NF125-HDVA	-	-	-	-		-	(*1)	●(Self-declaration) (Except for 3P)	●(Self-declaration)	-	-
	HDVA	NF250-HDVA	-	-	-	-		-	(*1)	●(Self-declaration) (Except for 3P)	●(Self-declaration)	-	-
	LIDW	NF400-HDW	-	-	-	-		-	•	●(Self-declaration)	●(Self-declaration)	-	-
	HDW	NF800-HDW	-	-	-	_		-	•	●(Self-declaration)	●(Self-declaration)	-	-
		NF50-SMU	-	-	-	•		-	•	●(Self-declaration)	●(Self-declaration)	-	-
	1	NF50-SVFU, NF100-CVFU	-	-	-	•		-	•	•	●(Self-declaration)	•	-
	1	NF100-SRU	-	-	-	•		-	•	•	●(Self-declaration)	•	-
	UL 489	NF100-HRU	-	-	-	•)	-	•	•	●(Self-declaration)	•	-
UL		NF125-SVU, NF125-HVU	-	-	-	•)	-	•	•	●(Self-declaration)	•	-
	Listed	NF250-CVU	-	-	-	•)	-	•	•	●(Self-declaration)	•	-
	1	NF250-SVU, NF250-HVU	-	-	-	•)	-	•	•	●(Self-declaration)	•	-
	1	NF400-SWU, NF400-HWU		_	_	_		_			• (Oalf dadamatica)		
		NF630-SWU, NF630-HWU	_	_			'	_	-	•	●(Self-declaration)	•	-

Note *1 Except for 4 poles breaker.

Remark: 1. KC (Korea Certification) and EAC (Eurasian Conformity) approval products are prepared. Please inquire details.

● Earth Leakage Circuit Breakers

		c Official Breakers											les in it e s
				North /	American Safe	ety Mark	(Compulsory Ma	ırk	Third Party Mark	Classification Society
			UL Standards				CSA S	Standards	ccc	CE	UKCA	TÜV Rheinland	NK
Specifications	Class	Applicable Models and Assignments		USA	١		Ca	anada	China	Europe	United Kingdom	Germany	
			71 °		c 711 ° us	الم)us		(W)	(€	UK	TÜVFmensland	Japan
		NV63-CV, NV125-CV	-	-	-	-	-	-	•	●(Self-declaration)	●(Self-declaration)	-	-
	С	NV250-CV			-	-	-	•	•	●(Self-declaration)	•	-	
		NV400-CW, NV630-CW	-	-	-	-	-	-	•	●(Self-declaration)	●(Self-declaration)	-	-
	s	NV32-SV, NV63-SV	-	-	-	-	-	-	•	●(Self-declaration)	●(Self-declaration)	-	-
		NV125-SV	-	-	_	-	-	-	•	●(Self-declaration)	●(Self-declaration)	-	-
General		NV250-SV	-	-	-	-		-	•	•	●(Self-declaration)	•	-
General		NV125-SEV, NV250-SEV, NV400-SW, NV400-SEW, NV630-SW, NV630-SEW, NV800-SEW	-	-	-			-	•	●(Self-declaration)	●(Self-declaration)	-	-
		NV63-HV	-	-	-	-	-	-	•	●(Self-declaration)	●(Self-declaration)	-	-
	H/R	NV125-HV	-	-	-		-	-	•	●(Self-declaration)	●(Self-declaration)	-	-
		NV125-HEV, NV250-HV, NV250-HEV	-	_	-	-	-	-	•	●(Self-declaration)	●(Self-declaration)	-	-
		NV400-HEW, NV630-HEW, NV800-HEW	-	_	-	-	-	-	-	-	-	-	-
		NV50-SVFU, NV100-CVFU	-	_	_		•	-	•	•	●(Self-declaration)	•	-
UL	UL 489	NV125-SVU, NV125-HVU	_	-	-		•	-	•	•	●(Self-declaration)	•	-
JL	Listed	NV250-CVU	-	-	-			-	•	•	●(Self-declaration)	•	-
		NV250-SVU, NV250-HVU	-	_	_		•	-	•	•	●(Self-declaration)	. •	-

Remark: 1. KC (Korea Certification) and EAC (Eurasian Conformity) approval products are prepared. Please inquire details.

Miniature Circuit Breakers

				Compulsory Ma	ark
			CCC	CE	UKCA
Specifications	Class	Applicable	China	Europe	United Kingdom
ореспісатогіз	Class	Models	(8)	C€	UK
		BH-D6	•	●(Self-declaration)	●(Self-declaration)
		BH-D10	•	●(Self-declaration)	●(Self-declaration)
General	DIN	BH-DN	•	●(Self-declaration)	●(Self-declaration)
General	DIN	BV-D	•	●(Self-declaration)	●(Self-declaration)
		BV-DN	•	●(Self-declaration)	●(Self-declaration)
		KB-D	•	●(Self-declaration)	●(Self-declaration)

Circuit Protectors

				North A	merican Safe	ety Mark				Compulsor	y Mark	Third Party Mark	Classification Society
		Anniharkia Madala				С	CSA Standards Canada		ccc	CE	UKCA	TÜV Rheinland	NK
Specifications	Class	Applicable Models and Assignments							China	Europe	Europe United Kingdom		
oposinoanonio			1	(F)	c 71 2° us	(Jr)us ((€	אמ	A TOVPhostand	Japan
General	СР	CP30-BA, CP30-HU	-	-	•	-			●(GB/T 17701) (*1)(*3)(*4)		●(EN 60934:Self-declaration)(*3)(*4) ●(EN 60947-2:Self-declaration) ●(EN 60947-3:Self-declaration)(*2)	●(EN 60934)(*3)(*4) ●(EN 60947-3)(*2)	-

Remark: 1. KC (Korea Certification) approval products are prepared. Please inquire details. (Excluding CP30-HU)

Notes *1 Only CP30-BA is applicable. (CCC is not applicable for those with SHT)

*2 Only applicable to 1P SHT.

*3 Spring clamp terminals with a rated current of 20A are not applicable.

*4 Not applicable to male tab terminals.

●Air Circuit Breakers

		Jakoro											
					North A	American Saf	ety Mar	rk		C	Compulsory Mai	rk	Third Party Mark
			Assignments	UL Standards				CSA S	Standards	ccc	CE	UKCA	TÜV Rheinland
Specifications	Class	Applicable Models			USA	4		Ca	anada	China	Europe	United Kingdom	Germany
				71 °	(ÎI)	c PL °us	c(V))us		(W)	(€	O K K	TOVPresentand
IEC	SW	AE630-SW, AE1000-SW AE1250-SW, AE1600-SW AE2000-SWA, AE2000-SW AE2500-SW, AE3200-SW AE4000-SWA, AE4000-SW AE5000-SW, AE6300-SW	IEC 60947-2 or JIS C 8201-2-1	-	-	-	_	-	-	-	●(Self- declaration)	●(Self- declaration)	-
ccc	sw	AE630-SW, AE1000-SW AE1250-SW, AE1600-SW AE2000-SWA, AE2000-SW AE2500-SW, AE3200-SW AE4000-SWA, AE4000-SW AE5000-SW, AE6300-SW	ccc	-	-	-	-	-	-	•	●(Self- declaration)	●(Self- declaration)	-

Remark: 1. EAC (Eurasian Conformity) approval products are prepared. Please inquire details.

● Molded Case Circuit Breakers , Motor Protection Breakers, Air Circuit Breakers, Circuit Protectors and Miniature Circuit Breakers (Classification Society)

				(Classification s	societies (Note	e)	
			NK	LR	ABS	BV	ccs	DNV
Specifications	Class	Applicable Models	Japan	United Kingdam	USA	France	China	Norway
		NF63-CV, NF125-CV	•	•	•	•	•	•
	С	NF250-CV	•	•	•	•	•	•
		NF400-CW, NF630-CW	•	•	•	•	_	-
		NF800-CEW	•	•	•	•	_	•
		NF32-SV, NF63-SV, NF125-SV	•	•	•	•	•	•
		NF250-SV	•	•	•	•	•	•
	s	NF400-SW, NF630-SW						-
	3	NF400-SEW, NF630-SEW	•	•	•	•	•	
		NF800-SEW						•
		NF1000-SEW, NF1250-SEW	•	•	•	-	_	-
		NF63-HV, NF125-HV	•	•	•	•	•	•
		NF250-HV					•	•
	H/R	NF400-HEW, NF400-REW					•	
General		NF630-HEW, NF630-REW	_	_	_	_	(HEW)	-
Goriolai		NF800-HEW, NF800-REW					_	
	U	NF125-UV, NF250-UV				_	•	•
		NF400-UEW, NF800-UEW				•	_	_
	Motor	NF32-SV MB, NF63-CV MB						
	Protection	NF63-SV MB, NF125-SV MB	•	•	•	•	•	•
	1 Totection	NF250-SV MB						
		AE630-SW, AE1000-SW						
		AE1250-SW, AE1600-SW						
	AE	AE2000-SWA, AE2000-SW	•	•	•	•	•	•
	\ _	AE2500-SW, AE3200-SW						
		AE4000-SWA						
		AE4000-SW, AE5000-SW, AE6300-SW	•	•	•	•	_	•
	CP	CP30-BA	(*2)(*3)	-	-	-	-	-
	BH	BH-D6, BH-D10	_	-	-	-	•	•
	KB	KB-D	-	_	-	-	•	•

Remark: 1. 4 poles breakers does not acquire Classification Society approval.

Note *1 Except for 4 poles breaker.

*2 Some specifications are not supported depending on the number of poles and operating characteristics. Please introduce the details.

*3 Male tab terminals and spring clamp terminals are excluded.

1. Electric Shock Protection

The safety standards for current passing through the human body are determined based on physiological phenomena as shown below.

- •In places where secondary accidents may be caused by electric shock: Area below the curve b
- ●In places where secondary accidents will not be caused by electric shock: Area below the curve c1

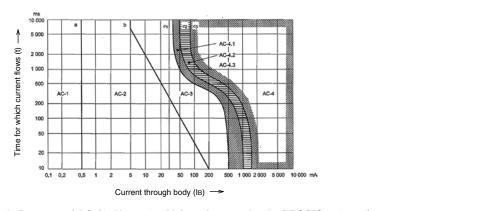


Fig. 4.17 Influence of AC (15Hz to 100Hz) on human body (IEC/TS60479-1)

2. ELCB Grounding Method

Select the rated sensitivity current based on the grounding method, purpose of protection and protection ground resistance value of load device. If the line is excessively long, the circuit breaker may operate unnecessarily owing to leakage current. Calculate the leakage current referring to Table 4-25. In this case, it is common to select sensitivity current approx. 10 times as high as the leakage current.

Table 4-24

Type of		TN sys	tem				TT sys	iom	IT system
earthing system	TN-C system	TN-S sy	stem	Т	N-C-S system		11 Sys	.em	ii system
Typical arrangement	L1 L2 L3 PEN	PEN PE PEN PE N PEN N PE					L1 L2 L3 N	L1 L2 L3	
	The touch voltage is limited to 5						0V.		
Protective condition	Zs × Ia ≤ 50V Zs: fault loop impedance (Ω) Ia: current causing the automatic operation of the disconnecting device within the time as below (A) U₀: nominal line to earth voltage (V)						$R_A imes I_{\Delta n} \le 50$ Ra: sum of the rof the earth and the prot conductor ($S_{\Delta n}$: rated currents	esistances electrode ective 2)	$\begin{aligned} \text{Id} \times & \text{Ra} \leq 50 \text{V} \\ \text{Ra: sum of the resistances} \\ \text{of the earth electrode} \\ \text{and the protective} \\ \text{conductor } (\Omega) \\ \text{Id: first fault current (A)} \end{aligned}$
Cortainori	Maxir	Maximum disconnection times (s)							
	Uo AC	Brar	nch circuits	rated 32A	and less	O#I	thers		
	00 AC	120V	230V	400V	Over 400V	Oti	1612		
	TN sy	rstem 0.8	0.4	0.2	0.1	5	5		
	TT sy	stem 0.3	0.2	0.07	0.04	1	<u> </u>		
Earth leakage protective device	- MCCBs Not ELCBs	- MCC - ELC		- MCCBs - ELCBs (except in TN-C zone)		ne)	- ELC	Bs	- Insulation monitoring devices + ELCBs

Table 4-25 Leakage current when 600V vinyl insulated wire is laid on 1km ∆-connected 3-phase 3-wire 200V line

Distance from grounded part	4m or more	® 10cm or more	© 1.5mm or more	① In close contact
Wiring work Wire size	Wiring on first floor ceiling of wooden building Wiring on second and higher floors of wooden building Aerial wiring (Except © and ®)	Wiring in RC building Wiring with vinyl tube and exposed wiring in steel frames (Except © and ①)	Vinyl tube burying Vinyl tube laying in close contact with steel frames in steel building	Wiring in metallic conduit Wiring in metallic duct
8mm² or less	0.60mA/km	1.29mA/km	19.9mA/km	100mA/km
14	0.66	1.44	22.1	110
22	0.72	1.55	23.9	120
38	0.81	1.75	26.9	135
60	0.99	2.14	32.9	165
100	1.14	2.46	37.9	189
150	1.25	2.72	41.8	209
250	1.46	3.16	48.6	243
325	1.52	3.29	50.7	253
500	1.71	3.69	56.8	284

Notes *1 The leakage current on rubber insulated wire (RB) is about 70% of the above values, and that on 3-core 600V cross-linked polyethylene insulated wire (CV) is about 50%.

Table 4-26 Leakage current conversion table

Type of line	Magnification
Single-phase 100V line	0.3
Single-phase 3-wire 200V line	0.3
3-phase 415V line	0.7
(人connection)	0.7

^{*2} At 50Hz, the values are 84% of the above values.

^{*3} To obtain the leakage current on another line, multiply the values shown in Table 4-25 by the magnification shown in Table 4-26.

 $^{^{\}star}4\,$ To determine the line length, add the length of all wires after ELCB installation point.

3. Rated Voltage and Number of Poles

Select the rated voltage and number of poles according to the circuit voltage and type. The following table shows the standard circuit voltage values. However, even at special voltage, if the voltage including the circuit voltage fluctuation is within the voltage range shown right, the leakage protection device will operate.


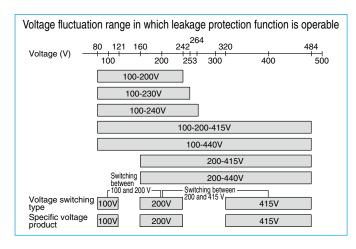


Table 4-27

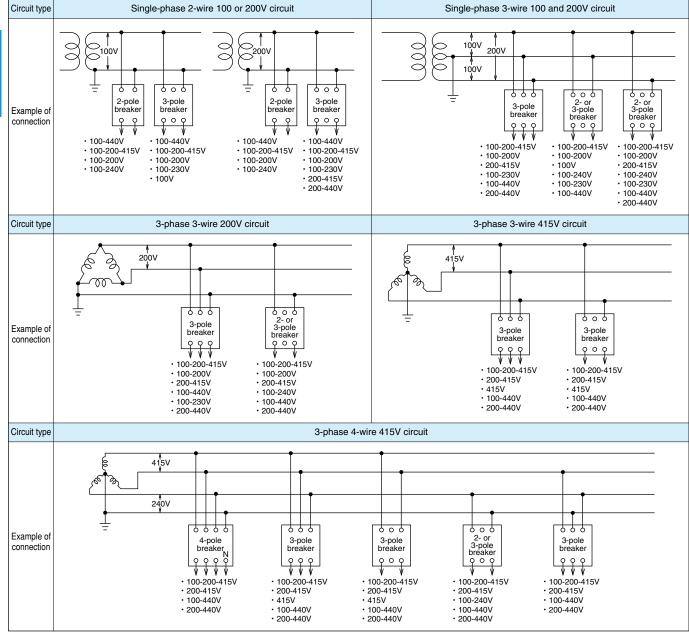

<Cautions when selecting and connecting>

⁽¹⁾ When a 3-pole circuit breaker is used as a 2-pole one, use the right and left poles.

⁽²⁾ For the mains of a 3-phase 4-wire 415V circuit, use a 4-pole circuit breaker having a rated voltage of 415V or 440V, and connect the neutral pole to the N pole on the right side.

4. Earth Fault Protection Coordination and Combination of Devices

Table 4-28

Protection type	Details	Installation point	Combination
With selectivity only for	 On general lines, the protection grounding resistance is relatively large and the earth fault current is small. In this 	Main circuit	Time-delay ELCB Combination of MCCB and time-delay earth leakage relay
earth fault breaking	case, install a time-delay relay on the main circuit and a high-speed relay on a branch circuit.	Branch circuit	High-speed ELCB
With selectivity for earth fault breaking and	 The selectivity for earth fault breaking is as stated above. Significant short-circuit fault very rarely occurs because of its nature (in most cases, circuits are broken at the early 	Main circuit	Class S time-delay ELCB Combination of MCCB (class U) and time-delay earth leakage relay
cascade type of short-circuit breaking	stage of earth fault). This protection is applied when the continuity of power supply is expendable. (Refer to the combination for cascade breaking on page 83.)	Branch circuit	Class C time-delay ELCB Combination of MCCB (class C) and high-speed earth leakage relay
With selectivity for earth fault breaking and	This protection is applied when selectivity is necessary in the entire area of fault.	Main circuit	Combination of electronic MCCB and time-delay earth leakage relay
short-circuit breaking	(Refer to the combination for selective breaking on page 81.)	Branch circuit	High-speed ELCB Combination of MCCB and high-sspeed earth leakage relay

Remark: 1. "Time-delay or high-speed earth leakage relay" refers to NV-ZBA, NV-ZSA, NV-ZHA or NV-ZLA.

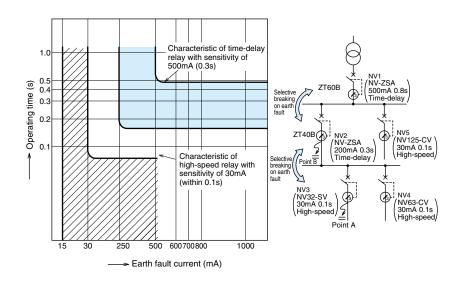


Fig. 4.18 Example of coordination of time-delay and high-speed relays for earth fault breaking



Installation and Connection

1) Connection Types	98
2) Connecting Parts	
3) Standard Tightening Torque	
4) Crimp Terminal Type	102
5) Busbar	104
6) Insulation Distance on Power Source Side	105
7) Effect of Installation Orientation	106
B) Connection of Line and Load	106

1. Connection Types

Table 5-1 Connection

•	au	ne 5-1	Connection												
			O	- \				nection (F)		(50)()					
			Connection type (Code a	address)		terminal P-N)		terminal AR)	Solderle: termin	ss (BOX) al (SL)					
			Image			refer to		A B	(Silling)	an (SL)					
\perp	_	NIE	E22 CV • NIE62 CV • NIE62 CV	/ • NEG2 LIV				(*0)							
			32-SV • NF63-CV • NF63-SV • NF63-HV 25-CV • NF125-SV • NF125-HV •			<u> </u>		(*2)							
			125-SEV • NF125-SGV • NF125-LG\		<u> </u>	-	•	(*2)	<u> </u>						
			160-SGV • NF160-LGV • NF160-HGV • NF2 250-SEV • NF250-HEV • NF250-SGV • NF2			•	•	(*2)							
			400-SW • NF400-SEW • NF4		-			•	-	-					
	ı		630-SW • NF630-SEW • NF6												
			800-SEW • NF800-HEW • NF 1000-SEW • NF1250-SEW •		-	-	•	•	-	-					
	ŀ		125-UV	NF 1000-3EW		•	•	(*2)							
19	MCCB	R NF	125-RGV • NF250-RGV • NF	250-UV				•							
	≥		400-UEW • NF400-REW					_							
		1 41	630-REW 800-UEW • NF800-REW		- 	-	•	•	-	-					
	F		30-FAU • NF50-FAU					_	-	_					
	Ц		50-FHU • NF100-FHU			<u> </u>				_					
			50-SVFU 100-CVFU			<u> </u>		•		<u>-</u>					
			125-SVU		•			•							
		NE	NF125-HVU NF250-CVU • NF250-SVU • NF250-HVU							<u> </u>					
			-250-CVU • NF250-SVU • NF 	250-HVU		<u> </u>		•		<u>)</u>					
┟	\top		/32-SV • NV63-CV • NV63-S\	/ • NV63-HV		•		(*2)		-					
		(,	/125-CV • NV125-SV • NV125	5-HV •		•	•	(*2)	-	_					
			/125-SEV • NV125-HEV /250-CV/SV/HV • NV250-SE\	//HFV		•		(*2)							
	ELCB ELCB	. NV	/400-SW • NV400-SEW • NV4	400-HEW • NV400-CW				(-)	-	_					
ļi	┧│	INV	/630-SW • NV630-SEW • NV6	630-HEW • NV630-CW	-	_	•	•	_	_					
	F		/800-SEW • NV800-HEW /30-FAU • NV50-FAU			•									
	Ī	FHU NV	/50-FHU • NV100-FHU					_	-	_					
F		UL NV	/100-SRU • NV100-HRU		Vind o	f terminal screw		•							
				Circuit breakers having fr				h terminal screws	s (A).)						
						*									
		Shape													
		Navau: -!	Pan-head screv	· · · · · · · · · · · · · · · · · · ·		ad screw 18		Bolt (Hex-socket		Bolt					
		Screw size						1	2×M8	M10					
-	Remarks	Туре	NF32-SV 63-CV 63-SV 63-HV 50-SVFU(*1) NF30-FAU 50-FHU In case of clamp connection (*1) ①When the wire size is 5.5mm and connect them. ②When connecting wires differi wires and 5.5mm² wires, cor together to a crimp terminal easily come off. ③Do not tighten directly solid within copper wires used as str 1.25mm² wires incether	p² or more, divide the wires, ng in size, for example, \$\psi\$1.6 anect the two kinds of wires because the thinner wires vires and cords consisting of	NF 63-CV(60, 63A) 63-SV(60, 63A) 63-HV(60, 63A) 125-CV 125-SV 100-CVFU 100-CVFU 125-SVU 125-HVU 125-HVU 100-FHU	NV 63-CV(60, 63A) 63-SV(60, 63A) 63-HV(60, 63A) 125-CV 125-SV 125-HV 100-FHU	NF 125-SEV 125-HEV 125-RGV 125-SGV 125-LGV 125-LGV 160-LGV 160-LGV 160-HGV 250-CV 250-SV 250-HV 250-SEV 250-LGV 250-LGV 250-LGV 250-CVU 250-CVU 250-CVU 250-CVU 250-CVU 250-CVU 250-CVU 250-CVU	NV 125-SEV 125-HEV 250-CV 250-SV 250-HV 250-SEV 250-HEV 250-CVU 250-HVU	NF 400-UEW(4P) 800-CEW 800-SEW 800-HEW 800-HEW 800-SDW NV 800-SEW 800-SEW	NF 400-CW 400-SW 400-SEW 400-HEW 400-REW 400-LEW(3P) 630-CW 630-SEW 630-HEW 630-REW NV 400-CW 400-SW 400-SEW 400-SEW 630-SEW 630-SEW 630-SEW 630-SEW 630-SEW					

^{*1} It is impossible to directly connect the wires of 40 and 50A, NF/NV 50-SVFU.
*2 It is possible to modify connection type with options.

Rea	ır (B)	Plug-in	(PM)
Bar stud (B-ST)	Round stud (B-ST)	Bar stud (PM)	Screw terminal (PM)
B B			
		#E	•
-	● (*2)	-	•
• (*2)	-	-	•
 •	-	•	-
•	-	•	-
• (*2)	-	(Except for NF1600-SEW)	-
•	_	_	●(Except for 4P)
•	-	●(Except for 4P)	
•	-	● (Except for NF800-UEW)	-
-	-	-	_
-	-	-	-
_	_	-	_
_	_	-	
_	-	-	-
-	-	-	-
 -	-	-	-
_	• (*2)	_	•
• (*2)	-	-	•
 ● (*2) ● (*2)	-	•	-
• (*2)			
● (*2)	_	•	-
-	-	-	-
-	-	-	-
 -	_	-	-
With insulating base (tube) for installation	on of	The circuit breaker can be connected on	lly by pushing it onto the preliminarily

Table 5-2 List of terminal screws (B)

The bar stud installation position can be

turned 90° on all models (except NF800-

UEW).
The current-carrying capacity of a vertically installed bus bar is larger than that of a horizontally installed bus bar even if the bus

bars have the same dimensions.

metallic board

		. ,			
N	lode	Connection type	Front	Rear	Plug-in
_	C s	NF400-CW • NF400-SW • NF400-SEW • NF400-HEW • NF400-REW • NF630-CW • NF630-SEW • NF630-HEW • NF630-REW • NF800-CEW • NF800-SEW • NF800-HEW • NF800-REW • NF800-SDW		M12 bolt	•
MCCB	•	NF1000-SEW • NF1250-SEW		M12 bolt	
15	Н	NF1600-SEW	M10	bolt	_
-	11	NF400-UEW		M12 bolt	
	0	NF800-UEW	M12	bolt	_
ELCB	Ç	NV400-SW • NV400-SEW • NV400-HEW • NV400-CW • NV630-SW • NV630-SEW • NV630-HEW • NV630-CW		M12 bolt	
	Ă	NV800-SEW • NV800-HEW		M12 bolt	

wired terminal block.

by pasting the insulation place and so on.

Install it tightening the supplied screws through the mounting holes.

If you process the products based on the drilling dimensions, there will be a

space between the inserting terminal block and the mounting plate so that the insulation distance can be secured between the connection conductors/ crimped terminals and the mounting plate.

In order to make the space smaller, you need to secure the insulation distance

2. Connecting Parts

For the connection shown in the table on the previous page, the following parts are available as connecting parts.

Table 5-3 Studs on rear surface (B-ST)

Tuna nama	Number	Applicable mo	dels	Stud shape and	Remarks	
Type name	of poles	MCCB	ELCB	major included parts	Hemarks	
ST-05SV2	2	NF32-SV, NF63-CV, NF63-SV	NV32-SV, NV63-CV	★Round studs		
ST-05SV3	3	NF63-HV	NV63-SV, NV63-HV	Round studs (with insulating tube)(2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)		
ST-05SV4	4	NF63-SV, NF63-HV	_	Bolts and nuts		
ST-1SV2	2	NETOS OV NETOS OV	_	- ★ Bar studs		
ST-1SV3	3	NF125-CV, NF125-SV NF125-HV(3, 4P)	NV125-CV, NV125-SV	●Bar studs (with insulating tube)		
ST-1SV4	4	14 120 114 (0, 11)	NV125-HV	(2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs) Bolts and nuts		
ST-1HV2	2	NF125-HV(2P)	_	OBOILS AND MULS		
ST-2SV2	2	NF125-SEV, NF125-HEV, NF125-RGV	_			
ST-2SV3	3	NF125-SGV, NF125-LGV, NF125-HGV NF160-SGV, NF160-LGV, NF160-HGV				
ST-2SV4	4	NF250-SGV, NF250-LGV, NF250-HGV NF250-CV, NF250-SV NF250-LGV/HGV, NF250-HV NF250-SEV, NF250-RGV NF250-HEV, NF125-SGV/HGV NF125-LGV, NF160-SGV, NF160-LGV/HGV	NV125-SEV, NV125HEV NV250-CV, NV250-SV NV250-HV, NV250-SEV NV250-HEV	★Bar studs ●Bar studs (with insulating tube) (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs) ●Bolts and nuts	One set includes the parts for one unit. Please place an order for the number of circuit	
ST-4SW2	2	NF400-CW. NF400-SW	_		breakers.	
ST-4SW3	3	NF400-SEW, NF400-HEW	NV400-CW, NV400-SW	★Bar studs		
ST-4SW4	4	NF400-REW	NV400-SEW NV400-HEW	●Insulating bases (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)		
ST-6SW2	2	NF630-CW. NF630-SW	_	Bar studs (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)		
ST-6SW3	3	NF630-SEW, NF630-HEW	NV630-CW, NV630-SW	(2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs) •Mounting screws, bolts and nuts		
ST-6SW4	4	NF630-REW	NV630-SEW, NV630-HEW			
ST-8SW2	2	NESS OF W NESS OF W	_	★Bar studs		
ST-8SW3	3	NF800-SDW, NF800-CEW NF800-SEW, NF800-HEW	NV800-SEW, NV800-HEW	Insulating base (2 pcs) Bar studs (2 pcs)		
ST-8SW4	4	NF800-REW	111000 0211, 111000 11211	(2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs) Mounting screws, bolts and nuts		

Table 5-4 Plug-in type terminal blocks (PM)

Tuna nama	Number	Applicable mo	dels	Major included worth
Type name	of poles	MCCB	ELCB	- Major included parts
PMDN-05SV2L	2P	NF32-SV NF63-CV/SV/HV (3A-50A)	_	
PMDN-05SV3L	3P	NF32-SV	NV32-SV	
PMDN-05SV4L	4P	NF63-CV/SV/HV (3A-50A)	NV63-CV/SV/HV (5A-50A)	Plug-in type terminal block (1 pc) Crip terminals (2-pole: 4pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)
PMDN-05SV2H	2P	NF63-CV/SV/HV (60A, 63A)	_	Only terminals (2-pole. 4pos, 5-pole. 6 pos, 4-pole. 6 pos)
PMDN-05SV3H	3P	NF63-CV/SV/HV (60A, 63A)	NV63-CV/SV/HV (60A, 63A)	
PMDN-05SV4H	4P	100-00/30/110 (00A, 03A)	11103-01/31/111 (00A, 00A)	
PMDN-1SV2	2P NF125-CV/SV —			
PMDN-1HV2	2P	NF125-HV	_	Plug-in type terminal block (1 pc) Crip terminals
PMDN-1SV3	3P	NF125-CV/SV/HV	NV125-CV/SV/HV	(2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)
PMDN-1SV4	4P	NF125-CV/3V/HV	NV 125-CV/SV/HV	
PMDN-1UV2	2P			
PMDN-1UV3	3P	NF125-UV	_	Plug-in type terminal block (2 pc) Crip terminals (2-pole: 4pcs, 3-pole: 6 pcs)
_	4P			One terrinials (2 poic. 4pos, o poic. o pos)
PMDN-2SV2	2P	NF125-SEV/HEV/SGV/LGV/HGV	_	
PMDN-2SV3	3P	NF160-SGV/LGV/HGV	NV125-SEV/HEV	Plug-in type terminal block (1 pc) Plug-in type barriers
PMDN-2SV4	4P	NF250-CV/SV/HV/SEV/HEV/SGV/LGV/HGV	NV250-CV/SV/HV/SEV/HEV	(2-pole: 2 pcs, 3-pole: 4 pcs, 4-pole: 6 pcs)
PMDN-2SV2	2P	NETOE DOW NEOED DOV		Tulip terminals (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)
PMDN-2SV3	3P	NF125-RGV, NF250-RGV	_	(2-pole. 4 pcs, 5-pole. 6 pcs, 4-pole. 6 pcs)
PMDN-2UV2	2P			Plug-in type terminal block (2 pc)
PMDN-2UV3	3P	NF250-UV	_	Plug-in type barriers (2-pole: 2 pcs, 3-pole: 4 pcs)
_	4P			Tulip terminals (2-pole: 4pcs, 3-pole: 6 pcs)
PMDN-4SW2	2P	NF400-CW/SW	_	
DMDNI 4CWO	3P	NF400-CW/SW/SEW	NV400-CW/SW/SEW	Plug-in type terminal block (2 pcs)
PMDN-4SW3	3P	NF400-HEW/REW	NV400-HEW	Plug-in type barriers (4 pcs)
DMDNI 40W4	4P	NF400-SW/SEW	NV400-SEW	Tulip terminals (3-pole: 6 pcs)
PMDN-4SW4	4P	NF400-HEW	_	
PMDN-8SW2	2P	NF800-SDW	_	
DMDN 00M0	3P	NF800-CEW/SEW	NV800-SEW	1
PMDN-8SW3	3P	NF800-HEW/REW	NV800-HEW	Plug-in type terminal block (2 pcs) Tulip terminals (3-pole: 6 pcs)
DMDN 00M4	4P	NF800-SEW	_	- Tulip terminals (5-pole. 6 pos)
PMDN-8SW4	4P	NF800-HEW	_	1
Note In addition to t	ne circui	t breakers shown above 4-pole and 2-pole circu	it breakers are available. We are re	ady to manufacture such circuit breakers to order. Please consult us.

Note In addition to the circuit breakers shown above, 4-pole and 2-pole circuit breakers are available. We are ready to manufacture such circuit breakers to order. Please consult u

3. Standard Tightening Torque

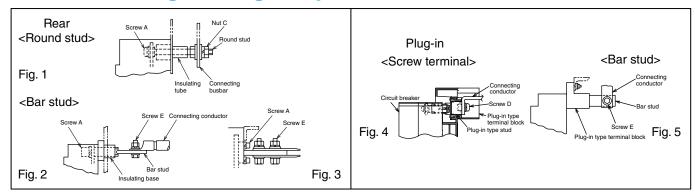


Table 5-5 Standard tightening torque (*1)

Tightening torque N·m

					Re	ar				Plug-in				
Model	Connection type		Round	d stud			Bar	stud		Screw	terminal	Bar	stud	
	_		Fig	j.1			Fig. 2,	Fig.3		Fig.4		Fig.5		
MCCB E	ELCB	Scre	w A	Nu	t C	Scre	ew A	Scre	w E	Scre	ew D	Scre	ew E	
MOOD	LOB	Size	Tightening torque	Size	Tightening torque	Size	Tightening torque	Size	Tightening torque	Size	Tightening torque	Size	Tightening torque	
NF32-SV, NF63-CV	NV32-SV, NV63-CV	M4×0.7	1	M6	2					M6	3			
NF63-SV, NF63-HV	NV63-SV, NV63-HV	101420.7	'	IVIO		_	_	_	_	IVIO	3	_	_	
NF125-CV, NF125-SV	NV125-CV, NV125-SV	_	_			M6	4	M8	12	M8	6			
NF125-HV, NF125-UV	NV125-HV	_	_	_	_	IVIO	4	IVIO	12	IVIO	"	_	_	
NF125-SEV, NF125-HEV, NF125-RGV														
NF250-CV, NF250-SV, NF250-HV, NF250-SEV														
NF250-HEV, NF250-RGV, NF250-UV	NV125-SEV, NV125-HEV													
NF250-LGV/HGV, NF250-RGV, NF125-SGV/HGV	NV250-CV, NV250-SV	_				M6	10	M8	12			M8	12	
NF125-LGV, NF160-SGV, NF160-LGV/HGV	NV250-HV, NV250-SEV	_	_	_	_	Mb	10	IVIO	'2		-	IVIO	12	
NF125-SGV, NF125-LGV, NF125-HGV	NV250-HEV													
NF160-SGV, NF160-LGV, NF160-HGV														
NF250-SGV, NF250-LGV, NF250-HGV														
NF400-CW, NF400-SW, NF400-SEW	NV400-CW, NV400-SW													
NF400-HEW, NF400-REW	NV400-CVV, NV400-SVV NV400-SEW, NV400-HEW	_	-	-	-	M8	20	M12	45	_	-	M12	45	
NF400-UEW (3P)	NV400-5EVV, NV400-HEVV													
NF400-UEW (4P)	-	-	-	-	-	M10	30	M12	45	-	_	M12	45	
NF630-CW, NF630-SW, NF630-SEW	NV630-CW, NV630-SW													
l ' '	NV630-SEW	_	-	-	-	M8	20	M12	45	_	-	M12	45	
NF630-HEW, NF630-REW	NV630-HEW													
NF800-CEW, NF800-SDW	NV800-SEW													
NF800-SEW, NF800-HEW, NF800-REW	NV800-SEW	_	-	-	-	M10	30	2-M12	45	_	-	2-M12	45	
NF800-UEW (*2)	INVOUU-TIEVV													
NF1000-SEW	_	_	_	_	_	4-M8	12	2-M12	45	_	_	2-M12	45	
NF1250-SEW	_	_	_	_	_	-1 -1010	12	Z-1VI 1Z	43	_	_	Z-1VI 1Z	45	
NF1600-SEW	-	-	-	-	-	4-M8	12	4-M10	25	_	_	-	-	

Notes *1 The appropriate range of tightening torque is ±20% of each value (standard tightening torque) shown in the above table. Please refer to the supplied assembly manual and instruction manual for more information.

*2 The plug-in type is not available.

4. Crimp Terminal Type

Table 5-6 List of applicable crimp terminals

As the terminals in _____, commercially available crimp terminals can be used. Please purchase the terminals at an electric material store


For others, the crimp terminals for MCCB must be used. Place an order with us. For the connection types shown in Fig. a and Fig. b, only crimp terminals will be delivered.


	Nominal sectional area mm ²		2	5.5	8	14	22	
	Allowable current (600V, IV wire at 30°C, in conduit	, not) (*4)	27A	49A	61A	88A	115A	
Frame (A)		Size of mm ²	1.04	2.63	6.64	10.52	16.78	
ğ //	Model		to	to	to	to	to	
E /	MCCB	ELCB	2.63	6.64	10.52	16.78	26.66	
30	NF30-FAU	NV30-FAU	R-2-5	R-5.5-5	JST8-5NS			
50	NF50-FAU	NV50-FAU	R-2-5	R-5.5-5	JST8-5NS	JST14-5NS	JST22-5NS (*5)	
100	NF100-FHU	NV100-FHU			R-8-8	R-14-8	R-22-8	
30 32 50	NF32-SV, NF50-FHU, NF63-CV* NF63-SV* NF63-HV* *50A or below	NV32-SV, NV50-FHU, NV63-CV* NV63-SV*, NV63-HV* *50A or below	R-2-5 *(R-2-6)	R-5.5-5 *(R-5.5-6)	R-8-5	R-14-5	JST22-S5 BH-22 (L330T459-23) (*6)	
60 63	NF63-CV, NF63-SV, NF63-HV 60, 63A	NV63-CV, NV63-SV, NV63-HV 60, 63A	R-2-8	R-5.5-8	R-8-8	R-14-8	R-22-8	
	-	-	R-2-5 (R-2-6)	R-5.5-5 (R-5.5-6)	R-8-5	R-14-5	JST22-S5 (L330T459-23)	
125	NF125-CV, NF125-SV, NF125-HV, NF125-UV 60A or more	NV125-CV, NV125-SV, NV125-HV 60A or more	R-2-8	R-5.5-8	R-8-8	R-14-8	R-22-8	
125 225 250	NF125-SEV, NF125-HEV, NF125-RGV NF250-CV, NF250-SV, NF250-HV, NF250-UV NF250-SEV, NF250-HEV, NF250-RGV NF125-SGV, NF160-SGV, NF250-SGV NF125-LGV, NF160-LGV, NF250-LGV NF125-HGV, NF160-HGV, NF250-HGV	NV125-SEV, NV125-HEV NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV				R-14-8	R-22-8	
400 600 630	NF400-CW, NF400-SW, NF400-SEW NF400-HEW, NF400-REW, NF400-UEW NF630-CW, NF630-SW, NF630-SEW NF630-HEW, NF630-REW	NV400-CW, NV400-SW NV400-SEW, NV400-HEW NV630-CW, NV630-SW, NV630-SEW, NV630-HEW						
800 1000 1200 1250	NF800-CEW, NF800-SEW, NF800-HEW NF800-REW, NF800-UEW, NF800-SDW NF1000-SEW, NF1250-SEW	NV800-SEW, NV800-HEW						
Notes *1	When using 2CR-150 or CR150-S8, insulate it from TC-	S with insulating tube or tane. When using CR	150-S8 for a 2-	or 3-note circuit	hreaker TCL-2S	V3L is annlicable	e	


When using 2CR-150 or CB150-S8, insulate it from TC-S with insulating tube or tape. When using CB150-S8 for a 2- or 3-pole circuit breaker, TCL-2SV3L is applicable.

1 When using 2CR-150 or CB150-S8, insulate it from TC-S with insulating tube or tape. when to some SCR-150 or CB150-S8, insulate it from TC-S with insulating tube or tape. when to some SCR-150 or CB150-S8, insulate it from TC-S with insulating tube or tape. When to some SCR-150 or CB150-S8, insulate it from TC-S with *3 When tightening a terminal screw without connecting a wire, crimp terminal or par, lighten the screw to 20 to 30 % or the to threads).
*4 The table shows not the allowable current values of circuit breakers, but those of wires applicable to crimp terminals.
*5 When using JST22-5NS, TC-S and RTC cannot be used. Insulate it with insulating tape or the like.
*6 When using JST22-5S and BH-22 with NF/NV50-FHU type, TC-S cannot be used. Insulate with insulating tape or the like.

Reference drawings of connection types

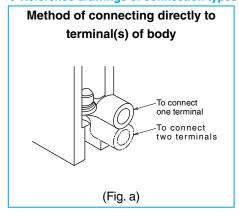

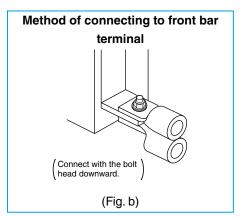

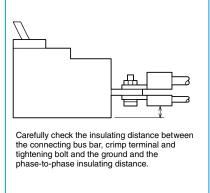

<Explanation of abbreviations>

R	··Product specified by JIS
CB	·· Product specified by JEM 1399
TE	··Product made by Tyco Electronics
JST	··Product made by J.S.T. Mfg. Co., Ltd.
NTM	··Product made by Nichifu Co., Ltd.
DST	·· Product made by Daido Solderless Terminal Mfg. Co., Ltd.

38	60	100	150	200	325	Crim	np terminal tigh	tening screw		ð
162A	217A	298A	395A	469A	650A	Screw	Tightening		Remarks	Reference drawing of connection type
26.66	42.42	96.3	117.2	192.6	242.27	size	torque	Shape	nemarks	nce High
to	to	to	to	to	to	0120	N • m			fere
42.42	60.57	117.2	152.05	242.27	325					8 8
						M5	2.5 ± 0.5	A	When connecting two crimp terminals, set the terminals as	
						M5	2.5 ± 0.5		shown below if the *-marked terminals are used.	
TE #322870 JST 38-S8 NTM R38-8S	1AF-60 (L330T459-12) CB60-S8					M5	2.5 ± 0.5	M5 • M6		
						M5	2.5 ± 0.5		R-2-5 R-5.5-5	
TE #322870 JST 38-S8 NTM R38-8S	1AF-60 (L330T459-12) CB60-S8					M8	6 ± 1 M8			(Fig. a)
						M5	2.5 ± 0.5		R-2-6 R-5.5-6	
TE #322870	1AF-60							M5		
JST 38-S8	(L330T459-12)					M8	6 ± 1			
NTM R38-8S	CB60-S8							M8		
R-38-8	R-60-8	2AF (LN300T920-20) CB100-S8	2CR-150(*1) (LN300T920-21) (*1)CB150-S8			M8	10.5 ± 2.5		When using 2AF, use a crimp tool having a nominal size of 100.	
R-38-12	R-60-12	R-100-12	R-150-12	R-200-12	JST325-12	M12	45 ± 5		Fit to a front type bar terminal. Up to two pieces can be fitted to	(Fig. b)
R-38-12	R-60-12	R-100-12	R-150-12 RD150-12 SD150-12	R-200-12 RD200-12 SD200-12	JST325-12 RD325-12 SD325-12				one terminal.	


temark: 1. For the crimp terminals for UL listed circuit breakers, refer to the page of the characteristics and external dimensions of UL 489 Listed Circuit Breakers.

Dimensions of crimp terminals <extracted from catalog of JST>

Doub words on	01	Applicable		Exter	nal dir	nensio	ns		Applicable wire
Part number	Shape	screw size	ϕ d2	В	L	F	Е	Thickness	mm ²
R2-5		M5	5.3	9.5	16.8	7.3			1.04
R2-6	Α	M6	6.4	12.0	21.8	11.0	4.8	0.8	to
R2-8		M8	8.4	12.0	2 1.0	11.0			2.63
R5.5-5		M5	5.3	9.5	19.8	8.3			2.63
R5.5-6	Α	M6	6.4	12.0	25.8	13.0	6.8	1.0	to
R5.5-8		M8	8.4	15.0	28.0	13.7			6.64
R8-5		M5	5.3	12.0	23.8				6.64
8-5NS	Α	M5	5.3	9.0	22.3	9.3	8.5	1.2	to
R8-6	7 ^	M6	6.4	12.0	23.8]	0.5	1.2	10.52
R8-8		M8	8.4	15.0	29.8	13.8			10.52
8-5 SC-9		M5	5.3	9	23.8	9.3	8.5	1.2	6.64 to 10.52
R14-5		M5	5.3	12.0	29.8				10.52
14-5NS	A	M5	5.3	9.0	28.3	13.3	10.5	1.5	to
R14-6	7 ^	M6	6.4	12.0	29.8]	10.5		16.78
R14-8	1	M8	8.4	16.0	32.8	14.5			10.76
L330T459-23		M5	5.3	12.0	30.0				
22-5NS	1	M5	5.3	9.5	28.7	12.0			16.78
22-S6	Α	M6	6.4	12.0	30.0	1	12.0	1.8	to
R22-8	1	M8	8.4	16.5	33.7	13.5			26.66
R22-12	1	M12	13.0	22.0	42.5	19.5			
38-S8		M8	8.4	15.5	38.0	16.0			26.66
R38-8	Α	M8	8.4	22.0	42.7	17.7	14.0	1.8	to
R38-12	1	M12	13.0	22.0	42.7	17.7			42.42
L330T459-12		M8	8.4	16.0	46.7	20.7			42.42
R60-8	Α	M8	8.4	22.0	49.7	20.7	18.0	2.0	to
R60-12	1	M12	13.0	22.0	49.7	20.7			60.57
LN300T920-20	В	M8	8.4	22.5	51.0	20.0	01.0	0.6	96.3
R100-12	Α	M12	13.0	28.5	55.6	20.4	21.0	2.6	to 117.2


Dout number		Applicable		Exter	nal dir	nensio	ns		Applicable
Part number	Shape	screw size	ϕ d2	В	L	F	Е	Thickness	wire mm²
LN300T920-21	В	M8	8.4	22.5	70.0	33.0			117.2
L330T402-8		M8	8.4	25.3	61.5	23.0	27.0	3.2	to
R150-12	Α	M12	13.0	36.0	66.0	21.0			152.05
R200-12	Α	M12	13.0	44.0	78.0	24.5	31.5	4.0	192.6 to 242.27
325-12	Α	M12	13.0	50.5	88.0	33.5	35.5	4.5	242.27 to 325
CB60-S8			8.4	16.0	46.7	20.7	18.0	2.0	42.42 to 60.57
CB100-S8	В	M8	8.4	22.0	52.5	20.5	21.0	2.6	96.3 to 117.2
CB150-S8			8.4	22.0	61.0	23.0	27.0	3.2	117.2 to 152.05

Do at access to a co		Applicable		E	kternal	dimer	sions			Applicable
Part number	Shape	screw	ϕ d2	В	L	F	Е	N	Thickness	wire mm²
RD60-12			14.0	22.0	89.0	20.0	18.0		2.0	42.42 to 60.57
RD100-12	1		14.0	28.5	95.5	20.3	21.0		2.6	96.3 to 117.2
RD150-12	C	M12	14.0	36.0	106.0	21.0	27.0	40	3.2	117.2 to 152.05
RD200-12	1		14.0	44.0	116.5	23.0	31.5		4.0	192.6 to 242.27
RD325-12	1		14.0	50.5	123.8	23.0	35.5		4.5	242.27 to 325
SD150-12				36.0	107.0	29.0	28.0		3.2	117.2 to 152
SD200-12	C	M12	14.0	44.0	108.0	36.0	32.0	32	4.0	192.6 to 242.2
SD325-12				50.5	125.0	38.0	37.0		4.5	242.2 to 325

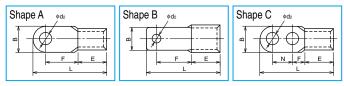

5. Busbar

The size of the conductor can be connected is shown on the outline drawing of each model. The following special busbars are available. Use them as needed. When using any busbar, isolate it from the bare busbar on the circuit breaker power supply side with an insulating barrier.

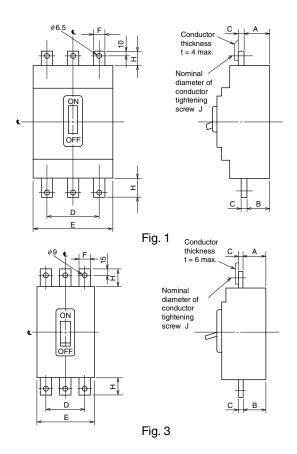

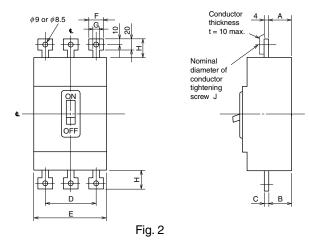


Table 5-7 Table of variable dimensions

Type	Applicable mo	dels	Outline and dimentions					Bus	sbar				
name	MCCB	ELCB	Outline and dimentions	Fig.	Α	В	С	D	Е	F	G	Н	J
FB-05SV	NF32-SV NF63-CV (50A or below) NF63-SV (50A or below) NF63-HV (50A or below)	NV32-SV NV63-CV (50A or below) NV63-SV (50A or below) NV63-HV (50A or below)	245 245 06.5	1	24	24	2	50	75	11.5	_	25	M5×0.8
FB-1SV	NF125-CV, NF125-SV NF125-HV, NF125-UV	NV125-CV NV125-SV NV125-HV	A6 28 08.5	2	24	24	4	60	90	18	15	29	M8
FB-2SV	NF125-SEV NF125-HEV, NF125-RGV NF250-CV, NF250-SV, NF250-HV NF250-UV, NF250-SEV NF250-HEV, NF250-RGV NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV	NV125-SEV NV125-HEV NV250-CV, NV250-SV NV250-HV, NV250-SEV NV250-HEV	515 325 00 00 00 00 00 00	3	24	24	6	70	105	20	-	37	M8

6. Insulation Distance on Power Source Side

Basic concept

Insulation distance (distance indicated in standards)

Be sure to at least secure the insulation distances (spatial distance and creeping distance) specified by the codes and standards of the relevant equipment and facilities where the circuit breakers are installed.

It is recommended that insulation barriers and insulation tape be used to enhance the electrical insulation between bare-live parts and between bare-live parts and ground to avoid accidents otherwise caused by a loose metal piece, conductive dust, abnormal surge voltage in the circuit or a similar event so as to improve the reliability of panels.

Insulation distance

At the exhaust outlet side of breaker, arc space is necessary. When the actual load circuit is opened, especially when a large current such as overload or short-circuit is interrupted, ionized gas is emitted from the exhaust outlet. This gas can cause a short circuit between bare, live parts such as busbars, and also can cause

grounding faults between conductive installation metal panels.

Therefore, it is important to secure enough arc space at the exhaust outlet side of the breaker and to strengthen insulation of parts exposed to the gas. In addition, securing enough space at the front of the exhaust outlet is necessary, because when the gas emission is blocked, failures such as deterioration of breaking performance can be caused.

●Insulation required part

With regard to insulation of bear, live parts of the line side of the breaker, please make sure to insulate at least C part C indicated in the diagram above with insulation tape, a tube or a terminal cover.

- ①A: Distance from the circuit breaker to the ceiling plate
 ②B1: Distance from the circuit breaker to the uncovered conducting part of the upper circuit breaker terminal (front connection)
 ③B2: Distance from the lower circuit breaker to the end face of the upper circuit breaker (rear connection)

- (4)D1 : Distance from the side of the breaker to the side plate
 (5)C : Insulated length of the power source terminal of the circuit breaker (front connection)

Please secure insulation using insulating tape, insulating tubing, insulation barrier, or a terminal cover, between bare charge parts within this size range. Please refer

- © Pot the models with institution barriers supplied as standard, please make sure to use the barriers.

 a : clearance specified in standard

 ⑥D2 : Side-to-side spacing of breakers

 While the circuit breakers can basically be installed together without a clearance in between, be sure to observe the following instructions.

 ♦ It is desirable to install an insulation barrier between the adjacent circuit breakers or install an insulation barrier between the adjacent circuit breakers or install an insulation barrier between the adjacent circuit breakers or install an insulation barrier between the adjacent circuit breakers or install an insulation barrier between the adjacent circuit breakers or install an insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier between the adjacent circuit breakers or insulation barrier barrier between the adjacent circuit breakers or insulation barrier
- to desirate to instant in instantation barrier between the adjacent circuit breakers of installed the barrier parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Objective parts considering the elect of cutoff gas.

 Ob
- A circuit breaker of 400 ampere frame or larger with an SHT or a UVT could operate falsely if a current of 50kA or higher flows through the adjacent circuit breaker. Be sure to secure a distance of at least 50mm in between.

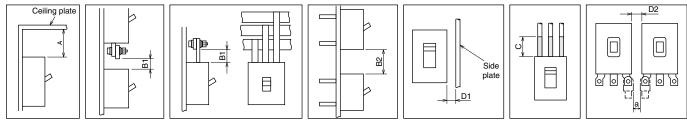


Table 5-8 Insulation distance (mm) (440VAC or below) *Figures in parentheses are for 230VAC or below.

	Model		Ceiling plate			Vertical spacing			Horizontal spacing
Class				Α		B1,	B2		
Series		ELCB		With terminal cover	Insulated plate, coated plate	Without terminal cover	With terminal cover	С	D1
	NF30-FAU, NF50-FAU, NF50-FHU, NF100-FHU	NV30-FAU, NV50-FAU, NV50-FHU, NV100-FHU	10	10	10	20	20	(*1)	20
	NF32-SV, NF63-CV	NV63-CV	5	5	5	20	20	(*1)	20
	NF63-SV, NF63-HV	NV32-SV, NV63-SV, NV63-HV	10	10	10	30	30	30	25
	NF125-CV	NV125-CV	50(30)	40(30)	10	50	50	(*1)	25
	NF125-SV	NV125-SV	50(10)	30(10)	10	50	50	50	25
	NF125-HV	NV125-HV	50	40	40	80	80	80	40
	NF250-CV	NV250-CV	40	40	40	50	50	50	50
0 • H • R	NF125-SEV, NF250-SV, NF250-SEV NF125-SGV, NF160-SGV, NF250-SGV	NV125-SEV, NV250-SV, NV250-SEV	70(40)	40	40	70(50)	50	70(50)	50
	NF125-HEV, NF250-HV, NF250-HEV NF125-LGV, NF160-LGV, NF250-LGV NF125-HGV, NF160-HGV, NF250-HGV	NV125-HEV, NV250-HV, NV250-HEV	80	60	60	80	80	80	60
	NF400-CW	NV400-CW	60	60	60	60	60	60	40
МВ	NF400-SW, NF400-SEW	NV400-SW, NV400-SEW	70	70	70	70	70	70	70
	NF400-HEW, NF400-REW	NV400-HEW	200	200	200	200	200	200	150
	NF630-SW, NF630-SEW, NF630-CW	NV630-CW, NV630-SW, NV630-SEW	70	70	70	70	70	70	70
	NF630-HEW, NF630-REW	NV630-HEW	200	200	200	200	200	200	150
	NF800-SEW, NF800-CEW	NV800-SEW	80	80	80	80	80	80	80
	NF800-HEW, NF800-REW	NV800-HEW	200	200	200	200	200	200	150
	NF1000-SEW, NF1250-SEW NF1600-SEW	-	100	100	100	100	100	100	100
	NF125-RGV, NF250-RGV	_	30 (*6)	30 (*6)	30 (*6)	50 (*9)	50 (*9)	50	5
	NF125-UV, NF250-UV	_	(*1)	(*1)	(*1)	(*1)	(*1)	(*1)	25
	NF400-UEW	_	70	70	70	70	70	70	70
	NF800-UEW	-	80	80	80	80	80	80	80
	CP30-BA, CP30-HU	_	10 (*6)	10 (*6)	10 (*6)	20	20	(*1)	20
	NF50-SMU	_	(10)	_	(10)	_	(20)	(20)	(10)
	NF100-SRU	NV100-SRU		30(10)(*6)	10(*6)	50(*7)	50(*7)	50(*7)	10
	NF100-HRU(*4)	NV100-HRU(*4)		60(10)(*6)(*7)	10(*6)				10
	NF50-SVFU	-	10 (*6)	10 (*6)	10 (*6)	20 (*7)	20 (*7)	30	10
UL	NF250-CVU	NV250-CVU	(40)	(40)	(40)	(50)	(50)	(50)	(20)
	NF100-CVFU	_	50(25)	40(25)	10	50	50	50	25(15)
	NF125-SVU(*4)	-	40(10)	30(10)	10	50	50	50	25(20)
	NF125-HVU(*5)	-	40	40	40	80	80	80	25(20)
	NF250-SVU(*4)	-	40	40	40	70(50)	50	70(50)	50(20)
	NF250-HVU(*5)	_	40	40	40	80	80	80	50(20)
	NF400-SWU, NF400-HWU(*5)	-	70	70	70	70	70	70	70
	NF630-SWU, NF630-HWU(*5)	_	70	70	70	70	70	70	70


7. Effect of Installation Orientation

Installation orientation does not affect the operating characteristics of circuit breakers of electronic or thermomagnetic operation types. However, the installation orientation affects the operating current of fully magnetic type circuit breakers as the iron core in the oil dash pot is under gravitational force.

It is generally suggested they be installed vertically.

●Hydraulic-magnetic (The same applies to other models of hydraulic-magnetic type.)

	MCCB	ELCB			
Class	Model	Class	Model		
S⋅H	NF100-SRU, NF100-HRU	S·H	NV100-SRU, NV100-HRU		
FH	NF50-FHU, NF100-FHU	FH	NV50-FHU, NV100-FHU		

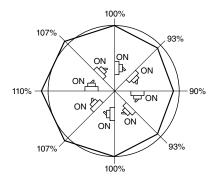


Rate of change of rated current by mounting angle

8. Connection of Line and Load

The standard wiring of line and load on the circuit breaker is as shown in (a) normal connection on the right.

Avoid the wiring shown in (b) reverse connection. This may lead to a decrease in breaking performance.

However, the reverse connection is allowed for the following models (excluding MDU breakers).

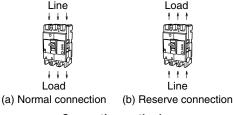

Connection methods

NF-C, NF-S, NF-H, NF-R and NF-U class	Г
CP30-BA, CP30-HU, NV-C, S, H and R class of 400 to 800AF,	
NF100-CVFU, NF100-SRU, NF100-HRU,	
NF125-SVU, NF125-HVU,	:
NF250-CVU, NF250-SVU, NF250-HVU,	
NE400-SWIL NE400-HWIL NE630-SWIL NE630-HWIL	

Reverse connection is allowed for the standard models.




Accessories

1 Internal Accessories	108
1) Internal Accessories	10
2) Terminal Symbols	
3) Operations and Ratings of Switches	
4) Maximum Number of Internal Accessories	11
5) Cassette Type Accessories	
6) Shunt Trip (SHT)	11
7) Undervoltage Trip (UVT)	
8) Lead Wire Drawing	
9) Lead Wire Terminal Block	
10) Test Button Module (TBM)	
11) Pre-Alarm Module (PAL)	
2 External Accessories	123
1) F-type Operating Handle (Breaker Mount Type)	12
2) V-type Operating Handle (Door Mount Type)	12
3) C-type Operating Handle	12
4) Terminal Covers	12
5) Insulating Barriers	
6) Handle Lock Devices, Lock Covers, Auxiliary Handles, Card Holders	
7) Mechanical Interlocks (MI)	
8) Boxes for Circuit Breakers and Boxed Circuit Breakers	13
9) Electrical Operated Circuit Breakers and Electrical Operation Devices	
10) ICC OF your Doil Mounting Adoptors	4.4


1. Internal Accessories

The accessories to be installed in circuit breakers include the followings. For the numbers of the accessories which can be installed, refer to the tables on pages 110 to 114. The standard internal accessories have lead wires (450mm in length) drawn out. (However, some of Models UVT and TBM have vertical lead wire terminal blocks as standard.) When circuit breakers are installed side by side, keep a space of 8mm or more for lead wires between the circuit breakers. (Models with lead wires drawn out toward load and models with lead wire grooves in the side faces can be installed in close contact.)

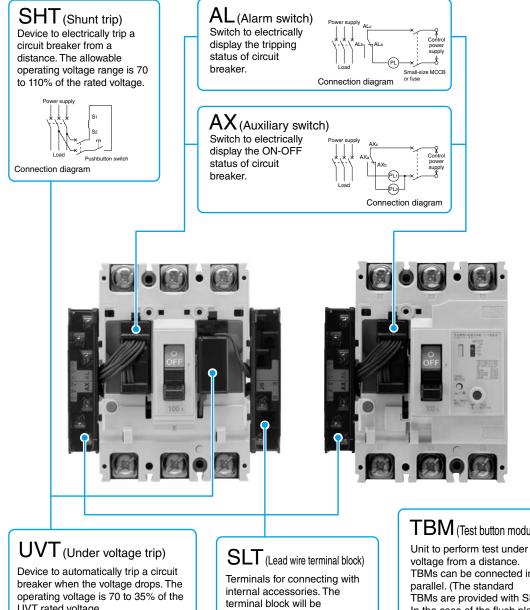

UVT rated voltage.

When the voltage recovers at least to 85% or more, the circuit breaker can be turned on after the device is manually reset.

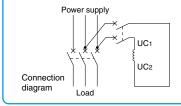


manufactured to order. For the detailed dimensions, refer to pages 120 and 121. (The dimensions of SLT slightly vary depending on the number of installed accessories and the model.)

However, circuit breakers with a frame size of 400A and above having an electrical operation device are normally provided with SLT.

TBM (Test button module)

TBMs can be connected in TBMs are provided with SLT. In the case of the flush plate type, the external dimensions are partially different from those of the standard type.)

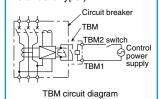

2. Terminal Symbols

Table 6-1

	Accessory name	Nameplate (sample)	Accessory name	Nameplate (sample)
AL	Alarm switch	ALAMM SWITCH AC 1938		
AX	Auxiliary switch	AUTOLARY SHIPTON AC 1999 AN AC 1997 AND AC 1997 AND AC 1997 AND AC 1997 AND AC 1997 AND AC 1997 AND AC 1997 AND ACC 1997 AN		j heline
SHT	Shunt tripping device	SHUAT TRIP ACTION SCHOOL	TBM Test button module	TEST SUTTON MICOLE ACCOUNT OF THE MICHAEL MOST UN MARKET. MICHAEL MICH
UVT	Undervoltage tripping device	A state of the sta		

3. Operations and Ratings of Switches

Table 6-2 Operations of AL switch

Status of circuit breaker	Contact status of AL switch
→ → → Off or On	98/ALa (open) 96/ALb (closed) 95/ALc
Trip	98/ALa (closed) 96/ALb (open) 95/ALc

^{*} The terminal numbers 98/ALa, 96/ALb and 95/ALc may vary depending on the number of installed switches and the installation poles.

Table 6-3 Operations of AX switch

Status of circuit breaker	Contact status of AX switch
Off or Trip	14/AXa (open) 12/AXb (closed) 11/AXc
On On	14/AXa (closed) 12/AXb (open) 11/AXc

^{*} The terminal numbers 14/AXa, 12/AXb and 11/AXc may vary depending on the number of installed switches and the installation poles.

Table 6-4 Ratings of AL·AX (Above 400A frame) switches

		AC		DC		
Applied	\/=l+===	Curre	ent A	1/-14	Curre	ent A
switch	Voltage V	Resistive load	Inductive load	Voltage V	Resistive load	Inductive load
_	(250)	(1)	(0.5)	(50)	(1)	(0.5)
A	125	3	(1)	30	2	(1)
	460	_	_	250	0.2	0.2
S	250	3	2	125	0.4	0.4
	125	5	3	30	4	3
	460	5	2	250	0.3	0.3
V	250	10	10	125	0.6	0.6
	125	10	10	30	10	6

Remarks: 1. The ratings in parentheses do not conform to UL.
2. For the applied switches, refer to Tables 6-9 to 6-12-2.

Table 6-5 Ratings of corrosion resist AL and AX switches

Campaian		AC		DC			
Corrosion resist	Vallana	Curre	Current A		Curre	ent A	
switch	Voltage V	Resistive	Inductive	Voltage V	Resistive	Inductive	
SWITCH		load	load		load	load	
	460	_	_	250	0.2	0.2	
ST	250	3	2	125	0.4	0.4	
	125	5	3	30	4	3	
	460	1	0.5	250	0.3	0.3	
VT	250	5	4	125	0.4	0.4	
	125	5	4	30	5	3	

Table 6-6 Ratings of small loads AL·AX switches

		AC		DC		
Constants	\/-l\	Current A		\/-lt	Current A	
Switch	Switch Voltage V	Resistive load	Inductive load	Voltage V	Resistive load	Inductive load
AB	125	0.1	_	30	(0.1)	_
SB	125	0.1	_	30	0.1	_
VB	125	0.1	_	30	0.1	_

Remark: 1. Ratings in parentheses are not subject to UL.

4. Maximum Number of Internal Accessories

SHT or UVT ■ PAL MCCB and Motor Protection Breakers Outgoing direction of -Handle of circuit breaker lead wires Table 6-7 Table of maximum number of internal accessories Left pole → Right pole indicates cassette type accessories

●AL ○AX

iable (J-7 IADI	e oi illaxilliulli ilu	iniber of internal a	L	eft pole → ← Right	pole indicates	cassette type accessories.
	С	NF63-CV NF125-CV	NF63-CV NF125-CV NF250-CV		NF400-CW NF630-CW	NF800-CEW	
	S	NF32-SV NF63-SV NF125-SV	NF32-SV NF63-SV NF125-SV NF125-SGV NF160-SGV NF250-SV NF250-SV	NF125-SEV NF250-SEV	NF400-SW NF400-SEW NF630-SW NF630-SEW	NF800-SEW NF800-SDW	NF1000-SEW NF1250-SEW NF1600-SEW
Model	L•H•R	NF63-HV	NF63-HV NF125-HV NF125-LGV NF125-HGV NF125-RGV NF160-LGV NF160-HGV NF250-HV NF250-LGV NF250-HGV NF250-HGV	NF125-HEV NF250-HEV	NF400-HEW NF400-REW NF630-HEW NF630-REW	NF800-HEW NF800-REW	
	U		NF125-UV NF250-UV		NF400-UEW(3P)	NF400-UEW(4P) NF800-UEW	
Number	HDV HDW HDVA	NF63-HDV	NF63-HDV(3P) NF125-HDVA(4P) NF250-HDVA(4P)		NF400-HDW(3P, 4P)	NF800-HDW(3P, 4P)	
(standard	r of poles and AX I) switches	2 poles	2, 3 or 4 poles	3, 4 poles	2, 3 or 4 poles	2, 3 or 4 poles	2, 3 or 4 poles
Accessor	y switches			S			V
A	AL	•	← 0 2 →	← 0 2 →	4- 0	(*6)	-
Α	ΑX	① → ·	* (1) (2) *	← ① ② → ← ③ ②	+ (1) (3) + + (2) (4) +	(*6) ↑ ①⑤ ③ → ↑ ②⑥ ④ →	← ① ③ → ← ② ④ → ← ⑤ ⑥ →
(HT or VT	(*1)	(*1)(*4)	(*1)(*4)	(*5)	(*1)	(*1)
AL -	+ AX	•	(*2) • 1 2 -	(*2) • ① ② →	(*6)	(*6)	
SHT	+ UVT				(*1)		
AL +	SHT or UVT		(*1)	(*1)	(*1) (*5) (*6) (*7)	(*1) (*5) (*6) (*7)	(*1)
AX +	SHT or UVT		(*1) + ②	(*1) + ① + ②	(*1) (*5) (*6) (*7)	(*1) (*5) (*6) (*6) (*6) (*7)	(*1) + O + O
AL + A	SHT X + or UVT		(*1) + O	(*1)	(*1) (*5) (*6) (*7)	(*1) (*5) (*6) (*7)	(*1)
	AL t output)			(*3)	Option for NF400-SEW, HEW, REW and UEW and NF630-SEW, HEW and REW	Option for NF800-CEW, SEW, HEW and REW and NF800-UEW	Option for NF1000-SEW and NF1250-SEW and NF1600-SEW
			•				

*1 When UVT is provided, the UVT voltage module will come in the vertical lead wire terminal block type. (SHT does not have a voltage module.)
*2 The second AX can be installed in place of the AL on the left pole side. When placing an order, specify the incorporation of the switches in the body.
*3 PAL (contact output) can be installed together with AL and AX on the left pole side. (It cannot be installed together with SHT or UVT.)
The standard type is provided with SLT. PAL control voltage (compatible with 100 to 200VAC) is necessary.

^{*4} SHT and UVT can be installed on the left side.
*5 SHT and UVT are normally installed on the right pole side. If you intend to install them on the left pole side, specify so. (The non-reset type UVT must be installed on the left pole side.)

*6 In the case where three or more accessories are installed on the left pole side and AL, AX or AL and AX are installed on the pole on which SLT, SHT or UVT is

installed, the SLT will be manufactured to order.


[&]quot;7 When AL, AX or AL and AX are installed on the pole on which UVT is installed, the UVT voltage module must be installed separately.

*8 SLT is provided as standard. A control power supply (100 to 200VAC) is required. (In this case, other internal accessories cannot be installed on the right pole side.)

Remarks: 1. For electrically operated automatic reset type circuit breakers having a frame size of 400A or above, the numbers of AL switches which can be installed are smaller by 1 than the values shown above.

2. The encircled numbers indicate the order of installation.

^{3.} AL and AX for minute load can be manufactured to order.

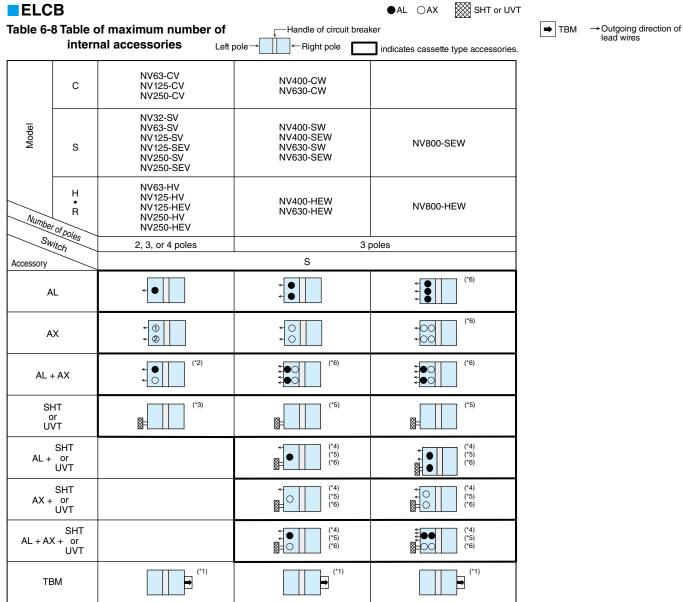

Notes *1 The standard type is provided with SLT. Only in the case of 24VDC, specify the control voltage.

- *2 The second AX can be installed in place of the AL on the left pole side. When placing an order, specify the incorporation of the switches in the body.
- *3 When UVT is provided, the UVT voltage module will come in the vertical lead wire terminal block type. (SHT does not have a voltage module.)
 *4 When AL, AX or AL and AX are installed on the pole on which UVT is installed, the UVT voltage module must be separately installed.
- *5 When the accessory is provided with UVT, the UVT voltage module has a vertical lead wire terminal block. The UVT is not provided with a cassette.

*6 SLT to be used when three or more accessories are installed on the left pole is manufactured to order. Remarks: 1. The encircled numbers indicate the order of installation.

- 2. TBM can be installed regardless of the number of installed AL, AX, SHT and UVT.
- 3. AL and AX for minute load can be manufactured to order.

UL Circuit Breakers

	oreaker •AL	○AX SHT	or UVT → TBM	→Outgoing direction o lead wires
Left pole → ← Right pole	indicates	cassette type acc	essories. Tab	le 6-9-2

Table 6-9-1 Table of maximum number of internal accessories

Model MCCB Number of poles (standard) of Al	NF30-FAU NF50-FAU	NF50-FHU NF100-FHU(3P)	NF100 NF100		NF50-SVFU NF100-CVFU	NF50-SVFU NF100-CVFU	NF125-SVU NF125-HVU NF250-SVU NF250-HVU NF250-CVU	NF400-SWU NF400-HWU	NF630-SWU NF630-HWU
Standard AV	2, 3 poles	2, 3 poles	2 poles	3 poles	2 poles	3 poles	2 or 3 poles	3 poles	3 poles
(Standard) Switches Accessory	Α	S	Å	Ā			S		
AL	•	(*9)	(*10)	(*9) • 0 2	•	← 0 0	←0 2 →	± • • • • • • • • • • • • • • • • • • •	(*4)
AX		(*9)	(*10)	(*9)	0	< ①	<0 2→	+ (1) (3) + + (2) (4) +	(*4) +05 3 + 26 4 +
SHT or UVT	(*8)	(*8) (*9)	(*10) (*11)	(*8) (*9) (*11)	(*1) (*6)	(*1) (*3) (*6)	(*1) (*3)	(*1) (*3)	(*1) (*3)
AL + AX	Only 3 poles	(*9) Only 3 poles	(*10) + • • • • • • • • • • • • • • • • • • •	(*9) • ① ② →	•	(*2) • ① ② • • ① ② •	(*2) • 1 2 •	(*6) + • • • • • • • • • • • • • • • • • • •	(*6) • • • • • • • • • • • • • • • • • • •
AL + or UVT	(*8) Only 3 poles	(*8) (*9) Only 3 poles	(*10) (*11)	(*8) (*9) (*11)		(*1) (*6)	(*1)	(*1) (*3) (*4) (*5)	(*1) (*3) (*4) (*5)
AX + SHT or UVT			(*10) (*11)	(*8) (*9) (*11)		(*1) (*6)	(*1)	(*1) (*3) (*4) (*5)	(*1) (*3) (*4) (*5)
AL + AX + Or UVT			(*10) (*11)	(*8) (*9) (*11)		(*1) (*6)	(*1) + O	(*1) (*3) (*4) (*5)	(*1) (*3) (*4) (*5)

Table 6-9-2
Table of maximum
number of accessories

number of accessories						
Model Number	NF	NF50-SMU				
(standaro	nd AX	1, 2, 3 poles				
Accesso	of poles and AX switches	-				
А						
A	x					
Sŀ	НТ					
AL -	- AX					
AL +	SHT					
AX +	SHT					
AL + AX	(+ SHT					

Model ELCB Number of poles (standard) of AX	NV30-FAU NV50-FAU	NV50-FHU NV100-FHU(3P)	NV100-SRU NV100-HRU(3P)	NV50-SVFU	NV50-SVFU NV100-CVFU	NV125-SVU NV125-HVU NV250-SVU NV250-HVU
(standard) AX	2, 3 poles	2, 3 poles	2, 3 poles	2 poles	3 poles	3 poles
(standard) switches Accessory	Α	S	Α		S	
AL	• 🗎	• (*9)	(*9)		+	+
AX		← ○	(*9)			-
SHT or UVT					(*1) (*6)	(*1)
AL + AX	Only 3 poles	Only 3 poles	(*9)		(*2)	(*2)
AL + SHT Or UVT			(*9) (*10) (*11)			
AX + SHT or UVT			(*9) (*10) (*11)			
AL + AX + SHT Or UVT			(*9) (*10) (*11)			
ТВМ				(*7)	(*7)	(*7)

Notes

- When UVT is provided, the UVT voltage module will come in the vertical lead wire terminal block type. (SHT does not have a voltage module.)
- SHT cannot be installed.
- SHT and UVT are normally installed on the right pole side. If you intend to install them on the left pole side, specify so.
- In the case where three or more accessories are installed on the left pole side and AL, AX or AL and AX are installed on the pole on which SLT, SHT or UVT is installed, the SLT will be manufactured to order.
- When AL, AX or AL and AX are installed on the pole on which UVT is installed, the UVT voltage module must be installed separately.
- UVT of NF50-SVFU and NV50-SVFU are not
- provided with cassettes.
 The standard type is provided with SLT. Only in the case of 24VDC, specify the control
- voltage. UVT cannot be installed.
- Lead drawing is standard. Lead drawing is also available. For NF/NV100-FHU. Lead wires are usually extended load side.
- *10 Lead drawing is not available.
 *11 Left pole SHT and UVT are mounted on the side of circuit breaker.

Remarks:

- The encircled numbers indicate the order of installation.
- AL and AX for minute load can be manufactured to order. (These switches have been certified only by UL and CSA. They have not been certified by TUV.)

AL for transmission with MDU SHT or UVT TBL MDU Breakers indicates cassette type accessories. ● AL ○ AX Table 6-10-1 Table of maximum number of **→** ТВМ Outgoing direction of lead wires internal accessories Handle of circuit breaker Left pole ← Right pole The numbers in O indicate the mounting order. NF250-SEV with MDU NF250-HEV with MDU NF250-SEV with MDU NF250-HEV with MDU Model Model Number of poles 3, 4 poles Number of poles 3, 4 poles Switch S Switch S ΑL 0 0 PAL 1 AL AX3 2 for transmission with MDU *6 AX 0 2 AL+AX 0 2 for transmission with MDU *6 AL+AX for transmission with MDU *6 SHT AL+AX+AL for transmission with MDU *6 AL+AX+AX UVT for transmission with MDU *6 AL+AX+AL+AX AL+SHT for transmission with MDU *6 AX+SHT AL+AX+SHT AL+UVT AX+UVT AL+AX+UVT

Notes:

*1 The right pole SLT specification is built into the main unit (not included with the cassette).

- When MDU specification is "Breaker mounting", "Breaker mounting unit separates".

 *2. The second AX can be mounted in place of the AL on the left pole side. Please order with the built-in body.
- *3. Left pole mounting is also possible.
- *4. The UVT voltage module is a vertical lead wire terminal block type. UVT is not included with the cassette.

MDU installation type	UVT specification	Remarks
Breaker mounting	· UVT voltage module separate installation is standard.	
Breaker mounting unit separate installation	In the case of separate display unit, UVT voltage module body mounting is also available.	Left pole mounting is also possible. (Reset type UVT can not be mounted on the left)
External mounting	·UVT voltage module body mounting is standard.	
Panel mounting	· A separate UVT voltage module can also be manufactured.	

^{*5.} It comes with a terminal block specification.

A control power supply (100-240VAC/DC common) is required (In this case, other internal accessories can not be mounted on the right pole). When MDU specification is "Breaker mounting", "Breaker mounting unit separates".

*6. When transmitting AL, AX, AL + AX, AL and AX for MDU transmission are left pole mounted. In this case, AL and AX for MDU transmission installed on the left pole side can not be used for lead wire extraction and terminal block installation

Remark:

1. AL and AX for minute load can be manufactured to order.

AL OAX

AL for transmission transmission with MDU SHT or UVT → TBL with MDU PAL TBM -

MDU Breakers

Table 6-10-2 Table of maximum number of internal accessories

The numbers in O indicate the mounting order.

The numbers in O	indicate the mounting of	order.								
Model	NF400-SEW with MDU NF400-HEW with MDU	NF800-SEW with MDU NF800-HEW with MDU								
Number of poles	3, 4	poles								
Switch		3								
AL	↓ • • • • • • • • • • • • • • • • • • •	*1								
AX	↑ ① ③ →← ② ④ →	105 3 +1 26 4 +								
SHT	—————————————————————————————————————									
UVT		*3 *4								
AL+AX	*1									
AL+SHT	*2	11 + 2 + 2 + 3 + 4 + 3 + 4 + 3 + 4 + 4 + 4 + 4 + 4								
AX+SHT	\$\frac{1}{4} \tag{9} \tag{9} \tag{9}	100 0 11 22 12 12 12 12 12 12 12 12 12 12 12								
AL+AX+SHT	*11 *2	1 · 1 · 2								
AL+UVT	*3 *4 *5 *5	11 33 44 55								
AX+UVT	3 4 4 5 4 9 9 4	103 6 11 224 8 4 3 4 4 4 9 0 7 5								
AL+AX+UVT	1 3 3 4 1 0 1 1 5	*1 *3 *4 *5								

Model	NF400-SEW with MDU	NF800-SEW with MDU							
	NF400-HEW with MDU	NF800-HEW with MDU							
Number of poles	3, 4 p	ooles							
Switch	S								
PAL	*6								
ті	With PAL- OAL contact								
AL for transmission with MDU *7									
AX for transmission with MDU *7									
AL+AX for transmission with MDU *7									
AL+AX+AL for transmission with MDU *7	•	↓							
AL+AX+AX for transmission with MDU *7	**************************************								
AL+AX+AL+AX for transmission with MDU *7									

indicates cassette type accessories.

 → TBM
 — Outgoing direction of lead wires

- Handle of circuit breaker

Notes: *1 When mounting 3 or more accessories on the left pole, SLT is manufactured upon order.
*2 The right pole mounting is standard for SHT. Please specify for left pole installation.

*7 When transmitting AL, AX, AL + AX, AL and AX for MDU transmission are left pole mounted. In this case, AL and AX for MDU transmission installed on the left pole side can not be used for lead extraction and terminal block installation to the outside.

MDU installation type	UVT specification	Remarks
Breaker mounting	· UVT voltage module separate installation is standard.	
Breaker mounting unit separate installation	In the case of separate display unit, UVT voltage module body mounting is also available.	Left pole mounting is also possible. (Reset type UVT can not be mounted on the left)
External mounting	·UVT voltage module body mounting is standard.	
Panel mounting	· A separate UVT voltage module can also be manufactured.	

1. AL and AX for minute load can be manufactured to order.

^{*3} The UVT voltage module is a vertical lead wire terminal block type. UVT is not included with the cassette. With embedded UVT, "UVT voltage module separate" Please specify

^{*4} UVT is standard with right pole mounting. Please specify for left pole installation. (The reset prevention type UVT has a left pole mounting)

^{*5} When mounting AL, AX, AL + AX on the same pole as UVT, the UVT voltage module is separate.
*6 It comes with a terminal block specification. Control power supply (100-240VAC/DC shared) 5VA is required.
(In this case, other internal accessories can not be mounted on the right pole)

5. Cassette Type Accessories

The internal accessories for major models having a frame size from 30 to 800A come in cassettes, and they can be installed to and removed from circuit breakers by the user.

Some cassette type accessories have lead wires drawn out, and others have vertical lead wire terminal blocks (SLT). (These parts are supplied by 10 pieces for frame size from 30 to 250A or by 1 piece for frame size from 400 to 800A.)

Applicable models and kinds of cassette type accessories

	Model	Alarm switch (AL)	Auxiliary switch (AX)	Shunt tripping device (SHT)	Undervoltage tripping device (UVT)
MCCB	NF100-SRU, NF100-HRU NF63-CV~NF250-CV, NF32-SV~NF250-SV NF63-HV~NF250-HV NF125-SGV~NF250-SGV, NF125-LGV~NF250-LGV NF125-HGV~NF250-HGV NF125-SEV, NF250-SEV, NF125-HEV, NF250-HEV NF125-RGV, NF250-RGV, NF125-UV, NF250-UV NF100-CVFU, NF125-SVU/HVU, NF250-CVU/SVU/HVU	0	0	0	0
	NF50-SVFU, NF400-CW, NF630-CW, NF800-CEW NF400-SW, NF630-SW, NF400-SEW-NF800-SEW NF800-SDW, NF400-HEW-NF800-HEW NF400-REW-NF800-REW, NF400-UEW, NF800-UEW NF400-SWU/HWU, NF630-SWU/HWU	0	0	0	-
ELCB	NV100-SRU, NV100-HRU NV63-CV~NV250-CV, NV32-SV~NV250-SV NV63-HV~HV250-HV NV125-SEV, NV250-SEV, NV125-HEV, NV250-HEV NV100-CVFU, NV125-SVU/HVU, NV250-CVU/SVU/HV		0	0	0
	NV50-SVFU, NV400-CW, NV630-CW NV400-SW, NV630-SW, NV400-SEW~NV800-SEW NV400-HEW~NV800-HEW	0	0	0	-

■ Procedure for installing cassette type accessories




 Press the trip button (PTT) to trip the circuit breaker. (*1)



Loosen the cover screws.



3. Open the cover

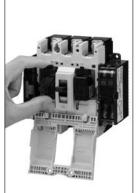

Install the cassette type accessory. (*2)



Close the cover, and tighten the screws.

Notes *1. When installing any cassette type accessory, set the circuit breaker to the tripped state.

*2. If the inner lid or another accessory has been installed, remove it before installing the accessory. When any circuit breaker supplied with the inner lid is used without an accessory, fit the inner lid without fail. Failure to do so may affect the short-circuiting performance.

Models with inner lid: NF125-SV, NF125-HV, NF125-UV

NF125-5V, NF125-HV, NF125-OV NV125-SV, NV125-HV NF250-SV, NF250-HV, NF250-CVU NV250-SV, NV250-HV, NV250-CVU

NF125-SVU, NF125-HVU, NV125-SVU, NV125-HVU NF250-SVU, NF250-HVU, NV250-SVU, NV250-HVU

NF125-SGV~NF250-SGV NF125-LGV~NF250-LGV NF125-HGV~NF250-HGV NF250-SEV, NF250-HEV, NF250-UV NV250-HEV NF125-SEV, NF125-HEV NV125-SEV, NV125-HEV NF400-REW, NF400-UEW NF630-REW NF800-HEW, NF800-REW, NF800-UEW NV800-HEW NF630-SWU, NF630-HWU

Cautions when installing

Before installing or removing any cassette type accessory, set the circuit breaker and accessories to the no-voltage state.

Never install a cassette type accessory while the handle is in the ON or OFF position. Doing so may damage the accessory. When installing an accessory with lead wires drawn out, apply the supplied nameplate to the circuit breaker side face.

When installing an accessory with lead wires drawn out for a frame size of 400 to 800A, secure the lead wires along the circuit breaker side face with the supplied lead wire retainers.

Type name

Table 6-11-1

Model		Installation	AL	AX	AL+AX	SHT	UVTN or UVTS
MCCB	ELCB	pole	AL	AA	ALTAX		0111010110
NF50-SVFU		For right pole	AL-03SVU AL-03SVURS	AX-03SVU AX-03SVURS	ALAX-03SVU ALAX-03SVURS	SHTA240-03SVUR SHTA440-03SVUR SHTD100-03SVUR SHTA240-03SVURS SHTA440-03SVURS SHTD100-03SVURS	-
	NV50-SVFU	For left pole For left pole	AL-03SVU AL-03SVULS	AX-03SVU AX-03SVULS	ALAX-03SVU ALAX-03SVULS	SHTA240-03SVUL SHTA440-03SVUL SHTD100-03SVUL SHTA240-03SVULS SHTA440-03SVULS SHTD100-03SVULS	-
NF32-SV, NF63-CV, NF63-SV, NF63-HV NF125-CV, NF125-SV, NF125-HGV NF125-SGV, NF125-LGV, NF125-HGV NF160-SGV, NF160-LGV, NF160-HGV NF125-SEV, NF125-HEV NF125-RGV, NF125-UV NF250-CV, NF250-SV, NF250-HV NF250-SGV, NF250-LGV, NF250-HGV NF250-SEV, NF250-HEV NF250-SEV, NF250-UV		For right pole	AL-05SV AL-05SVRS	AX-05SV AX-05SVRS	ALAX-05SV ALAX-05SVRS	SHTA240-05SVR SHTA550-05SVR SHTD125-05SVR SHTA240-05SVRS SHTA550-05SVRS SHTD125-05SVRS	UVTNAD130-05SVR UVTSAD130-05SVR UVTNA250-05SVR UVTSA250-05SVR UVTSAD130-05SVR UVTNAD130-05SVRS UVTSAD130-05SVRS UVTNAD130-05SVRS UVTSAD130-05SVRS UVTNA480-05SVRS UVTSAD30-05SVRS UVTNA480-05SVRS
THE ZOO HOV, THE ZOO GV	NV32-SV, NV63-CV NV63-SV, NV63-HV NV125-CV, NV125-SV NV125-HV NV125-SEV, NV125-HEV NV250-CV, NV250-SV NV250-HV NV250-SEV, NV250-HEV	For left pole For left pole	AL-05SV AL-05SVLS	AX-05SV AX-05SVLS	ALAX-05SV ALAX-05SVLS	SHTA240-05SVL SHTA550-05SVL SHTD125-05SVL SHTA240-05SVLS SHTA550-05SVLS SHTD125-05SVLS	UVTNAD130-05SVL UVTSAD130-05SVL UVTNA250-05SVL UVTSA250-05SVL UVTSAB130-05SVL UVTNAD130-05SVLS UVTSAD130-05SVLS UVTNAD130-05SVLS UVTSAD130-05SVLS UVTNA480-05SVLS UVTSAB0-05SVLS UVTNA480-05SVLS
NF100-CVFU NF125-SVU/HVU NF250-CVU/SVU/HVU		For right pole	AL-05SVU AL-05SVURS	AX-05SVU AX-05SVURS	ALAX-05SVU ALAX-05SVURS	SHTA240-05SVUR SHTA550-05SVUR SHTD125-05SVUR SHTA240-05SVURS SHTA550-05SVURS SHTD125-05SVURS	UVTNAD130-05SVUR UVTSAD130-05SVUR UVTNA250-05SVUR UVTSA250-05SVUR UVTSA250-05SVUR UVTNAD130-05SVURS UVTSAD130-05SVURS UVTSAD130-05SVURS UVTSAD30-05SVURS UVTSAD480-05SVURS UVTSAD480-05SVURS UVTSAD480-05SVURS
	NV100-CVFU NV125-SVU/HVU NV250-CVU/SVU/HVU	For left pole For left pole	AL-05SVU AL-05SVULS	AX-05SVU AX-05SVULS	ALAX-05SVU ALAX-05SVULS	SHTA240-05SVUL SHTA550-05SVUL SHTD125-05SVUL SHTA240-05SVULS SHTA550-05SVULS SHTD125-05SVULS	UVTNAD130-05SVUL UVTSAD130-05SVUL UVTNA250-05SVUL UVTSA250-05SVUL UVTSAD80-05SVUL UVTNAD130-05SVULS UVTSAD130-05SVULS UVTNA250-05SVULS UVTNA250-05SVULS UVTNA480-05SVULS UVTSA480-05SVULS
NF100-SRU NF100-HRU		For right	AL-05SRU	AX-05SRU	ALAX-05SRU	SHTA240-05SRU SHTA480-05SRU SHTD125-05SRU	_
		pole	AL-05SRURS	AX-05SRURS	ALAX-05SRURS	SHTA240-05SRURS SHTA480-05SRURS SHTD125-05SRURS	
	NV100-SRU NV100-HRU	For left pole	AL-05SRU	AX-05SRU	ALAX-05SRU	SHTA110-05SRULS SHTA127-05SRULS SHTA220-05SRULS	UVTNA110-05SRULS UVTNA127-05SRULS UVTNA220-05SRULS
	NV 100-HRU	For left pole	AL-05SRULS	AX-05SRULS	ALAX-05SRULS	SHTA240-05SRULS SHTD024-05SRULS SHTD110-05SRULS	UVTNA240-05SRULS UVTND024-05SRULS UVTND110-05SRULS
NF400-CW, NF400-SW, NF400-SEW NF400-HEW, NF400-REW, NF400-UEW NF630-CW, NF630-SW, NF630-SEW		For right pole (2, or 3 poles)	-	AX-4SW AX-4SWRS AX2-4SWRS	-	SHT-4SW SHT-4SWRS	-
NF630-EW, NF630-REW NF800-CEW, NF800-SDW, NF800-SEW		For right pole (4 poles)	_	_	_	SHT-4SWRFS SHT-8SWRFS	-
NF800-HEW, NF800-REW, NF800-UEW		For left pole (2, 3 or 4 poles)					
	NV400-CW, NV400-SW NV400-SEW, NV400-HEW NV630-CW, NV630-SW NV630-SEW, NV630-HEW NV800-SEW, NV800-HEW	For left pole (2, 3 or 4 poles)	AL-4SWL AL-4SWLS AL2-4SWLS	AX-4SW AX-4SWLS AX2-4SWLS	ALAX-4SWL ALAX-4SWLS	SHT-4SW SHT-4SWLS	-
NF400-SWU, NF400-HWU NF630-SWU, NF630-HWU		For right pole	-	AX-4SWU AX-4SWURS AX2-4SWURS	-	SHT-4SWU SHT-4SWURS	-
		For left pole	AL-4SWU	AX-4SWU	ALAX-4SWU	SHT-4SWU	

- Ent the possibility of installation of accessories and the installation pole, refer to the tables of maximum numbers on pages 110 to 114.

 AL and AX for minute load can be manufactured to order. (Please specify "B" at the end of the model.)

 Corrosion-proof cassette type AL and AX are not available. When the circuit breaker body is exposed to class 1 tropicalization, class 2 tropicalization, reinforced corrosion resistance treatment or class 2 heat resistance treatment, place an order for the circuit breaker including the accessories.

 Cassette type accessories with SLT for right pole cannot be installed to 4-pole circuit breakers. Accessories with SLT for right pole to be used in 4-pole circuit breakers are manufactured to order.

 Cassette type accessories with SLT cannot be installed to flush plate type circuit breakers.

 It is impossible to install a combination of a cassette type accessory with lead wires drawn out and that with SLT or a combination of cassette type accessories with SLT on the pole to which UVT has been installed.

 AX and SHT with lead wires drawn out for frame size from 400 to 800A can be installed to any of the right and left poles.


 When installing more than one AL or AX with lead wires drawn out for frame size from 400 to 800A to one side, install the cassett promatory in length depending on the installation position.

 Install the cassette accessories for frame size from 400 to 800A starting from the outside of the installation positions. For the installation positions, see the installation positions shown in the following table.
- 11. When three pieces of more of AL and AX are installed on a circuit breaker with a frame size 400 to 800A, the AL and AX with SLT are manufactured to order.

Installation positions of cassette type accessories for 400 to 800A frames

Installation positions

Table 6-11-2 Installation positions of cassette type accessories

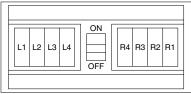


Frame (A)		400	• 600 •	630		800							
Accessory Installation positions	L1	L2	L3	R2	R1	L1	L2	L3	L4	R4	R3	R2	R1
AL	0	0	-	_	_	0	0	0	-	-	-	-	-
AX	0	0	-	0	0	0	0	0	0	-	1	(*1)	0
AL + AX	0	0	-	-	_	0	0	_	-	-	-	-	1
SHT	-)	()	_	ı)	(*	1)	-	ı

^{*} Accessories only for Earth Leakage Circuit Breakers (NV-C, S and H), Earth Leakage Alarm Breakers (NF-Z) and single-phase 3-wire circuits (NF-N and NV-N) cannot be installed to R1, R2, R3 or R4.

Note *1 It is impossible to simultaneously install AX on R2 and SHT on R3 or R4.

Interpretation of type name

(1) Alarm switch • Auxiliary switch

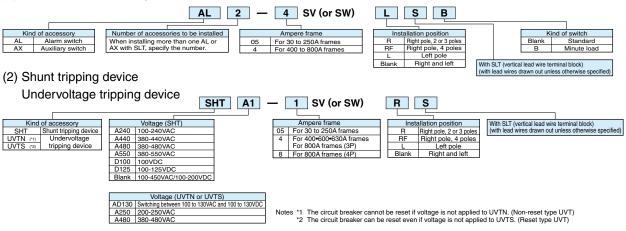

6. Shunt Trip (SHT)

■Coil ratings (standard)

Table 6-12-1

Model	Provision of coil burnout preventing switch	Voltage (V)	In A	iput (\ C	/A) (*		Operating time (*2)	
NF30-FAU NF50-FAU		100-120VAC 200-240VAC			_	_	20 or less	
NF50-FHU NF100-FHU		100-120VAC 200-240VAC 100VDC			5	0	15 or less	
NF50-SVFU NV50-SVFU		100-240VAC 380-440VAC 100VDC			6	0		
NF32-SV, NF63-CV/SV/HV, NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV, NF125-CV/SV/HV/SEV/HEV/RGV/UV NF250-CV/SV/HV/SEV/HEV/RGV/UV NF250-SGV/LGV/HGV NV32-SV, NV63-CV/SV/HV NV125-CV/SV/HV/SEV/HEV, NV250-CV/SV/HV/SEV/HEV NF100-CVFU, NF125-SVU/HVU, NF250-CVU/SVU/HVU NV100-CVFU, NV125-SVU/HVU, NV250-CVU/SVU/HVU	Provided	100-240VAC 380-550VAC 100-125VDC	12	0	5	0	15 or less	
NF100-SRU/HRU (*3)		100-240VAC 380-480VAC 100-125VDC						
NF400-CW/SW/SEW/HEW/REW/UEW NF630-CW/SW/SEW/HEW/REW			100V	20	100V	10		
NF800-CEW/SDW/SEW/HEW/REW/UEW NV400-CW/SW/SEW/HEW		Compatible with 100 to 450VAC and	200V	50 120			5-15	
NV630-CW/SW/SEW/HEW NV800-SEW/HEW, NF400-SWU/HWU, NF630-SWU/HWU		100 to 200VDC	380V 450V	170	200V	35		
NF100-SRU/HRU	Not provided	100-110VAC, 110-127VAC Not provided 200-220VAC, 220-240VAC)	_	_	15 or less	
NV100-SRU/HRU	D/Ino		_		1	0		
NF1000-SEW, NF1250-SEW/SDW	Provided	100-120VAC 200-240VAC	20	200		0	7-15	
NF1600-SEW/SDW		380-450VAC 100VDC	300		100		15-25	

Coil ratings (list of available special voltage coils)

Table 6-12-2

					V	AC										VI	С						Compatible with AC/DC
Model	24	25-27	24-48	48	50-55	60	440- 480	380- 550	440- 550	500- 550	12	24	24-36	36	36-48	48	60	110	125	220	200- 250	220- 250	24-48
NF32-SV, NF63-CV/SV/HV NF125-CV/SV/HV/SEV/HEV/RGV/UV NF125-SGV/LGV/HGV, F160-SGV/LGV/HGV NF250-CV/SV/HV/SEV/HEV/RGV/UV NF250-SGV/LGV/HGV NV32-SV, NV63-CV/SV/HV NV125-CV/SV/HV/SEV/HEV NV250-CV/SV/HV/SEV/HEV NF100-CVFU, NF125-SVU/HVU, NF250-CVU/SVU/HVU NV100-CVFU, NV125-SVU/HVU, NV250-CVU/SVU/HVU	_	_	0	-	_	-	_	_	_	-	0	_	0	_	0	-	_	_	_	-	0	_	-
NF100-SRU/HRU (*1)	-	-	0	-	-	0	-	-	-	-	0	-	0	-	0	-	0	-	-	_	-	0	-
NF400-CW/SW/SEW/HEW/REW/UEW NF630-CW/SW/SEW/HEW/REW NF800-CEW/SDW/SEW/HEW/REW/UEW NV400-CW/SW/SEW/HEW/REW NV630-CW/SW/SEW/HEW NV800-SEW/HEW, NF400-SWU/HWU, NF630-SWU/HWU	_	_	-	-	-	-	_	0	-	-	0	_	-	_	-	-	-	-	-	-	_	_	0
NF1000-SEW, NF1250-SEW/SDW NF1600-SEW/SDW	0	-	-	0	-	_	0	-	-	0	0	0	-	0	-	0	-	0	0	_	_	_	-

^{*1} Ensure that the voltage of the operating power supply for SHT is not dropped below the allowable operating voltage (70% of the rated minimum voltage value) by the input power.
*2 The operating time is the time from when the rated voltage is applied to the shunt tripping device until the main contact of the circuit breaker starts opening.
*3 Available for right pole.

k: 1. The accessory is usable at 50 Hz and 60 Hz.

7. Undervoltage Trip (UVT)

(1) Specifications for UVT and coil ratings

Table 6-13

	Specif	fication		Coil ratings		
Model	Reset type	Non-reset type	Voltage (\			Operating time (*2)
	Tieset type	Two is reset type	Standard voltage	Special voltage (*1)	(VA)	(ms)
NF50-SVFU NV50-SVFU	_	0		24VAC/DC 48VAC/DC		
NF32-SV, NF63-CV/SV/HV/HRV NF125-CV/SV/HV/RGV/SEV/HEV/UV NF125-SGV/LGV/HGV, NF160-SGV/LGV/HGV NF250-CV/SV/HV/RGV/SEV/HEV/UV NF250-SGV/LGV/HGV NV32-SV, NV63-CV/SV/HV NV125-CV/SV/HV/SEV/HEV NV250-CV/SV/HV/SEV/HEV NF100-CVFU, NF125-SVU/HVU, NF250-CVU/SVU/HVU NV100-CVFU, NV125-SVU/HVU, NV250-CVU/SVU/HVU	0	0	100-130VAC/DC 200-250VAC 380-480VAC	24VAC/DC 48VAC/DC 500-600VAC	5	30 or less
NF400-CW/SW/SEW/HEW/REW/UEW NF630-CW/SW/SEW/HEW/REW NF800-CEW/SDW/SEW/HEW/REW/UEW NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW NV800-SEW/HEW	(*4)	(*5)	Switching between 100 to 110 and 120 to 130VAC Switching between 200 to 220 and 230 to 250VAC Switching between	(°3) Switching between 24/48VAC Switching between 500 to 550/600VAC Switching between	5	5-30
NF1000-SEW, NF1250-SEW NF1600-SEW	0	0	380 to 415 and 440 to 480VAC Switching between 100 and 110VDC	24/48VDC Switching between 110/125VDC		5-35
NF400-SWU/HWU, NF630-SWU/HWU	O (*4)	_				5-30
NF100-SRU/HRU, NV100-SRU/HRU	-	0	100-110VAC 110-127VAC 200-220VAC 220-240VAC 24VDC 100-110VDC	-	10	30 or less

*1 Some special voltage models vary in voltage range.
*2 The operating time is the time from when the undervoltage tripping device is set to the no-voltage state until the main contact starts opening.

*3 The accessory is usable at 50Hz and 60Hz.
 *4 If UVT is turned on without excitation, the circuit breaker instantaneously opens and immediately trips.

*5 Only for installation on the left pole

(2) Reset type and non-reset type UVT

Reset type (Refer to Table 6-15.)

The reset type UVT has a structure which does not trip a circuit breaker even if the UVT coil is not excited when the circuit breaker handle is in the OFF or reset position. Therefore, it keeps the circuit breaker in the reset state even if the coil is not excited when the breaker is reset electrically.

When the coil in the unexcited state is turned on, the circuit breaker is normally tripped. However, the major contacts of some models of circuit breakers may instantaneously close, or, on circuit breakers with AX, the AX switches may instantaneously change over. For electrical interlock, use a non-reset type UVT.

Non-reset type (Refer to Table 6-15.)

When the UVT coil is not excited, the circuit breaker cannot be set to the off state even if the circuit breaker is tried to be reset from the tripped state. When the coil exciting voltage restores to the reference voltage or more, the circuit breaker can be reset to the off state.

(3) Time delay UVT

- This type of UVT has a time delay in operation.
- It can prevent operation upon occurrence of instantaneous power failure.

Table 6-14

UVT module	Time delay	Voltag	ge (V)
type name	Time delay	Standard voltage	Special voltage
		24/48AC	
		100-120/200-240/380-450AC	380-450/460-550/600-690AC
U-05W	Switching among 0.1, 0.3 and 0.5s	220-250/380-450/460-550AC	(Compatible with 50Hz and 60Hz)
	0.1, 0.3 and 0.35	(Compatible with 50Hz and 60Hz)	24/48DC
		100-110DC	
		100-120/200-240/380-450AC	
U-30W	Switching among	220-250/380-450/460-550AC	_
	0.5, 1 and 3s	(Compatible with 50Hz and 60Hz)	

- Notes *1 Available voltage ranges between 85% of the minimum rated voltage to 110% of the maximum rated voltage for each setting.
 - (Ex.: In the case of 100 to 120V, a voltage range of 85 to 131V is available.)
 - *2 The operating time denotes the time from when the UVT is set to the no-voltage state until the main contact of the breaker starts to open.
 - *3 Operating time ranges for each setting are as shown below. 0.1s setting: 0.1 to 0.3s, 0.3s setting: 0.3 to 0.5s, 0.5s setting: 0.5 to 1.0s,
 - 1.0s setting: 1.0 to 3.0s, 3.0s setting: 3.0 to 6.0s
 - *4 The maximum operating time is set by default.
 - *5 This value is for the minimum voltage for each rated voltage. (Ex.: 85V or less in the case of 100 to 120V.)
 - *6 This value is for the maximum voltage for each rated voltage. (Ex.: 42 to 84V in the case of 100 to 120V.)


Remark *1 Contact us for details on applicable type names and ordering procedures.


(4) Structure of UVT

The UVT mechanical unit is installed in a circuit breaker, and the UVT voltage module is installed on the outside of the circuit breaker. When the voltage drops, the UVT voltage module detects the voltage drop, and the UVT mechanical unit trips the circuit breaker.

The UVT voltage module has a vertical lead wire terminal block and is normally installed on the body. The external module will be manufactured to order.

Outline drawing

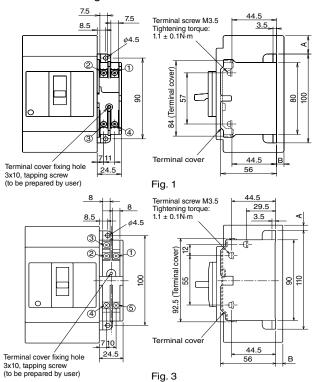

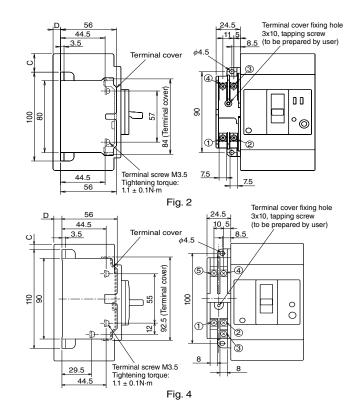

Examples of connection

Terminal symbols

Examples of connection

Table (

NF50-S NF32-S NF100-0 NF125-0

NF400-L NF1000

Short-circuit protecting device, such as fuse

① D1/P1 Control power supply terminal (COM) ② D2/P2 Control power supply terminal (rated voltage) J1/UC1 UVT coil connecting terminal 4 J2/UC2 UVT coil connecting terminal

Remarks: 1 When the UVT voltage module is installed on the body (standard), the UVT is supplied with J1/UC1 and J2/UC2 terminals connected with the UVT coil 2 When the UVT is installed on the left pole side, the UVT module terminal positions are reversed (on the er supply and load sides). Carefully connect the

Examples of connection

Fig. 5

Short-circuit protecting device, such as fuse

Terminal symbols Control power supply terminal (COM) D1/P1 D2/P2 Control power supply terminal (rated voltage Lo) D3/P3 Control power supply terminal (rated voltage Hi) 4 J1/UC1 UVT coil connecting terminal 5 J2/UC2 UVT coil connecting terminal

Remarks: 1 When the UVT is used at the rated voltage

I When the UVT is used at the rated voltage Lo, connect the control voltage to D1/P1 and D2/P2 terminals.
When the UVT is used at the rated voltage Hi, connect the control voltage to D1/P1 and D3/P3 terminals.

(Ex.) 100 to 110/120 to 130VAC
(Rated voltage Lo/rated voltage Hi)
2 When the UVT voltage module is installed on the body (standard), the UVT is supplied with J1/UC1 and J2/UC2 terminals connected with the UVT coil.

J2/UC2 terminals connected with the UVT coil.

3 When the UVT is installed on the left pole side, the UVT module terminal positions are reversed (on the power supply and load sides). Carefully connect the

Fig. 6

6-15 Installation on right pole	side		(mm)	Table 6-16 Installation on left pole s	ide		(mı	
M- d-I	Reference	Variable dimensions		Madal	Reference	Variable d	imensions	
Model	drawing	Α	В	Model	drawing	С	D	
SVFU		11	7.5	NV50-SVFU		11	7.5	
SV, NF63-CV/SV/HV		20.5	7.5	NV32-SV, NV63-CV/SV/HV		20.5	7.5	
-CVFU		20.5	7.5	NV100-CVFU	Fig. 2	30.5	7.5	
-CV/SV/HV		20.5	7.5	NV125-CV/SV/HV	"	20.5	7.5	
-SVU/HVU		41.5	7.5	NV125-SVU/HVU	Fig. 5	41.5	7.5	
-UV	Fig. 1 81.5		7.5	NV125-SEV/HEV, NV250-CV/SV/HV/SEV/HEV		38	7.5	
SEV/HEV/RGV, NF250-CV/SV/HV/RGV/SEV/HEV	Fig. 5			NV250-CVU/SVU/HVU		48	7.5	
-SGV/LGV/HGV, NF160-SGV/LGV/HGV		38	7.5	NF400-CW/SW/SEW/HEW/REW				
-SGV/LGV/HGV				NF630-CW/SW/SEW/HEW/REW				
-CVU/SVU/HVU	1	48	7.5	NV400-CW/SW/SEW/HEW		67.5	41.5	
-UV	1	113	7.5	NV630-CW/SW/SEW/HEW		67.5	41.5	
-CW/SW/SEW/HEW/REW		07.5	44.5	NF400-ZCW/ZSW/ZEW	Fig. 4			
-CW/SW/SEW/HEW/REW, NF400-SWU/HWU		67.5	41.5	NF400-SWU/HWU	Fig. 6			
-UEW(3P)	Fig. 3	107.5	138.5	NF400-UEW(3P)		107.5	138.5	
-CEW/SDW/SEW/HEW/REW, NF630-SWU/HWU	Fig. 6	76.5	41.5	NF800-CEW/SDW/SEW/HEW/REW		70.5	41.5	
-UEW(4P), NF800-UEW	7	123.5	138.5	NV800-SEW/HEW, NF630-SWU/HWU		76.5	41.5	
0-SEW, NF1250-SEW, NF-1600-SEW		161	63	NF400-UEW(4P), NF800-UEW		123.5	138.5	

8. Lead Wire Drawing

Lead wire lateral drawing ... Available to all models

Note *1 Except for BH-D6. BH-D10. BH-DN. BV-D. BV-DN and KB-D.

Specifications for lead wires

Table 6-17

Applicable model	Kind of lead wire	Lead wire thickness	Lead wire length	Example of ring mark
1000A frame or above	Heat-resistant	0.75mm ²	450mm	98/ALa (Red), 96/ALb (Blue) 95/ALc (Gray), 14/AXa (Brown) 12/AXb (Black), 11/AXC (White) C1/S1 (Red), C2/S2 (Red)
30 to 800A frames except above models	wire	0.5mm ²	45011111	J1/UC1 (White), J2/UC2 (White) A terminal symbol is indicated on each lead wire with a ring mark.

Remark: 1. Although the following models are applicable to lead wires drawn laterally, they are normally applicable to installation in close contact with the circuit breaker side faces. (The circuit breaker side faces have grooves.)

NF32-SV, NF63-CV/SV/HV~NF250-CV/SV/HV/UV NF125-SEV/HEV, NF250-SEV/HEV, NF125-RGV NF250-RGV, NF125-SGV/LGV/HGV~NF250-SGV/LGV/HGV NV32-SV, NV63-CV/SV/HV~NV250-CV/SV/HV NV125-SEV/HEV, NV250-SEV/HEV NF50-SVFU, NF100-CVFU, NF125-SVU/HVU, NF250-CVU/SVU/HVU, NV100-CVFU, NV125-SVU/HVU NV250-CVU/SVU/HVU

(When a 4-pole model among the above models has accessories installed on the right pole side, the lead wires are 400mm long.)

9. Lead Wire Terminal Block

(1) Vertical lead wire terminal block (SLT)

The lead wire terminal blocks for plug-in terminal blocks are available (P-LT). The drilling size of these terminal blocks differs from the standard size. Consult us for details.

For a flush plate type circuit breaker, a terminal block will be installed on the circuit breaker rear face. (Specify as FP-LT.)

Note *1 When the circuit breaker body is equipped with internal accessories and electrical operation device of motor-driven type (2) or spring charge type (2), the circuit breaker is normally provided with a lead wire terminal block.

MCCB

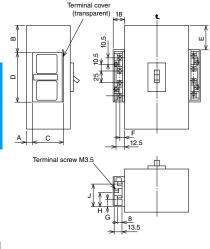


Table 6-18-1 Table of variable dimensions

(mm)

Model	Α	В	С	D	Е	F	G	Н	J
NF30-FAU, NF50-FAU (*1) 7	1.5	44.5	69	_	9	10.5	22.5	34.5
NF100-SRU (*1	16	16.5	44.5	86.5	16.5	6	10.5	22.5	34.5
NF100-HRU (*1) 22	16.5	44.5	86.5	16.5	6	10.5	22.5	34.5
NF50-SVFU	16.5	17	44.5	86.5	17	6	10.5	22.5	34.5
NF32-SV, NF63-CV/SV/HV	7	26.5	54	86.5	26.5	7	14	26	38
NF63-HDV	'	20.5	54	00.5	26.5	/	14	20	30
NF100-CVFU	7	36.5	54	86.5	36.5	7	14	26	38
NF125-CV/SV/HV	7	26.5	54	86.5	26.5	7	14	26	38
NF125-SVU/HVU	7	47.5	54	86.5	47.5	7	14	26	38
NF125-UV	7	87.5	54	86.5	87.5	7	14	26	38
NF250-UV	7	119	54	86.5	119	7	14	26	38
NF125-SEV/HEV/HDVA	7	44	54	86.5	44	7	14	26	38
NF250-CV/SV/HV/SEV/HEV/HDVA	'	44	34	00.5	44	/	14	20	30
NF125-RV, NF250-RV	7	28.5	54	86.5	28.5	7	14	26	38
NF250-CVU/SVU/HVU	7	54	54	86.5	54	7	14	26	38
NF400-CW/SW/SEW/HEW/REW, NF400-SWU/HWU		79.5	54	86.5	79.5	7	14	26	38
NF630-CW/SW/SEW/HEW/REW	41	79.5	54	00.5	79.5	/	14	20	30
NF800-CEW/SDW/SEW/HEW/REW, NF630-SWU/HWU		88.5	54	86.5	88.5	7	14	26	38
NF1000-SEW, NF1250-SEW/SDW, NF1600-SEW/SDW	62.5	173	52	86.5	173	7	14	26	38
NF400-UEW(3P)	138	119.5	54	86.5	119.5	7	14	26	38
NF400-UEW(4P), NF800-UEW	130	135.5	54	86.5	135.5	7	14	26	38
NF50-FHU	14	5	44.5	86.5	5	7	10	22	34
NF100-FHU	14	7	44.5	86.5	-4	7	10	22	34
NF400-HDW	47	79.5	54	86.5	79.5	7	14	26	38
NF800-HDW	47	88.5	54	86.5	88.5	7	14	26	38

Note *1 The terminal positions are different from those shown in the left figure. Consult us for details.

Remark: 1. Terminal screw tightening torque: M3.5 ... 1.1 ± 0.1N·m

10 22 34

ELCB Terminal cover 0

Table 6-18-2 Table of variable dimensions

D NV30-FAU, NV50-FAU 1.5 44.5 69 10.5 22.5 34.5 16 16.5 44.5 10.5 22.5 34.5
 10.5
 22.5
 34.5

 10.5
 22.5
 34.5
 NV100-HRU (*1) 22 16.5 44.5 86.5 6 17 54 17 NV50-SVFU 54 16.5 86.5 16.5 86.5 6 NV32-SV, NV63-CV/SV/HV NV100-CVFU 26.5 54 86.5 26.5 54 86.5 14 26 54 36.5 86.5 36.5 54 14 86.5 26 38 NV125-CV/SV/HV 26.5 26 NV125-SVU/HVU 47.5 54 86.5 47.5 54 86.5 14 26 38 NV125-SEV/HEV, NV250-CV/SV/HV/SEV/HEV 86.5 54 86.5 14 38 26 NV250-CVU/SVU/HVU 54 54 86.5 54 54 86.5 7 14 26 38 NV400-CW/SW/SEW/HEW/REW 41 79.5 54 86.5 79.5 52 92 14 26 38 26.5 NV630-CW/SW/SEW/HEW, NV400-SWU/HWU 41 54 86.5 26.5 52 92 NV800-SEW/HEW 88.5 88.5 14 38 26 NV50-FHU 14 44.5 14 5 10 22

44.5 86.5

14

-4 44.5 86.5

Notes *1 The terminal positions are different from those shown in the left figure. Consult us for details. Remark: 1. Terminal screw tightening torque: M3.5 ... 1.1 ± 0.1N·m

14

14-terminal SLT

SLT for installing three or more internal accessories on the left pole side

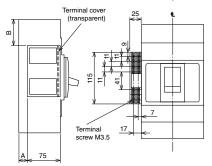


Table 6-18-3 Table of variable dimensions

(mm)

(mm)

Mo	Model			
MCCB	ELCB	A	В	
NF400-CW/SW/SEW NF400-HEW/REW NF630-CW/SW/SEW NF630-HEW/REW	NV400-CW/SW/SEW NV400-HEW NV630-CW/SW/SEW/HEW	20	60	
NF400-UEW(3P)	_	117	100	
NF800-CEW/SDW/SEW NF800-HEW/REW	NV800-SEW/HEW	20	69	
NF400-UEW(4P), NF800-UEW	-	117	116	
NF1000-SEW, NF1250-SEW NF1600-SEW	-	35	154	

Remarks: 1. The terminal positions are different from those shown in the left figure. Consult us for details. 2. Terminal screw tightening torque: M3.5 ... 1.1 ± 0.1N·m

10. Test Button Module (TBM)

● The test button is kept pressed while control input voltage is applied to the button. (When ELCB of time delay type is used, apply voltage for 2 seconds or more.)

NV100-FHU

- The test button module is supplied with voltage through a circuit isolated from the main circuit. It can share the control sequence with SHT of a molded case circuit breaker.
- The test button modules can be connected in parallel.
- The module is normally provided with a vertical lead wire terminal block (SLT).


Table 6-19

Model	NV32-SV NV63-CV/SV/HV NV125-CV/SV/HV NV125-SEV/HEV NV250-CV/SV/HV/SEV/HEV NV50-SVFU NV100-CVFU NV105-SVU/HVU	NV400-CW/SW NV630-CW/SW NV400-SEW-NV800-SEW NV400-HEW-NV800-HEW				
Control input Rated voltage (V)	NV250-CVU/SVU/HVU Compatible with 100 to 240AC and 100 to 240DC (24DC) (*1)					
Control input (VA)	1.5VA or less	1VA or less				
Reference drawing	Fig. 1	Fig. 2				

*1 Unless otherwise specified, the module will be manufactured for 100 to 240VAC and 100 to 240VDC.

In the case of 24VDC, specify the voltage.

1. The length of the lead wires to be connected to TBM1 and 2 shall be 100 mm or less.

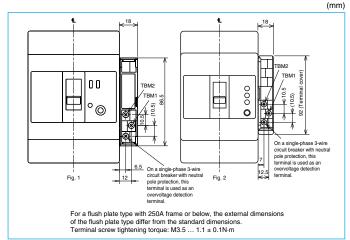

11. Pre-Alarm Module (PAL)

The pre-alarm is a function to output an alarm when the load current exceeds the preset current value. It is helpful in securing continuous power supply and preventive maintenance.

It can be fitted to electronic circuit breakers with a frame size from 125 to 1600A.

■ 125 and 250A frames


Pre-alarm module (PAL module)
 The standard modules have SLT. Other internal accessories cannot be installed on the right pole side.


A control power supply (compatible with 100 to 240VAC and DC) is necessary. The control power supply voltage range is 85 to 246VAC/DC, and the required volt-ampere is 5VA.


Table 6-20-1

Model	Switching capacity Contact output (1a)	Resetting method
NF125-SEV NF125-HEV NF250-SEV NF250-HEV NV125-SEV NV125-HEV NV250-SEV NV250-HEV	125VAC 2A 30VDC 2A 250VAC 2A 100VDC 0.3A	Press the reset button, or turn off the control power supply.

Pre-alarm characteristics

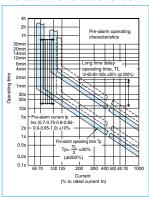

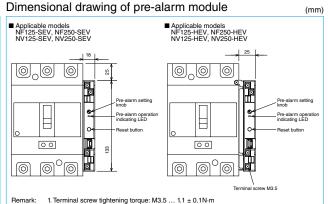

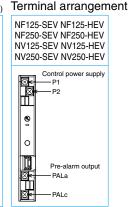

Pre-alarm LED indication

When the load current exceeds the preset current value, the LED lamp on the pre-alarm module front panel starts blinking. When the pre-alarm output is given, the lamp stops blinking and turns on.

• Pre-alarm current setting (Ip setting)
The pre-alarm current can be set to the rated current In × 0.7-0.75-0.8-0.85-0.9-0.95-1.0 with the knob on the pre-alarm module front panel.

■ 400A frame or above

Solid state relay (SSR) output (PAL lead)

The lead wires are drawn out. On the right pole side, only internal accessories with lead wires drawn out can be installed. A control power supply

Table 6-20-2

Model	Switching capacity Solid state relay (SSR) – Non-contact output	Resetting method
NF400-SEW NF400-HEW NF400-REW NF400-UEW NF630-SEW NF630-HEW NF630-REW NF800-CEW NF800-SEW NF800-HEW NF800-REW NF800-UEW NF1000-SEW NF1500-SEW NF1600-SEW N	24 to 240VAC/DC 20mA	When the load current becomes lower than the preset current value, the alarm is reset.

Pre-alarm module (PAL module)

The standard modules have SLT. Other internal accessories cannot be installed on the right pole side.


A control power supply (compatible with 100 to 200VAC) is necessary. The control power supply voltage range is 80 to 242VAC, and the required volt-ampere is 10VA.


Table 6-20-3

Model	Switching capacity Contact output (1a)	Resetting method
NF400-SEW NF400-HEW NF400-REW NF400-UEW NF630-SEW NF630-HEW NF630-REW NF800-CEW NF800-SEW NF800-HEW NF800-REW NF800-UEW NF1000-SEW NF1250-SEW NF1600-SEW NV400-HEW NV630-SEW NV630-HEW NV800-SEW NV800-HEW	100VAC or 200VAC, 2A	Press the reset button, or turn off the control power supply.


Pre-alarm characteristics

Detailed drawing of pre-alarm module

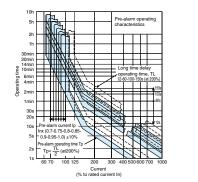

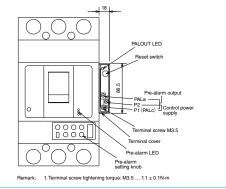

Pre-alarm module output rating

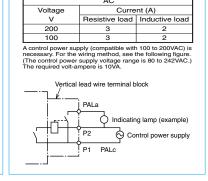

• Pre-alarm LED display (standard device)
When the load current exceeds the preset current value, the LED lamp on the circuit breaker front panel starts blinking. When the pre-alarm output is given, the lamp stops blinking and turns on at PALOUT LED.

Pre-alarm current setting (Ip setting)


The pre-alarm current can be set to the rated current $\ln \times 0.7-0.75-0.8-0.85-0.9-0.95-1.0$ with the knob on the circuit breaker front panel.

1. F-Type Operating Handle Operating handle of breaker mount type to be installed to circuit breaker body

Appearance (Color: Munsell N1.5)




- The handle provides an isolating function in combination with the circuit breaker body (except F10SW and above).
- It has a safety device which prevents the circuit breaker turning on while the door is open.
 It can be locked in the OFF position. (Up to 3 commercially available padlocks (35mm and 40mm) can be fitted. A type which can be locked in the ON or OFF position can be manufactured. Specify the type if required.) On circuit breakers with a frame size of
- manuactured. Specify the type if required.) On circuit breakers with a frame size of 1000A or above, the handle can be locked in the ON or OFF position. (If it is necessary to lock the handle only in the OFF position, specify so.) It is in protection class IP54 (IEC 60529). (For circuit breakers with a frame size of 1000A or above, the protection class (IEC 60529) is IP3X (IP5X when dust-proof packing is provided).

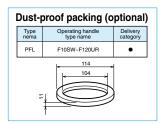



The left drawing shows the


relationship between the hinges

and circuit breake viewed from the load side of the circuit breaker.

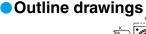

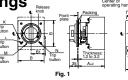

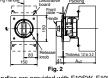

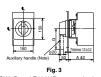

Center of

hinge and

breaker ...

Note Auxiliary handles are provided with F10SW, F10SW4P and F120UR as standard Auxiliary handles (F-HT) are provided for F-4S ~ F-6SUL as option


Dimensional drawings of front plate drilling









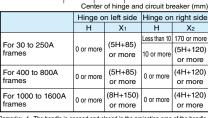



The handle is opened and closed in the projection area of the handle and does not run over the projection area of the circuit breaker (except when the auxiliary handle is provided.)

When the operating handle is fitted to NV, the test button cannot be pressed easily. If necessary, use a circuit breaker with TBL or TBM When using an Earth Leakage Alam Breaker, use the externally resetting type (ECA-SLT RST) or automatically resetting type (ARS).

Dimensional drawings of circuit breaker mounting holes



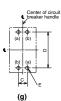

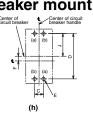

Door lock withstand load

	F(N)	L(mm)
F-05~F-2	500	50
F-4~F-8	500	68

Table 6-21 Table of variable dimensions

		pening ition		Applicable m	nodel		Refere	ence dr	rawing				Dime	nsions	(mm)				Trip	
Type name	OFF	Reset	MCCB	Number of poles	ELCB	Number of poles	Dimensional drawing	Drillin	g plan	A (*1)	В	B1	С	D	Е	F	G	J	button position (*4)	Mounting screw
F-05SV2	_	С	NF32-SV	2P	_	_			f	` ,			13						N	
F-05SVE2		0	NF63-CV, NF63-SV, NF63-HV							105						_		_	.,	
F-05SV F-05SVE (*2)	-	0	NF32-SV NF63-CV, NF63-SV, NF63-HV		NV32-SV NV63-CV, NV63-SV, NV63-HV	2P • 3P		b	g				25	111					L	(a) Circuit breaker
F-1SV2, F-1SVE2	-	0	NF125-CV, NF125-SV	2P	_	-	1		f				15						N	mounting
F-1SV F-1SVE	-	0	NF125-CV, NF125-SV NF125-HV	3P • 4P	NV125-CV, NV125-SV, NV125-HV	3P • 4P			g	105			30			-		-	L	screw (2 pcs.)
F-1UV. F-1UVE	_	0		2P • 3P • 4P		_	1	С	h				00	172	1	31		86		(b) Circuit
F-2SV F-2SVE	-	0	NF125-SEV, NF125-HEV, NF125-RV NF125-SGV, NF125-LGV, NF125-HGV NF160-SGV, NF160-LGV, NF160-HGV NF250-SGV, NF250-LGV, NF250-HGV NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV, NF250-RV	2P • 3P • 4P	NV125-SEV, NV125-HEV NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	3P • 4P	Fig. 1	b	f	107	104	58	35	126	M4 screw	-	_	1	К	breaker handle mounting screw (2 pcs.) F-05SV2 F-05SVE2
F-2UV, V-2UVE	_	0	NF250-UV	2P • 3P • 4P	_	-		С	h					201	οι ψυ	38		100.5	K	F-1SV2
F-1SVUL	-	0	NF125-SVU, NF125-HVU	3P	NV125-SVU, NV125-HVU	3P	1	С	h	105			30	123	1	6		61.5	L	F-1SVE2 F-05SRUL2
F-2SVUL	-	0	NF250-CVU, NF250-SVU, NF250-HVU		NV250-CVU, NV250-SVU, NV250-HVU	3P			g	107			35	126					К	F-03SVUL2 F-05SVUL2
F-05SRUL2	-	0	NF100-SRU NF100-HRU	2P	NV100-SRU	2P		b	f	110 116			0	92						Only the screws
F-05SRUL	-	0	NF100-SRU NF100-HRU		NV100-SRU NV100-HRU	3P			g	110 116			25	92		-		-	_	(b) are used for the
F-03SVUL2 F-03SVUL	_	0 0	NF50-SVFU	2P 3P	NV50-SVFU	2P 3P		а	f g		80	50	9	82.5					М	following models.
F-05SVUL2	_	0		2P	_	_	1		f	105		_	13		1				N	-
F-05SVUL	_	0	NF100-CVFU		NV100-CVFU	3P	1	b	g		104	58	25	111					L	
F-4S F-4SE	-	0	NF400-CW, SW, SEW, HEW, REW NF630-CW, SW, SEW, HEW, REW		NV400-CW, SW, SEW, HEW NV630-CW, SW, SEW, HEW	3P, 4P		d	g	183			44	194		-				
F-4U F-4UE	-	0	NF400-UEW	3P	-	-		е	h	280			44	234		20				
F-8S F-8SE	-	0	NF800-CEW, SDW, SEW NF800-HEW, REW	2P, 3P, 4P	NV800-SEW, HEW	3P	Fig. 2	d	g	183		_	70	243	M6 screw or ø7	-	_			(a)(b) Circuit
F-8U F-8UE	-	0	NF800-UEW NF400-UEW(4P)	3P, 4P	-	-		е	h	280	_	_		290	σιψί	23.5		-	-	breaker mounting
F-4SUL	_		NF400-SWU/HWU	3P	-	-		d		183			44	194]					screw
F-6SUL	_	0	NF630-SWU/HWU	3P	_	-		u	g	103			70	243						(4 pcs.)
F10SW (*3)	-	0	NF1000-SEW NF1250-SEW/SDW NF1600-SEW/SDW	2P, 3P	_	_	Fig. 3	d	g	221	_	_	70	375	M8 screw or ø10	-	200			

- *1 The dimensions for the front connection type are shown. On some models of the rear connection type and plug-in type, the reference surface for mounting the circuit breaker may

 - connection type and plug-in type, are research solutions.

 2. For the 4-pole plug-in type, a special handle is required. Consult us for details.

 3. If a handle which can be locked only in the OFF position is required, specify so.

 4. The circuit breaker can be tripped by operating the trip button while the door is open.

 5. Do not remove the sponge packing used to secure the protection class IP51. Fit the supplied packing without fail.

 The handle cannot be used when the circuit breaker is installed on IEC 35mm rails.
- The handles with E in their model names are designed for emergency stop devices. The standard handles are Reset Open Type which can open the doors only when they are reset to open. OFF Open type handles which can open the doors when they are in the OFF position can be manufactured to order.


 A handle which can be operated and can indicate the ON and OFF positions in the same manner as the standard models even if the circuit breaker is installed horizontally can be manufactured to order.

 - manufactured to order. F10SW and higher models do not conform to the isolation function. Handles which are opened and closed in the OFF position can be opened also in the

Installation procedure For details, please refer to Operating Handle Installation Manual supplied with the product.

1) Installation to a breaker


Install the operating handle to the circuit breaker in accordance with the following procedure.

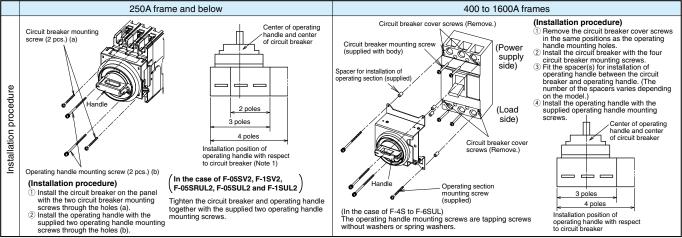

*1 In the case of F-05SRUL2, the center of the operating handle is the same as the center of the circuit breaker.

2 Installation of decorative board and retaining board

Drill holes in the door according to the drilling size shown on the previous page, and tighten the decorative board and retaining board with the supplied countersunk screws. In the case of 800A frame or below, fit the supplied packing to the position shown right.

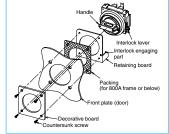

Door locking mechanism

The panel door can be opened only when the operating handle is operated to open (reset). (On F-4S to F10SW, the door lock is held in the released state even if the handle is returned to OFF.) The door can be opened when the handle is in the ON position if the release knob is operated with a tool.

Operation locking mechanism

Circuit breakers with a frame size of 800A or below can be locked by setting the handle in the OFF position. (Operating handles which can lock circuit breakers in the ON or OFF position can be manufactured.) Operate the locking part, and lock the handle with padlocks. Up to three padlocks can be fitted.

Lockout hasps (scissors locks) can be used.


If the circuit breaker trips even when the operating handle is locked in the ON position, also the operating handle indicates that it has tripped. F-2SUL or below: Only when one 35mm padlock (weighing 70g or less) is used F-4S or above: Only when one 40mm padlock (weighing 100g or less) is used To 800A frame or below, padlocks with dimension B of 3mm to 8mm can be applied.

For 1000A or above, padlocks with dimension of 3mm to 6mm can be applied. (When using padlocks of 3mm or less, please consult us.)

Circuit breaker installation direction (except UL 489 listed circuit breakers)


We can supply circuit breakers on which the handles and their ON and OFF positions are

in the same directions as on vertically installed circuit breakers even when they are installed horizontally. The door drilling size is identical. If you intend to install an operating handle on a horizontally installed circuit breaker, specify "Y" (horizontal installation with power supply on the left) or "Z" (horizontal installation with power supply on the right) at the end of the model name. (Ex.: F-4S Y)

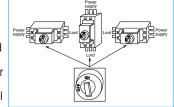


Sealing of release knob

The use of an optional part, Release Protection "F-RCS", can prevent the panel door being opened by operating the release knob. (800A frame or below)

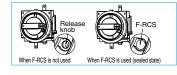

Operation Lock Devices

(1) Padlock

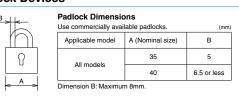

(2) Lockout Devices (Scissors Lock)



How to order


For 800A frame or below, specify the following specification symbols together with the model name.

- Operation lock: LF.....Lock in OFF position · Operation lock: LNLock in ON or OFF position
- · Door opening: DR ······Reset to open
- · Operation lock: DF ······Open in OFF position
- · Installation direction: Blank ··· Power supply upward
- · Installation direction: Y Power supply on left
- · Operation lock: Z.....Power supply on right

For a standard product with a frame size of 1000A or above, specify the model name. When it is required to enable the operation lock only in the OFF position, specify the model name and "only lock in OFF position."

If you intend to seal the release knob, place an order for the release protection. (Lot: 10 pcs.)

Interpretation of model name

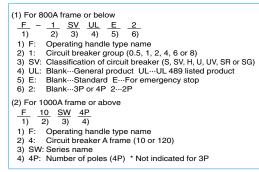

2. V-Type Operating Handle


Appearance (Color: Munsell N1.5)




Operating handle of door mount type consisting of operating section to be mounted on circuit breaker body and operating handle on panel

- The handle provides an isolation function in combination with the circuit breaker hody.
- Conforming to the safety regulations of EN Standard (EN 60204-1)
 Protection class (IEC 60529) IP65 as standard
- The handle can be locked only in the OFF position with up to three commercially available padlocks (35mm or 40mm).
- The panel door can be opened in the OFF position. In the ON and trip positions, the panel door is locked and cannot be opened. However, the door can be opened even in the ON and trip positions by operating the release part with a tool.



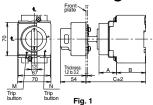

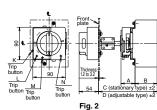


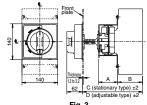



Fig. 3

Note Auxiliary handles (F-HT) are provided for V-4S ~ V-6SUL as option


Dimensional drawings for front plate drilling



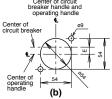

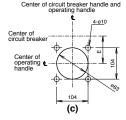

Center of hinge and breaker

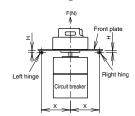


Relationship between hinges and circuit breaker viewed from load side of circuit breaker

		(mm)
	Н	Х
For 30 to 250A		5H+100
frames	0 or more	or more
For 400 to 800A	o or more	8H+150
frames		or more

The above figure shows the relationship viewed from the load side

Dimensional drawings of circuit breaker mounting holes

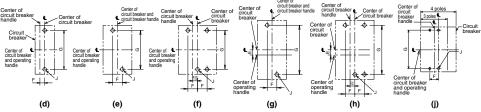

Door lock withstand load

	F(N)
30 to 800A frames	200

Table 6-22 Table of variable dimensions


Тур	e name	A	pplicable	model			ence d	rawing										
Stationary type	Adjustable type	мссв	Number	ELCB	Number	sional	Dri	lling an	А	В	Stationary type	Adjus type D		E	F	G	J	Trip button position (*5)
			of poles		of poles	ie o					С	(min)	(max)					
V-05SV2 V-05SVE2		NF32-SV NF63-CV, NF63-SV, NF63-HV	2P	-	-			d				-	-		12.5			N
V-05SV V-05SVE		NF32-SV NF63-CV, NF63-SV, NF63-HV		NV32-SV NV63-CV, NV63-SV, NV63-HV	2P, 3P	-		е				162	300	-	25			L
V-1SV2, V-1SVE2	1	NF125-CV, NF125-SV	2P	_	-	1	l	d	39			_	-		15	111		N
V-1SV		NF125-CV, NF125-SV	3P 4P	NV125-CV, NV125-SV, NV125-HV	3P 4P	-		e f						_				
V-1SVE	(*1) Adjusting unit V-AD3S is	NF125-HV	2P, 3P 4P	_	-	Fig.	ь	e f		61	125				30		M4 screw	L
V-1UV V-1UVE		NF125-UV	2P, 3P 4P	_	-	2	5	g h	39	"	123			30.5		172	or ϕ 5	
V-2SV V-2SVE	, , , , , , , , , , , , , , , , , , , ,	NF125-SEV, NF125-HEV, NF125-SGV NF125-LGV, NF125-HGV, NF125-RGV NF160-SGV, NF160-LGV, NF160-HGV NF250-CV, NF250-SV, NF250-HV	2P, 3P	NV125-SEV, NV125-HEV NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	3P			е	41			162	300	-	35	126		V
		NF250-SGV, NF250-LGV, NF250-HGV NF250-SEV, NF250-HEV, NF250-RGV	4P	NV250-5EV, NV250-NEV	4P			f	41						35			K
V-2UV V-2UVE		NF250-UV	2P, 3P 4P	_	-			g h						37.5		201		
V-03SVUL2 V-03SVUL	-	NF50-SVFU	2P 3P	NV50-SVFU	2P 3P	Fig.	а	d e	37	61	125	-	-	ı	9 18	82.5		M N
V-05SVUL2	(*1)	NF100-CVFU	2P	_	-		b	d	39	61	125	-	-		12.5	111	M4	N
V-05SVUL	- V-AD3S is			NV100-CVFU	3P			е		J.	123	162	300		25		screw or $\phi 5$	L
V-1SVUL	mounted on	NF125-SVU, NF125-HVU	3P	NV125-SVU, NV125-HVU	3P		ь	g	39	61	125	162	300	6	30	123	Σ. φο	L
V-2SVUL	stationary type.	NF250-CVU/SVU/HVU	3P	NV250-CVU/SVU/HVU	3P	Fig.		е	41			. 52	550	-	35	126		K
V-05SRUL2		NF100-SRU NF100-HRU	2P	NV100-SRU	2P	, '		d		61 67	130	_	_		0		M4	
		NF100-HRU NF100-SRU		NV100-SRU	-	-	b		44	61	130	167	305	-	_	92	screw	-
V-05SRUL	i e	NF100-BRU	3P	NV100-SH0	3P			е		67	136	173	311		25		or <i>φ</i> 5	
V-4S V-4SE	Adjusting unit	NF400-CW/SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW	2P. 3P.	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	3P, 4P			j		97	191	233	300	-	44	194		
V-4U V-4UE		NF400-UEW	3P	_	-	Fig.	С	h	76	194	288	330	397	20		234	M6 screw	
V-8S V-8SE	, , , po.	NF800-CEW/SDW/SEW/HEW/REW	2P, 3P, 4P	NV800-SEW/HEW	3P	3			/0	97	191	233	300		70	243	or ϕ 7	_
V-4SUL V-6SUL		NF400-SWU/HWU NF630-SWU/HWU	3P 3P	_	-	-		١,		"		_50	550		44 70	194 243		

- 11 For the adjustable type, purchase the optional adjusting unit V-AD3S or V-AD3L.
 22 The dimensions of the adjustable type models provided with the adjusting unit V-AD3S or V-AD3L are shown
 33 When using the operating handle for a plug-in type model with a frame size of 250A or below, specify so
 41 The dimensions on the front connection type are shown. For the rear connection and plug-in
 types, separately consult us.
 45 The circuit breaker can be tripped by operating the trip button while the door is open.
 (The trip button position varies depending on the model.)
 46 The handle cannot be used when the circuit breaker is installed on IEC 35mm rails.
- Remarks
- The products whose model names contain E are designed for emergency stop.
 When the operating handle is fitted to NV, the test button cannot be pressed easily. If necessary, use a circuit breaker with TBL or TBM. When using an Earth Leakage Alarm Breaker, use the externally resetting type (ECA-SLT) or automatically resetting type (ARS).

Installation procedure For details, please refer to Operating Handle Installation Manual supplied with the product.

1) Installation to a breaker

Install the operating handle to the circuit breaker in accordance with the following procedure.

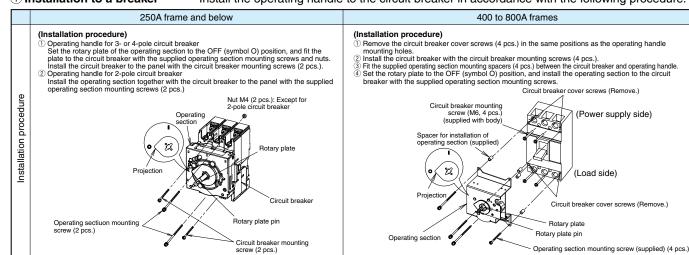

Operating handle section mounting screw (250A frame or below: 2 pcs. 400A frame or above: 4 pcs.)

Operating handle section

Handle

(2) Installation of operating handle section

Drill a hole in the door according to the dimensional drawing for front plate drilling given on the previous page, and install the operating handle section in accordance with the following procedure.

[Confirmation items]

- 1. The handle should turn smoothly to the ON and OFF positions.
- 2. When the handle is turned slightly in the ON direction (approx. 5 degrees) when in an

OFF state, it should slowly return to the OFF position on its own. Furthermore, when in this state, the OFF position should not change when the handle is lightly forced in the reset direction.

- 3. When released, the front plate should open and then immediately close.
- 4. The operating handle section should be parallel with the breaker.

Door locking mechanism

The operating handle is provided with an interlock mechanism to prevent the door opening in the ON and TRIP positions. In the OFF position, the door can be opened. However, the door can be opened in the ON or TRIP position by pressing the release knob in the arrow direction with a tool (3mm wide and 1.8mm thick).



Front plate

Operation locking mechanism

(1) Operating handle section


Operation lock can be set only in the OFF Position. Up to three commercially available padlocks (A = 35 or 40mm) can be fitted. Lockout hasps (scissors locks) can be used. When the operating handle section is locked with padlocks, also the door is locked.

2 Operating section

The operating section can be locked so that the circuit breaker will not be turned on carelessly when the inside of the panel is inspected with the panel door open. Fit a padlock through the hole in the operating section of the operating handle.

 Adjusting unit
 The height from the circuit breaker mounting surface to the panel door can be adjusted by fitting the optional adjusting unit V-AD3S or V-AD3L. Cut the shaft of the adjusting unit according to the height.

Note The adjusting unit is not applicable to 2-pole external type circuit breakers. If it is used on a 2-pole external type circuit breaker, the positions may not be correctly displayed.

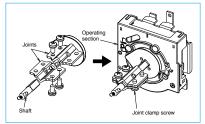

(Power supply side)

(Load side)


Rotary plate

Circuit breaker cover screws (Remove.)

Make adjustments with the adjusting unit as stated below.

1) External dimension drawing

Front plate Thickness

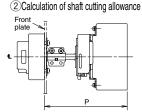

		wax.							
T	Dimensio	ons (mm)	Cutting allowance	Calculation					
Type name	Min.	Max.	Culling allowance	Calculation					
V-05SV V-05SVUL			0. 6						
V-1SV V-1SVUL V-1SUL	162	300	Shaft $\stackrel{\circ}{\square}$						
V-2SV V-2SVUL V-2SUL			175 Cutting allowance	(Cutting allowance)(P max)(panel size)					
V-2SGUL	180	318		X = 300 mm - P					
V-4S			Shaft 01						
V-8S	233	300							
V-4SUL V-6SUL			109 Cutting allowance						

Note The unit is applicable to operating handles for emergency stop (E)

Padlocks


The user must prepare padlocks.

The dimensions of the padlocks are the same as those shown on page 134.

How to order

Specify the model name of the operating handle. For adjustable type, place an order for the adjustment unit. (One lot includes 1 pc.) 250A frame or below: V-AD3S 400 to 800A frames: V-AD3L

Interpretation of model name

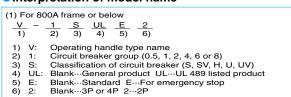



3. C-type (cable-type) Operating Handle


- The panel door can only be opened in the OFF position.
- It has a safety device which prevents the circuit breaker turning on while the door is open.
- The handle can be locked only in the OFF position with up to three commercially available padlocks.
- The panel door can be opened in the ON position by turning the release knob.
- Protection class (IEC 60529) IP23 as standard.
- The handle does not provide an isolation function.


Outline drawings


Dimensional drawings of circuit breaker mounting holes

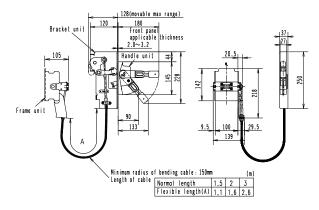


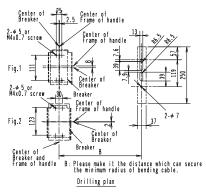

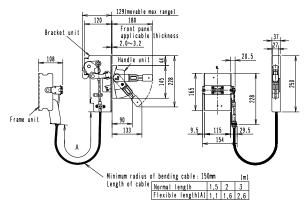

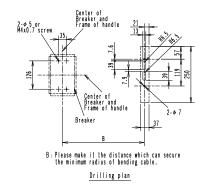

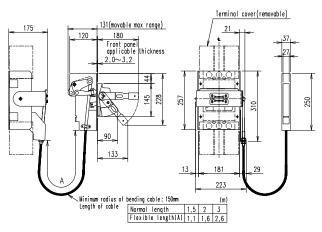

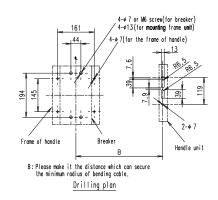


Door interlock drawing

Table 6-23

	Applicat	le model	Number	Reference drawing			
Type name	мссв	ELCB	of poles	Dimensional drawing	Drilling plan		
C1SVU	NF100-CVFU	NV100-CVFU		Fig.1			
01300	NF125-SVU/HVU	NV125-SVU/HVU	3P	Fig. i	а		
C2SVU	NF250-CVU/SVU/HVU	NV250-CVU/SVU/HVU	35	Fig.2	b		
C4SWU	J NF400-SWU/HWU NV400-SWU/HWU			Fig.3	С		

Notes *1 Only 3-pole models are available.

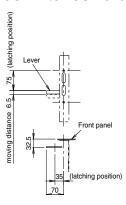


^{*2} For internal accessories, only models with lead wires drawn out can be used.

4. Terminal Covers

The terminal covers are used to avoid exposure of live parts. Many kinds of terminal covers, including large terminal covers (TC-L), small terminal covers (TC-S), transparent terminal covers (TTC), rear terminal covers (BTC) and plug-in terminal covers (PTC), for various models and applications are available, and they are helpful. (The terminal covers cannot be fitted to electrically operated circuit breakers of spring charged type (2) and motor-drive type (2). The standard terminal covers can be used for the spring charged type (1). For the motor-drive type, special terminal covers can be manufactured. Consult us for details.)

Quick terminal covers

These covers are very convenient because they can be fitted only by inserting them into the mounting holes in the circuit breaker body. To remove the terminal cover, shift the projections of the terminal cover with the tip of a slotted screwdriver or finger, and draw it out.

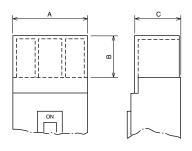

(TC-L·TC-S·TTC)

Table of variable dimensions

Table 6-24 Large terminal covers (TC-L)

		Number	Applicable	model	Dim	ensions	(mm)		Contents	;		
Type name	Color	of poles of circuit breaker	МССВ	ELCB	Α	В	С	Number of covers	Cover mounting screw	Sealing plate	Appearance	Remarks
TCL-05FH2	White	2	NF50-FHU	NV50-FHU	50	27	55.5	2	-	-		
TCL-05FH3	White	3	NF32-SV		75	27	55.5	2	-	-		
TCL-05SV2 (*1)(*7)	White	2	NF63-CV/SV/HV	-	50	25	65.5	2	-	2		
TCL-05SV2L (*1)(*8)	White	2	NF32-SV NF63-CV/SV/HV	-	50	40	65.5	2	-	2	- Labour	
TCL-05SV3 (*2)(*7)	White	3	NF32-SV NF63-CV/SV/HV	NV32-SV, NV63-HV	75	25	65.5	2	-	2	Berne aren	
TCL-05SV3L	White White	2, 3	NF32-SV, NF63-CV/SV/HV	NV63-CV/SV NV32-SV, NV63-HV	75	40	65.5	2	_	2		
(*2)(*8)	White	2, 3	- NEGO 0\/#!\/	NV63-CV/SV								
TCL-05SV4 (*2) TCL-1SV2 (*1)	White	2	NF63-SV/HV NF125-CV/SV		100 60	25 40	65.5 65.5	2	-	2		
	White	3	NF125-CV/SV	NV125-CV/SV/HV								
TCL-1SV3 (*2)	White		NF125-HV/UV	-	90	40	65.5	2	-	2		
TCL-1SV4 (*2)		4	NF125-SV/HV/UV	NV125-SV/HV	120	40	65.5	2	-	2		
TCL-1FH3	White	3	NF100-FHU	NV100-FHU	75	42	55.5	2	-	2		
TCL-2SV3 (*2)(*9)(*11)	White	2, 3	NF125-SEV/HEV	NV250-CV/SV/HV NV250-SEV/HEV NV125-SEV/HEV	105	40	65.5	2	-	2		
TCL-2SV3L (*2)(*10)(*11)	White	2, 3		NV250-CV/SV/HV NV250-SEV/HEV NV125-SEV/HEV	105	50	65.5	2	-	2		
TCL-2SV4 (*2)(*4)(*11)	White	4		NV250-SV/HV NV250-SEV/HEV NV125-SEV/HEV	140	40	65.5	2	-	2	Quick type	
TCL-4SW3 (*2)	White	2, 3	NF400-CW/SW/SEW NF630-CW/SW/SEW NF400-SEW with MDU (*6)	NV400-CW/SW/SEW NV630-CW/SW/SEW	171	110	99.5	2	-	2	The cover can be sealed with the sealing plate.	
, ,	White	3	NF400-UEW (*3)		171	110	132.5/196.5	2	_			
TCL-4SW4 (*2)	White	4	NF400-SW/SEW/HEW NF630-SW/SEW	NV400-SEW/HEW NV630-SEW	240	110	105	2	6	-		
TCL-8SW3 (*2)	White		NF400-SEW with MDU (*6) NF800-CEW/SDW/SEW/HEW/REW NF800-SEW with MDU/HEW with MDU		224	155	103.5	2	4	_		
102 00110 (2)	White	3	(*6)	-		100	100.0	-				
TCL-8UW3	Transparent	3	NF800-UEW (*3)	_	220	155	146/194.5	2	4	-		
TCL-8SW4 (*2)	White	4	NF800-SEW/HEW NF800-SEW with MDU/HEW with MDU (*6)	-	294	155	103.5	2	6	-		Use in combination
TCL-8UW4	Transparent	4	NF400-UEW, NF800-UEW (*3)	-	290	155	146/194.5	2	6	-	8	with insulating
TCL-10SW3	Transparent	3	NF1000-SEW NF1250-SEW/SDW	-	220	150	139	2	4	-		barrier.
TCL-10SW4	Transparent	4	NF1000-SEW NF1250-SEW/SDW	-	290	150	139	2	4	-		
TCL-05SRU2 (*2)	White	2	NF100-SRU NF100-HRU	NF100-SRU -	50	40	66 72	2	4	_	Screw type	
TCL-05SRU3 (*2)	White	3	NF100-SRU NF100-HRU	NF100-SRU NF100-HRU	75	40	66 72		-	_		
	White	2	NF50-SVFU	NV50-SVFU	36	30	65.5	2	-	-	Quick type	
	White	3	NF50-SVFU	NV50-SVFU	54	30	65.5	2	-	-	(Remove the existing cover from the body, and fit the terminal cover.)	
TCL-05SVU2 (*1)(*7)		2	NF100-CVFU		50	25	65.5	2	2	-		
TCL-05SU2L (*1)(*8)		2	NF100-CVFU	- NIV(100 C)/(FL)	50	40	65.5	2	2	-	Screw type	
TCL-05SVU3 (*2)(*7)		3	NF100-CVFU	NV100-CVFU	75	25	65.5	2	2	_	~	
TCL-05SVU3L (*2)(*8)		3 2, 3	NF100-CVFU NF125-SVU	NV100-CVFU	75	40	65.5	2	2	-	Screw type	
TCL-1SVU3 (*2)	White	3	NF125-HVU	NV125-SVU/HVU	90	40	65.5	2	2	-	(Remove the existing cover from the body, and fit the terminal cover.) Screw type	
(*2)(*9)	White	3	NF250-CVU/SVU/HVU	NV250-CVU/SVU/HVU	105	40	65.5	2	2	-	(Remove the existing cover from the body, and fit the terminal cover.) Screw type	
(*2)(*10)	White	3	NF250-CVU/SVU/HVU	NV250-CVU/SVU/HVU	105	50	65.5	2	2	-	(Remove the existing cover from the body, and fit the terminal cover.)	
TCL-4SWU	White	3	NF400-SWU/HWU	_	171	110	99.5	2	-	2	Quick type	
TCL-6SWU	Transparent	3	NF630-SWU/HWU	-	224	155	103.5	2	4	-	Screw type	Use in combination with insulating barrier.
					_				_			

- Notes *1 For a circuit breaker with F or V type operating handle, specify the model name
 - with F at the end.

 (F or V type operating handle dedicated models, screws are used for fixing.)

 2 The standard models can be used in combination with F and V Type Operating

 - Handles.

 3 The dimension C is the size on the power supply side and load side.

 4 When a crimp terminal applicable to wires with a size of 117.2 to 152.05mm² (Model 2CR-150 or CB150-S8) is used, TC-L cannot be fitted. Insulate the terminal from TC-S with insulating tube or taping.

 5 In the case of installation on the body, specify the model name with-MDU at the end.

 6 It cannot be installed in the case of installation on the body.

 7 Applicable to circuit breakers with rating of 75A or less (max. wire size 25mm²)
- *8 Applicable to circuit breakers with rating of 125A or less (max, wire size 60mm²)

- Applicable to circuit breakers with rating of 200A or less (max. wire size 00mm²)
 Applicable to circuit breakers with rating of 200A or less (max. wire size 100mm²)
 Applicable to circuit breakers with rating of 250A or less (max. wire size 150mm²)
 (Applicable to UL wire 300kcmil)
 For NF125-HEV, NF250-HEV, NV125-HEV and NV250-HEV with PAL, specify the
- model name with MP at the end.

 1. The wire sizes shown in the above notes *8 to *11 are those of the 600V vinyl
- insulated wires.
 - 2.Insulate the exposed live parts of crimp terminals with insulating tape or the like. 3.When protection from the power supply and load sides is necessary, separately consult us.

Table 6-25 Small terminal covers (TC-S)

		T .	Number	Applicab	le model	Dime	ensions ((mm)		Contents	3		
Type name	е	Color	of poles of circuit breaker	MCCB	ELCB	Α	В	С	Number of covers	Cover mounting screw	Sealing plate	Appearance I	Remarks
TCS-05FA2	(*6)	White	2	NF30-FAU, NF50-FAU	NV30-FAU, NV50-FAU	40	7	55	2	-	-		
TCS-05FA3	(*6)	White	3	NI 30-1 AO, NI 30-1 AO	11130-1 AO, 11130-1 AO	60	7	55	2	-	-		
TCS-05FH2	(*7)	White	2	NF50-FHU	NV50-FHU	50	5	55.5	2	-	-		
TCS-05FH3	(*7)	White	3	141 30-1 110	14730-1110	75	5	55.5	2	-	-		
TCS-05SV2	(*1)	White	2	NF32-SV, NF63-CV/SV/HV	ı	50	5	65.5	2	-	2		
TCS-05SV3		White	3	NF32-SV, NF63-CV/SV/HV	NV32-SV, NV63-HV	75	5	65.5	2		2		
	(*2)	White	2, 3	-	NV63-CV/SV	/5	3	05.5		_	_	Trees	
TCS-05SV4		White	4	NF63-SV/HV	-	100	5	65.5	2	-	2	Care o	
TCS-1SV2	(*2)	White	2	NF125-CV/SV	-	60	6.5	65.5	2	-	2	range	
TCS-1SV3		White	3	NF125-CV/SV	NV125-CV/SV/HV	90	6.5	65.5	2		2		
103-1343		White	2, 3	NF125-HV/UV	-	90	0.5	05.5		_	_		
TCS-1SV4		White	4	NF125-SV/HV/UV	NV125-SV/HV	120	6.5	65.5	2	-	2		
TCS-1FH3		White	3	NF100-FHU	NV100-FHU	75	5	55.5	2	-	2	Ψ	
TCS-2SV3 (*	2)(*3)	White	2, 3	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV/RGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV		105	6.5	65.5	2	-	2		
				NF125-SEV/HEV	NV125-SEV/HEV								
TCS-2SV4	/* 2 \	White	4	NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV	-	140	6.5	65.5	2		2	Quick type	
103-2344	(3)	VVIIILE	-	NF250-SV/HV/UV	NV250-SV/HV	140	0.5	05.5		_		The cover can be sealed with the sealing	
				NF250-SEV/HEV NF250-SGV/LGV/HGV	-							plate.	
TCS-05SRU2		White	2	NF100-SRU	NV100-SRU	50	5	66	- 2		2		
	(*2)	White		NF100-HRU	-		3	72					
TCS-05SRU3		White	3	NF100-SRU	NV100-SRU	75	5	66	- 2		2		
	(*2)	White	٥	NF100-HRU	NV100-HRU	75	٥	72		_			

Notes

- *1 For a circuit breaker with F type operating handle, specify the model name with F at the end.

 (F type operating handle dedicated models, screws are used for fixing.)

 *2 The standard models can be used in combination with F and V Type Operating Handles.

 *3 For NF125-HEV, NF250-HEV, NV125-HEV and NV250-HEV with PAL, specify the model name with MP at the end.

- *6 When a crimp terminal applicable to wires with a size of 16.78 to 22.66mm² (Model JST-22-5NS) used, TC-S cannot be fitted. Insulate with insulating tape or the like.

 *7 When a crimp terminal applicable to wires with a size of 16.78 to 22.66mm² (Model JST-22-5S and BH-22) used, TC-S cannot be fitted. Insulate with insulating tape or the like.

 1. Insulate the exposed live parts of crimp terminals with insulating tape or the like.

Remark:

Table 6-26 Transparent terminal covers (TTC)

of not		Number	Applicab	le model	Dime	ensions ((mm)		Contents	;		
Type nai	me	of poles of circuit breaker	MCCB	ELCB	Α	В	С	Number of covers	Cover mounting screw	Sealing plate	Appearance	Remarks
TTC-05SV2	(*1)		NF32-SV NF63-CV/SV/HV	-	50	25	65.5	2	-	2		
TTC-05SV3	/*O\	3	NF32-SV NF63-CV/SV/HV	NV32-SV, NV63-HV	75	25	65.5	2	_	2		
	(*2)	2, 3	-	NV63-CV/SV								
TTC-05SV4		4	NF63-SV/HV	-	100	25	65.5	2	-	2	Transparent	
TTC-1SV2	(*1)	2	NF125-CV/SV	-	60	40	65.5	2	-	2	The state of the s	
TTC-1SV3	(*2)	3	NF125-CV/SV	NV125-CV/SV/HV	90	40	65.5	2		2	Carrier Co	
110-1343	(2)	2, 3	NF125-HV/UV	-	90	40	65.5	4	-			
TTC-1SV4		4	NF125-SV/HV/UV	NV125-SV/HV	120	40	65.5	2	-	2		
TTC-2SV3 (*2)(*3))(*5)(*6)	2, 3	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV/RGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV		105	40	65.5	2	-	2		
			NF125-SEV/HEV	NV125-SEV/HEV								
TTC-2SV4	(*6)	4	NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV	-	140	40	65.5	2	_	2	•	
110-2374	(6)	4	NF250-SV/HV/UV	NV250-SV/HV	140	40	65.5	4	_		Quick type	
			NF250-SEV/HEV NF250-SGV/LGV/HGV	-							The cover can be sealed with the sealing plate.	
TTC-4SW3		2, 3	NF400-CW/SW/SEW NF400-HEW/REW NF630-CW/SW/SEW NF630-HEW/REW	NV400-CW/SW/SEW NV400-HEW NV630-CW/SW/SEW NV630-HEW	171	110	104.5	2	4	-		
		3	NF400-SEW with MDU/HEW with MDU (*4)	-								
TTC-4SW4			NF400-SW/SEW/HEW NF630-SW/SEW/HEW NF400-SEW with MDU/HEW with MDU (*4)	NV400-SEW/HEW NV630-SEW	240	110	104.5	2	6	-	Transparent	Use in
TTC-8SW3		2, 3	NF800-CEW/SDW/SEW NF800-HEW/REW	NV800-SEW/HEW	- 224	155	103.5	2	4	_		combination with
110-858/3		3	NF800-SEW with MDU/HEW with MDU (*4)	-	224	155	103.5		4	_		insulating barrier.
TTC-8SW4		4	NF800-SEW/HEW NF800-SEW with MDU/HEW with MDU (*4)	_	294	155	103.5	2	6	-	Screw type	

- Notes *1 For a circuit breaker with F type operating handle, specify the model name with F at the end.

 (F type operating handle dedicated models, screws are used for fixing.)

 *2 The standard models can be used in combination with F and V Type Operating Handles.

 *3 When a crimp terminal applicable to wires with a size of 117.2 to 152.05mm² (Model 2CR-150 or CB150-S8) is used, TTC cannot be fitted.

 Use TCL-2SV3L. Or insulate the terminal from TC-S with insulating tube or taping.
- *4 In the case of installation on the body, specify the model name with MDU at the end.

 *5 Applicable to circuit breakers with rating of 200A or less (max. wire size 100mm²)

 *6 For NF125-HEV, NF250-HEV, NV125-HEV and NV250-HEV with PAL, specify the model name with MP at the end.

 Remark: 1.There is also a 4-poles product.

Fig. 2

<PTC>

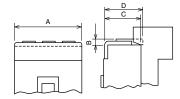


Table 6-27 Rear terminal cover (BTC)

	Τ.	Nu	umber	Applicab	le model	Dim	ensions (mm)		Contents	3		
Type name	, olo	of of br	poles circuit reaker	MCCB	ELCB	А	В	С	Number of covers	Cover mounting screw	Sealing plate	Appearance	Remarks
BTC-05SV2	Wh	nite		NF32-SV NF63-CV/SV/HV	- (*1) 50	5	65.5	2	-	2		
BTC-05SV3	Wh	nite		NF32-SV NF63-CV/SV/HV	NV32-SV, NV63-HV	75	5	65.5	2	_	2	S. Careta	
	Wh		2, 3	-	NV63-CV/SV							25.250	
BTC-05SV4	Wh	nite	4	NF63-SV/HV	-	100	5	65.5	2	-	2	Leve of the	
BTC-1SV2	Wh	nite	2	NF125-CV/SV	-	60	6.5	65.5	2	-	2		
BTC-1SV3	Wh	nite	3	NF125-CV/SV	NV125-CV/SV/HV	90	6.5	65.5	2	_	2		
B1C-13V3	Wh	nite 2	2, 3	NF125-HV/UV	-	90	0.5	65.5	4	_	-		
BTC-1SV4	Wh	nite	4	NF125-SV/HV/UV	NV125-SV/HV	120	6.5	65.5	2	-	2		Cover for stud
BTC-2SV3 (*0	6) Wh	nite 2	2, 3	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV/RGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV		105	6.5	65.5	2	-	2		connection block on back in the case of rear
				NF125-SEV/HEV	NV125-SEV/HEV								connection
DT0 0014 #	2)			NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV	-	140							type
BTC-2SV4 (*	6) Wh	nite	4	NF250-SV/HV/UV	NV250-SV/HV	140	6.5	65.5	2	_	2		
				NF250-SEV/HEV NF250-SGV/LGV/HGV	-								
	Wh	nite 2			NV400-CW/SW/SEW NV630-CW/SW/SEW	140	42 (*2)	99.5	2	_		Quick type	
BTC-4SW3				NF400-SEW with MDU(*5)	(*5)					2	The cover can be sealed with the	
	Wh	nite	3	NF400-UEW (*4)	-	140	42 (*2)	132.5/ 196.5	2	-		sealing plate.	
BTC-4SW4 (*:	3) Transp	parent	4		NV400-SEW/HEW NV630-SEW	185	42 (*2)	97.5	2	6	-		
	Transp	parent 2	2, 3	NF800-CEW/SDW/SEW/HEW/REW	NV800-SEW/HEW	210	32 (*2)	97.5	2	8	_	9	
BTC-8SW3 (*:	3)		L	NF800-SEW with MDU/HEW with MDU (*5)		210	32 (2)	97.5		_ °			
210 00110	Transp	parent	3	NF800-UEW (*4)	-	210	32 (*2)	146/ 194.5	2	4	-		
DTC OCWA (*	2) -			NF800-SEW/HEW NF800-SEW with MDU/HEW with MDU (*5)	(*5) 280	32 (*2)	97.5	2	10	-	Sarau tuna	
BTC-8SW4 (*:	3) Transp	parent	4	NF400-UEW, NF800-UEW (*4)	-	280	32 (*2)	146/ 194.5	2	6	-	Screw type	

*1 For 2-pole ELCB, use BTC for 3-pole circuit breaker.

*2 Dimension B in Fig. 2

*3 The covers can be used for plug-in type circuit breakers. Other models are designed only for rear connection type.

*4 The dimension C is the size on the power supply side and load side.

*5 In the case of installation on the body, it can be fitted only on the power supply side.

6 For NF125-HEV, NF250-HEV, NV125-HEV and NV250-HEV with PAL, specify the model name with MP at the end.

Remarks
1. PTC-4SW3 can be used as the back terminal covers for NF400-HEW/REW, NF630-HEW/REW, NV400-HEW and NV630-HEW.
2. For terminal covers for 4-pole circuit breakers not listed above, consult us.

Table 6-28 Plug-in terminal covers (PTC)

		Number		le model		imensi	ons (mn	n)	(Content	s		
Type name		of poles of circuit breaker		ELCB	Α	В	С	D	Number of covers	Cover mounting screw	Sealing plate	Appearance	Remarks
PTC-05SV2	White	2	NF32-SV NF63-CV/SV/HV	-	50	6.5	65.5	72	2	2	-		
PTC-05SV3	White	3	NF32-SV NF63-CV/SV/HV	NV32-SV, NV63-HV	75	6.5	65.5	72	2	2	_		
	White	2, 3	-	NV63-CV/SV	1							-5	
PTC-05SV4	White	4	NF63-SV/HV	-	100	6.5	65.5	72	2	2	-	spranto 0	
PTC-1SV2	White	2	NF125-CV/SV	-	60	6.5	65.5	-	2	4	-	Creative (1)	
PTC-1SV3	White	3	NF125-CV/SV	NV125-CV/SV/HV	90	6.5	65.5	_	2	4	_		
1610-1343	White	2, 3	NF125-HV/UV	-	90	0.5	05.5	_	-	4	_		
PTC-1SV4	White	4	NF125-SV/HV	NV125-SV/HV	120	6.5	65.5	-	2	2	-		Cover for
PTC-2SV3	White	2, 3	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV/RGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV		105	6.5	65.5	78.5	2	4	-		stud connection block in the case of plug-in type
			NF125-SEV/HEV	NV125-SEV/HEV								Screw type	
PTC-2SV4	White	4	NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV	-	140	6.5	65.5	78.5	2	2		Screw type	
1710-2574	vvriite	4	NF250-SV/HV/UV	NV250-SV/HV	140	0.5	05.5	/6.5	-		_		
			NF250-SEV/HEV NF250-SGV/LGV/HGV	-									
PTC-4SW3 (*2)	Transparent		NF400-CW/SW/SEW NF630-CW/SW/SEW	NV400-CW/SW/SEW NV630-CW/SW/SEW	140	42	97.5	_	2	4	_	Same as screw type of BTC	
F10-43VV3 (2)	папърагени	2,3		NV400-HEW (*1) NV630-HEW (*1)	140	42	97.5	_	2	4	_	Same as sciew type of BTC	

*1 The covers can be used as back terminal covers. *2 See Fig. 2 of BTC.

2 Accessories

Table 6-29 List of terminal covers applicable to F and V Type Operating Handles

		Type name		Applicable operating	Number of	Applicable	model
Large terminal (TC-L)		Small terminal covers (TC-S)	Transparent terminal covers (TTC)	handles	poles of circuit breaker	MCCB	ELCB
TCL-05SV2F TCL-05SV2LF	(*2)(*3) (*2)(*4)	TCS-05SV2F (*2)	TTC-05SV2F (*2)	F-05SV2, V-05SV2	2	NF32-SV, NF63-CV/SV/HV	- (*1)
TCL-05SV3	(*3) (*4)	TCS- 05SV3	TTC-05SV3		3	NF32-SV, NF63-CV/SV/HV	NV32-SV, NV63-HV
TCL-05SV3L	(*4)	103-05575	110-05545	F-05SV, V-05SV	2, 3	_	NV63-CV/SV
TCL-05SV4		_	_		4	NF32-SV, NF63-CV/SV/HV	_
TCL-1SV2F	(*2)	TCS-1SV2F (*2)	TTC-1SV2F (*2)	F-1SV2, V-1SV2	2	NF125-CV/SV	-
TOL 101/0		TCS-1SV3	TTC-1SV3		3	NF125-CV/SV	NV125-CV/SV/HV
TCL-1SV3		105-1503	110-1503	F-1SV, V-1SV	2, 3	NF125-HV/UV	-
TCL-1SV4		-	_		4	NF125-CV/SV/HV/UV	NV125-CV/SV/HV
TCL-2SV3 TCL-2SV3L	(*5) (*6)(*7)	TCS-2SV3	TTC-2SV3	F-2SV, V-2SV	2, 3	NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV	NV250-CV/SV/HV, NV250-SEV/HEV NV125-SEV/HEV
TCL-2SV4	(*7)	_	-	r-23v, v-23v	4	NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV	NV250-CV/SV/HV, NV250-SEV/HEV NV125-SEV/HEV
TCL-4SW3 TCL-4SP3W		_	TTC-4SW3	F-4S	2, 3	NF400-CW/SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW
TCL-4SW4		_	TTC-4SW4	V-4S	4	NF400-SW/SEW/HEW NF630-SW/SEW/HEW	NV400-SEW/HEW NV630-SEW
TCL-8SW3		-	TTC-8SW3	F-8S	2, 3	NF800-CEW/SDW/SEW/HEW/REW	NV800-SEW/HEW
TCL-8SW4		_	TTC-8SW4	V-8S	4	NF800-SEW/HEW	_


Notes

- *1 For 2-pole NV, use a terminal cover for 3-pole circuit breaker.
 *2 Only for F and V Type Operating Handles (screw type)
 *3 Applicable to circuit breakers with rating of 75A or less (max. wire size 25mm²)
 *4 Applicable to circuit breakers with rating of 125A or less (max. wire size 60mm²)
 *5 Applicable to circuit breakers with rating of 200A or less (max. wire size 100mm²)
 *6 Applicable to circuit breakers with rating of 250A or less (max. wire size 150mm²)
 *7 For NF125-HEV, NF250-HEV, NV125-HEV and NV250-HEV with PAL, specify the model page with MP at the end model name with MP at the end.

Remark: 1. The terminal covers for UL 489 Listed Circuit Breakers can be normally combined with F Type Operating Handles.

5. Insulating Barriers

The insulating barrier enhances the insulation between the phases of circuit breaker terminals. It also prevents accidents due to conductive foreign matter and dust, and secondary accidents when isolating a fault current.

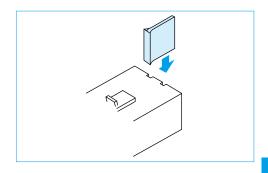

The insulating barrier is available for the models listed in the table below. **Table 6-30**

("●" denotes optional)

				(Cacriott	es optional)
Applica		Connecti	ng method		
MCCB	ELCB	Front	Rear	Flush plate	Plug-in
NF32-SV, NF63-CV NF125-CV, NF100-CVFU NF100-SRU	NV32-SV, NV63-CV NV125-CV, NV100-CVFU NV100-SRU	•	-	-	-
NF63-SV/HV NF125-SV/HV NF100-HRU	NV63-SV/HV NV125-SV/HV NV100-HRU	Standard attachment	-	-	-
NF125-SEV/HEV NF250-CV/SV/HV/SEV/HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV/RGV NF250-SGV/LGV/HGV/RGV NF250-SGV/HGV/RGV NF250-SEV/HEV with MDU	NV125-SEV/HEV NV250-CV/SV/HV/SEV/HEV NV250-SEV/HEV with MDU	Standard attachment	-	-	Standard attachment
NF125-SVU NF125-HVU NF250-SVU NF250-HVU NF250-CVU	NV125-SVU NV125-HVU NV250-SVU NV250-HVU NV250-CVU	Standard attachment	-	-	-
NF400-CW/SW/SEW/HEW/REW/UEW NF630-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	Standard attachment	•	•	Standard attachment
NF400-UEW(4P) NF800-CEW/SEW/HEW/REW/SDW	NV800-SEW/HEW	Standard attachment	•	•	•
NF800-UEW	-	Standard attachment	•	•	-
NF400-SWU/HWU NF630-SWU/HWU	-	Standard attachment	-	-	-
NF1000-SEW, NF1250-SEW/SDW	-	Standard attachment	-	-	Standard attachment
NF1600-SEW/SDW	-	Standard attachment	-	-	-

Always mount the insulating barrier when it comes with the circuit breaker.

Insulating Barrier-Front (BA-F)

Table 6-31 Summary of dimensions

Type name	Applicat	ole model	Dimensi	ons (mm)	Quan	tity per b	reaker	Reference diagram
туре паше	MCCB	ELCB	Α	В	2P	3P	4P	helefelice diagram
BAF-05SRU	NF100-SRU/HRU	NV100-SRU/HRU	50	59.5	1	2	-	
BAF-05SV	NF32-SV NF63-CV NF125-CV NF63-SV/HV	NV32-SV NV63-CV NV125-CV NV63-SV/HV	50	59.5	1 (*2)	2	3	
	NF125-SV/HV/UV	NV125-SV/HV						Λ - A
BAF-2SV	NF125-SEV/HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV/SV/HV/UV/SEV/HEV NF250-SGV/LGV/HGV/RGV NF250-SEV/HEV with MDU	NV125-SEV/HEV NV250-CV/SV/HV/SEV/HEV NV250-SEV/HEV with MDU	100	59.5	2	4	6	
	NF100-CVFU	NV100-CVFU						
BAF-05SVU	NF125-SVU NF125-HVU	NV125-SVU NV125-HVU	50	59.5	2	4	-	
BAF-2SVU	NF250-SVU NF250-HVU NF250-CVU	NV250-SVU NV250-HVU NV250-CVU	100	59.5	-	4	-	
BAF-4SW	NF400-CW/SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	110	98.5	2	4	6	
BAF-4UW (*1)	NF400-UEW(3P)	-	110	132/ 98.5	-	4	-	
BAF-8SW	NF800-CEW/SEW/SDW/HEW/REW	NV800-SEW/HEW	110	98.5	1	2	3	
BAF-10SW	NF400-UEW(4P) NF800-UEW, NF1000-SEW NF1250-SEW/SDW	-	110	132	1	2	3	
BAF-4SWU	NF400-SWU/HWU	-	110	98.5	-	4	-	
DAI -43000	NF630-SWU/HWU(less than 600A)	-	110	98.5	-	2	-	
BAF-6SWU	NF630-SWU/HWU(630A)	-	150	98.5	-	4	-	
BAF-16SW	NF1600-SEW/SDW	-	185	132	1	2	3	


Notes *1 The barriers BAF-4UW for the power supply and load sides vary in the dimension B.

Insulating Barrier-Rear (BA-B)

Table 6-32 Summary of dimensions

I	Type name	Applicable	e model	Dimension	ons (mm)	Quanti	ty per b	reaker	Reference diagram
-	туре паше	MCCB	ELCB	Α	В	2P	3P	4P	nelerence diagram
	BAB-4SW	NF400-CW/SW/SEW/HEW/REW NF400-UEW(3P) NF630-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	140	74.5	-	4	6	Mounting panel
	BAB-8SW	NF800-CEW/SEW/SDW/HEW/REW NF400-UEW(4P) NF800-UEW	NV800-SEW/HEW	140	74.5	-	4	6	<u> </u>

Drilling size for use of BA-B (in the case of 3-pole circuit breaker)

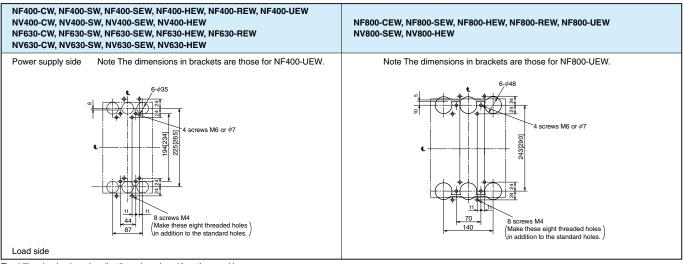

The drilling size drawings show the dimensions viewed from the rear side.

^{*2} Not supplied with ELCB.

Insulating Barrier-Plug-in (BA-P)

Table 6-33 Summary of dimensions

Type name	Applica	ble model	Dimension	ons (mm)	Quant	ity per b	reaker	Reference diagram
Type name	MCCB	ELCB	Α	В	2P	3P	4P	riererice diagram
BAP-2SV	NF125-SEV/HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV/SV/HV NF250-SGV/LGV/HGV/RGV NF250-SEV/HEV	NV125-SEV/HEV NV250-CV/SV/HV/SEV/HEV	172	74.5	4			
BAP-4SW	NF400-CW/SW NF400-SEW/HEW/REW/UEW NF630-CW/SW NF630-SEW/HEW/REW	NV400-CW/SW NV400-SEW/HEW NV630-CW/SW NV630-SEW/HEW	178	74.5		4	6	B = B
BAP-8SW	NF800-CEW/SEW NF800-HEW/REW	NV800-SEW/HEW	172	74.5	-			
DAF-03W	NF1000-SEW NF1250-SEW	-	215	74.5				₽ B →

Earth fault preventing barriers (BA-G)

Table 6-34 Summary of dimensions

Type name		ole model	Dimensi	ons (mm)	Quantity per breaker	Reference diagram
туре паше	MCCB	ELCB	A	В	3P	neierence diagram
BAG-05SV3	NF32-SV NF63-CV/SV/HV	NV32-SV NV63-CV/SV/HV	30	75		
BAG-1SV3	NF125-CV/SV/HV	NV125-CV/SV/HV	40	90		, в ,
BAG-2SV3	NF125-SEV/HEV NF250-CV/SV/HV/SEV/HEV NF250-SEV/HEV with MDU	NV125-SEV/HEV NV250-CV/SV/HV/SEV/HEV NV250-SEV/HEV with MDU	63	105		▼
BAG-4SW3	NF400-CW/SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	63	164		
BAG-4UW3	NF400-UEW	-	63	164	1	
BAG-8SW3	NF800-CEW/SEW/SDW/HEW/REW	NV800-SEW/HEW	110	210		
BAG-8UW3	NF800-UEW	-	110	210		
BAG-10SW3	NF1000-SEW NF1250-SEW/SDW	-	98	210		Earth fault preventing barrier (3 poles)
BAG-16SW3	NF1600-SEW/SDW	-	150	300		

Also the earth fault preventing barriers for 2- and 4-pole circuit breakers are available.

6. Handle Lock Devices, Lock Covers, Auxiliary Handles, Card Holders

(1) Handle Lock Devices (HL and HL-S)

These devices are used to lock the circuit breakers in the ON or OFF position. If overcurrent flows while the circuit breaker is locked, it will trip. Model HL (red resin moldings) to be fitted to handles and Model HL-S to be secured on circuit breaker covers are available. (Use a commercially available padlock having the nominal size shown in the right table. If a padlock in another size is used, the device may not lock correctly.)

Table 6-35 HL

Time name	Applicable mod	Reference	Padlock	
Type name	MCCB	ELCB	diagram	Padiock
HL-05FH	NF50-FHU, NF100-FHU	NV50-FHU, NV100-FHU	Fig. 4	
HL-05FA	NF30-FA/FAU, NF50-FA/FAU	NV30-FA/FAU, NV50-FA/FAU	Fig. 4	
HLF-05BHD	BH-D6, BH-D10	-	Fig. F	
HLF-05SMU (*1)	NF50-SMU	-	Fig. 5	
HLF-05SRU	NF100-SRU/HRU	NV100-SRU/HRU	-]
HLN-05SV	NF32-SV, NF63-CV/SV/HV NF125-CV/SV/HV/UV, NF125-SEV/HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF250-SGV/LGV/HGV/RGV	NV32-SV, NV63-CV/SV/HV NV125-CV/SV/HV, NV125-SEV/HEV NV250-CV/SV/HV, NV250-SEV/HEV		a
HLF-05SV	NF32-SV, NF63-CV/SV/HV NF125-CV/SV/HV/IV, NF125-SEV/HEV NF125-SQV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF250-SGV/LGV/HGV/RGV	NV32-SV, NV63-CV/SV/HV NV125-CV/SV/HV, NV125-SEV/HEV NV250-CV/SV/HV, NV250-SEV/HEV	Fig. 1	
HLF-05SVU	NF125-SVU/HVU NF250-SVU/HVU/CVU	NV125-SVU/HVU NV250-SVU/HVU/CVU		
HL-4CW (*1)	NF400-CW	NV400-CW		
HL-4SW (*1)	NF400-SW/SEW/HEW/REW/UEW NF630-CW/SW/SEW/HEW/REW NF800-CEW/SDW/SEW/HEW/REW/UEW	NV400-SW/SEW/HEW NV630-CW/SW/SEW/HEW NV800-SEW/HEW	Fig. 2	С
HL-4SWU	NF400-SWU/HWU, NF630-SWU/HWU	_		
HL (*2)	NF1000-SEW, NF1250-SEW/SDW, NF1600-SEW/SDW	_	Fig. 3	

Applicable model

*1 When a padlock is not used, the device can be used as a

lock cover (LC).

*2 Place an order for a circuit breaker body combined with the

Remarks 1. One lot of HL-4CW and HL-4SW contains one piece, and one

lot of others contains 10 pieces.

2. HLF types are used for OFF lock, and HLN types for ON lock.

Padlock size (mm)

Application	A (Nominal size)	В
а	25	4 or less
b	35	5 or less
С	40	6 or less





Padlock





Fig. 2



Fig. 4

Dimensions (mm)



Fig. 5

Fig. 3

Table 6-36 HL-S

		Applie	cable model					Dimension	ons (mm)			Deference	
Type nam	е	MCCB	Number of poles	ELCB	Number of poles	Α	В	С	D	E	F	Reference diagram	Padlock
HLS-05SV2		NF32-SV, NF63-CV, NF63-SV NF63-HV	2P	-	-			50					
		NF125-CV, NF125-SV	2P	-	-			57	_				
		NF32-SV, NF63-CV, NF63-SV NF63-HV	3P	NV32-SV, NV63-CV, NV63-SV, NV63-HV	3P			75					
		NF63-SV,NF63-HV	4P	-	-	32			23		32		
HLS-05SV	(*1)	NF125-CV, NF125-SV	3P	NV125-CV, NV125-SV, NV125-HV	3P		75		_				
	(.,	NF125-HV	2P, 3P	-	-								
		NF125-SV, NF125-HV	4P	NV125-SV, NV125-HV	4P			86	28				
		NF125-UV	2P, 3P	-	-	60.5			-		1 5]	
		NF 125-U V	4P	-	-	62.5			28]	1.5		
		NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV, NF250-SV, NF250-HV NF250-SGV/LGV/HGV/RGV NF125-SEV, NF125-HEV	2P	NV125-SEV, NV125-HEV NV250-CV, NV250-SV.								Fig. 5	
HLS-2SV	(*1)	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV NF250-SGV/LGV/HGV/RGV	3P	NV250-UV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	3P	32	84	100	-	63	32		b
		NF125-SEV, NF125-HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SV, NF250-HV, NF250-SEV, NF250-HEV NF250-SGV/LGV/HGV/RGV	4P	NV125-SEV, NV125-HEV NV250-SV	4P				33				
		NF250-UV	2P, 3P	-	-	69.5			-		-5.5		
		141 250-01	4P	-	-	00.0			33		-5.5		
HLS-03SVU	(*1)	NF50-SVFU	2P, 3P	NV50-SVFU	2P, 3P	-	-	-	-			Fig. 8	
HLS-05SVU2	. ,	NF100-CVFU	2P	-	-			50			32		
HLS-05SVU	(*1)	NF100-CVFU	3P	NV100-CVFU	3P	32	75	75	-		02	Fig. 5	
		NF125-SVU/HVU	2P, 3P	NV125-SVU/HVU	3P			86					
HLS-05SVU	. ,	NF125-SVU/HVU	2P, 3P	NV125-SVU/HVU	3P	32	75	86	_		32	Fig. 5	
HLS-2SVU	. ,	NF250-SVU/HVU/CVU	3P	NV250-SVU/HVU/CVU	3P	02	84	100			J 22	1.19.5	
HLS-4SW	("3)	NF400-CW/SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW	2P, 3P, 4P	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	3P, 4P	-	-	_	-	-	-	Fig. 6	
HLS-4UW	. ,	NF400-UEW	3P	-	-	-	-	-	-	-	-		
HLS-8SW	(*3)	NF800-CEW/SDW/SEW/HEW/REW		NV800-SEW/HEW	3P, 4P	-	-	-	-	-	-]	
HLS-8UW	(*3)	NF400-UEW NF800-UEW	4P 3P. 4P	_	-	-	-	-	-	-	-	Fig. 7	
Notes *1 For l		J.											

Notes *1 For locking in OFF position
*2 A, B, C and D in Figs. 5 and 6 are drilling sizes in front plate.
*3 Terminal covers cannot be fitted.

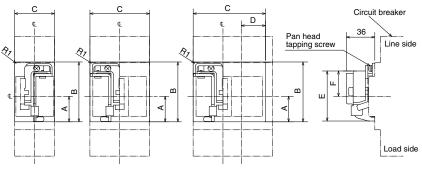


Fig. 5

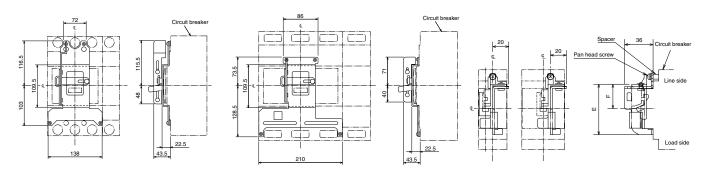


Fig. 7 Fig. 6 Fig. 8

(2) Lock Covers (LC)

Lock Cover is a plug-in lock for indicating easily without using padlocks that it is prohibited to operate the circuit breaker. A "Caution" tag can be hung on it. The covers are red resin moldings.



Table 6-37 LC

Type name	Applicable mo	odel
туре паше	MCCB	ELCB
LC03CS	NF50/100-FHU	NV50/100-FHU
LC-05SV	NF32-SV NF63-CV/SV/HV NF125-CV/SV/HV/UV NF125-SEV/HEV NF125-SEV/LGV/HGV/RGV NF160-SGV/LGV/HGV/RGV NF250-CV/SV/HV/UV NF250-SEV/HEV NF250-SEV/LGV/HGV/RGV	NV32-SV NV63-CV/SV/HV NV125-CV/SV/HV NV125-SEV/HEV NV250-CV/SV/HV NV250-SEV/HEV
LC05FA	NF30-FAU NF50-FAU	NV30-FAU NV50-FAU

Remark: 1. One lot of and LC-NVL contains 50 pieces, and one lot of other models contains 10 pieces

(3) Auxiliary Handles (HT)

These handles facilitate opening and closing circuit breakers.



Auxiliary Handles

Table 6-38 HT

Type name	Applicable model		Dir	nensio	ons		Outline dimension			
туре паше	Applicable model	Α	В	С	D	Е	drawing			
HT-4CW (*1)	NF400-CW, NV400-CW		77.5							
(*1)	NF400-SW/SEW/HEW/REW/UEW NF630-CW/SW/SEW/HEW/REW NF800-CEW/SDW/SEW/HEW NF800-REW/UEW NV400-SW/SEW/HEW NV630-CW/SW/SEW/HEW NV800-SEW/HEW	59	81	32	38	M4	g g g g g g g g g g g g g g g g g g g			
	NF1000-SEW NF1250-SEW/SDW NF1600-SEW/SDW	62	118	34	45	M4	← A → ← → screw			

Notes *1 HT can be supplied separately. The user can fit it to the circuit breaker. (One lot contains 1 piece.)

2 4-pole circuit breakers with 800A frame and 4-pole NF400-UEW come with auxiliary handles as standard accessories.

3 HT is standard accessory.

(4) Card Holders (CH)

Cards showing the circuit breaker name and circuit number can be inserted to the card holder.

Fit the card holder to the circuit breaker body or the flush plate in the flush frame. (Although a card holder is supplied with each circuit breaker body, the card holder is available as an optional part.)



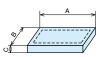


Table 6-39 Card holder size (mm)

Applicable model	Type name	Α	В	С	Card size
NF250-SV or below NV250-SV or below		44	12	5	39×9
NF400-SW or above NV400-SW or above		38	22	5	33×20

7. Mechanical Interlocks (MI)


This mechanical interlock device is used to enable one of two circuit breakers to turn on. Install the device on the panel.


Mechanical interlocks to be installed directly to circuit breaker bodies can be

manufactured.

Consult us for details.

Front, rear and plug-in types

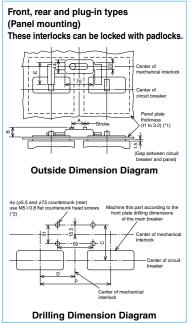

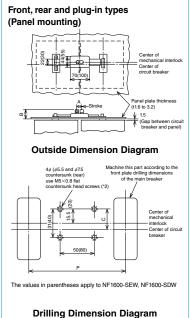

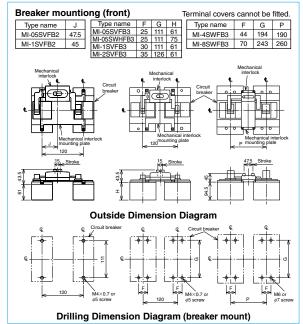


Fig. 2 Fig. 3 Fig. 1

Table 6-40 Table of variable dimensions

For 400A frame or above, use a panel 1.6 to 3.2 thick.

*2 When the panel is 2.3 or more thick, countersink the panel (rear side) in ϕ 9.5 for the four ϕ 5.5 holes.

Applicable	model			Pit	ch (P)	(*1)				Dir	nensio	ns (mn	n)		Reference diagram	Breaker mount (*3)	Reference diagram (3P)
MCCB	ELCB	Star	ndard		Semi-s		Standa		+	Α	В	С	D	Е	efer liag	Type name	gran
IMICOB	ELOB	Type name	2P	3P	3	P	Type name	4P	,	_^_	В	U			<u>د</u> ۾	2P•3P	gi B
NF32-SV, NF63-CV/SV/HV	_]	120	-	-	-	-	-		15	33	63	47.5	58		MI-05SVFB2]]
NF32-SV, NF63-CV/SV/HV	NV32-SV, NV63-CV/SV/HV	MI-05SV3	-	120	-	130	MI-05SV4	120 (*4)		15	33	63	-	58		MI-05SVFB3	(Fig. 3)
NF125-CV/SV	-		120	-	-	-	-	-		15	33	63	45	58	1	MI-1SVFB2	
NF125-CV/SV/HV	NV125-CV/SV/HV	MI-05SV3		120	130	150	MI-1SV4	130		15	33	63		58		MI-1SVFB3	1
NF125-UV	-	1	_	120	130	150	IVII-15V4	(*4)	(*2)	15	33	32.5	_	58		-	-
NF160-SGV/LGV/HGV	NV125-SEV/HEV NV250-CV/SV/HV NV250-SEV/HEV	MI-05SV3		20 4)	150	180	MI-2SV4	150 (*4)		15	33	63	-	58	(Fig. 1)	MI-2SVFB3	(Fig. 3)
NF250-UV	-	1										25.5				_	-
NF400-CW/SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	MI-4SW3	19	90	_	210	MI-4SW4	250		47.5	33	83.5	_	74		MI-4SWFB3	
NF400-UEW (3P)	-	1	-	190			-	-	(*2)			83.5				_] [:- o)
NF800-CEW/SDW/SEW/HEW/REW	NV800-SEW/HEW		2	20					`-'			83.5			1	MI-8SWFB3	(Fig. 3)
NF400-UEW (4P) NF800-UEW	-	MI-8SW3	-	220	-	240	MI-8SW4	290		47.5	33	60	-	74		-	
NF1000-SEW, NF1250-SEW/SDW	-	MI-10SW3	2	20	-	-	MI-10SW4	290	2.3	47.5	47	37.5	-	-	(E:- 0)	-	
NF1600-SEW/SDW	_	MI-16SW3	3	15	-	-	MI-16SW4	426	(*5)	65	54.5	39	-	-	(Fig. 2)	-	1 -
Notes *1 Specify the circuit breaker mounting pitch (P). *2 No need to specify the panel thickness (t). (Usable panel thickness range: t = 1-3.2mm. Above 400AF, use panel thickness t = 1.6-3.2mm) *3 Terminal covers cannot be fitted. (However, TCL-4SW3 can be fitted.) *4 When UVT is provided, separately install the module. *5 If the thickness is not 2.3, specify the panel thickness (t). Remarks 1. When a mechanical interlock is installed on the panel, screw type terminal covers cannot be installed. 2. These devices do not provide an isolation function. However, 400, 600, 630 and 800A frame circuit breakers can be made conforming to it. (See Note 3.) 3. On a 2-pole circuit breaker obtained by removing the neutral pole conductor from a 3-pole circuit breaker, the mechanical interlock can be installed in the same manner as or 3-pole circuit breaker.										nanner as on a	ì						

8. Boxes for Circuit Breakers and Boxed Circuit Breakers

(1) Kinds and specifications

Table 6-41

			Closed type (S)	Dust-proof type (I)	Water-proof type (W)
	Appearance		(*1)	· ·	
	NEGO OV NEGO OVIOVILIV	2P	NFS-05SV2 (*5)	NEL 0501	_
	NF32-SV, NF63-CV/SV/HV	3P	NFS-05SV	NFI-05SV	NFW-05SV
	NETOE OVIOV	2P	NFS-1SV2 (*5)		_
	NF125-CV/SV	3P	NFS-1SV	NFI-1SV	NFW-1SV
	NF125-HV	2, 3P	NF5-15V		NFW-1HV
MCCB (*2)	NF125-SGV/LGV NF160-SGV/LGV NF250-SGV/LGV NF250-CV/SV, NF125/250-SEV NF125/160/250-HGV		NFS-2SV	NFI-2SV	NFW-2SV
	NF250-HV, NF125/250-HEV	2, 3P	-		
	NF400-CW		-	NFI-4CW	NFW-4CW
	NF400-SW/SEW		_	NFI-4SW	NFW-4SW
	NF630-CW/SW/SEW		-	NFI-6SW	NFW-6SW
	NF800-CEW/SDW/SEW		-	NFI-8SW	NFW-8SW
	NV32-SV, NV63-CV/SV/HV	2P 3P	NFS-05SV NFS-05SV	NFI-05SV	NFW-05SV
	NV125-CV/SV	35	NFS-1SV		NFW-1SV
_	NV125-CV/3V NV125-HV	_	NFS-1SV	NFI-1SV	NFW-1HV
(X (X	NV250-CV/SV, NV125/250-SEV	_	NFS-2SV		INF VV-IFIV
FLCB	NV250-HV, NV125/250-HEV	3P	- INF3-23V	NFI-2SV	NFW-2SV
Ш	NV400-CW	3P	-	NFI-4CW	NFW-4CW
	NV400-SW/SEW		-	NFI-4SW	NFW-4SW
	NV630-CW/SW/SEW		-	NFI-6SW	NFW-6SW
	NV800-SEW		-	NFI-8SW	NFW-8SW
	Operating method		Direct operation of circuit breaker handle	Operation through oper	ating handle mechanism
	Standard paint color		Box: Munse	II 5Y7/1 Operating handle: Mu	unsell N1.5
	Protection class (IEC 60529)		IP3X	IP4X (*3)	IP65 (*4)

- Notes *1 The window frame varies depending on the model.
 *2 For 1-pole circuit breakers, boxes are not manufactured.
 *3 The protection class of NFI-1SV and NFI-2SV is IP3X.
 *4 The protection class of NFW-4CW, NFW-4SW, NFW-6SW and NFW-8SW is IP54.
 *5 The circuit breaker body is a 2-pole external type.

 Remarks: 1. Only internal accessories with lead wires drawn out can be fitted. (However, LT and SLT can be fitted on the right pole side.)
 - pole side.)

 2. The dust-proof type (I) models do not provide an isolation function.

Selection of rated current

When selecting the rated current of circuit breaker, it is necessary to consider the temperature in the box. When the rated current is carried, the temperature in the box increases by 10 to 20K. Correct the rated current with the temperature correction curve.

Determine the maximum working current to be 80% or less of the rated current.

Locking

Type I and W boxed circuit breakers can be provided with locks in the following parts. Locking can prevent unnecessary operation.


- ①Cover and case
- 20N or OFF position of operating handle Padlocks must be prepared by the user. The dimensions of the padlocks are shown on page 116.

Interlock (only for Dust-proof type)

The cover cannot be opened while the circuit breaker is in the ON state. However, if the interlock release screw is turned, the cover is released from the locked state and can be opened even in the ON state.

Handle operation and display

The ON, OFF or trip state of the body is displayed on each position on the decorative board.

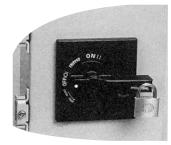

Example of Type I operating handle block

(2) External dimensions

MCCB

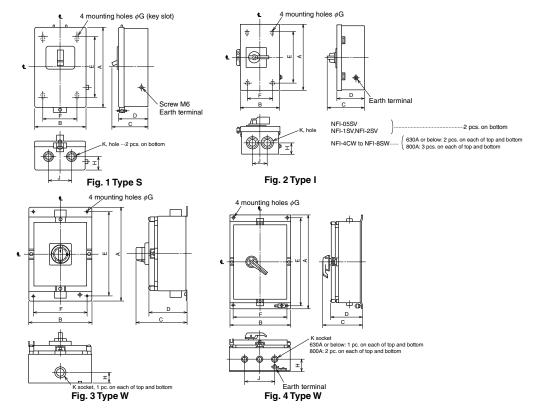


Table 6-42 Table of variable dimensions (Boxes for 4-pole circuit breakers are not manufactured.)

Box	Type name	Applicable Model	Variable dimensions (mm)										
type	туре пате	Applicable Wodel	Fig.	Α	В	С	D	E	F	G	Н	J	К
	NFS-05SV2	NF32-SV. NF63-CV/SV/HV	1	260	178	98	78	202	100	7	34	100	28, 35, 44
	NFS-05SV	,								-			,,
	NFS-1SV2	NF125-CV/SV	1	310	178	98	78	252	100	7	34	100	28, 35, 44
S	NFS-1SV	NF125-CV/SV/HV	·	0.0						·	ļ		20,00,
	NFS-2SV	NF250-CV/SV, NF125/250-SEV NF125-SGV/LGV NF160-SGV/LGV NF250-SGV/LGV	1	440	247	137	116	373	170	9	52	120	50, 62, 78
	NFI-05SV	NF32-SV, NF63-CV/SV/HV	2	350	186	155.5	117	286	120	7	42	100	28, 35, 44
	NFI-1SV	NF125-CV/SV/HV	2	352	188	155.5	118	286	120	7	42	100	28, 35, 44
	NFI-2SV	NF250-CV/SV/HV, NF125/250-SEV/HEV NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV	2	442	248	162	124	373	170	9	54	120	50, 62, 78
	NFI-4CW	NF400-CW	2	730	320	244	191	650	240	11	87	120	50, 62, 78
	NFI-4SW	NF400-SW/SEW	2	730	320	244	191	650	240	11	65	120	50, 62, 78
	NFI-6SW	NF630-CW/SW/SEW	2	940	433	260	207	856	350	15	90	150	92
	NFI-8SW	NF800-CEW/SDW/SEW	2	1353	543	304	251	1270	460	15	90	320	104
	NFW-05SV	NF32-SV, NF63-CV/SV/HV	3	390	265	214	160	350	225	9.5	45	-	28
	NFW-1SV	NF125-CV/SV	3	390	265	214	160	350	225	9.5	50	_	36
	NFW-1HV	NF125-HV	3	480	265	239	186	440	225	9.5	60	-	36
w	NFW-2SV	NF250-CV/SV/HV, NF125/250-SEV/HEV NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV	3	550	355	264	210	510	315	11	75	_	54
	NFW-4CW	NF400-CW	4	800	355	257	220	760	315	11	85	-	70
	NFW-4SW	NF400-SW/SEW	4	800	355	257	220	760	315	11	85	-	70
	NFW-6SW	NF630-CW/SW/SEW	4	800	355	257	220	760	315	11	85	-	82
	NFW-8SW	NF800-CEW/SDW/SEW	4	1435	550	339	265	1395	515	15	100	180	104

Note) The sockets are applicable to thick steel duct (JIS C 8305) and conduit tube thread.

ELCB

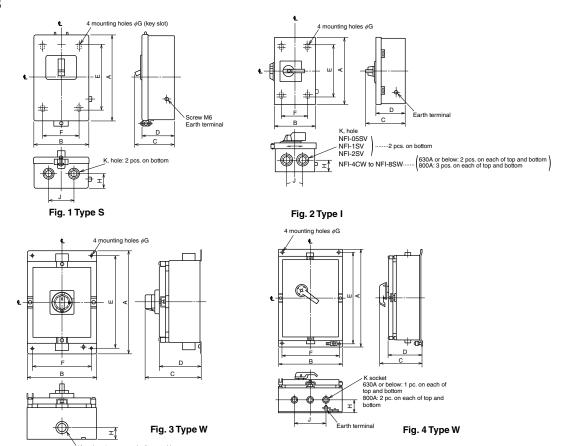


Table 6-43 Table of variable dimensions (Boxes for 4-pole circuit breakers are not manufactured.)

Box	Time name	Applicable Madel		Variable dimensions (mm)									
type	Type name	Applicable Model	Fig.	Α	В	С	D	Е	F	G	Н	J	K
	NFS-05SV	NV32-SV, NV63-CV/SV/HV	1	260	178	98	78	202	100	7	34	100	28, 35, 44
S	NFS-1SV	NV125-CV/SV/HV	1	310	178	98	78	252	100	7	34	100	28, 35, 44
	NFS-2SV	NV250-CV/SV, NV125/250-SEV	1	440	247	137	116	373	170	9	52	120	50, 62, 78
	NFI-05SV	NV32-SV, NV63-CV/SV/HV	2	350	186	155.5	117	286	120	7	42	100	28, 35, 44
I	NFI-1SV	NV125-CV/SV/HV	2	352	188	155.5	118	286	120	7	42	100	28, 35, 44
	NFI-2SV	NV250-CV/SV/HV, NV125/250-SEV/HEV	2	442	248	162	124	373	170	9	54	120	50, 62, 78
	NFI-4CW	NV400-CW	2	730	320	244	191	650	240	11	87	120	50, 62, 78
	NFI-4SW	NV400-SW/SEW	2	730	320	244	191	650	240	11	65	120	50, 62, 78
	NFI-6SW	NV630-CW/SW/SEW	2	940	433	260	207	856	350	15	90	150	92
	NFI-8SW	NV800-SEW	2	1353	543	304	251	1270	460	15	90	320	104
	NFW-05SV	NV32-SV, NV63-CV/SV/HV	3	390	265	214	160	350	225	9.5	45	-	28
	NFW-1SV	NV125-CV/SV	3	390	265	214	160	350	225	9.5	50	-	36
w	NFW-1HV	NV125-HV	3	480	265	239	186	440	225	9.5	60	-	36
	NFW-2SV	NV250-CV/SV/HV, NV125/250-SEV/HEV	3	550	355	264	210	510	315	11	75	-	54
VV	NFW-4CW	NV400-CW	4	800	355	257	220	760	315	11	85	-	70
	NFW-4SW	NV400-SW/SEW	4	800	355	257	220	760	315	11	85	-	70
	NFW-6SW	NV630-CW/SW/SEW	4	800	355	257	220	760	315	11	85	-	82
	NFW-8SW	NV800-SEW	4	1435	550	339	265	1395	515	15	100	180	104

Note) The sockets are applicable to thick steel duct (JIS C 8305) and conduit tube thread.

9. Electrical Operated Circuit Breakers and Electrical **Operation Devices**



Spring charge type (1)



Spring charge type (2) Standard paint color: Munsell 5Y7/1



Motor-drive type (2) Standard paint color: Munsell 5Y7/1

(1) Specifications

Electrically operated circuit breakers **Table 6-44**

Specify the electrical operation device together with the circuit breaker body.

Electrically operating method			od	Spring charge type (1)	Spring cha	rge type (2)	Motor-drive type (2)		
MCCB	CI	Class S, H and R		NF125-SV, NF125-HV NF125-SEV, NF125-HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SV, NF250-HV NF250-SEV, NF250-HEV NF250-SEV/LGV/HGV/RGV NF125-RV, NF250-RV	NF630-SW, NF630-SEW NF630-HEW, NF630-REW	NF1000-SEW NF1250-SEW NF1250-SDW NF1600-SEW NF1600-SDW	NF400-SW, NF400-SEW NF400-HEW, NF400-REW NF630-SW, NF630-SEW NF630-HEW, NF630-REW NF800-SDW, NF800-SEW NF800-HEW, NF800-REW	NF1000-SEW NF1250-SEW NF1250-SDW NF1600-SEW NF1600-SDW	
		Class C		NF125-CV NF250-CV	NF400-CW NF630-CW NF800-CEW	-	NF400-CW NF630-CW NF800-CEW	-	
	Class U			NF125-UV NF250-UV	NF400-UEW NF800-UEW	-	NF400-UEW NF800-UEW	-	
	N	lotor breaker	s	NF125-SV, NF250-SV	_	_	_	_	
ELCB		ass S, H and	R	NV125-SV, NV125-HV NV125-SEV, NV125-HEV NV250-SV, NV250-HV NV250-SEV, NV250-HEV	NV400-SW, NV400-SEW NV400-HEW NV630-SW, NV630-SEW NV630-HEW, NF800-SEW NV800-HEW	-	NV400-SW, NV400-SEW NV400-HEW NV630-SW, NV630-SEW NV630-HEW, NF800-SEW NV800-HEW (*3)	-	
				NV125-CV NV250-CV	NV400-CW NV630-CW	-	NV400-CW(*3) NV630-CW	-	
	N	Motor breakers		NV125-SV, NV250-SV	_	_	_	_	
(Allowable operating voltage range:			inge:	Compatible with 100 to 240VAC and 100 to 250VDC 24VDC, 48 to 60VDC (*1)	100-110VDC, 200-220VAC(12	100-110VAC 5VDC, 240VAC)	100-110VDC, 100-110VAC, 200-220VAC (125VDC, 240VAC)		
Operating	DC	100/110V	ON OFF	0.5 (1.5)	8 1.0 (3.0)	10 1.0 (4.0)	3.0(8.0)	5.0(13.5)	
current (Arms)		100/110V	, ON OFF		10	10		5.0(10.0)	
Values in				0.6 (3.0)	1.0 (3.0)	1.0 (3.0)	4.0(8.0)		
(): Starting current	AC -	200/220V	ON	0.5 (2.5)	8	8	2.0(4.5)	3.5(7.0)	
Carront					0.5 (1.5)	0.5 (1.5)	2.0(4.5)	3.3(7.0)	
0	oN s OFF			0.05~0.1(*2)	0.05 0.07		0.3 or less		
Operating time				0.6 or less (self-holding type)	3 or less (self-holding type)		(self-hold	ding type)	
		Charge		1.2 or less (self-holding type)	0 01 1633 (3611	-notating type)	_	_	
Required transformer capacity VA			/ VA	150	70	00	400	700	
Endurance voltage				1500V	1500V				

- Endurance voltage | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 1500V | 15

Electrical operation devices

The following models of Electrical Operation Devices are supplied also as separate devices. The user can install them to the circuit breaker body. (Front connection, rear connection and plug-in types)

(When requiring a motor breaker or a CE marked product, place an order for it together with the circuit breaker body.)

Table 6-45

Electrically operating method	Spring charge type (1)									
Applicable models Rated operating voltage	NF125-CV/SV/HV	NV125-CV/SV/HV	NF125-SEV/HEV/SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV/SV/HV/UV/SEV/HEV/SGV/LGV/HGV/RGV NF250-UV	NV250-CV/SV/HV	NV125-SEV/HEV NV250-SEV/HEV					
Compatible to 100-240VAC/100-250VDC	MDSAD240-NF1SVE	MDSAD240-NV1SVE	MDSAD240-NF2SVE	MDSAD240-NV2SVE	MDSAD240-NVE2SVE					
24VDC	MDSD024-NF1SVE	MDSD024-NV1SVE	MDSD024-NF2SVE	MDSD024-NV2SVE	MDSD024-NVE2SVE					
48-60VDC	MDSD060-NF1SVE	MDSD060-NV1SVE	MDSD060-NF2SVE	MDSD060-NV2SVE	MDSD060-NVE2SVE					

Cautions

- All electrical operations are based on intermittent rating.
 Avoid operating any device continuously 10 times or more (ON and OFF operations are counted as one time).
- Operate any device at 85 to 110% of the rated operating voltage.
- The dielectric strength of electrical operation circuits is 1500 V. When performing dielectric strength test of any of these devices and other devices, if the test voltage exceeds the rated value (1500V), disconnect the operation power supply terminal.
- When collectively operating more than one electrical operation device, isolate the devices connecting a relay to each device.

If the control terminals are directly connected in parallel, a circuit will be formed, and the devices may not normally function.

Automatic reset (optional)

The automatic reset type has a built-in alarm switch in the circuit breaker and is connected in such a way that the OFF operation circuit is closed when the circuit breaker trips. Therefore, when the circuit breaker trips, it is automatically reset.

However, when the circuit breaker thermally trips, it may not be automatically reset.

If an automatic reset spring charge type (1) is required, the user must wire the device in accordance with the external connection diagram shown in Fig. 1 in "Cautions for use" in (2).

(2) Structure and operation

■Spring charge type (1)

Electrical operation

- When the ON operation switch is closed, the relay will operate, the motor will be driven, the latch mechanism will be released, and the closing spring force will instantaneously turn on the circuit breaker.
- When the OFF operation switch is closed, the relay will operate, the motor will be driven, the circuit breaker will be turned off (reset), and, at the same time, the closing spring will be charged.

Note: The charge may not be completed because the circuit protective function operates.

Manual operation

- After turning the MANUAL/AUTO selection switch on the cover upper surface to MANUAL, press the ON button, and the latch mechanism will be released, and the closing spring force will instantaneously turn on the circuit breaker.
- After turning the MANUAL/AUTO selection switch on the cover upper surface to MANUAL, draw out the manual handle, and move it upward and downward about 10 to 14 times. Then, the circuit breaker will be turned off (reset), and, at the same time, the closing spring will be charged. Although the circuit breaker can be turned off even if the switch is not turned to MANUAL, the selection switch should be set to MANUAL because remote operation may be accepted.
- After turning the changeover switch to MANUAL, draw out the OFF lock plate, and lock the circuit breaker in the OFF state with padlocks (to be prepared by the user). Up to three padlocks can be fitted.
 \$\phi\$5 to \$\phi\$8 padlocks can be fitted.

Note: After the completion of manual operation (on-site operation), return the selection switch to AUTO without fail. If it is not returned, electrical operation (remote operation) cannot be performed.

Display of tripping state

When the circuit breaker trips in the ON state, the tripping state is displayed. When it trips in the OFF state, the OFF state is kept displayed.

Note: When it trips in the OFF state, signals from AL will not be output.


Cautions for use

- ① To the ON or OFF operation switch (to be prepared by the user), current only of 24VDC and 15 to 30mA flows. Use a switch for minute load.
- ② Operate the operation switch for 0.1s or more to turn on and for 20ms or more to turn off. If it is operated for less than the time, it may not function.

The wire to the operation switch shall be less than 100m.


- ③ The power supply module has a built-in switching power supply. Therefore, it may interfere with communication devices near the module. In such a case, install a noise filter on the input side.
- ④ For the automatic reset type, purchase a circuit breaker with alarm switch (for minute load), and connect the signal circuit (among the terminal numbers S1, S2 and S4) as shown in Fig. 1. Please note that the wirings that are shown in dashed lines are wired already at the time pf shipment from the factory.

If the circuit breaker in the OFF state is tripped by UVT-N or the like, it cannot be automatically reset. To reset it, it is necessary to turn it on under no current. After this operation, it will be automatically reset

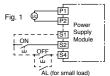

AL "a" (small load alarm switch)



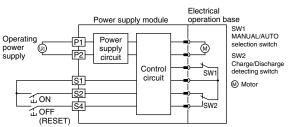

The circuit breaker is off, and the electrical operation device is in the charged state.

Symbol	Interpretation of symbol
SW1	MANUAL/AUTO selection switch
SW2	Limit switch
5002	(For spring condition detection charge/discharge)
M	Motor

Note *1 When power is applied, inrush current (capacitor charging current) of 60A flows to the breaker and fuse installed on the power supply circuit for 1ms or so. When selecting the breaker and fuse, make sure that they will not cause problems, such as blowout and malfunction.

■ Motor-drive type (2)

Electrical operation

Forward and reverse motor rotation is changed by ball screw to switch the breaker ON and OFF (reset).

Manual operation


The manual operation handle can be used to switch the breaker ON and OFF directly.

- 1 In the case of a circuit breaker with UVT, if the circuit breaker trips owing to the operation of UVT, the procedure for re-closing the circuit breaker varies depending on the condition of the electrical operation device before the circuit breaker trips.
 - Tripping in ON state: Reset (OFF). → Turn on.
 - Tripping in OFF state: Turn on (idle tripping). → Reset (OFF). → Turn on.


(If the circuit breaker cannot be turned on (idle tripping), reset (OFF) it, and turn on.)

- When an automatic reset system is configured on a nonreset type circuit breaker with UVT, if UVT is set to the no-voltage state, the operations to turn off (reset), trip, turn off (reset) and trip are repeated.
- Therefore, configure the circuit in such a way that power is disconnected from the electrical operation device before the circuit breaker is tripped by the non-reset type UVT.
- ② Current of about 0.2A will flow to the ON-OFF switch. Use an appropriate switch.

- ③ Do not apply ON and OFF operation signals continuously. An interval of 0.5 sec or more is necessary between ON and OFF signals.
- 4 In the case of the automatic reset type device, it will perform the reset operation with an interval of 0.5 sec after NFB performs the tripping action.
- (5) The electrical operation device has a built-in pumping preventing circuit. Therefore, it can operate to turn off the circuit breaker while the ON operation switch is held in the closing state, but it cannot turn on continuously after turning off. To turn on, once turn off the ON operation switch, and turn on the switch. Do not apply the ON operation signal continuously
- ⑥ The manual operating handle moves at a high speed during electrical operation. Pay attention to the handle. Keep the operation circuit power supply off during manual operation.
- ⑦ In the manual operation, surely turn the manual operating handle to the position indicated on the nameplate.
- Operation circuit For the automatic reset type, the connections indicated with the dashed lines are added.

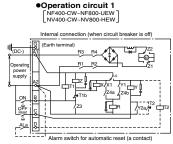

- M : Motor
- X : Relay for ON operation
- : Relay for OFF operation
- R : Motor driving relay
- Z : Polarity switching relay (Operation circuit 1 or 2)
- (R1)~(R4): Relay switches
- Z, K: Exciting coil of keep relay
- (Operation circuit 3) LS, LS1, LS2: Limit switches
- X1~X4, Y1~Y4, Y2a, Z4a, Z4b, Z1, Z2, Z3, K1, T1b, T2a; Relay switches
- T₁: Pumping preventing timer
- T₂: Timer for automatic reset

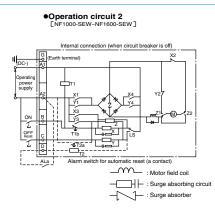

■Spring charge type (2)

Electrical operation

When the ON operation switch is closed, the closing coil will be excited to release the latch mechanism, and the closing spring force will instantaneously turn on the circuit breaker. When the OFF operation switch is closed, the relay will operate to start the motor, turn off (reset) the circuit breaker and, at the same time, charge the closing spring.

Manual operation

- Press the ON button, and the latch mechanism will be released, and the closing spring force will instantaneously turn on the circuit breaker.
- Turning off (resetting)

 Bush the leef enring


Push the leaf spring, bring out the manual handle, and move the handle upward and downward more than ten times. Then, the circuit breaker will be turned off (reset), and, at the same time, the closing spring will be charged.


Cautions for use

① In Before installing or removing the electrical operation device to or from the circuit breaker, trip the circuit breaker, and discharge the electrical operation device. After the device is installed to the circuit breaker, the device will not trip the circuit breaker in the OFF state even if the trip button is pressed. This is not a trouble.

The electrical operation device takes 3 seconds to turn off the circuit breaker. To open the circuit immediately by remote operation, use a circuit breaker with SHT or UVT.


- The device has a built-in pumping preventing relay.
- ② Current of about 9A and 0.2A will flow to the ON and OFF switches, respectively. Use appropriate switches.

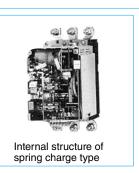

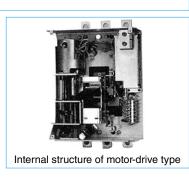

Operation circuit

For the automatic reset type, the connections indicated with the dashed lines are added.

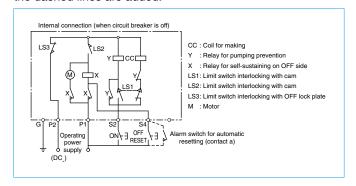


10. IEC 35mm Rail Mounting Adapters

Table 6-46

Γ	T	Number of poles	Applicab	le model
ı	Type name	of circuit breaker	MCCB	ELCB
	(Note1) DIN-05SV	2, 3	NF32-SV NF63-CV/SV/HV	NV32-SV NV63-CV/SV/HV

Note: 1. Place an order in units of 10 pieces.

External dimension

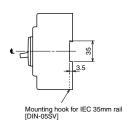



Characteristics and Dimensions

1 Molded Case Circuit Breakers	146
• NF32-SV, NF63-CV/SV/HV	146
• NF125-CV/SV/HV	148
• NF125-UV	150
• NF250-CV/SV/HV	152
• NF250-UV	154
• NF125-SGV/LGV/HGV/RGV, NF160-SGV/LGV/HGV,	
NF250-SGV/LGV/HGV/RGV	
• NF125-SEV/HEV, NF250-SEV/HEV	158
• NF400-CW/SW	160
• NF400-SEW/HEW/REW	162
• NF400-UEW	164
• NF630-CW/SW	166
• NF630-SEW/HEW/REW	168
NF800-CEW/SEW/HEW/REW	170
• NF800-SDW	172
• NF800-UEW	
• NF1000-SEW, NF1250-SEW	176
• NF1250-SDW	178
• NF1600-SEW	180
• NF1600-SDW	182
2 Earth Leakage Circuit Breakers	184
• NV32-SV, NV-63CV/SV/HV	184
• NV125-CV/SV/HV	
• NV250-CV/SV/HV	188
• NV125-SEV/HEV, NV250-SEV/HEV	190
• NV400-CW/SW	
• NV400-SEW/HEW	
• NV630-CW/SW	
• NV630-SEW/HEW	198
• NV800-SEW/HEW	

3UL Certified Circuit Breakers	202
• NF50-SMU	202
• NF50-SVFU, NV50-SVFU	
• NF100-CVFU, NV100-CVFU	206
• NF100-SRU/HRU, NV100-SRU/HRU	208
• NF125-SVU/HVU, NV125-SVU/HVU	210
• NF250-CVU/SVU/HVU, NV250-CVU/SVU/HVU	
• NF400-SWU/HWU	214
• NF630-SWU/HWU	_
• NF30-FAU, NF50-FAU, NV30-FAU, NV50-FAU	
• NF50-FHU, NF100-FHU, NV50-FHU, NV100-FHU	220
4 Measuring Display Unit Breakers	222
NF250-SEV/HEV with MDU	222
NF400-SEW/HEW with MDU	224
NF800-SEW/HEW with MDU	226
5 DC High-Voltage Circuit Breakers	230
• NF63-HDV	
• NF125-HDVA, NF250-HDVA	
• NF400-HDW, NF800-HDW	234
6 Miniature Circuit Breakers, Residual Current Circuit Breaker Residual Current Circuit Breaker with Overcurrent Protection and	rs [°]
Isolating Switches	<u>236</u>
• BH-D6, BH-D10	
• BH-DN	_
• BV-D	
• BV-DN, BV-DN6	
• KB-D	240
7 Circuit Protectors	241
• CP30-BA/HU	
8 Electrical Operated Cicuit Breakers	242



NF63-SV


Model			NF3	2-SV	NF6	3-CV	NF63-SV		N	NF63-HV		NF32-SV [MB]		NF63- [MB	-	NF63-S [MB]		
Rated current In (A) Reference ambient temperature 40°C		3 4 (5) 6 10 (15) 16 20 25 (30) 32 3 4 (5) 6 10 (15) 16 20 25 (30) 32 40 50 (60) 63		5) 16 5 (30) 0 50	3 4 (5) 6 10 (15) 16 20 25 (30) 32 40 50 (60) 63		20 32	(15) 25 (2 40 60) 6	30) 50	4 7.1 10 16	8 12	32	4 5 8 10 16 25 40 4	12 32	4 5 7. 8 10 1 16 25 3 40 45			
Number of p	oles			2	3	2	3	2 :	3 4	2	3	4		3		3		3
Rated insula	Rated insulation voltage Ui (V)			60	00	600		600		690			500		500)	500	
			690V		-		-		_		2.5/2.5		_		-		-	
			500V	2.5/2.5		2.5/2.5		7.5/7.5		7.5/7.5		-		-		-		
Detect			440V	2.5/2.5 2.5/2.5		2.5/2.5		7.5/7.5 7.5/7.5		10/8		2.5/2.5		2.5/2	.5	7.5/7.5		
Rated short-circuit	IEC 60947-2		415V			2.5/2.5				10/8		2.5/2.5		2.5/2	.5	7.5/7.5		
breaking	EN 60947-2		400V	5/5		5/5		7.5/7.5		10/8		5/5		5/5		7.5/7.5		
capacity	(lcu/lcs)		380V	5	/5	5	/5	7.5/7.5			10/8			5/5		5/5		7.5/7.5
(kA)			230V	7.5	/7.5	7.5	/7.5	15	/15		25/19)	7.	5/7.	5	7.5/7	5	15/15
			200V	7.5	/7.5	7.5	/7.5	15	/15		25/19)		-		-		-
		DC	250V (*1)	2.5	/2.5	2.5	/2.5	7.5	7.5		7.5/7.5	5	-		-		-	
Standard attached parts (front connection)				Terminal screw: 50A or less M5x14 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) 60A or more M8x14 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) Mounting screw: M4x0 7x55 (2 and 3P: 2pcs, 4P: 4pcs)														

60A or more M8x14 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) Mounting screw: M4x0.7x55 (2 and 3P: 2pcs, 4P: 4pcs) Insulation barrier: (2P: 1pc, 3P: 2pcs, 4P: 3pcs) ("2)


es *1 Use two poles for three- and four-pole products. Not available for use with connection as shown at the bottom of page 18.

*2 Supplied with NF63-SV and NF63-HV

Operating Characteristics

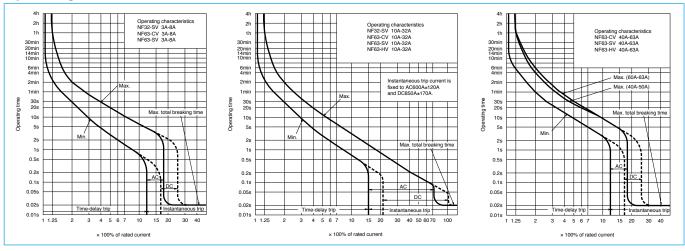


Internal Accessories

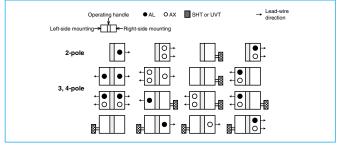

Temperature Compensation Curve

Accessories

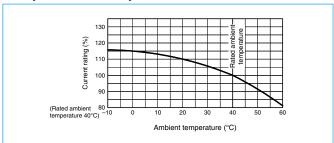


Type name

Reference page


Accessor	ies		Type name	Reference page	
	F	2P	F-05SV2	123	
Operating bandle	Г	3, 4P	F-05SV	123	
Operating handle	V	2P	V-05SV2	125	
	V	3, 4P	V-05SV	125	
Lock cover	LC		LC-05SV		
	111 (*4)		HLF-05SV	101	
Handle lock device	HL(*1)		HLN-05SV	134	
	HL-S		HLS-05SV		
Mechanical interlock	МІ	2, 3P	MI-05SV3	100	
	IVII	4P	MI-05SV4	136	


ote *1 HLF types are used for OFF lock and HLN types for ON lock.

		l	22	105-05572					
	Small	TC-S	3P	TCS-05SV3					
			4P	TCS-05SV4					
			2P	TCL-05SV2					
			25	TCL-05SV2L					
	Large	TC-L	3P	TCL-05SV3					
	101-05 1		3P	TCL-05SV3L					
Terminal				4P	TCL-05SV4				
				2P	TTC-05SV2	128			
cover		Skeleton TTC	keleton TTC	Skeleton TTC	Skeleton TTC	Skeleton TTC	3P	TTC-05SV3	
			4P	TTC-05SV4					
			2P	BTC-05SV2					
		Rear	Rear B1	BTC	3P	BTC-05SV3			
			BTC-05SV4						
		Plug-in PTC		2P	PTC-05SV2				
	Plug-in I		3P	PTC-05SV3					
			4P	PTC-05SV4					
IEC 35mm	rail mountii	ng adapt	ers	DIN-05SV	143				

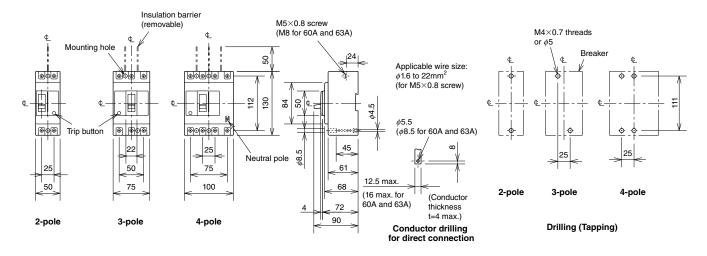




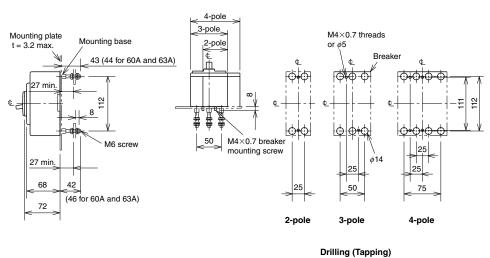

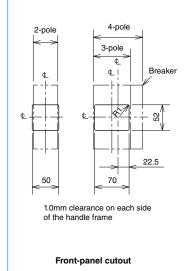

Plug-in

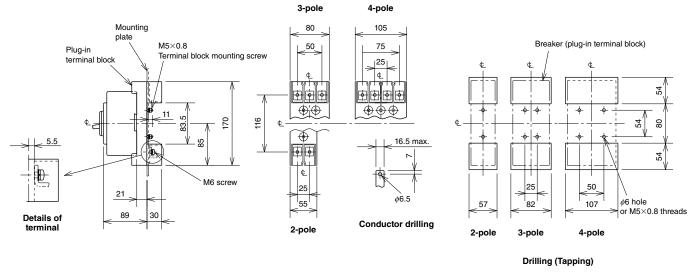

Remark: 1. Only 2-pole and 3-pole models are available for NF32-SV and NF63-CV.

We only have motor breakers for 3-pole models.





NF125-SV


Model				NF12	25-CV	NF125-SV			N	F125-ŀ	١٧	NF125-SV[MB]
Rated current In (A) Reference ambient temperature 40°C		50 (60) 63 (75) 80 100 125		40 50) 16 20 (30) 32 50 (60) 63 (75) 80 100 125		(15) 16 20 (30) 32 40 50 (60) 63 (75) 80 100 125		(12.5) (16) (25) 32 (40) 45 63 71 90 100			
Number of p	oles			2	3	2	3	4	2	3	4	3
Rated insula	tion voltage Ui	(V)		60	00		690			690		500
	IEC 60947-2		690V	-	-				10/8			-
		AC	500V	7.5	18/18			30/23			-	
			440V	10	25/25		50/38		25/25			
Rated short-circuit			415V	10)/5		30/30)	50/38		30/30	
breaking	EN 60947-2		400V	10/5		30/30		50/38		30/30		
capacity (kA)	(lcu/lcs)		380V	10/5		30/30		50/38		30/30		
(KA)			230V	30.	/15	50/50		100/75		50/50		
			200V	30.	/15	50/50		100/75		-		
		DC	250V (*1)	7.5	5/4		40/40)	-		-	
Standard attached parts (front connection)			Terminal screw: M8x14 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) Mounting screw: M4x0.7x55 (2 and 3P: 2pcs, 4P: 4pcs) (*2) Insulation barrier: (2P: 1pc, 3P: 2pcs, 4P: 3pcs)									

Notes *1 Use two poles for 3- and 4-pole products.


Operating Characteristics

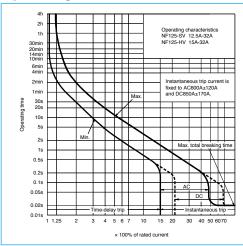

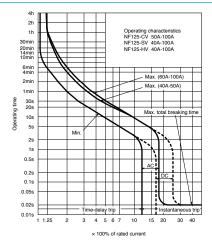


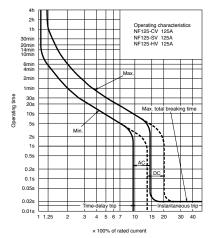

Internal Accessories

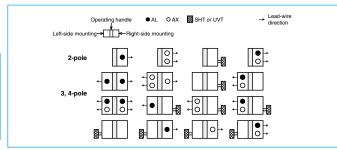

Temperature Compensation Curve

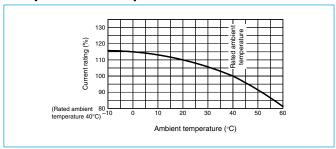

External Accessories

Accessor	ies		Type name	Reference page		
	F	2P F-1SV2		400		
One retine handle	-	3, 4P	F-1SV	123		
Operating handle	V	2P	V-1SV2	125		
	\ \	3, 4P	V-1SV			
Lock cover	LC		LC-05SV			
	111 /*4\		HLF-05SV	101		
Handle lock device	HL(*1)		HLN-05SV	134		
	HL-S		HLS-05SV			


*1 HLF types are used for OFF lock and HLN types for ON lock.

*2 Specify the working voltage. Refer to the reference page for type name.


е		Accessor	ies		Type name	Reference page			
	Mashaniaa	hanical interlock		2, 3P	MI-05SV3	136			
	Mechanica	ii interiock	MI	4P	MI-05SV4	136			
		Small		2P	TCS-1SV2				
			TC-S	3P	TCS-1SV3				
					4P	TCS-1SV4			
		Large		2P	TCL-1SV2				
			Large	Large	Large	TC-L	3P	TCL-1SV3	
					4P	TCL-1SV4			
	T	Skeleton	Skeleton	Skeleton			2P	TTC-1SV2	
	Terminal cover				TTC	3P	TTC-1SV3	128	
	COVE			4P	TTC-1SV4				
				2P	BTC-1SV2				
		Rear	BTC	3P	BTC-1SV3				
				4P	BTC-1SV4				
				2P	PTC-1SV2				
		Plug-in	PTC	3P	PTC-1SV3				
				4P	PTC-1SV4				
	Electrical of	peration de	vice		(*2)	140			

If wired as shown at the bottom on page 18, 3- and 4-poles can be used for up to 400 and 500VDC, respectively.


*2 Supplied with NF125-SV and NF125-HV.

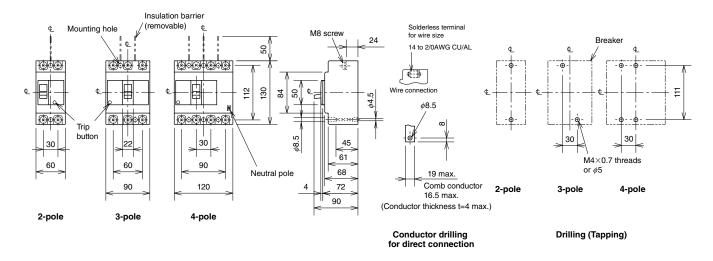

Rear connection

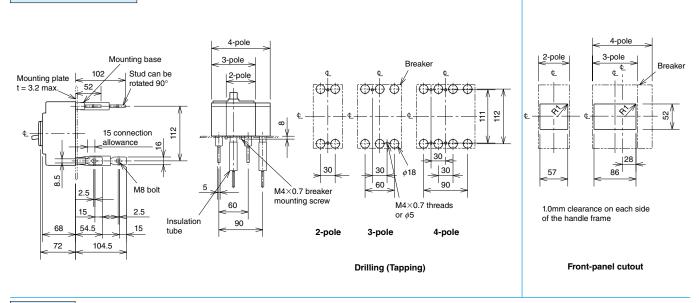

Plug-in

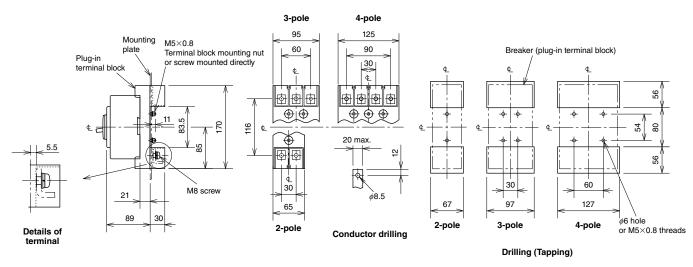


Remarks: 1. The 2-pole models of NF125-HV are 3-pole models with the central pole removed.


- 2. Only 2-and 3-pole models are available for NF125-CV.
- 3. We only have motor breakers for 3-pole models.


NF.	125-	UΥ
-----	------	----

Model					NF125-UV				
	rent In (A) e ambient temperature	e 40°C			15 20 30 40 50 60 75 100 125				
Number o	f poles			2	3	4			
Rated ins	ulation voltage Ui (V)			690					
			690V		10/10				
cuit / (kA)	IEC 60947-2 EN 60947-2	AC	500V		200/200				
			440V		200/200				
short-circuit capacity (k			415V		200/200				
hor			400V		200/200				
s be	(Icu/Ics)		380V		200/200				
Rated s breaking			230V		200/200				
pr			200V		200/200				
		DC	250V	_					
Standard attached parts (front connection)				Terminal screw: M8×14 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) Mounting screw: M4×0.7×55 (2 and 3P: 2pcs, 4P: 4pcs)					


Operating Characteristics

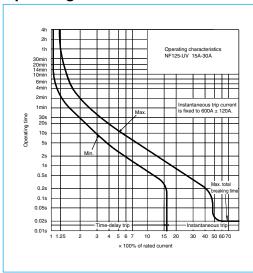

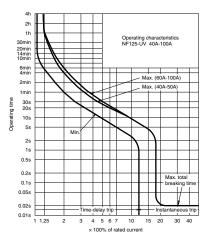


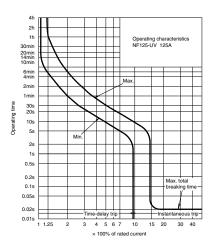

Internal Accessories

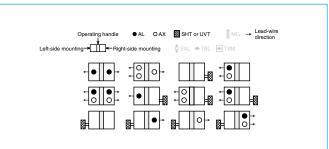

Temperature Compensation Curve

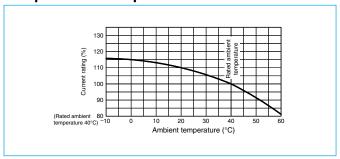


External Accessories


	Accessor	ies	Type name	Reference page		
	Operating handle	F	F-1UV	123		
		V	V-1UV	125		
	Lock cover	LC	LC-05SV			
		111 /+4)	HLF-05SV	404		
	Handle lock device	HL (*1)	HLN-05SV	134		
		HL-S	HLS-05SV			


Notes *1 HLF types are used for OFF lock and HLN types for ON lock.
*2 Specify the working voltage. Refer to the reference page for type name.

,		Accessori	ies		Type name	Reference page
	Mechanica	المعامعات	мі	2, 3P	MI-05SV3	
	Mechanica	ii interiock	IVII	4P	MI-05SV4	400
		Small	TC-S	3P	TCS-1SV3	136
		Smail	10-5	4P	TCS-1SV4	
		Laves	TC-L	3P	TCL-1SV3	
		Large	I I C-L	4P	TCL-1SV4	
	Terminal	Skeleton	ттс	3P	TTC-1SV3	
	cover	Skeleton	110	4P	TTC-1SV4	128
		Rear	DTC	3P	BTC-1SV3	128
		near	BTC	4P	BTC-1SV4	
		Diversion	DTC	3P	PTC-1SV3	
		Plug-in	PTC	4P	PTC-1SV4	
	Electrical o	peration de	vice		(*2)	140

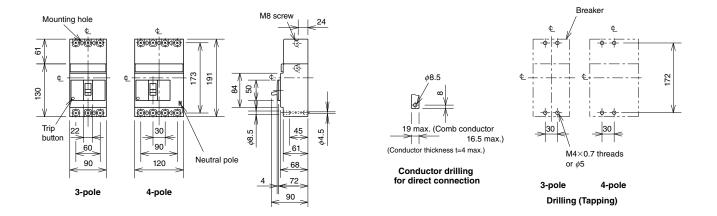

Rear connection

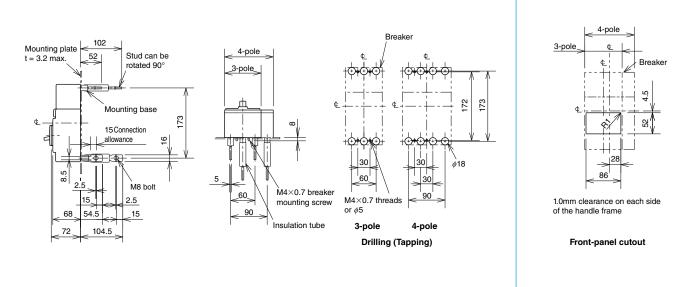

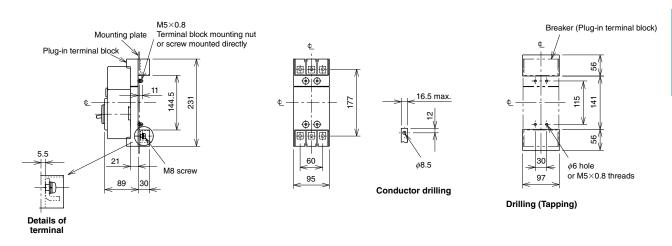

Remark: 1. 2-pole models are 3-pole models with the central pole removed.

Molded Case Circuit Breakers

NF250-CV NF250-SV NF250-HV





Model				NF25	50-CV	N	F250-S	V	N	IF250-H	IV	NF250-SV[MB]
	ted current In (A) ference ambient temperature 40°C mber of poles ted insulation voltage Ui (V) 690\ 500\ 440\ ted			(10 125 150 225	(100) 125 150 160 175 200 225 250			125 150 160 175 200 225 250			125 150 175 200 225	
Number of p	oles			2	3	2	3	4	2	3	4	3
Rated insula	ated insulation voltage Ui (V) 690V			6		690			690		500	
						8/8			10/8		-	
			500V	10)/8		30/30			50/38		-
Rated short-circuit IEC 60947-2			440V	15/12			36/36		65/65			36/36
		1	415V	25/19		36/36		70/70			36/36	
breaking	short-circuit IEC 60947-2		400V	25	36/36			75/75			36/36	
capacity (kA)			380V	25	/19	36/36			75/75			36/36
(NA)			230V	36	/27	85/85			100/100			85/85
			200V	36	/27		85/85			100/100)	-
		DC (*1)	250V	15	/12	20	/20 (300	OV)	40	/40 (300	OV)	-
	Standard attached parts front connection)				Terminal screw: M8 (Bolt(Hex-socket))×16 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) Mounting screw: M4×0.7×55 (2 and 3P: 2pcs, 4P: 4pcs) Insulation barrier: (2P: 2pcs, 3P: 4pcs, 4P: 6pcs)							

Note *1 Use two poles for 3- and 4-pole products. In this case, do not use the neutral pole of the 4-pole products.


If wired as shown at the bottom of page 18, 3-pole NF250-CV can be used for up to 400VDC, 3-pole NF250-SV and NF250-HV up to 500VDC and 4-pole products up to 600VDC.

Operating Characteristics

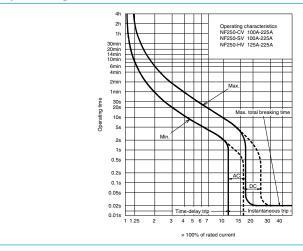


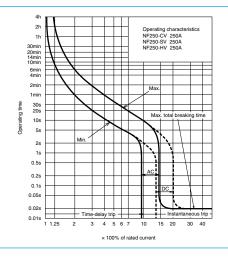

Internal Accessories

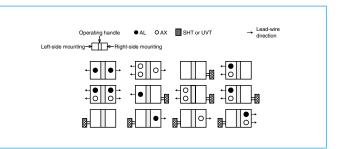

Temperature Compensation Curve

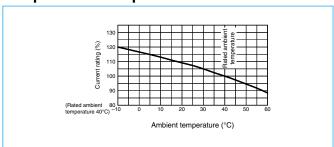

Accessor	ies	Type name	Reference page
On a matin or branching	F	F-2SV	123
Operating handle	V	V-2SV	125
Lock cover	LC	LC-05SV	
	111 (*4)	HLF-05SV	104
Handle lock device	HL(*1)	HLN-05SV	134
	HL-S	HLS-2SV	


Notes *1 HLF types are used for OFF lock and HLN types for ON lock.
*2 Specify the working voltage. Refer to the reference page for type name.

9		Accessori	es		Type name	Reference page
	Markania	I forke of a sile		2, 3P	MI-05SV3	400
	Mechanica	ii interiock	MI	4P	MI-2SV4	136
		Small	TC-S	2, 3P	TCS-2SV3	
		Siliali	10-3	4P	TCS-2SV4	
				2, 3P	TCL-2SV3	
		Large	TC-L	2, 31	TCL-2SV3L	
				4P	TCL-2SV4	
	Terminal cover	Skeleton	ттс	2, 3P	TTC-2SV3	128
	00101	Skeleton	110	4P	TTC-2SV4	
		Rear	втс	2, 3P	BTC-2SV3	
		neai	ыс	4P	BTC-2SV4	
		Dlug in	PTC	2, 3P	PTC-2SV3	
		Plug-in	FIC	4P	PTC-2SV4	
	Electrical o	peration de	vice		(*2)	140


Breaker


52

Front connection

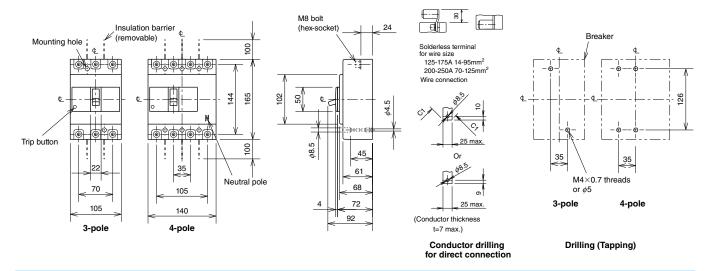

Rear connection

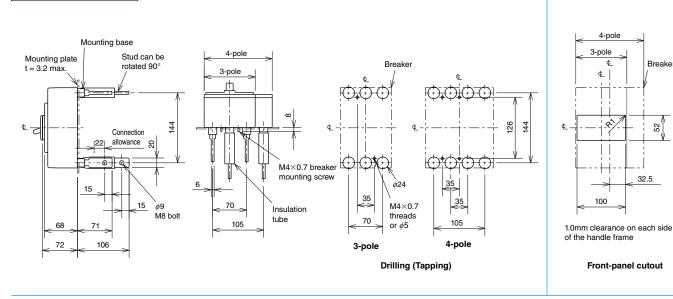

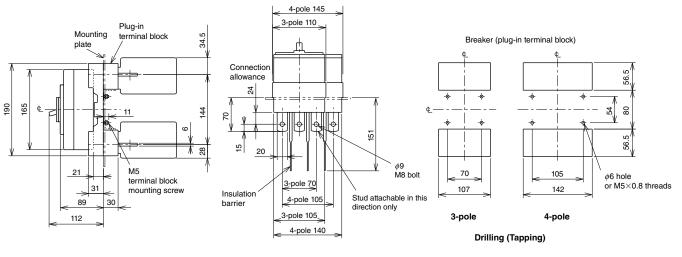

- Remarks: 1. 2-pole models are 3-pole models with the central pole removed.
 - Only 2-pole and 3-pole models are available for NF250-CV.
 We only have motor breakers for 3-pole models.

Molded Case Circuit Breakers


NF250-UV




NF250-UV

Model					NF250-U'	V				
	urrent In (A) ce ambient tempe	erature	40°C		125 150 175 200 225 250					
Number	of poles			2 3 4						
Rated in	sulation voltage l	Ji (V)		690						
			690V	15/15						
a			500V	200/200						
;; ≥;			440V	200/200						
r-cir acity	IEC 60947-2		415V	200/200						
short-circuit capacity (kA)	EN 60947-2	AC	400V	200/200						
	(Icu/Ics)		380V		200/200					
Rated s breaking			230V		200/200					
p			200V		200/200					
		DC	250V		-					
Standard attached parts (front connection)				Terminal screw: M8 (Bolt(Hex-socket))x16 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) Mounting screw: M4x0.7x55 (2 and 3P: 2pcs, 4P: 4pcs) Mounting screw: M4x0.7x73 (2 and 3P: 2pcs) Insulation parier: (2P: 2pcs, 3P; 4pcs, 4P; 6pcs)						


Operating Characteristics

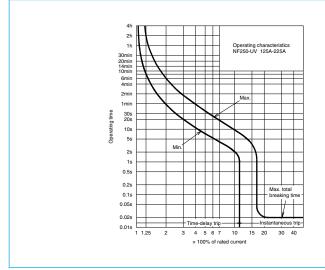

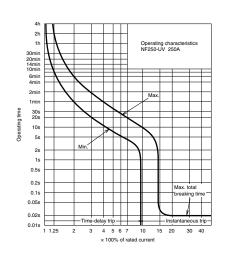

Internal Accessories

Temperature Compensation Curve

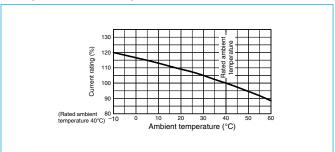


Accessor	ies	Type name	Reference pag
0	F	F-2UV	123
Operating handle	V	V-2UV	125
Lock cover	LC	LC-05SV	
	111 /*4)	HLF-05SV	104
Handle lock device	HL(*1)	HLN-05SV	134
	HL-S	HLS-2SV	


Notes *1 HLF types are used for OFF lock and HLN types for ON lock.


_	typec are acca io. o	room and rizer types for our room.
	*2 Specify the working voltage.	Refer to the reference page for type name.

	Accessor	ies		Type name	Reference page
			2, 3P	MI-05SV3	100
Mechanic	al interlock	MI	4P	MI-2SV4	136
		TO 0	2, 3P	TCS-2SV3	
	Small	TC-S	4P	TCS-2SV4	
				TCL-2SV3	
	Large	TC-L	2, 3P	TCL-2SV3L	
			4P	TCL-2SV4	
Terminal cover	01-1-1	TTC	2, 3P	TTC-2SV3	128
COVE	Skeleton	110	4P	TTC-2SV4	
	D	рто	2, 3P	BTC-2SV3	
	Rear	BTC	4P	BTC-2SV4	
	Diversion	DTC	2, 3P	PTC-2SV3	
	Plug-in	PTC	4P	PTC-2SV4	
Electrical	operation de	evice		(*2)	140

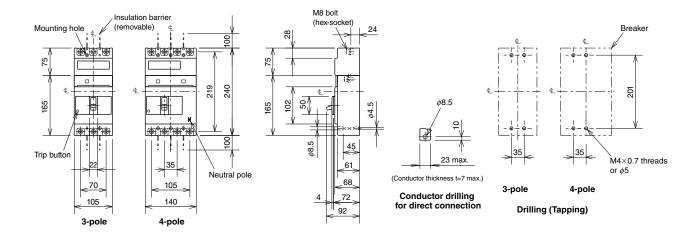



Rear connection

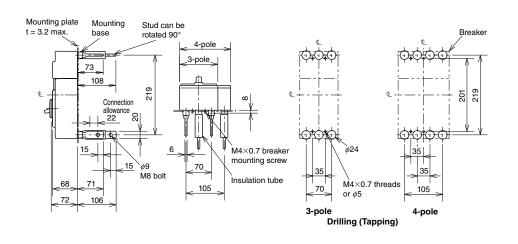

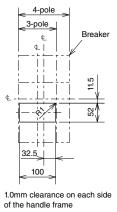

Front-panel cutout

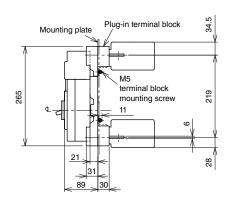

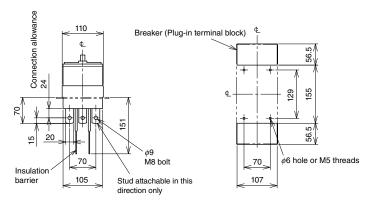

Drilling (Tapping)

Remark: 1. 2-pole models are 3-pole models with the central pole removed.

NF125-LGV

NF250-LGV

NF160-HGV

NF125-RGV

NF250-SGV


NF125-SGV NF160-SGV

Мо	del			NF	125-S	GV	NF	160-S	GV	NF	250-S	G۷	NF	125-L	GV	NF	160-L	GV	NF	250-L	G۷
	ted current le erence ambien		ature 40°C	32-40	20-25 35-50 70-100	45-63	1.	25-16	0	1	25-16 40-20 75-25	0	32-40	20-25 35-50 70-100	45-63	1	25-16	0	1	25-16 40-20 75-25	0
Nu	mber of pole	es		2	3	4	2	3	4	2	3	4	2	3	4	2	3	4	2	3	4
Ra	ted insulatio	n voltaç	ge Ui (V)		690			690			690			690			690			690	
3			690V		8/8			8/8			8/8			8/8			8/8			8/8	
capacity			500V		30/30			30/30			30/30			36/36			36/36			36/36	
8	IEC		440V		36/36			36/36			36/36			50/50			50/50			50/50	
breaking	60947-2	AC	415V		36/36			36/36			36/36			50/50			50/50			50/50	
	EN	AC	400V		36/36			36/36			36/36			50/50			50/50			50/50	
short-circuit	60947-2		380V		36/36			36/36			36/36			50/50			50/50			50/50	
살	(Icu/Ics)		230V		85/85			85/85			85/85			90/90			90/90			90/90	
	200				85/85			85/85			85/85		90/90				90/90			90/90	
Rated		300V		20/20			20/20			20/20		20/20			20/20		20/20				
Sta	ndard attach	ned par	ts					Moun	ting s	crew:	M4×0).7×5	5 (2 a	nd 3F	2: 2pcs	, 4P:	4pcs)				
15.00		\		1				L.	1 - 41 .			OD. C	1	D 4	45	D. C	\				


(frc	nt connectio	n)					I	nsulation	on barr	ier: (2	P: 2pcs	, 3P: 4	lpcs, 4P: 6	pcs)		
Мо	del			NF	125-H	GV	NF	160-H	GV	NF	250-H	ΒV	NF125	-RGV	NF250	-RGV
	lodel ated current In (A) eference ambient temperature 4 umber of poles ated insulation voltage Ui			32-40	20-25 35-50 70-100		125-160			125-160 140-200 175-250				25 25-32 -50 50-63 00 100-125	125-160 160-200 200-250	
				2	3	4	2	3	4	2	3	4	2	3	2	3
Ra	ted insulation	voltaç	ge Ui (V)		690			690			690		69	90	69	90
(K)			690V		10/8			10/8			10/8		-	-	-	-
gig	500V 500V				50/38			50/38			50/38		-			
8	EC 440V				65/65			65/65		65/65			125/125		125/	125
king	BE IEC 440V 60947-2 AC 415V			70/70				70/70			70/70		150/	150	150/	150
prea	60947-2 EN AC 415V 400V				75/75		75/75			75/75			150/150		150/150	
icrit		[380V		75/75			75/75			75/75		150/	150	150/	150
살	(lcu/lcs)] [230V		100/10	0		100/100)		100/100)	150/	150	150/	150
당		[200V		100/10	0		100/100)		100/100)	150/	150	150/	150
Bat					40/40			40/40			40/40		-	-	-	-
Sta	ndard attach	ed par	ts										P: 2pcs, 4			
(fro	nt connectio	n)					I	nsulatio	on barr	ier: (2	P: 2pcs	, 3P: 4	lpcs, 4P: 6	pcs)		

*1 When wired as shown at the bottom of page 18, 3-pole models can be used for up to 500VDC, and 4-pole models for up to 600VDC.


Operating Characteristics

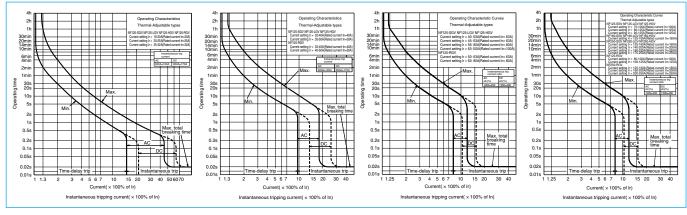

Internal Accessories

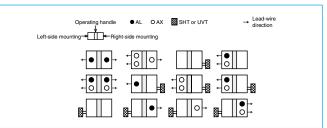


Temperature Compensation Curve

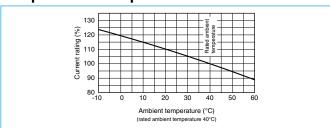


		T.	
Accessor	ies	Type name	Reference page
On a vating a bandle	F	F-2SV	123
Operating handle	V	V-2SV	125
Lock cover	LC	LC-05SV	
	111 /*4)	HLF-05SV	134
Handle lock device	HL(*1)	HLN-05SV	134
	HL-S	HLS-2SV	


^{*1} HLF types are used for OFF lock and HLN types for ON lock.
*2 Specify the working voltage. Refer to the reference page for type name.

	Accessor	ies		Type name	Reference page
Markania	at the kender of a		2, 3P	MI-05SV3	400
Mechanica	al interlock	MI	4P	MI-2SV4	136
	Small	TC-S	2, 3P	TCS-2SV3	
	Smail	10-5	4P	TCS-2SV4	
			0.00	TCL-2SV3	
	Large	TC-L	2, 3P	TCL-2SV3L	
1			4P	TCL-2SV4	
Terminal cover	Skeleton	TTC	2, 3P	TTC-2SV3	128
COVE	Skeleton	110	4P	TTC-2SV4	
	D	рто	2, 3P	BTC-2SV3	
	Rear	BTC	4P	BTC-2SV4	
	Diversity	PTC	2, 3P	PTC-2SV3	
	Plug-in	1510	4P	PTC-2SV4	
Electrical	operation de	vice		(*2)	140

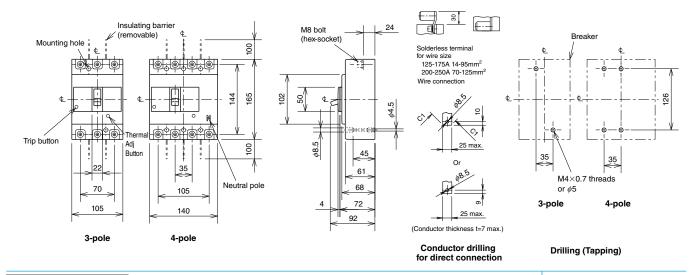

Rear connection

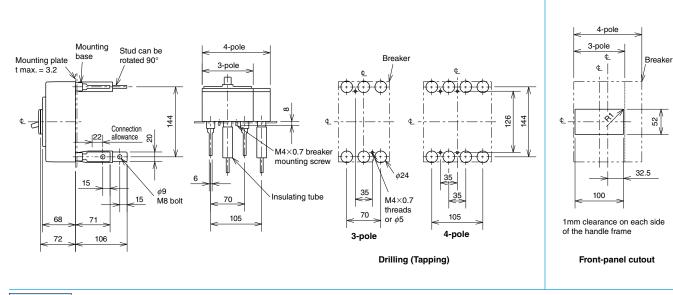

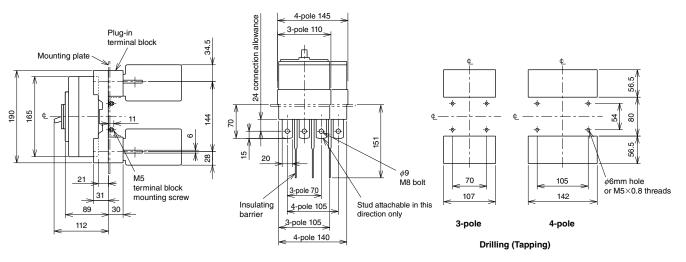

Remark: 1. 2-pole models are 3-pole models with the central pole removed.


Molded Case Circuit Breakers


NF125-SEV NF125-HEV NF250-SEV NF250-HEV




Model				NF12	5-SEV	NF125	5-HEV	NF25	0-SEV	NF25	0-HEV	
Rated current Reference ar	nt In (A) mbient tempera	ature -	40°C	32 6	3 125	32 63	32 63 125		250	160 250		
Current setting Ir (A)				16-32 32-	stable 63 63-125 step) (6.25A step)	Adjus 16-32 32- (1.6A step) (3.15A	63 63-125	80-160 [°]	stable 125-250 (12.5A step)	80-160	stable 125-250 (12.5A step)	
Number of poles				3	4	3	4	3	4	3	4	
Rated insula	tion voltage Ui	(V)		6	90	69	90	6	90	6	90	
			690V	8	/8	10	/8	8/8		10/8		
			500V	30	/30	50/	/38	30/30		50/38		
			440V	36	/36	65/	65	36/36		65	6/65	
Rated short-circuit	IEC 60947-2	AC	415V	36	/36	70/70		36/36		70/70		
breaking	EN 60947-2	AC	400V	36	/36	75/	75/75		36/36		75/75	
capacity (kA)	(lcu/lcs)		380V	36	/36	75/75		36/36		75/75		
(10.1)			230V	85	/85	100/	100	85/85		100/100		
			200V	85	/85	100/	100	85/85		100	/100	
		DC	250V		-	_		_		_		
Standard attached parts (front connection)						screw: M8(Bolt(Hex-socke unting screw: M4×0.7×55 Insulation barrier: (3P:						

Operating Characteristics

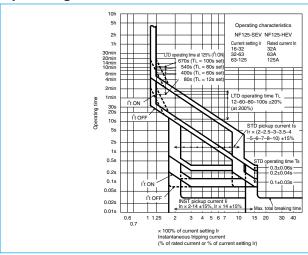


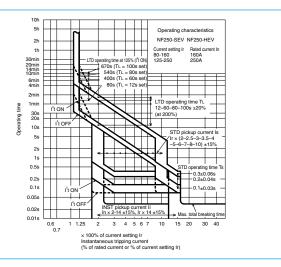

Internal Accessories

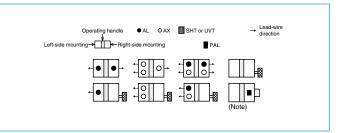

Current Reducing Curve

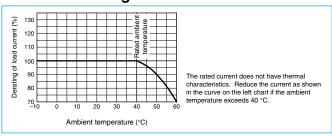


Accesso	ries	Type name	Reference page	
Operation bondle	F	F-2SV	123	
Operating handle	V	V-2SV	125	
Lock cover	LC	LC-05SV		
	111 (+4)	HLF-05SV	101	
Handle lock device	HL(*1)	HLN-05SV	134	
	HL-S	HLS-2SV		

- Notes *1 HLF types are used for OFF lock and HLN types for ON lock.


 *2 Specify the working voltage. Refer to the reference page for type name.


 *3 For NF125-HEV and NF250-HEV with PAL, specify the model name with MP at the

е		Accessor	ies		Type name	Reference page		
	Mechanica	l intorlook	Linterlock MI		MI-05SV3	136		
	Mechanica	ii iiileiiock	IVII	4P	MI-2SV4	130		
		Small	TC-S	3P	TCS-2SV3			
		Siliali	10-3	4P	TCS-2SV4			
	Terminal	Large		3P	TCL-2SV3			
			TC-L	- 01	TCL-2SV3L			
				4P	TCL-2SV4			
	cover	Q	TTC	3P	TTC-2SV3	128		
	(*3)	Skeleton	110	4P	TTC-2SV4			
		Rear	втс	3P	BTC-2SV3			
		Rear	ыс	4P	BTC-2SV4			
		Plug-in	PTC	3P	PTC-2SV3			
		Flug-III	110	4P	PTC-2SV4			
	Electrical operation device				(*2)	140		

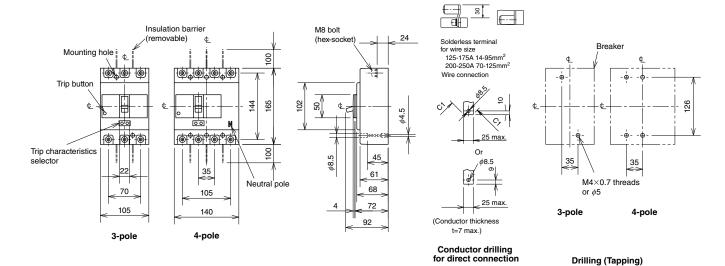


Rear connection

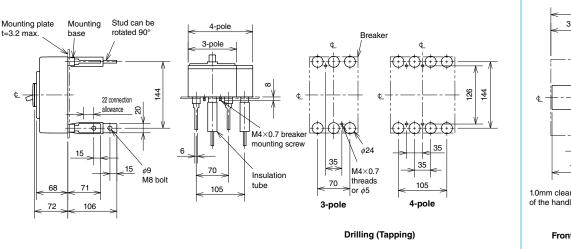

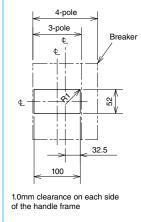

Front-panel cutout

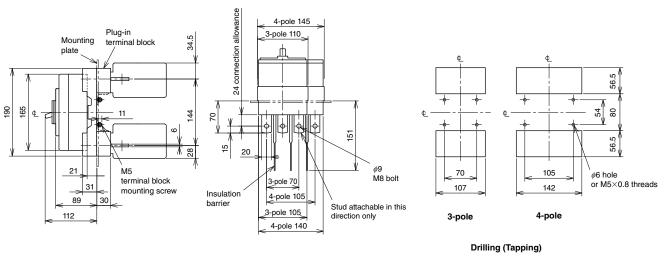

NF400-CW NF400-SW





NF400-SW

Model				NF40	0-CW		NF400-SV	٧		
	current In (A) nce ambient te	mperatu	re 40°C	250 300 350 400						
Numbe	Number of poles			2	3	2	3	4		
Rated insulation voltage Ui (V)				69	690					
			690V		-		10/10			
short-circuit capacity (kA)	IEC 60947-2 EN 60947-2 (Icu/Ics)		500V	15	5/8		30/30			
		AC	440V	25	42/42					
t-cir acity			415V	36	/18		45/45			
short-circ capacity			400V	36	/18		45/45			
s be			380V	40,	/20	50/50				
Rated s breaking			230V	50	/25	85/85				
ď			200V	50/	/25	85/85				
		DC (*1)	250V	20	/10	40/40				
Standa			Front connection		Terminal screw: M12 boltx35 (2-pole: 4pcs, Mounting screw: M6x6 Insulating barrier: (2P: 2pcs, 3F			6×60 (4pcs)		
·			Rear connection		M12 bolt×35 (2-po			-pole: 8pcs)		


*1 When wired as shown at the bottom of page 18, 3-pole models can be used for up to 400VDC, and 4-pole models for up to 500VDC.

Operating Characteristics

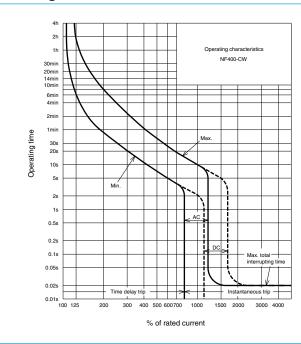


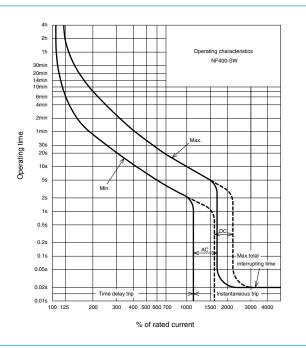

Internal Accessories

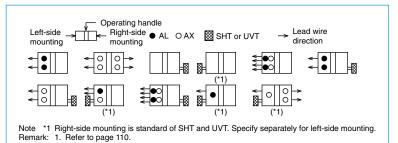


Temperature Compensation Curve

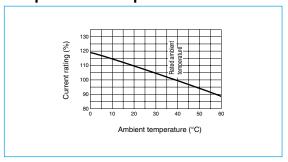


Accessorie	es		Type name	Reference page	
Operating handle	F		F-4S	123	
Operating handle	٧		V-4S	125	
Mechanical interlock	мі	2, 3P	MI-4SW3	136	
iviechanicai interiock	IVII	4P	MI-4SW4		
Auxiliary handle	HT		HT-4CW, HT-4SW	135	

Note	*1	Specify the operation method and voltage. Order in combination with	
		the breaker unit.	

	Accessories			Type name	Reference page	
,	Lorgo	TC-L	2, 3P	TCL-4SW3		
Terminal cover	Large	I I C-L	4P	TCL-4SW4		
	Skeleton	ттс	2, 3P	TTC-4SW3	128	
	Skeleton	110	4P	TTC-4SW4	120	
	Rear	втс	2, 3P	BTC-4SW3		
	near	ыс	4P	BTC-4SW4		
Handle lock device		HL		HL-4CW, HL-4SW		
		HL-S		HLS-4SW	134	
Florence desire		NFM	3P	(*4)	140	
Eleci	rical operation device	INFIN	4P	(*1)	140	

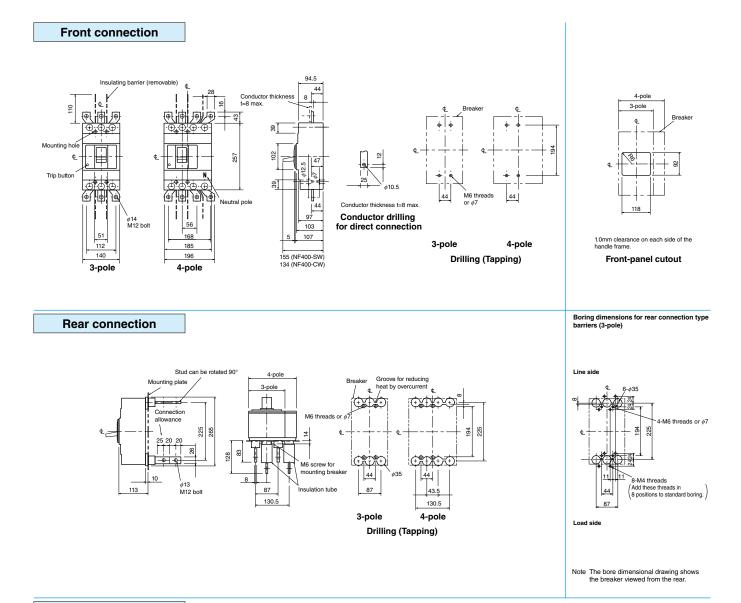

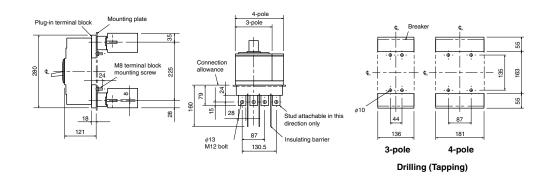

Remark: 1. 2-pole models are 3-pole models with the central pole removed.


NF400-SEW

NF400-SEW NF400-HEW NF400-REW Model Rated current In (A) Reference ambient temperature 40°C Adjustable 200 225 250 300 350 400 Number of poles Rated insulation voltage Ui (V) 690 690 690 690V 10/10 35/18 500V 30/30 50/50 70/35 Rated short-circuit breaking capacity (kA) 42/42 125/63 440V 65/65 415V 50/50 70/70 125/63 IEC 60947-2 EN 60947-2 AC 400V 70/70 125/63 50/50 (Icu/Ics) 380V 50/50 70/70 125/63 85/85 150/75 230V 100/100 200V 85/85 100/100 150/75 DC 250V Terminal screw: M12 boltx35 (3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: M6x72 (4pcs) Insulating barrier: (3P: 4pcs, 4P: 6pcs) connection Standard attached parts Rear Terminal screw: M12 bolt×35 (3-pole: 6pcs, 4-pole: 8pcs)

Mounting screw: M6×85 (4pcs)


Operating Characteristics

NF400-SEW

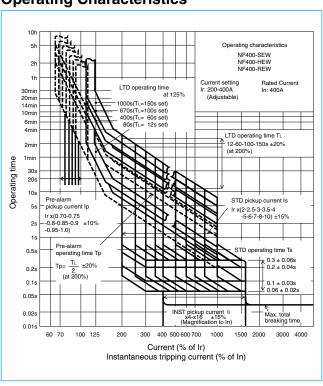


Internal Accessories

connection

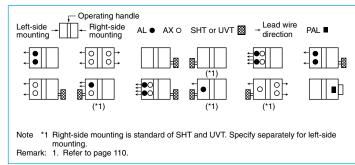

Current Reducing Curve

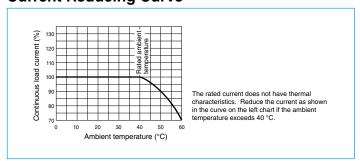



External Accessories

Accessori	es		Type name	Reference page	Accessories				Type name	Reference page
Operating handle			F-4S	123	١.	Lorgo	TC-L	3P	TCL-4SW3 (*2)	
Operating nandle	٧		V-4S	125	over	Large	I I C-L	4P	TCL-4SW4 (*3)]
Mechanical interlock	МІ	3P	MI-4SW3	136	00	Skeleton	TTC	3P	TTC-4SW3	128
Mechanical interiock	IVII	4P	MI-4SW4	130	ninal	Skeletoll		4P	TTC-4SW4	120
Auxiliary handle	HT		HT-4SW	135	Lerm	Dear	втс	3P	BTC-4SW3 (*4)	
					i '	Rear	BIC	4P	BTC-4SW4	
							HL		HL-4SW	
					Handle lock device				HLS-4SW	134
			Eloc	Electrical operation device		3P	(*1)	140		
					LIEC	uncai operation device	NFM	4P	(')	140

Notes *1 Specify the operation method and voltage. Order in combination with the breaker unit.

- This is for NF400-SEW.
 This is for NF400-SEW/HEW.
- *4 This is for NF400-SEW. For rear terminal cover of NF400-HEW/REW, use PTC-4SW3.

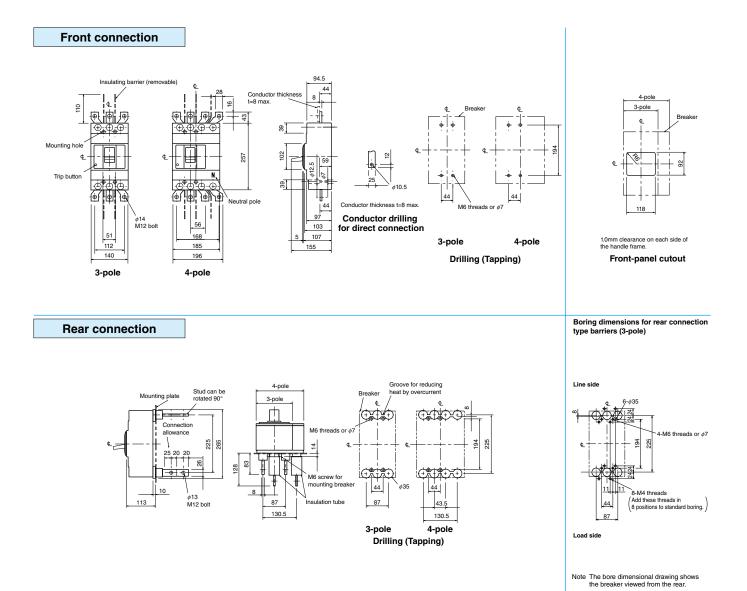

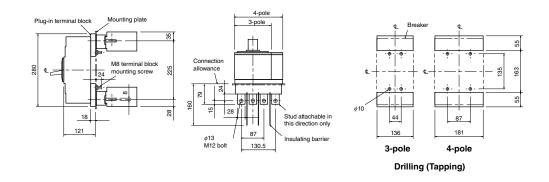


NF400-UEW




NF400-UEW

Model				NF400)-UEW			
	current In (A) nce ambient ter	mperatur	e 40°C	Adjustable 200 225 250 300 350 400				
Numbe	Number of poles			3 4				
Rated insulation voltage Ui (V)				690				
				-	-			
2			500V	170/170				
cuit / (kA)			440V	200/200				
t-cir acity	IEC 60947-2 (lcu/lcs)	AC	415V	200/	/200			
short-circuit capacity (k			400V	200/	/200			
			380V	200/200				
Rated			230V	200/200				
بة			200V	200/200				
		DC	250V	-	-			
(4-pole	Standard attached parts (4-pole models are provided with auxiliary handle.) Rear connection			Terminal screw: M12 boltx38 Mounting screw: 3P M6x65 4P M6x35 Insulating barrier: (3P: 4pcs, 4	(2pcs), M6×174 (2pcs) (3pcs), M6×132 (2pcs)			
with a				Terminal screw: M12 boltx35 Mounting screw: 3P M6×72 4P M6×35				


Operating Characteristics

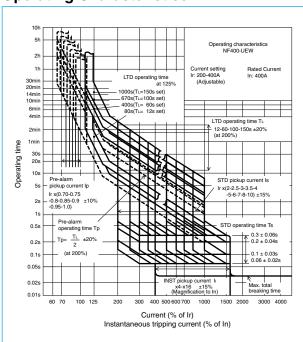

Internal Accessories

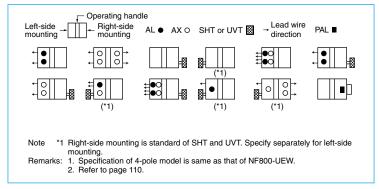



Current Reducing Curve

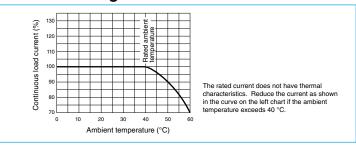

Accessories		Type name	Reference page		Accessories			Type name	Reference page	
Operating handle		F-4U	123	_	ਲ Large	TC-L	3P	TCL-4SW3		
Operating nandle	V	V-4U	125	inal /er			4P	TCL-8UW4	128	
Mechanical interlock	MI	MI-4SW3	136	eri co	Skeleton		3P	-	120	
Auxiliary handle	HT	HT-4SW	135]	Rear	втс	3P	BTC-4SW3]	
				Llane	المال مال المال	HL		HL-4SW	404	
				Handle lock device		HL-S		HLS-4UW	134	
						device		(*1)	140	

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit. Remark *1 Specification of 4-pole model is same as that of NF800-UEW.

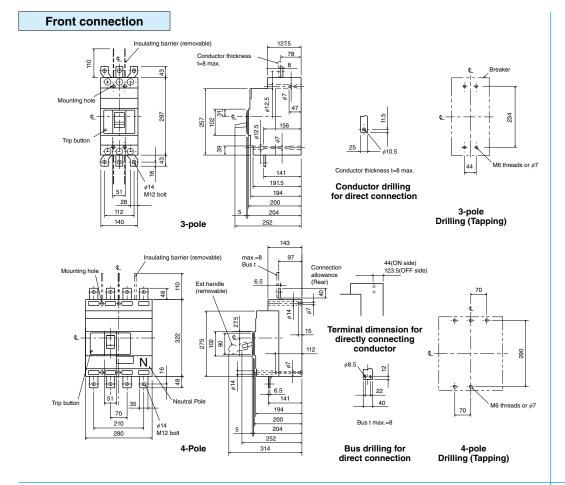


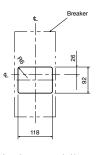


1.0mm clearance on each side of the handle frame.

Front-panel cutout


Rear connection

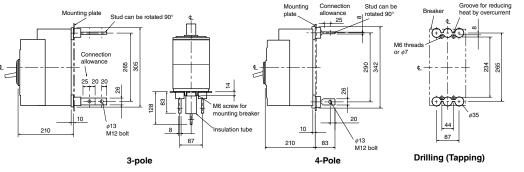

Boring dimensions for rear connection type barriers (3-pole)

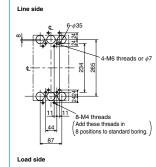

Note The bore dimensional drawing shows the breaker viewed from the rear.

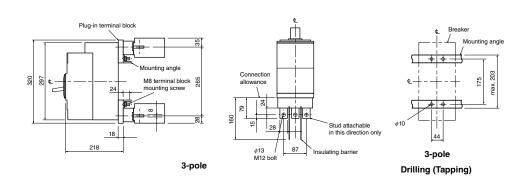





NF630-SW

Model				NF63	0-CW		NF630-SW	1	
	current In (A) ence ambient te	mperatur	e 40°C	500 600 (630)					
Numbe	er of poles			2	3	2	3	4	
Rated insulation voltage Ui (V)			69	690					
			690V	-			10/10		
Rated short-circuit eaking capacity (kA)	IEC 60947-2 (Icu/Ics)		500V	18	/9		30/30		
		AC	440V	36/	42/42				
			415V	36/	36/18				
hor			400V	36/	18		50/50		
Rated s breaking	(100/100)		380V	40/	20	50/50			
Rate			230V	50/	50/25			85/85	
مَ			200V	50/	25	85/85			
		DC (*1)	250V	20/	/10		40/40		
Standard attached parts Front connection Rear connection			Terminal screw: M12 boltx35 (2-pole: 4pcs, 3-pole: 6pcs, 4-pole: 8pc Mounting screw: M6x72 (4pcs) Insulating barrier: (2P: 2pcs, 3P: 4pcs, 4P: 6pcs)						
			Terminal screw: M12 boltx35 (2-pole: 4pcs, 3-pole: 6pcs, 4-pole Mounting screw: M6x85 (4pcs)				pole: 8pcs)		


Note *1 When wired as shown at the bottom of page 18, 3-pole models can be used for up to 400VDC, and 4-pole models for up to 500VDC.

Operating Characteristics

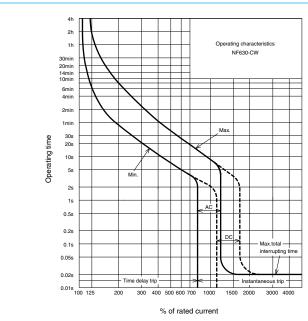


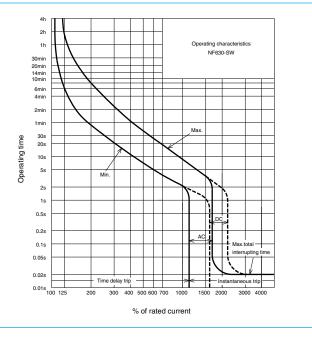

Internal Accessories

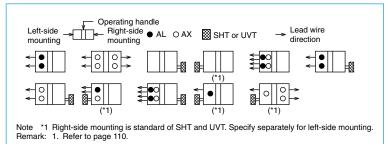


Temperature Compensation Curve

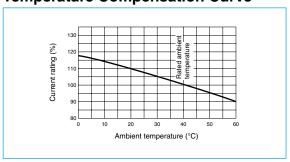


Accessorie	es		Type name	Reference page	
Operating handle	F		F-4S	123	
Operating nandle	V		V-4S	125	
Mechanical interlock	мі	2, 3P	MI-4SW3	136	
Mechanical interiork	IVII	4P	MI-4SW4		
Auxiliary handle	HT		HT-4SW	135	

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

	Accessories			Type name	Reference page
	Lorgo	TC-L	2, 3P	TCL-4SW3	
ver	Large	I I C-L	4P	TCL-4SW4	
Terminal cover	Skeleton	ттс	2, 3P	TTC-4SW3	128
nin 8	Skeleton	' ' '	4P	TTC-4SW4	120
Le L	Deer	втс	2, 3P	BTC-4SW3	
] '	Rear	ВІС	4P	BTC-4SW4	
		HL		HL-4SW	101
Hand	dle lock device	HL-S		HLS-4SW	134
Elec	trical operation device	NFM	3P	(*1)	140
Elec	incai operation device	INCIN	4P	(1)	140

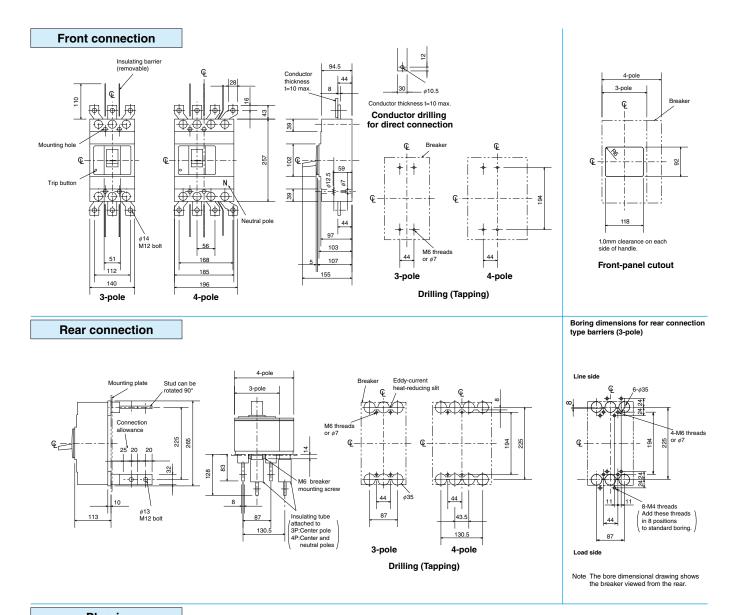

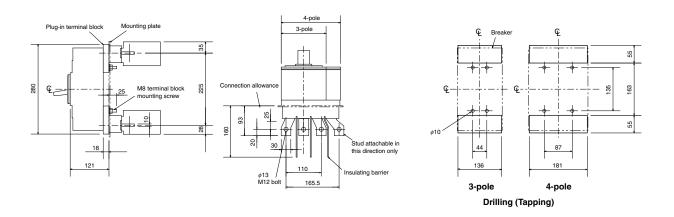

Remark: 1. 2-pole models are 3-pole models with the central pole removed.

Molded Case Circuit Breakers


NF630-SEW NF630-HEW NF630-REW




NF630-SEW

Model				NF630	-SEW	NF630)-HEW	NF630-REW
	current In (A) ence ambient ter	mperatur	e 40°C		300	Adjus 350 400	stable 500 600	630
Numbe	er of poles			3	4	3	4	3
Rated	insulation voltag		69	90	69	90	690	
				10/	10	35	/18	-
न			500V	30/	30	50	/50	70/35
cuit / (kA)			440V	42/	42	65	/65	125/63
t-cir acity		AC	415V 50/50		50	70	/70	125/63
short-circuit capacity (k	IEC 60947-2 (Icu/Ics)	AC	400V	50/50		70	/70	125/63
ed s	(122,122)		380V	50/50		70/70		125/63
Rated s breaking			230V	85/	85	100	/100	150/75
بة			200V	85/	85	100	/100	150/75
	DC		250V	-	-		-	-
			Front connection	Terminal	6pcs, 4-pole: 8pcs) (4pcs) 4P: 6pcs)			
Rear			Rear connection	Terminal		112 bolt×3 ting screw		6pcs, 4-pole: 8pcs) (4pcs)


Operating Characteristics

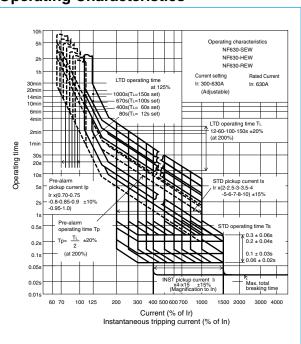

Internal Accessories

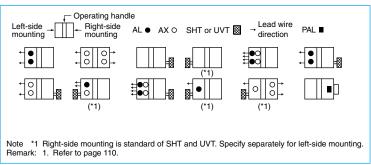



Current Reducing Curve

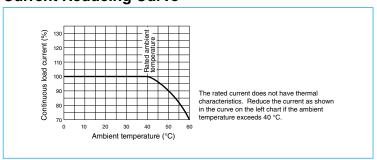

Accessori	es		Type name	Reference page		Accessories			Type name	Reference page
Operating handle	F		F-4S	123		Lorgo	TC-L	3P	TCL-4SW3 (*2)	
Operating nandle	V		V-4S	125	cover	Large	I C-L	4P	TCL-4SW4 (*2)	
Mechanical interlock	3P		MI-4SW3	400		Skeleton	ттс	3P	TTC-4SW3	400
Wechanical Interlock	ical interlock MI 4P		MI-4SW4	136	minal	Z Skeleton		4P	TTC-4SW4	128
Auxiliary handle	HT		HT-4SW	135	Frn	D	пто	3P	BTC-4SW3 (*3)	
						Rear	BTC	4P	BTC-4SW4	i
							HL		HL-4SW	
					Han	dle lock device	HL-S		HLS-4SW	134
					Elec	trical operation device	NFM	3P 4P	(*1)	140


- *1 Specify the operation method and voltage. Order in combination with the breaker unit.
 *2 This is for NF630-SEW.
 *3 This is for NF630-SEW. For rear terminal cover of NF630-HEW/REW, use PTC-4SW3.

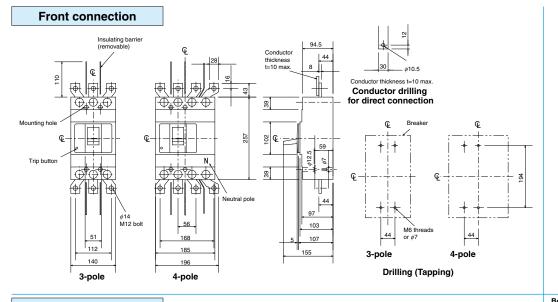


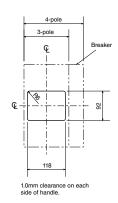


Front-panel cutout


Rear connection

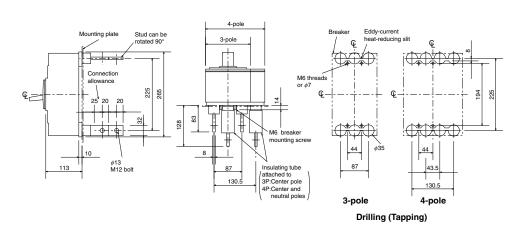

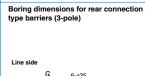

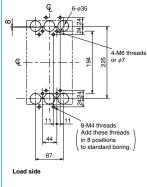

Note The bore dimensional drawing shows the breaker viewed from the rear.

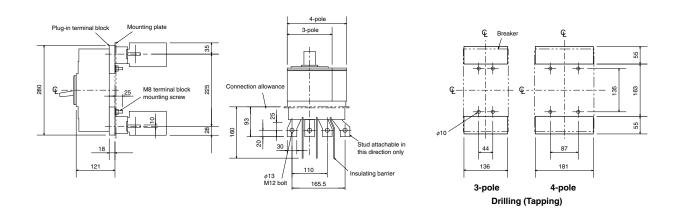

NF800-CEW NF800-SEW NF800-HEW NF800-REW




Model				NF800-CEW	NF800	SEW	NF800	-HEW	NF800-REW
	current In (A) nce ambient ter	nperatur	e 40°C		Adjustable 400 450 500 600 700 800				
Numbe	er of poles			3 3 4		4	3	4	3
Rated	insulation voltag	690	690		69	90	690		
			690V	-	10/	/10	15/	/15	-
2			500V	18/9	30/	/30	50/	/50	70/35
cuit (KA)			440V	36/18	42/42		65/65		125/63
t-cir acity			415V	36/18	50/	/50	70/70		125/63
short-circuit capacity (k	IEC 60947-2 (Icu/Ics)	AC	400V	36/18	50/50		70/	/70	125/63
s pe	(100,100)		380V	40/20	50/50		70/70		125/63
Rated s breaking			230V	50/25	85/	/85	100/100		150/75
مَ			200V	50/25	85/	/85	100/	/100	150/75
		DC 250V		-	-	-	-	-	-
	ard attached pare models are pro	Front connection	1	v: M12 Mountin lating ba	g screw	: M6×3	5 (4pcs		
	th auxiliary handle.) Rear connection				v: M12 Mountin				4-pole: 16pcs)


Operating Characteristics

Operating characteristics NF800-CEW NF800-SEW NF800-HEW NF800-REW at 125% Ir: 400-800A (Adjustable) 1000s(TL=150s set) LTD operating time TL 12-60-100-150s ±20% (at 200%) Operating time 208 10: Ir x(2-2.5-3-3.5-4 -5-6-7-8-10) ±15% Ir x(0.70-0.75 -0.8-0.85-0.9 ±10% -0.95-1.0) $\mathsf{Tp} = \ \frac{\mathsf{TL}}{2} \ \pm 20\%$ 0.2 0.1 0.01s 100 125 400 500 600 700 Current (% of Ir) Instantaneous tripping current (% of In)

Internal Accessories

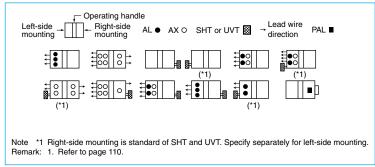



Current Reducing Curve

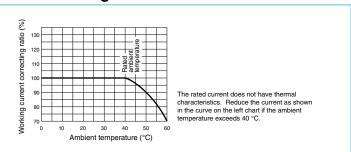

Accessorie	es		Type name	Reference page		Accessories			Type name	Reference page
Operating handle	F		F-8S	123		Lorgo	TC-L	3P	TCL-8SW3	
Operating nandle	٧		V-8S	125	cover	Large	I I C-L	4P	TCL-8SW4	
Mechanical interlock		3P	MI-8SW3	400		Skeleton	TTC	3P	TTC-8SW3	128
Wechanical Interlock	MI	4P	MI-8SW4	136	minal	Skeleton		4P	TTC-8SW4	
Auxiliary handle	HT		HT-4SW	135	En	D	пто	3P	BTC-8SW3	
						Rear	BTC	4P	BTC-8SW4	
							HL		HL-4SW	
					Han	dle lock device	HL-S		HLS-8SW	134
					Г	trical apprehing daying	NFM	3P	(*4)	140
					Lied	Electrical operation device		4P	(*1)	140

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

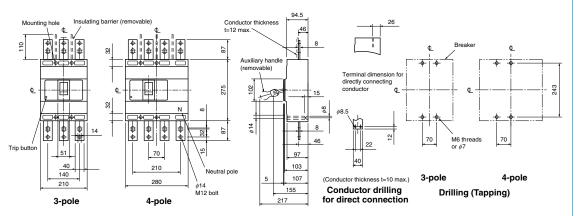


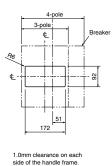



Front-panel cutout


Boring dimensions for rear connection type barriers (3-pole)

Rear connection

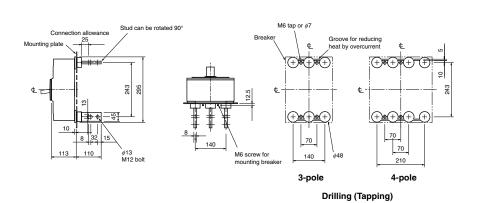

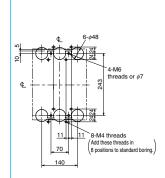

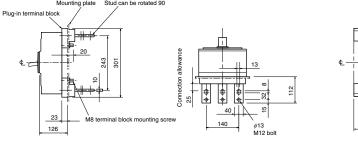

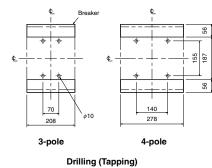


NF800-SDW


Model				NF800-SDW			
	current In (A) ence ambient ter	nperatur	e 40°C	(700) 800			
Numb	er of poles			2			
Rated	insulation voltag	ge Ui (V)		690			
				-			
ि			500V	-			
short-circuit capacity (kA)			440V	-			
t-cir acity	IEC 60947-2 (Icu/Ics)	AC	415V	-			
short-circuit capacity (k	Time constant	AC	400V	-			
s pe	not larger than 10ms			-			
Rated s breaking		3		-			
مَ			200V	-			
		DC	250V (*1)	40/40			
(4-pole	Standard attached parts 4-pole models are provided			Terminal screw: M12 boltx35 (2-pole: 8pcs, 3-pole: 12pcs, 4-pole: 16pcs) Mounting screw: M6x35 (4pcs) Insulating barrier: (2P: 1pc, 3P: 2pcs, 4P: 3pcs)			
with a	with auxiliary handle.) Rear connection			Terminal screw: M12 boltx40 (2-pole: 8pcs, 3-pole: 12pcs, 4-pole: 16pcs) Mounting screw: M6x40 (4pcs)			

Note *1 The standard specifications for NF800-SDW are 2-pole.
For DC special voltage use, we also have 3-pole and 4-pole models.


Operating Characteristics

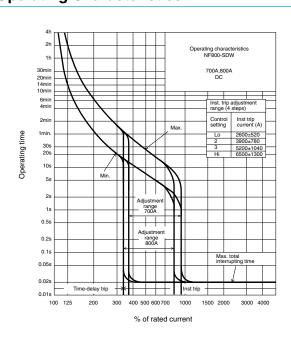

Internal Accessories

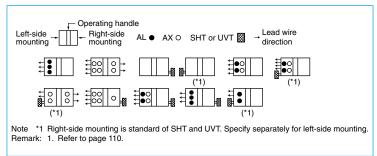


Temperature Compensation Curve

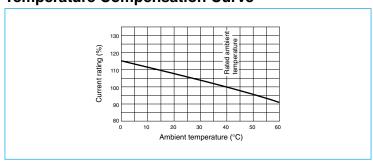


Accessori	es		Type name	Reference page		Accessories			Type name	Reference page
Operating handle	F		F-8S	123		Largo	TC-L	2, 3P	TCL-8SW3	
Operating nandle	٧		V-8S	125	over	Large	I C-L	4P	TCL-8SW4	
Mechanical interlock	МІ	2, 3P	MI-8SW3	136	0	Skeleton	ттс	2, 3P	TTC-8SW3	128
Wechanical interiock	IVII	4P	MI-8SW4	130	minal	Skeleton		4P	TTC-8SW4	128
Auxiliary handle	HT		HT-4SW	135	Frr	Deer	рто	2, 3P	BTC-8SW3	
					'	Rear	BTC	4P	BTC-8SW4	
							HL		HL-4SW	404
					Han	dle lock device	HL-S		HLS-8SW	134
				Elec	trical operation device	NFM	2, 3P 4P	(*1)	140	

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

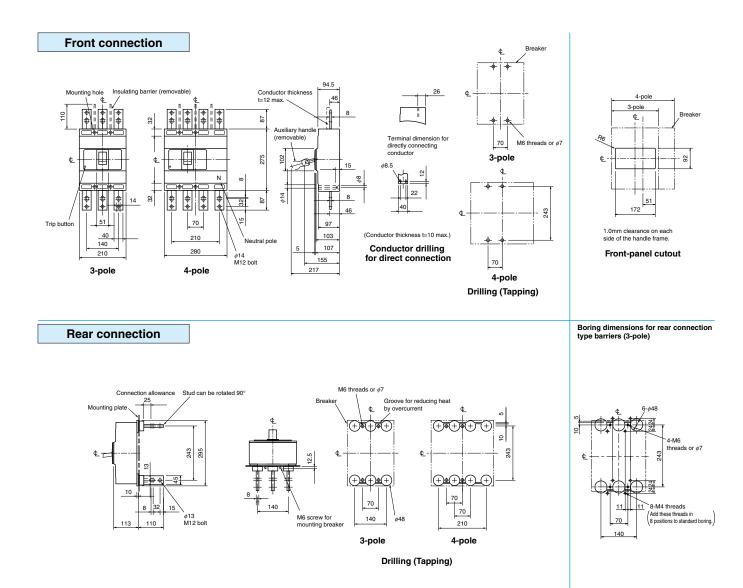

Plug-in

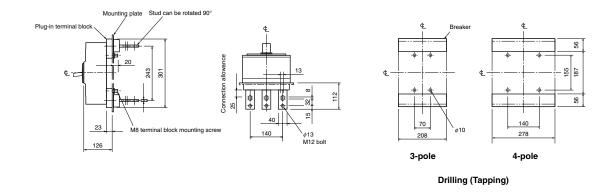

Remarks: 1. Standard specification of NF800-SDW is 2-pole model. 3-pole and 4-pole models are available for DC special voltage.


2. 2-pole models are 3-pole models with the central pole removed.




NF800-UEW

Model				NF800)-UEW			
	current In (A) ence ambient ter	mperatur	e 40°C		stable 600 700 800			
Numb	er of poles			3 4				
Rated insulation voltage Ui (V)				690				
			690V	35/35				
2			500V	170.	/170			
Rated short-circuit eaking capacity (kA)			440V	200	/200			
r-circ acity			415V	200	/200			
hor	IEC 60947-2 (Icu/Ics)	AC	400V	200	/200			
s pe	(100/100)	1371-2		200/200				
Rated s breaking			230V	200	/200			
þr			200V	200	/200			
		DC	250V	-	-			
	Standard attached parts (4-pole models are provided		Front connection	Mounting screw: 3P: M6> 4P: M6×35 (3pcs	(3-pole: 12pcs, 4-pole: 16pcs) (35, M6×132 (2pcs each)), M6×132 (2pcs) 3P: 2pcs, 4P: 3pcs)			
with a	with auxiliary handle.)		Rear connection	Mounting screw: 3P: M6>	(3-pole: 12pcs, 4-pole: 16pcs) (40, M6×137 (2pcs each) (2), M6×137 (2pcs)			


Operating Characteristics

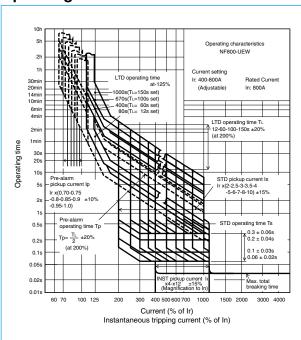

Internal Accessories

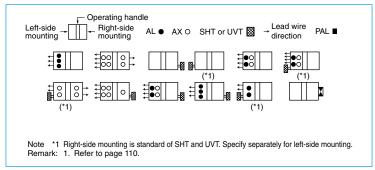



Current Reducing Curve

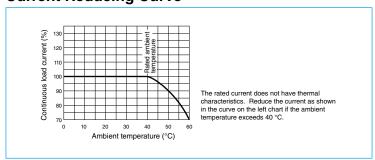


Accessori	es		Type name	Reference page		Accesso	ries		Type name	Reference page
Operating handle	perating handle F V echanical interlock MI 3P 4P		F-8U	123		Lorgo	TC-L	3P	TCL-8UW3	
Operating naticie			-	125	Ferminal cover	Large	IC-L	4P	TCL-8UW4	400
Machanical interlock			MI-8SW3	100		Skeleton	ттс	3P	-	
Wechanical Interlock			MI-8SW4	136		Skeleton	110	4P	-	128
Auxiliary handle	HT		HT-4SW	135		Rear	втс	3P	BTC-8SW3	
					'	Hear	ВІС	4P	BTC-8SW4	
					I I a	مطام امماد طمينمم	HL		HL-4SW	104
					па	ndle lock device	HL-S		HLS-8UW	134
					Ele	ectrical operation	device		(*1)	140


Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

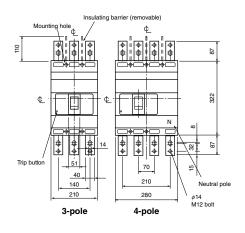

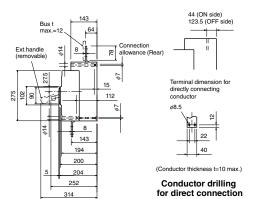

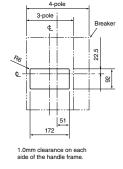



Front-panel cutout

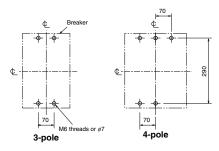



Drilling (Tapping)

Rear connection

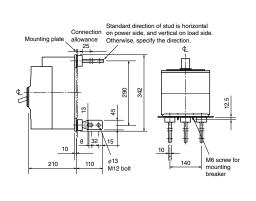

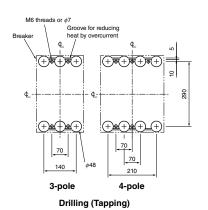

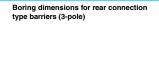

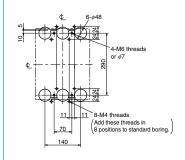





NF1250-SEW


Model				NF100	0-SEW	NF125	0-SEW
	current In (A) nce ambient ter	mperatur	e 40°C	500 60	stable 00 700 0 1000	Adjustable 600 700 800 1000 1200 1250	
Numbe	er of poles			3	4	3	4
Rated	insulation voltag		69	90	69	90	
			690V	25/	/13	25	/13
ि			500V	65/	/33	65	/33
(SE			440V	85/	/43	85	43
short-circuit capacity (kA)		AC	415V	85/	/43	85.	/43
hor	IEC 60947-2 (Icu/Ics)	AC	400V	85/	/43	85	43
s be	(104/105)		380V	85/	/43	85.	/43
Rated s breaking			230V	125	6/63	125	/63
þ			200V	125	i/63	125/63	
		DC	250V	-	-	-	-
Ctand	and attached ac	•	Front connection	N	Mounting screw lating barrier: ((3-pole: 12pcs, : M8×40 (4pcs (3P: 2pcs, 4P: 3 andle: (1pc))
Sianda	ard attached par	เร	Rear connection	Terminal screw: M12 boltx45 (3-pole: 12pcs, 4-pole: 16 Mounting screw: M8x40 (4pcs) Insulating barrier: (3P: 2pcs, 4P: 4pcs) Auxiliary handle: (1pc))

Operating Characteristics

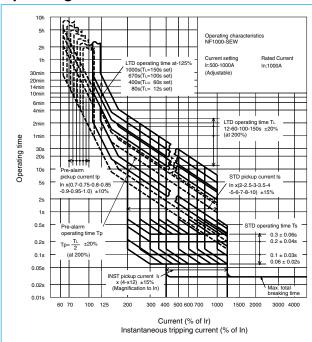


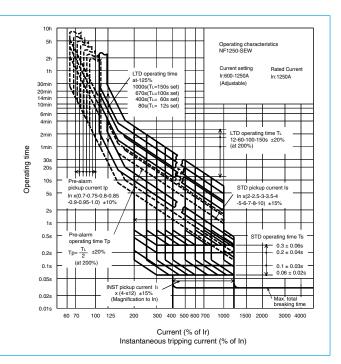

Internal Accessories

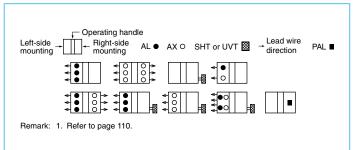

Current Reducing Curve

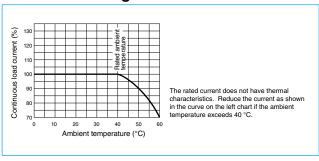


External Accessories


An order for 🕸 should be placed at the same time as an order of circuit breaker main body)


Accessorie	es		Type name	Reference page	Accessories			Type name	Reference page
Operating handle	_	3P	F10SW	123	Auxiliary handle	HT		HT-10SW	135
Operating nandle	perating nandle F		F10SW4P	123	Handle lock device	HL		HL (☆)	134
Mechanical interlock	МІ	3P	MI-10SW3	400	Large terminal cover	TC-L	3P	TCL-10SW3	128
Wechanical interiock	IMI	4P	MI-10SW4	136	Large terminal cover	I C-L	4P	TCL-10SW4	120
					Electrical operation device	NFM	3P	(*1)	140
					Electrical operation device	INFIVI	4P	(*1)	140

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

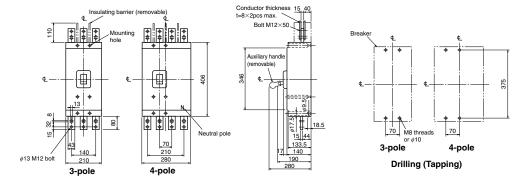



Rear connection

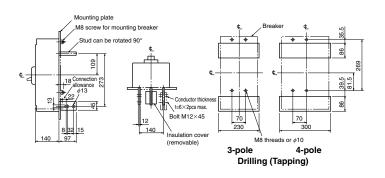

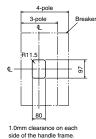

Front-panel cutout

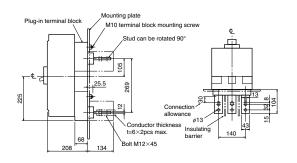

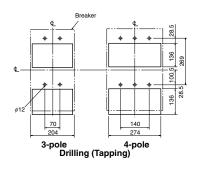


NF1250-SDW




Model				NF1250-SDW						
	current In (Amp ence ambient ter		e 40°C	1000 1200 1250						
Numbe	er of poles			2						
Rated	insulation voltaç	ge Ui (V)		690						
			690V	-						
2			500V	-						
SE E			440V	-						
short-circuit capacity (kA)	IEC 60947-2 (Icu/Ics)	AC	415V	-						
thor	Time constant	AC	400V	-						
s pe	not large than 10ms		380V	-						
Rated s breaking									230V	-
مَ			200V	-						
		DC	250V (*1)	40/20						
Standa	Standard Attached parts			Terminal screw: M12 boltx50 (2-pole: 8pcs, 3-pole: 12pcs) Mounting screw: M8x40 (4pcs) Insulating barrier: (2P: 1pc, 3P: 2pcs, 4P: 3pcs) Auxiliary handle: (1pc)						
			Rear connection	Terminal screw: M12 boltx45 (2-pole: 8pcs, 3-pole: 12pcs) Mounting screw: M8x40 (4pcs) Insulating barrier: (3P: 2pcs, 4P: 4pcs) Auxiliary handle: (1pc)						


Note *1 The standard specifications for NF1250-SDW are 2-pole. For DC special voltage use, we also have 3-pole model.

Operating Characteristics

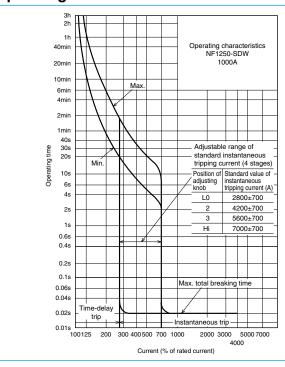


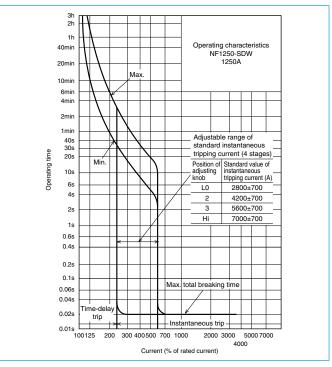

Internal Accessories

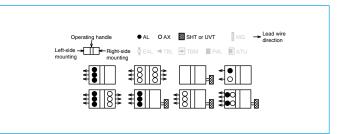

Temperature Compensation Curve

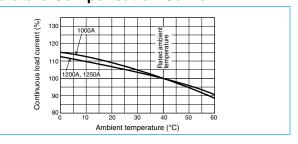



External Accessories


An order for 🖈 should be placed at the same time as an order of circuit breaker main body.)

(An order for 💢 should be placed at the same time as an order of circuit breaker main body.)									
Accessories			Type name	Reference page	Accessories			Type name	Reference page
Operating handle	F	2, 3P	F10SW	123	Auxiliary handle	HT		HT-10SW	135
		4P	F10SW4P		Handle lock device	HL		HL (☆)	134
Mechanical interlock	МІ	2, 3P	MI-10SW3	136	Large terminal cover	TC-L	2, 3P	TCL-10SW3	128
		4P	MI-10SW4				4P	TCL-10SW4	
					Electrical operation device	NFM	2, 3P	(*1)	140
					Liectrical operation device	INCIN	4P	(')	140

lote *1 Specify the operation method and voltage. Order in combination with the breaker unit.

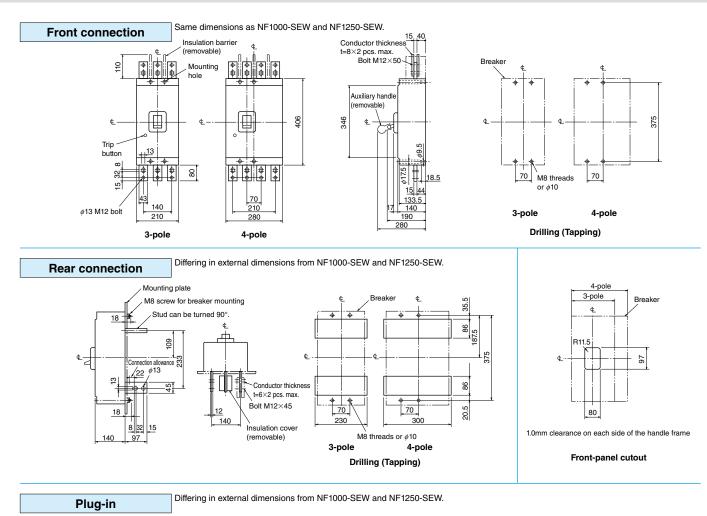

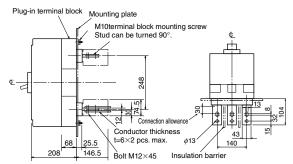

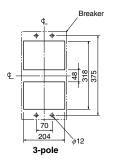

Drilling (Tapping)


Remarks: 1. Standard specification of NF1250-SDW is 2-pole model. 3-pole and 4-pole models are available for DC special voltage.

2. 2-pole models are 3-pole models with the central pole removed.


NF1600-SEW

Model				NF160	0-SEW			
	current In (A) ence ambient ter	mperatur	e 40°C		stable 1400 1500 1600			
Numbe	er of poles			3	4			
Rated	insulation voltag	ge Ui (V)		69	90			
			690V	25.	/13			
2			500V	65/33				
돌			440V	85.	/43			
short-circuit capacity (kA)	IEC 60947-2 (Icu/Ics)		415V	15V 85/43				
hort		AC	400V	85.	/43			
s pe			380V	85.	/43			
Rated s breaking			230V	125/63				
_ p			200V	125/63				
		DC	250V	-	-			
Front connection Standard attached parts				Mounting screw: Insulating barrier: ((3-pole: 24pcs, 4-pole: 32pcs) M8 × 40 (4pcs) 3P: 2pcs, 4P: 3pcs) indle: (1pc)			
	Standard attached parts Re				(3-pole: 24pcs, 4-pole: 32pcs) M8 × 40 (4pcs)			


Operating Characteristics

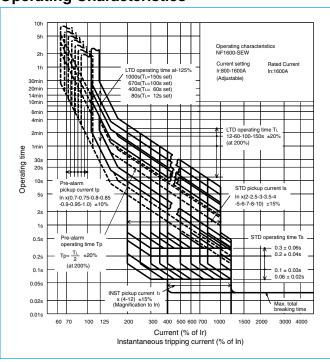

Internal Accessories

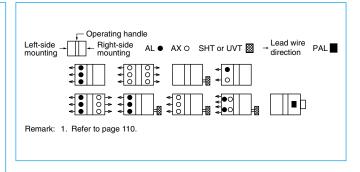

Current Reducing Curve

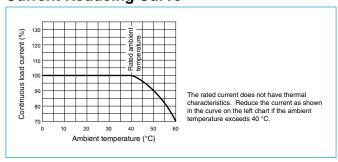



External Accessories

(An order for 🕸 should be placed at the same time as an order of circuit breaker main body.)

(All older for A should	an order for A should be placed at the same time as an order of cheater main body.)											
Accessories			Type name	Reference page	Accessories			Type name	Reference page			
Operating handle	T_	3P	F10SW	100	Auxiliary handle	HT		HT-10SW	135			
Operating nandle	-	4P	F10SW4P	123	Handle lock device	HL		HL (☆)	134			
Mechanical interlock	М	3P	MI-16SW3	100	Electrical operation device	NFM	3P	(*1)	140			
Wechanical interiock	IVII	4P	MI-16SW4	136	Electrical operation device	INFIN	4P] (')	140			


Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

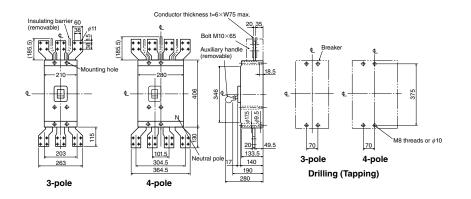

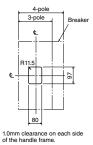

Front-panel cutout

Rear connection

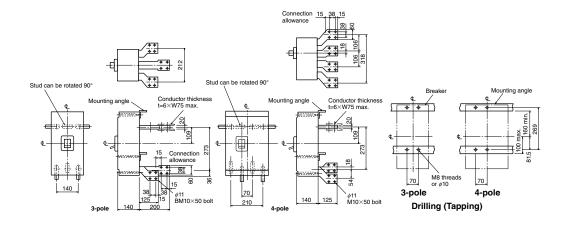

NF1600-SDW




NF1600-SDW


Model				NF1600-SDW									
	current In (Amp ence ambient ter		e 40°C	1600									
Numb	er of poles			2									
Rated	insulation voltaç	ge Ui (V)		690									
			690V	=									
2			500V	-									
SE			AC	AC	AC	AC	AC	40	40			440V	=
acity	IEC 60947-2 (Icu/Ics)									415V	=		
hort	Time constant							400V	-				
Rated short-circuit breaking capacity (kA)	not large than 10msec		380V	-									
Rate	10111000		230V	=									
ď			200V	-									
		DC	250V (*1)	40/20									
Front connection Standard Attached parts				Terminal screw: M10 boltx65 (2-pole: 16pcs, 3-pole: 24pcs, 4-pole: 32pcs) Mounting screw: M8x40 (4pcs) Insulating barrier: (2P: 1pc, 3P: 2pcs, 4P: 3pcs) Auxiliary handle: (1pc)									
			Rear connection	Terminal screw: M10 boltx50 (2-pole: 16pcs, 3-pole: 24pcs, 4-pole: 32pcs) Mounting screw: M8x40 (4pcs) Auxiliary handle: (1pc)									

Note *1 The standard specifications for NF1600-SDW are 2-pole.
For DC special voltage use, we also have 3-pole and 4-pole models.

Operating Characteristics

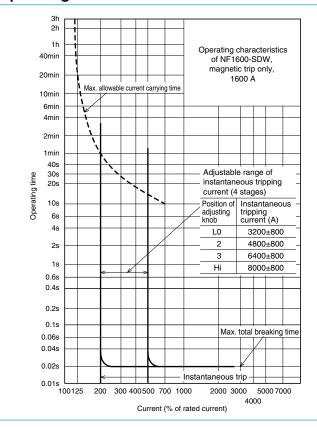


Internal Accessories

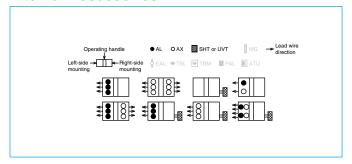

External Accessories


Accessories			Type name	Reference page	Accessories	Type name	Reference page	
Operating handle	_	2, 3P	F10SW	123	Auxiliary handle	HT	HT-10SW	135
Operating nandle	F	4P	F10SW4P	123	Handle lock device	HL	HL (☆)	134
Machanical interleak	ok MI 2,		MI-16SW3	136	Electrical operation device	NFM 2, 3P	(*1)	140
Mechanical interlock MI		4P	MI-16SW4	136	Electrical operation device	INFINI 4P	(1)	140

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

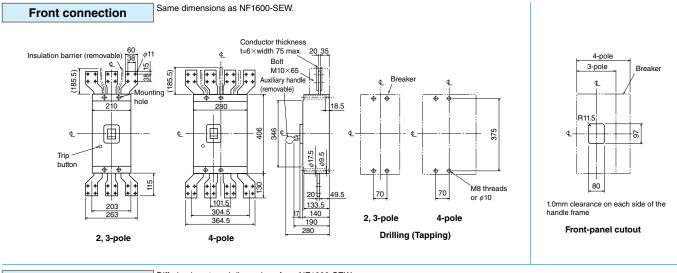

Rear connection

Differing in external dimensions from NF1600-SEW.

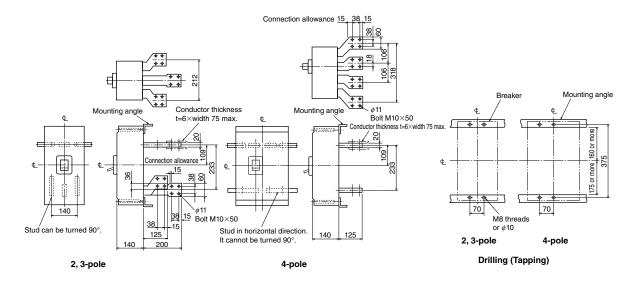

Remarks: 1. Standard specification of NF1600-SDW is 2-pole model. 3-pole and 4-pole models are available for DC special voltage.

2. 2-pole models are 3-pole models with the central pole removed.




NV63-SV


Model				NV32-SV	NV6	3-CV	NV63-SV	NV63-HV
Rated current In (Reference ambier		0°C		(5) 6 10 (15) 16 20 25 (30) (32)		5) 16 20 25 50 (60) 63	(5) (10) (15) 16 20 25 (30) 32 40 50 (60) 63	(15) 16 20 25 (30) 32 40 50 (60) 63
Number of poles				3	2 3		3	3
Phase line				3φ3W, 1φ3W, 1φ2W	1¢2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W
Rated operational	l voltage Ue (V)		AC	100-440	100-240	100-440	100-440	100-440
High-speed type	Rated current s	sensitiv	rity (mA)	30 100/200/500 selectable	30	30 100/200/500 selectable	30 100/200/500 selectable	30 100/200/500 selectable
riigir opeca type	May an auating ti	(-)	at l∆n	0.1	0.1		0.1	0.1
	Max operating time (s) at 5IΔ		at 5l∆n	0.04	0.04		0.04	0.04
	Rated current sensitivity (mA)			-		_	-	-
Time-delay type	Max operating time (s)			-		_	-	-
	Inertial operating	time (s)	(or more)	-		_	-	_
Earth-leakage ind	lication system			Mechanical type (button)	Mechanical type (button)		Mechanical type (button)	Mechanical type (button)
			440V	5/5	-	2.5/2.5	7.5/7.5	10/8
5			415V	5/5	-	2.5/2.5	7.5/7.5	10/8
Rated short-circuit	IEC 60947-2		400V	5/5	-	5/5	7.5/7.5	10/8
breaking EN 60947-2 AC		230V	10/10	7.5	/7.5	15/15	25/19	
capacity (kA)	' '		200V	10/10	7.5	/7.5	15/15	25/19
			100V	10/10	7.5	/7.5	15/15	25/19
Standard attached	d parts (Front co			Terminal screw: 50A 60A Mounting screw: M4	or more N	//8×14 (2P:	4pcs, 3P: 6pcs)	r: (2P: 1pc, 3P: 2pcs)

Note *1 Attached to NV63-SV and NV63-HV.


Operating Characteristics

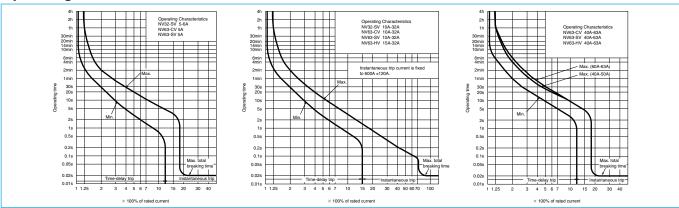


Earth leakage Tripping Characteristics

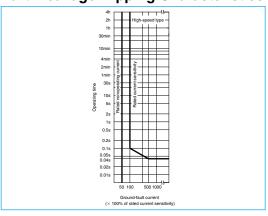

Internal Accessories

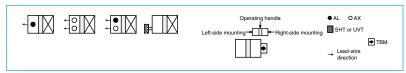

Temperature Compensation Curve

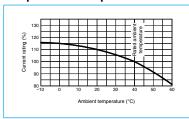


~~

Leakage indication button


Internal Wiring Diagram


External Accessories

Accesso	ries	Type name	Reference page		Accessories		Type name	Reference page
Onevetine bondle	F	F-05SV	123	Mechanical interlock		МІ	MI-05SV3	136
Operating handle	٧	V-05SV	125	Small		TC-S	TCS-05SV3	
Lock cover	LC	LC-05SV		Terminal cover	Laura	TC-L	TCL-05SV3	1
	111 (*4)	HLF-05SV	404		Large	IC-L	TCL-05SV3L	100
Handle lock device	HL (*1)	HLN-05SV	134		Skeleton	TTC	TTC-05SV3	128
	HL-S	HLS-05SV			Rear	BTC	BTC-05SV3]
Note *1 HLF types a	re used for OF	F lock and HLN types for ON lock.	·	1	Plug-in	PTC	PTC-05SV3	1
				IEC 35mm	rail mounti	ng adapters	DIN-05SV	143

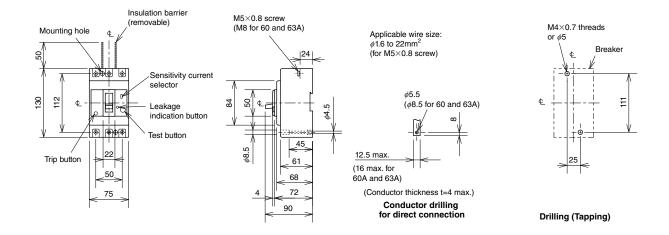

Rear connection

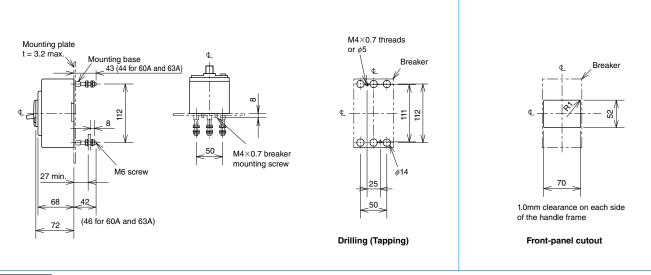

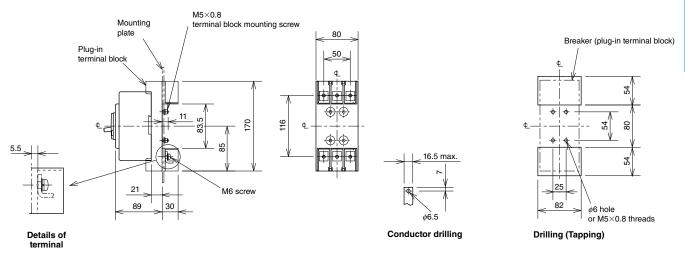


Remark: 1. 2-pole models are 3-pole models with the central pole removed.


NV125-CV


Model				NV125-CV	NV12	25-SV	NV12	25-HV		
Rated current In (Reference ambier		0°C		(60) 63 (75) 80 100 125		30 32 40 50 30 100 125 (*2)		30) 32 40 50 0 100 125 (*2)		
Number of poles				3	3 4		3	4		
Phase line				3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3 <i>∲</i> 4W	3φ3W, 1φ3W, 1φ2W	3 <i>∲</i> 4W		
Rated operational	voltage Ue (V)	(*3)	AC	100-440	100-440	200-440	100-440	200-440		
High-speed type Rated current sensitivity (mA) Max operating time (s) at IΔn				30 100/200/500 selectable		0 0 selectable		0 0 selectable		
				0.1	0	.1	0.1			
	wax operating til	116 (2)	at 5l∆n	0.04	0.	04	0.	04		
	Rated current s	ensitiv	ity (mA)	(100/200/500 selectable)	(100/200/50	0 selectable)	(100/200/50	0 selectable)		
Time-delay type	Max operating	time (s)		perating time (s)		(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)		(0.45/1.0/2.0) selectable)
	Inertial operating	time (s)	(or more)	(0.1/0.5/1.0)	(0.1/0	.5/1.0)	(0.1/0.5/1.0)			
Earth-leakage ind	lication system			Mechanical type (button)	Mechanical	type (button)	Mechanical type (button)			
			440V	10/5	25	/25	50	/38		
D-4-d			415V	10/5	30	/30	50	/38		
Rated short-circuit	IEC 60947-2 EN 60947-2	AC	400V	10/5	30	/30	50	/38		
breaking	(lcu/lcs)	AC	230V	30/15	50	/50	100)/75		
capacity (kA)	,		200V	30/15	50	/50	100/75			
			100V	30/15	50/50 –		100/75	-		
Standard attached parts (Front connection)				Terminal screw: M8x14 (3P: 6pcs, 4P: 8pcs) Mounting screw: M4x0.7x55 (3P: 2pcs, 4P: 4pcs) (*1)						

- *1 Attached to NV125-SV and NV125-HV.
 *2 In case of time delay type, rated current is prodused with 20amp. or more.
 *3 Rated operational voltage of time-delay type is for 200-440V.


Operating Characteristics

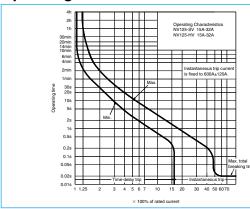

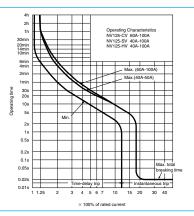


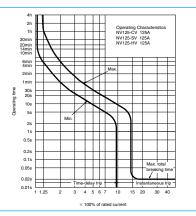

Earth leakage Tripping Characteristics

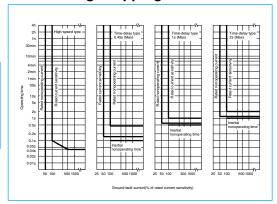


Internal Accessories

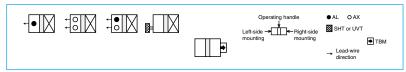


PTC-1SV4

Temperature Compensation Curve

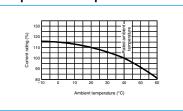


Plug-in

Electrical operation device

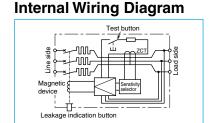



External Accessories

Accesso	ries	Type name	Reference page		Accessories			Type name	Reference page
O	F	F-1SV	123	Marchania	. 1		3P	MI-05SV3	400
Operating handle	٧	V-1SV	125	Mechanical interlock		MI	4P	MI-1SV4	136
Lock cover	LC	LC-05SV			0	TO 0	3P	TCS-1SV3	
	111 (*1)	HLF-05SV	134		Small	TC-S	4P	TCS-1SV4	
Handle lock device	HL (*1)	HLN-05SV	134		Large	TC-L	3P	TCL-1SV3	
	HL-S	HLS-05SV			Large	IC-L	4P	TCL-1SV4	
		PFF lock and HLN types for ON lock.		Terminal	Skeleton	ттс	3P	TTC-1SV3	128
*2 Specify the	working volta	ge. Refer to the reference page for type	name.	cover	Skeleton	110	4P	TTC-1SV4	126
				Rear	втс	3P	BTC-1SV3		
					near	ыс	4P	BTC-1SV4	
					Plug-in	DTC	3P	PTC-1SV3	

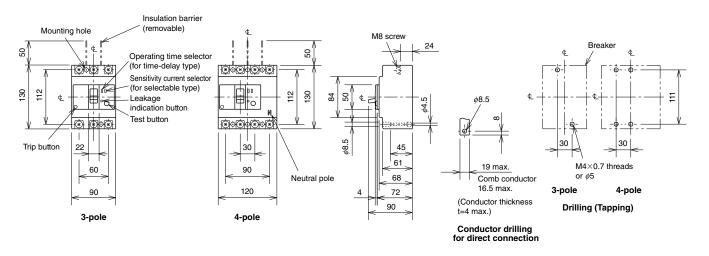

Rear connection

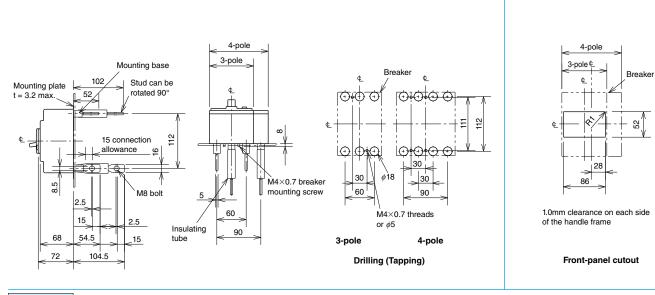

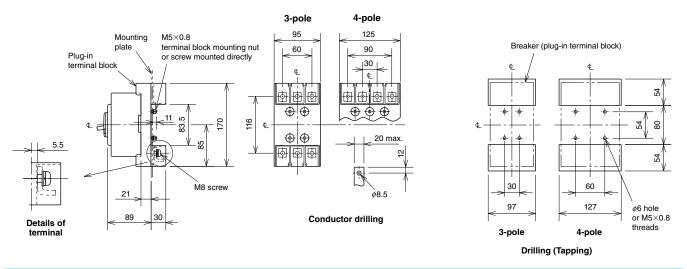

Remark: 1. Only 3-pole models are available for NV125-CV.

Earth Leakage Circuit Breakers

NV250-CV NV250-SV NV250-HV





NV250-CV

Model				NV250-CV	NV25	50-SV	NV25	0-HV
Rated current In (Reference ambier		0°C		125 150 175 200 225 250		50 175 25 250	125 150 175 200 225 250	
Number of poles				3	3	4	3	4
Phase line				3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3 <i>ϕ</i> 4W	3φ3W, 1φ3W, 1φ2W	3 <i>∲</i> 4W
Rated operational	voltage Ue (V)	(*1)	AC	100-440	100-440	200-440	100-440	200-440
High-speed type				30 100/200/500 selectable		0) 0 selectable	3 100/200/500	0 0 selectable
				0.1	0.1		0.1	
				0.04	0.04		0.04	
	Rated current sensitivity (mA)			(100/200/500 selectable)	(100/200/50	0 selectable)	(100/200/500) selectable)
Time-delay type	Max operating time (s)			(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0) selectable)	(0.45/1.0/2.0	selectable)
	Inertial operating	time (s)	(or more)	(0.1/0.5/1.0)	(0.1/0.5/1.0)		(0.1/0	.5/1.0)
Earth-leakage ind	lication system			Mechanical type (button)	Mechanical type (button)		Mechanical type (butto	
			440V	15/12	36	/36	65/65	
Rated			415V	25/19	36	/36	70/	70
short-circuit	IEC 60947-2 EN 60947-2	AC	400V	25/19	36	/36	75/	75
breaking	(lcu/lcs)	AC	230V	36/27	85,	/85	100/	/100
apacity (kA)	, ,		200V	36/27	85	/85	100/	/100
			100V	36/27	85/85 –		100/100	-
Standard attached	d parts (Front co	nnectio	on)	Terminal screw: M8 (Bolt(Hex-socket))×16 (3P: 6pcs, 4P: 8pcs) Mounting screw: M4x0.7x55 (3P: 2pcs, 4P: 4pcs) Insulation barrier: (3P: 4pcs, 4P: 6pcs)				


*1 Rated operational voltage of time-delay type is for 200-440V.

Operating Characteristics

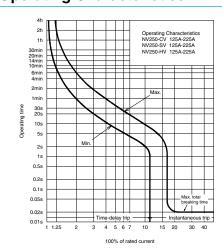


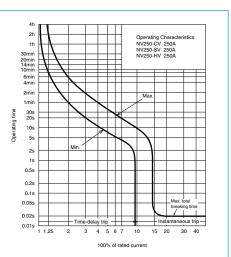


Earth leakage Tripping Characteristics

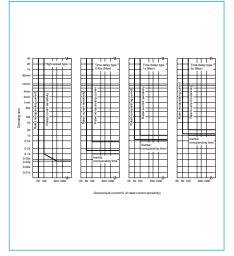


Internal Accessories

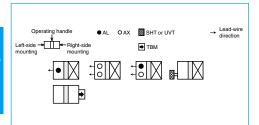

Temperature Compensation Curve

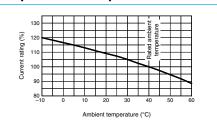

Internal Wiring Diagram

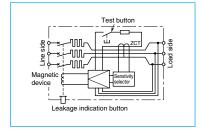


External Accessories


Accessori	es	Type name	Reference page
	F	F-2SV	123
Operating handle	V	V-2SV	125
Lock cover	LC	LC-05SV	
	111 (+4)	HLF-05SV	404
Handle lock device	HL (*1)	HLN-05SV	134
	HL-S	HLS-2SV	


*1 HLF types are used for OFF lock and HLN types for ON lock.
*2 Specify the working voltage. Refer to the reference page for type name.


9		Accessori	ies		Type name	Reference page						
	Mechanica	بام ماسمهما . ا	мі	3P	MI-05SV3	136						
	iviechanica	ii interiock	IVII	4P	MI-2SV4	136						
		Cmall	TC-S	3P	TCS-2SV3							
		Small	10-5	4P	TCS-2SV4							
				3P	TCL-2SV3							
		Large	Large	Large	Large	Large	Large	Large	TC-L	3P	TCL-2SV3L	
				4P	TCL-2SV4							
	Terminal cover	Skeleton	ттс	3P	TTC-2SV3	128						
	00101	Skeleton	110	4P	TTC-2SV4							
		Rear	втс	3P	BTC-2SV3							
		neai	ыс	4P	BTC-2SV4]						
		Plug-in	PTC	3P	PTC-2SV3							
ļ		riuy-In	F10	4P	PTC-2SV4							
	Electrical of	peration de	vice		(*2)	140						

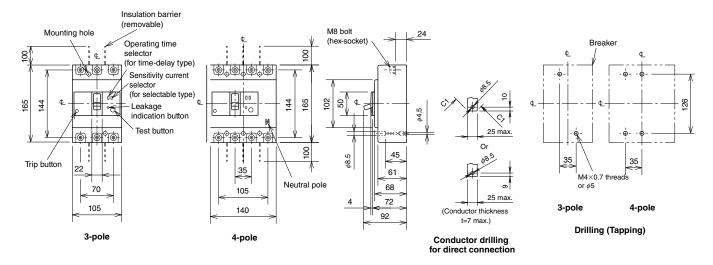

Rear connection

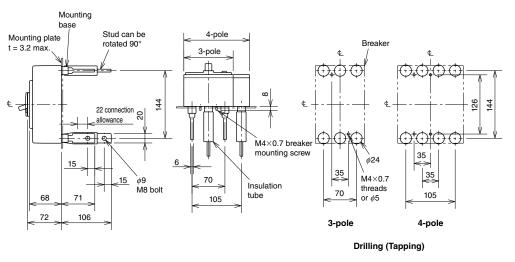

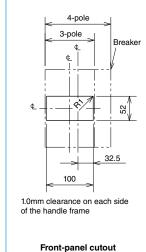

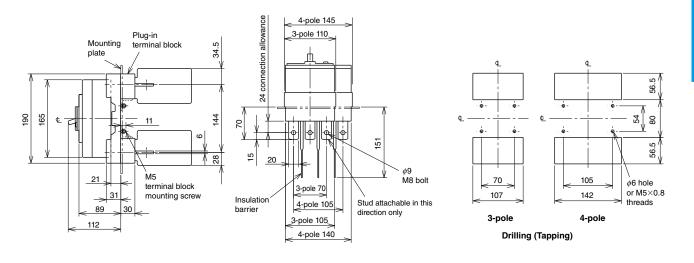

Remark: 1. Only 3-pole models are available for the model of NV250-CV.

Earth Leakage Circuit Breakers

NV125-SEV NV125-HEV NV250-SEV NV250-HEV





NV250-SEV

Model				NV12	5-SEV	NV125	5-HEV	NV250-SEV	NV250-HEV
Rated current In (A Reference ambien		°C		12	25	12	25	250	250
Current setting Ir (A)			Adjustable 63-125 (6.25A step)		Adjustable 63-125 (6.25A step)		Adjustable 125-250 (12.5A step)	Adjustable 125-250 (12.5A step)
Number of poles				3	4	3	4	3	3
Phase line			3φ3W, 1φ3W, 1φ2W	3 <i>φ</i> 4W	3φ3W, 1φ3W, 1φ2W	3 <i>φ</i> 4W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	
Rated operational	voltage Ue (V) (*	1)	AC	100	-440	100-	440	100-440	100-440
Rated current sensitivi			rity (mA)	(30) 100/200/500 selectable		(30) 100/200/500 selectable		(30) 100/200/500 selectable	(30) 100/200/500 selectable
High-speed type	May an austine time (a)		at I∆n	0.1		0.	.1	0.1	0.1
	Max operating time (s) at 5l∆n			0.	04	0.0	04	0.04	0.04
	Rated current sensitivity (mA)			(100/200/50	0 selectable)	(100/200/50) selectable)	(100/200/500 selectable)	(100/200/500 selectable)
Time-delay type	Max operating	;)	(0.45/1.0/2.0 selectable)		(0.45/1.0/2.0	selectable)	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)	
	Inertial operating	time (s)	(or more)	(0.1/0.5/1.0)		(0.1/0.5/1.0)		(0.1/0.5/1.0)	(0.1/0.5/1.0)
Earth-leakage indi	ication system			Mechanical	type (button)	Mechanical type (button)		Mechanical type (button)	Mechanical type (button)
			440V	36	/36	65/	65	36/36	65/65
Rated			415V	36	/36	70/	70	36/36	70/70
short-circuit	IEC 60947-2 EN 60947-2	AC	400V	36	/36	75/	75	36/36	75/75
breaking	(lcu/lcs)	AC	230V	85	/85	100/	/100	85/85	100/100
	<u> </u>		200V	85	/85	100/	/100	85/85	100/100
			100V	85	/85	100/	/100	85/85	100/100
Standard attached	parts (Front con	nectio	n)	Mounting s	Terminal screw: M8 (Bolt(Hex-socket))×16 (3P: 6pcs, 4P: 8pcs) lounting screw: M4x0.7x55 (3P: 2pcs, 4P: 4pcs) Insulation barrier: (3P: 4pcs, 4P: 6				


Note *1 Rated operational voltage of time-delay type is for 200-440V.

Operating Characteristics

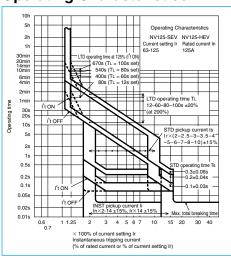


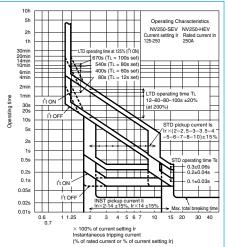


Earth leakage Tripping Characteristics

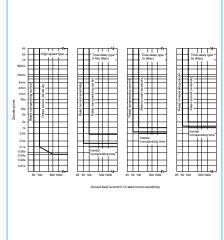


Internal Accessories

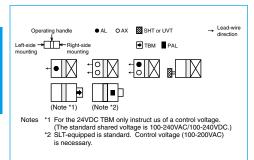

Current Reducing Curve

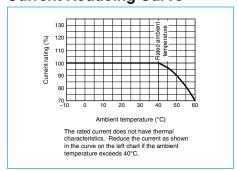

Internal Wiring Diagram

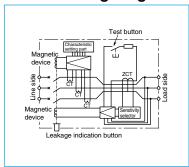

External Accessories

Accesso	ries	Type name	Reference page	Accessories		Type name	Reference page		
O	F	F-2SV	123	Mechanical interlock			3P	MI-05SV3	100
Operating handle	V	V-2SV	125			MI	4P	MI-2SV4	136
Lock cover	LC	LC-05SV			Small	TC-S	3P	TCS-2SV3	
Handle lock device HL (*1	1.11 (*4)	HLF-05SV	134		Smail	10-5	4P	TCS-2SV4	
	HL ("1)	HLN-05SV			Large	TC-L	3P	TCL-2SV3	
	HL-S	HLS-2SV		Terminal			3P	TCL-2SV3L	
		FF lock and HLN types for ON lock.					4P	TCL-2SV4	
		ge. Refer to the reference page for type		cover	Chalatan	TTC	3P	TTC-2SV3	128
	me with MP at the	(*3)	Skeleton	TIC	4P	TTC-2SV4			
end.					D	DTO	3P	BTC-2SV3	
					Rear	BTC	4P	BTC-2SV4	
							3P	PTC-2SV3	7


Plug-in

Electrical operation device


PTC


PTC-2SV4

(*2)

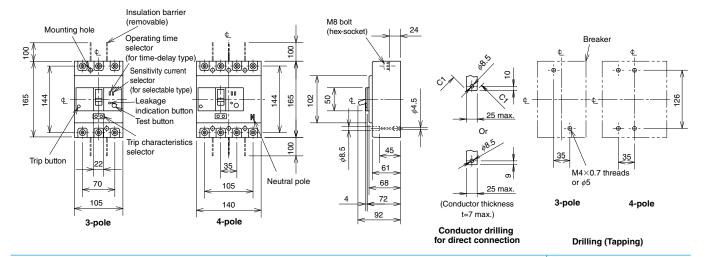


Rear connection

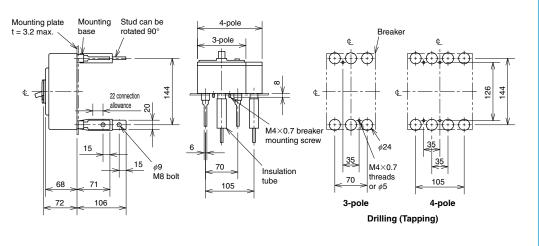

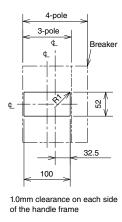

Front-panel cutout

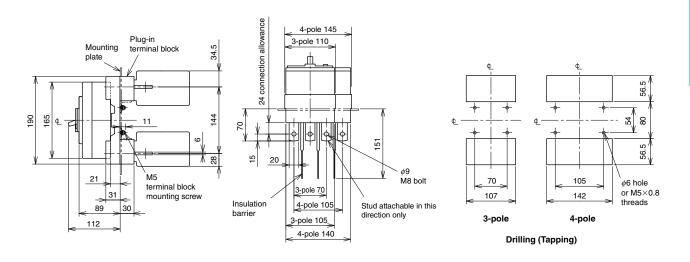

Remark: 1. Only 3-pole models are available for the model of NV250-SEV and NV250-HEV.

Earth Leakage Circuit Breakers

NV400-CW NV400-SW




NV400-SW


Model				NV400-CW	NV400-SW		
Rated current Reference an	In (A) nbient temperatur	e 40°C		250 300 350 400			
Number of po	les			3			
Phase line				3φ3W, 1φ3W, 1φ2W			
Rated operati	onal voltage Ue (V) (*1)	AC	100	440		
Rated current sensitivity (mA)			(mA)	(30) 100 · 200 ·	500 Selectable		
High-speed type	May an austin a t	ima (a)	at l∆n	0.	1		
typo	type Max operating tir		at 5l∆n	0.04			
	Rated current sensitivity ((mA)	(100 · 200 · 50	0 Selectable)		
Time-delay type	Max operating t	ime (s)		(0.45 · 1.0 · 2.0	0 Selectable)		
type	Inertial operating	time (s)	(or more)	(0.1 · 0.	5 · 1.0)		
Earth leakage	protection chara	cteristic		Type AC			
Earth-leakage	e indication syster	n		Mechanical type (Button)			
			440V	25/13	42/42		
Rated short-o	sirouit		415V	36/18	45/45		
breaking capa		AC	400V	36/18	45/45		
IEC 60947-2		AC	230V	50/25	85/85		
EN 60947-2			200V	50/25	85/85		
		100V	50/25	85/85			
Standard attached parts (Front connection)				Terminal screw: M12 boltx35 (3-pole: 6pcs) Mounting screw: M6x60 (4pcs)			

Note *1 Rated operational voltage of time-delay type is for 200-440V.


Operating Characteristics

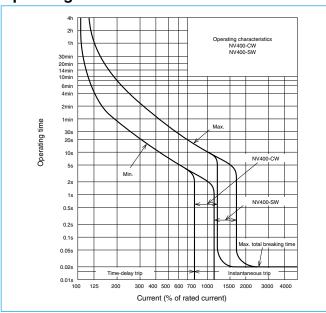


Earth Leakage Tripping Characteristics

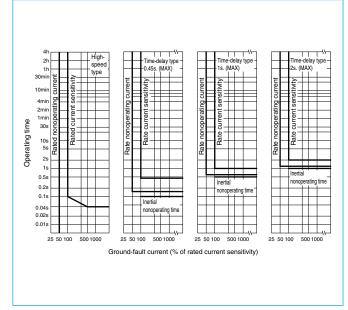

Internal Accessories

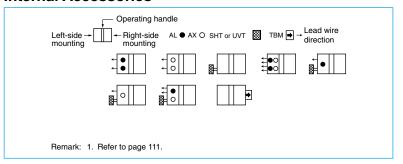

Temperature Compensation Curve

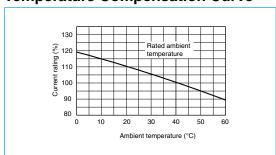



External Accessories


Accessories		Type name	Reference		Accessorie	20	Type name	Reference
		туре паше	page	Accessories			туре паше	page
Operating handle	F	F-4S	123	Au	xiliary handle	HT	HT-4CW, HT-4SW	135
Operating nandle	V	V-4S	125	cover	Large	TC-L	TCL-4SW3	
Mechanical interlock	MI	MI-4SW3	136		Skeleton	TTC	TTC-4SW3	128
				Terminal	Rear	втс	BTC-4SW3	
						HL	HL-4CW, HL-4SW	404
				на	ndle lock device	HL-S	HLS-4SW	134
				Ele	ectrical operation	device	(*1)	140


Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Internal Wiring Diagram

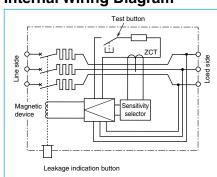

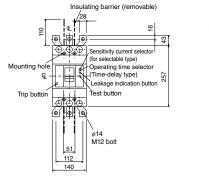

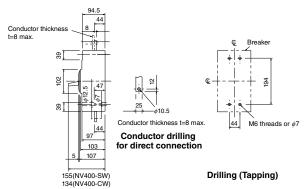


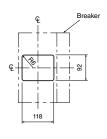


1.0mm clearance on each side of the handle frame.

Front-panel cutout

Rear connection

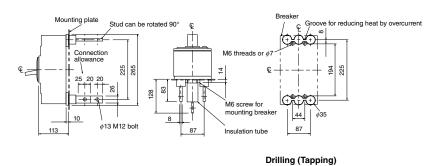



Boring dimensions for rear connection type barriers (3-pole)

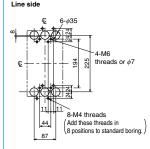


Load side

Note The bore dimensional drawing shows the breaker viewed from the rear.

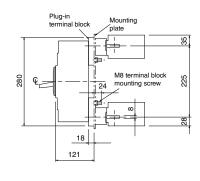

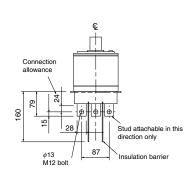

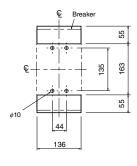

Drilling (Tapping)

NV400-SEW NV400-HEW




NV400-SEW


Model				NV400	NV400-SEW NV400-H				
Rated curren Reference ar	t In (A) mbient temperature	e 40°C		2		stable 300 350 40	00		
Number of p	oles			3	3 4 3 4				
Phase line				3P : 3φ3W, 1φ3W, 1φ2W 4P : 3φ4W					
Rated operational voltage Ue (V) (*1) AC					100	-440			
	Rated current sensitivity (mA)			(3	0) 100 · 200 ·	500 Selectab	ole		
High-speed type	May aparating tip	(-)	at l∆n		0	.1			
1,700	Max operating tir	ne (s)	at 5l∆n		0.04				
	Rated current sensitivity (mA)		(100 · 200 · 500 Selectable)						
Time-delay type Max operating time		ne (s)			(0.45 · 1.0 · 2	.0 Selectable))		
77-	Inertial operating	time (s) (or more)		(0.1 · 0	.5 · 1.0)			
Earth leakag	e protection chara	cteristic			Туре	e AC			
Earth-leakag	e indication syster	n		Mechanical type (Button)					
			440V	42	42	65/	/65		
Rated short-	oirouit		415V	50	/50	70/	/70		
breaking cap	acity (kA)	AC	400V	50.	/50	70/	/70		
IEC 60947-2 EN 60947-2	(lcu/lcs)	10	230V	85	/85	100/	/100		
EN 60947-2			200V	85	/85	100/	/100		
100V		100V	85/85 100/100		/100				
Standard attached parts (Front connection)			Terminal screw: M12 boltx35 (3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: M6×72 (4pcs) Insulation barrier: (3P: 4pcs, 4P: 6pcs)			cs)			

Note *1 Rated operational voltage of time-delay type is for 200-440V.


Operating Characteristics

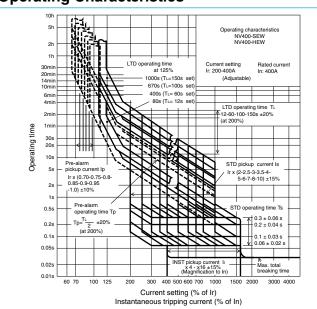


Internal Accessories

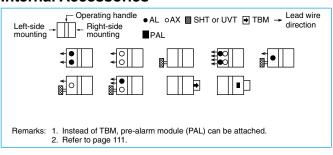

Earth Leakage Tripping Characteristics

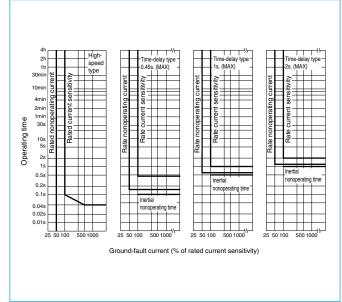


Current Reducing Curve

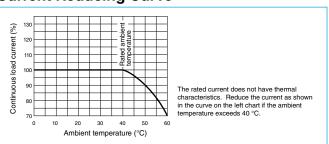



External Accessories

LAternal At	,00	530	1103							
Accessorie	Accessories			Reference page		Accessori	es		Type name	Reference page
On a ration a boundle	F		F-4S	123	Aux	kiliary handle	HT		HT-4SW	135
Operating handle	٧		V-4S	125	Ι.	Laves	TC-L	3P	TCL-4SW3 (*1)	
Mechanical interlock	N 41	3P	MI-4SW3	136	cover	Large	IIC-L	4P	TCL-4SW4 (*1)	
Mechanical interlock MI 4P		4P	MI-4SW4	MI-4SW4		Skeleton	TTC	3P	TTC-4SW3	128
Notes *1 This is for N	V400-	SEW.			ermiri ——————————————————————————————————	4P		TTC-4SW4		
			For rear termina	al cover of		B	пто	3P	BTC-4SW3 (*2)	
NV400-HE\ *3 Specify the			thod and voltag	ne.	l '	Rear	BTC	4P	BTC-4SW4	
	Order in combination with the breaker unit.						HL		HL-4SW	404
					Hai	ndle lock device	HL-S		HLS-4SW	134
					Ele	ctrical operation	NVM	3P	(*3)	140

Internal Wiring Diagram

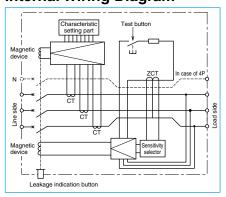

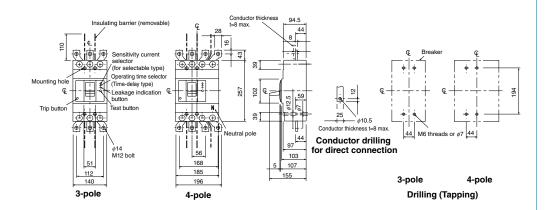


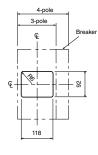


 1.0mm clearance on each side of the handle frame.

Front-panel cutout


Rear connection

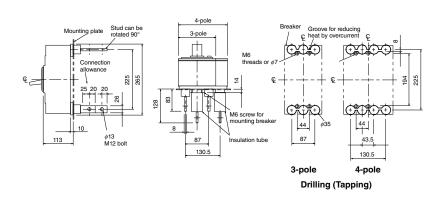

Boring dimensions for rear connection type barriers (3-pole)

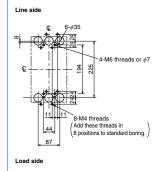

Note The bore dimensional drawing shows the breaker viewed from the rear.

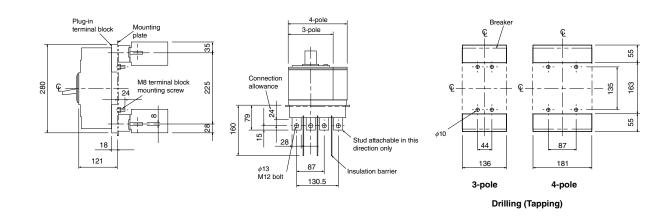

Earth Leakage Circuit Breakers

at l∆n

at 5l∆n

Model

Number of poles Phase line

High-speed

Time-delay

type

type

Rated current In (A) Reference ambient temperature 40°C

Rated operational voltage Ue (V)

Earth leakage protection characteristic Earth-leakage indication system

Rated current sensitivity (mA)

Rated current sensitivity (mA)

Inertial operating time (s) (or more)

Max operating time (s)

Max operating time (s)

NV630-CW NV630-SW



NV630-SW

440V 36/18 415V 36/18 Rated short-circuit breaking capacity (kA) IEC 60947-2 (lcu/lcs) EN 60947-2 400V 50/50 36/18 230V 50/25 85/85 200V 50/25 85/85 100V Terminal screw: M12 boltx35 (3-pole: 6pcs) Standard attached parts

NV630-CW

500 600 (630)

3φ3W, 1φ3W, 1φ2W

200-440

100 · 200 · 500 Selectable

0.45 · 1.0 · 2.0 Selectable


0.1 · 0.5 · 1.0

Type AC


Mechanical type (Button)

NV630-SW


Operating Characteristics

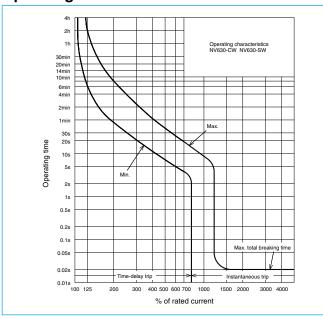


Earth Leakage Tripping Characteristics

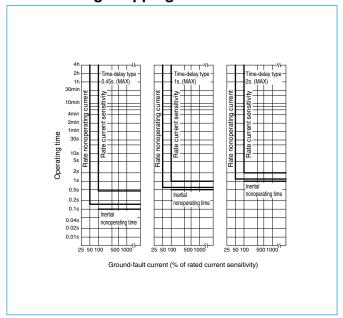

Internal Accessories

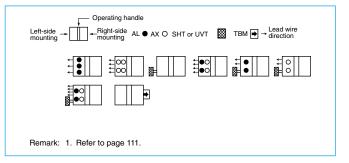

Temperature Compensation Curve

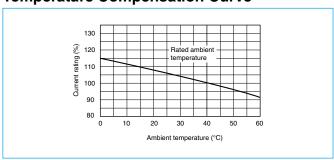


External Accessories


Accessories		Type name	Reference page		Accessorie	es	Type name	Reference page
Onevetion bondle	F F-4S 123		123	Au	xiliary handle	HT	HT-4SW	135
Operating handle	٧	V-4S	125	20Ver	Large	TC-L	TCL-4SW3	
Mechanical interlock	MI	MI-4SW3	136			TTC	TTC-4SW3	128
				Terminal	Rear	BTC	BTC-4SW3	
				II.	ndla laak dawisa	HL	HL-4SW	404
				Handle lock device		HL-S	HLS-4SW	134
			Electrical operation device			(*1)	140	

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Internal Wiring Diagram

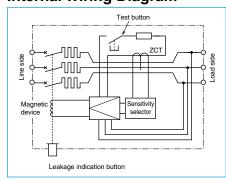

Front connection Test button Conductor drilling 612 **A** 4 Neutral Pole for direct connection φ14 M12 bolt 3-pole 4-pole 107 Drilling (Tapping)

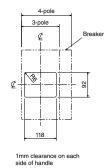



Front-panel cutout


Rear connection

140 3-pole 185


4-pole

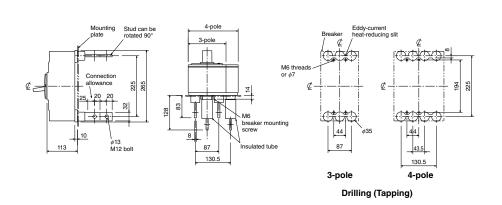


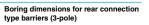


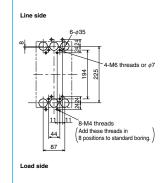

Note The bore dimensional drawing shows the breaker viewed from the rear.

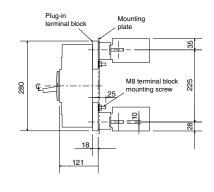

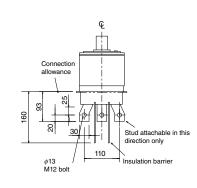

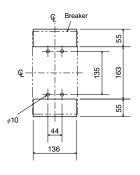


Drilling (Tapping)

NV630-SEW NV630-HEW



NV630-SEW


Earth Leakage Tripping Characteristics

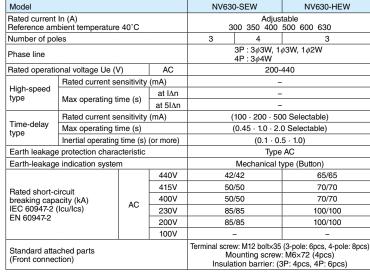


Operating Characteristics LTD operating time at-1259 000s(TL=150s set) 570s(TL=100s set) Operating time STD pickup current Iso 0.3 ± 0.06s 0.2 ± 0.04s Current (% of Ir) Instantaneous Tripping Current (% of In)

30s 0.2s Ground-fault current (% of rated current sensitivity)

Internal Accessories

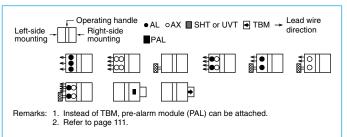


Current Reducing Curve

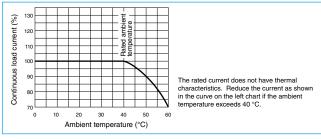



External Accessories

				Reference						Reference
Accessorie	Accessories			page		Accessori	es		Type name	page
Operating handle	F		F-4S	123	Aux	iliary handle	HT		HT-4SW	135
Operating naritie	٧		V-4S	125	Ι.		TC-L	3P	TCL-4SW3 (*1)	
Mechanical interlock	МІ	3P	MI-4SW3	136	Large	I C-L	4P	TCL-4SW4 (*1)		
Wechanical Interiock	IVII	4P	MI-4SW4	136		Skeleton	TTC	3P	TTC-4SW3	100
Notes *1 This is for N	Notes *1 This is for NV630-SEW.						110	4P	TTC-4SW4	128
*2 This is for N				al cover of	Terminal He	Daras	втс	3P	BTC-4SW3 (*2)	
NV630-HEV *3 Specify the				ge.		Rear		4P	BTC-4SW4	
Order in cor	nbinati	on with	n the breaker u	nit.	ш.	ndle lock device	HL		HL-4SW	124
						idle lock device	HL-S		HLS-4SW	134
								3P	(*0)	140
					dev	ice	NVM	4P	(*3)	140

Internal Wiring Diagram

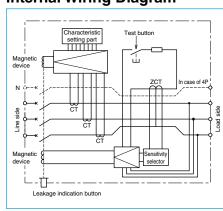


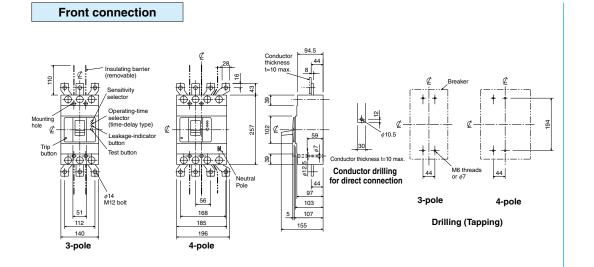

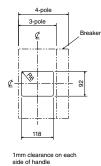


Front-panel cutout


Rear connection

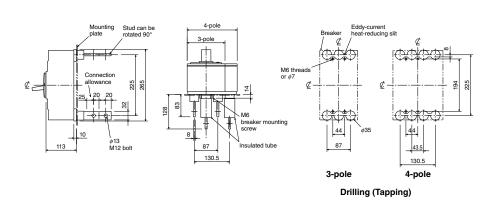



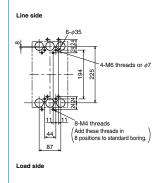

Note The bore dimensional drawing shows the breaker viewed from the rear.

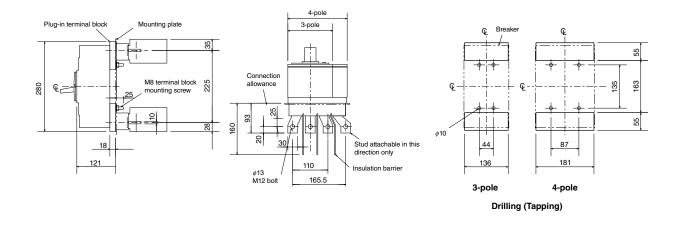


NV800-SEW NV800-HEW



		2.66	
NIV	กก.	SEW/	


Model NV800-SEW NV800-HEW Rated current In (A) Reference ambient temperature 40°C 400 450 500 600 700 800 Number of poles Phase line 3ø3W, 1ø3W, 1ø2W Rated operational voltage Ue (V) 200-440 Rated current sensitivity (mA) High-speed at IAn Max operating time (s) at 5l∆n Rated current sensitivity (mA) 100 · 200 · 500 Selectable Time-delay 0.45 · 1.0 · 2.0 Selectable Max operating time (s) type Inertial operating time (s) (or more) $0.1\cdot0.5\cdot1.0$ Type AC Earth leakage protection characteristic Mechanical type (Button) Earth-leakage indication system 440V 42/42 415V 50/50 70/70 Rated short-circuit breaking capacity (kA) IEC 60947-2 (lcu/lcs) 400V 70/70 50/50 230V 85/85 100/100 EN 60947-2 200V 85/85 100/100 100V Terminal screw: M12 bolt×35 (3-pole: 12pcs) Mounting screw: M6×35 (4pcs) Standard attached parts (Front connection)

Operating Characteristics

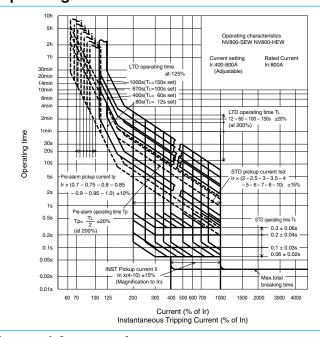


Earth Leakage Tripping Characteristics

Insulation barrier: (2pcs)

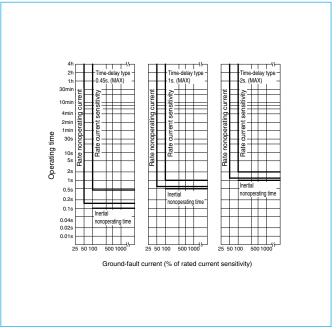

Internal Accessories

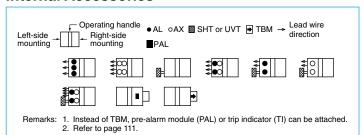


External Accessories


Accessories		Type name	Reference page		Accessorie	es	Type name	Reference page
Operation bondle	F	F-8S	123	23 Auxiliary handle		HT	HT-4SW	135
Operating handle	V	V-8S	125	cover	Large	TC-L	TCL-8SW3	
Mechanical interlock	MI	MI-8SW3	136	inal	Skeleton	TTC	TTC-8SW3	128
			•	Terminal	Rear	BTC	BTC-8SW3	
				II.	مطام امماد طمينمم	HL	HL-4SW	134
				па	ndle lock device	HL-S	HLS-8SW	
					ctrical operation	device	(*1)	140


Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.


Current Reducing Curve

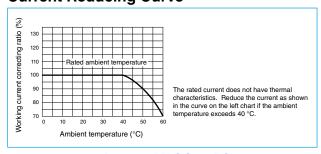

Internal Wiring Diagram

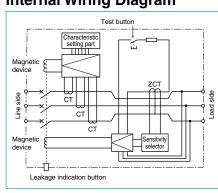

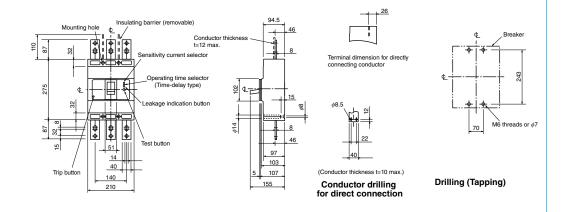


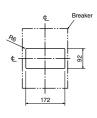


1.0mm clearance on each side of the handle frame.

Front-panel cutout


Rear connection

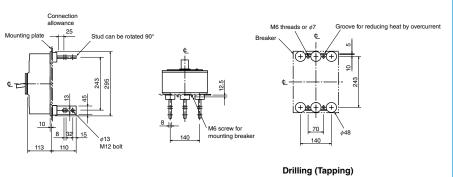


Boring dimensions for rear connection type barriers (3-pole)

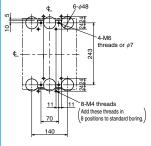

Note The bore dimensional drawing shows the breaker viewed from the rear.

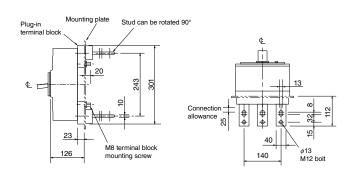

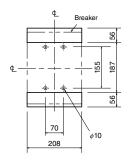

Drilling (Tapping)

UL Certified Circuit Breakers

NF50-SMU




NF50-SMU


	Model			NF50-SMU			
ı	Rated current l Reference ambient tem		0.5 1 1.5 2 3 4 5 6 7 8 10 13 15 20 25 30 35 40 50				
	Number of po	oles	1	2	3		
- F		AC	240V	5	1	0	
cuit y (kA)	UL 489 CSA C22.2 No.5	AC	120V	10	-		
short-circuit capacity (k	00/1 022.2 110.0	DC	60V	10	-	-	
shor cap		Rated ins	ulation voltage Ui V		440		
ed s	IEC 60947-2 EN 60947-2	AC	400V	-	10/	7.5	
Rated breaking	(lcu/lcs)	AC	230V	10/7.5	10/	7.5	
p	, ,	DC	60V	10/7.5	-	-	

Note *1 The handle does not indicate the trip position due to automatic reset structure.

Operating Characteristics

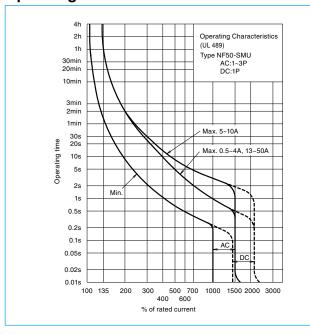


Temperature Compensation Curve

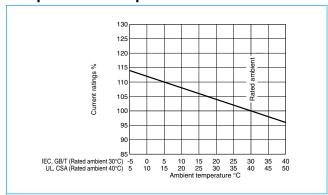

External Accessories

Accessories	Type name	Reference page
AL	AL-05SMU	
AX	AX-05SMU	
SHT	SHT024-05SMU SHTA130-05SMU SHT048-05SMU SHTA277-05SMU SHTD130-05SMU	203
HL	HLF-05SMU	134

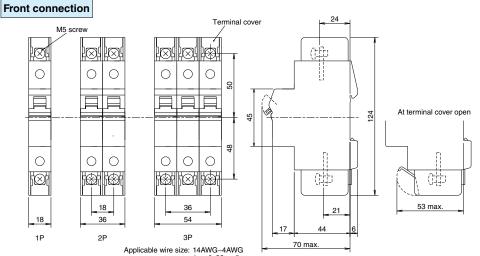

Applicable	crimp term	inal torque	18 lb-in. (2N·m)
Applica	ble wire	Crimp termin	al model (*1)
mm ²	AWG (#) (75°C)	JST	NTM
0.65-1.65	18-16	R1.25-5	R1.25-5
		R2-5	R2-5
1.04-2.63	16-14	2-M5	R2-5M
1.04-2.63	10-14	V2-5	
		V2-M5	
2.63-4.6	12		R3.5-5S
2.03-4.0	12	_	R3.5-5L
		R5.5-5	R5.5-5
2.63-6.64	12-10	V5.5-5	R5.5-5S
			R5.5-5N
6.64-10.52	8	R8-5	R8-5
0.04-10.52	°		R8-5S
10.52-16.78	6	R14-5	R14-5
10.52-16.78	°	14-NK5	R14-5S


16.78-26.66


JST: Japan Solderless Terminal Mfg. Co. NTM: Nichifu Co., Ltd. Note *1 When using in wire connection use crimp terminal in the table.

R22-5S

AL/ AX

Remark: The wires cannot be connected directly.

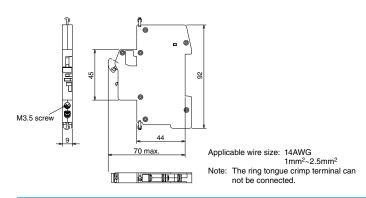

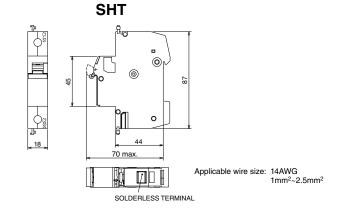


Time Name		Alarm switch (AL)	Auxiliary switch (AX)			
Type Name		AL-05SMU	AX-05SMU			
Configuration		1c	1c			
Contact capacity		277VAC 3A 240VAC 6A 130VDC 1A 48VDC 2A 24VDC 6A				
Terminal		Load side (OFF side)				
Terminal connection	1	Clamp terminal M3.5 (*1)				
E a ca	а	9	9			
Dimension (mm)	b	9	2			
	С	4	4			
	ca	70				
Mass (kg)		0.05				


Note *1 Ring tongue crimp terminal can not be connected.

Type Name		Shunt trip device (SHT)							
туре маше		SHT024-05SMU SHTA130-05SMU SHT048-05SMU SHTA277-09			SHTA277-05SMU	SHTD130-05SMU			
Voltage V		AC24/DC24	AC48-130	AC48/DC48	AC220-277	DC110-130			
Input power requirement (VA) (*2)	60	200	70	70	105			
Operating time (ms) (*3	3)	20 or less							
Terminal connection		Solderless							
(E Ca Ca Ca Ca Ca Ca Ca Ca Ca Ca Ca Ca Ca	а	18							
	b		87						
Dimension Control of the Control of	С			44					
	ca	70							
Mass (kg)				0.1	·				

- *2 Secure a sufficient input power so that the voltage will not drop below the permissible lower working voltage (70% of the lowest rated voltage).
 *3 The operating time denotes the time from when the rated voltage is applied to SHT until when the main contact of the breaker starts to open.

Terminal Symbol

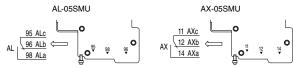

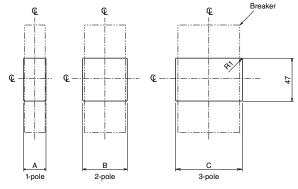

The drilling dimensions have a 1.0mm clearance on each side of breaker window frame.

Front-panel cutout

Rate of dimensional change (Front-plate cutout) (mm)									
Pole	e Width Accessory								
role	Widti	No accessory	AL or AX	AL or 2 pcs AX	SHT1	AL or AX with SHT	AL or 2 pcs AX with SHT		
1	Α	20	29	38	38	47	56		
2	В	38	47	56	56	65	74		
3	С	56	65	74	74	83	92		

NF50-SVFU NV50-SVFU




NV50-SVFU

	Mod	lel		NF50	-SVFU			Model			NV50-SVFU	
	Rated current In (A) Reference ambient		(3) 5 10 15 20 30 40 50			Rate Reference	ed curren e ambient 40°C			(5) (10) 15 20 30 40 50		
	temperature 40°C					Nur		2	3			
	Number o	of pole	S	2	3		Phase line					3φ3W 1φ2W
		Rated	voltage VAC	2	40			UL 489			120-	240
Rated short-circuit breaking capacity (kA)	UL 489		600Y/347V 480V		-	Rate VAC	d voltage	IEC 6094 EN 6094			100-240	100-440
acity	CSA C22.2 No.5		480Y/277V		-	peq	Rated cu	rrent sens	rrent sensitivity I∆n mA		30 50	30 50 100
cap	cab		240V		14		High-speed type	Pick-up c	Pick-up current UL		3	75%
ing	ing		120V		-	Ę	Operating	time (sec)	withir	n AT 5l∆n	0.04	(*1)
reak		Rated ins	ulation voltage Ui V	440		Е	Earth-leakage indication system					window
ii bi			690V		_	ing	UL	489	AC	480V	-	-
ic			500V			Rated short-circuit breaking capacity (kA)	CSA			240V	14	
J.t.	IEC 60947-2 EN 60947-2		440V	7.	5/4	(<u>F</u>	No	0.5		120V	1	4
sh	(lcu/lcs)	AC	415V	10	0/5	oiro				440V	-	7.5/4
atec			400V	10	0/5	short	IEC 60		AC	400V	-	10/5
Œ			380V	10	0/5	ted 8	(lcu		AC	230V	15/8	15/8
			230V	15	5/8	æ				100V	15/8	15/8
Standard attached parts (Front connection)		M5 (2P: 4pcs IEC35 rai	al screw: i×14 , 3P: 6pcs) Il mounting aws			ndard attached parts (Front connection)		Terminal screw: M5×14 (2P: 4pcs, 3P: 6pcs IEC35 rail mounting claws				


Note *1 0.1 for UL1053.

Remark: 1. The mounting screws must be prepared by the user. (Recommended size: $M4 \times 0.7 \times 65$ (2 pcs).)


Operating Characteristics

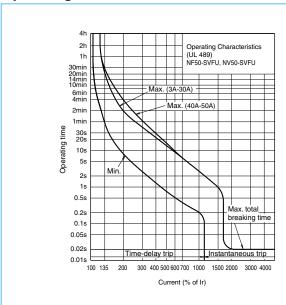


Earth Leakage Tripping Characteristics

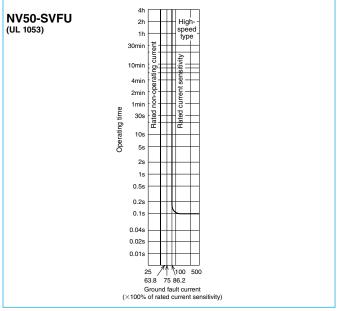


Internal Accessories

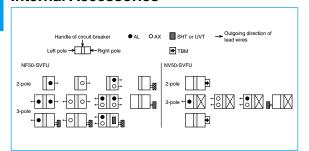

Temperature Compensation Curve

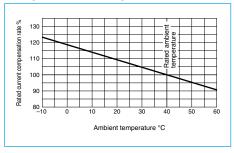


Internal Wiring Diagram

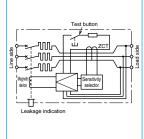

External Accessories

		•••								
Accessories			Type name	Reference page	A	Accessories			Type name	Reference page
	_	2P	F-03SVUL2	100	Terminal cover	Large	TC-L	2P	TCL-03SVU2	100
On a rational bandle	-	3P	F-03SVUL	123				3P	TCL-03SVU3	128
Operating handle	V	2P	V-03SVUL2	405						
	\ \	3P	V-03SVUL	125						
Handle lock device	HL		HLF-03SVU	134						
natitule lock device	HI-S		HLS-03SVII	134						

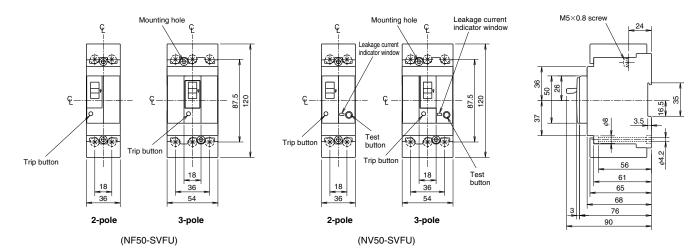



(Conductor thickness t=4 max.)


Conductor drilling for direct connection

Remarks: 1. The mounting screws are not enclosed with the breaker.
2. The wires cannot be connected directly.

Compatible crimp terminals Tightening torque 22lb-in (2.5N-m)

<u>-</u>	<u> </u>		. , ,			
Applicable w	ire range (*1)	Crimp terminal type (*2)				
mm ²	AWG (#) (60°C/75°C)	JST	NTM			
2.5-2.63	14	R2-5 2-M5 V2-5 V2-M5	R2-5 R2-5M			
2.63-4.6	12	-	R3.5-5S R3.5-5L			
2.63-6.64	12-10	R5.5-5 V5.5-5	R5.5-5 R5.5-5S R5.5-5N			
6.64-10.52	8	R8-5	R8-5 R8-5S			
10.52-16.78	6	R14-5 14-NK5	R14-5 R14-5S			
16.78-26.66	4	22-S5 22-S6	R22-5S			

JST: Japan Solderless Terminal Mg. Co.
NTM: Nichifu Co., Ltd.
Notes 1 14AWG or lager to comply with UL Standards.
2 When using with a wire connection, use the crimp terminal combination shown above.

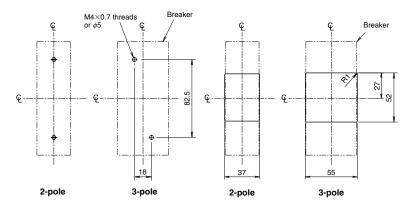

The drilling dimensions have a 1.0mm clearance on each side of breaker window frame.

Drilling (Tapping)

Front-panel cutout

NF100-CVFU NV100-CVFU




NF100-CVFU


	Mod	del		NF100	-CVFU			Model			NV100-CVFU
	Rated cui	rent In	ι (Δ)			Refe	Rate erence an	ed current nbient ter		ure 40°C	60 (70) 75 (80) (90) 100
	Referenc	e amb	ienť	60 (70) 75 (80) (90) 100			Nu	mber of p		3	
	temperature 40°C)°C	(00) (3	50) 100			Phase lir		3 <i>∲</i> 3W	
					Priase line					1 <i>∲</i> 2W	
	Number	of pole	s	2	3			UL 489			120-240
		Rated	voltage VAC	2	40	Rate	ed age VAC	IEC 609	947-2		100-440
€			600Y/347V		-	*************************************	EN 6094		47-2		100-440
Rated short-circuit breaking capacity (kA)	UL 489 CSA C22.2		480V		-	ype	Dotod o	urrent se	noitivit	, lan ma	30 50
acit	No.5	AC	480Y/277V	,	-	ed t	nateu c	urrent se	IISILIVIL	/ ідп ппа	100/200/500 selectable
cap			240V	1	14	Rated current sense. Pick-up current UL Operating time (sec)			JL 105	3	75% of I∆n
ing			120V	,	ΞĒ	Operatin	g time (se	c) withi	n AT 5l∆n	0.04 (*1)	
eak		Rated ins	ulation voltage Ui V	6	00	E	arth-leak	age indic	ation s	ystem	Mechanical button
li b			690V	,	-	ng	UL	489		480V	-
ig.			500V	7.	5/4	reak	CSA C22.2		AC	240V	14
뷡	IEC 60947-2 EN 60947-2		440V	10	0/5	Egg.	No	0.5		120V	14
sho	(lcu/lcs)	AC	415V	10	0/5	Scirc				440V	10/5
ated	, ,		400V	10	0/5	short)947-2)947-2	AC	400V	10/5
æ			380V	10	0/5	Rated short-circuit breaking capacity (kA)		/lcs)	AC	230V	15/8
			230V	15	5/8	Ba	,			100V	15/8
Standard attached parts (Front connection)			claws, Insul (2P: 2pcs (Only for ty terminal) Mo M4×0.7× Terminal so	Il mounting lating barrier , 3P: 4pcs) /pe with bar punting screw (55 (2 pcs) crew: M8×14 , 3P: 6pcs)	Standard attached parts (Front connection)			IEC35 rail mounting claws, Insulating barrier (4pcs) (Only for type with bar terminal) Mounting screw M4×0.7×55 (2 pcs) Terminal screw: M8×14 (3P: 6pcs)			

Note *1 0.1 for UL1053.


Operating Characteristics

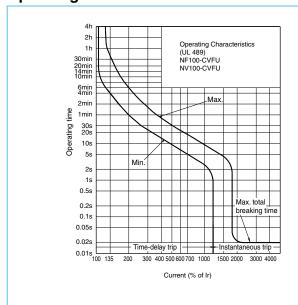


Earth Leakage Tripping Characteristics

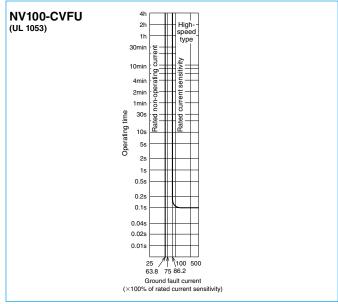


Internal Accessories

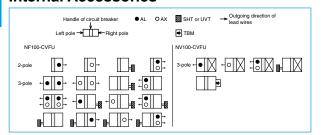

Temperature Compensation Curve

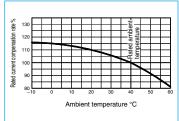


Internal Wiring Diagram

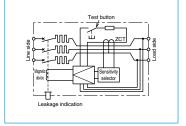

External Accessories


External Ac	External Accessories									
Accessories			Type name	Reference page	Accessories				Type name	Reference page
Operating handle	_	2P	F-05SVUL2	123		over Large		2P	TCL-05SVU2	128
	-	3P	F-05SVUL		Terminal cover		TC-L	21	TCL-05SVU2L	
	V	2P	V-05SVUL2	125	Terminal cover		I I C-L	3P	TCL-05SVU3	
	v	3P	V-05SVUL	125				3F	TCL-05SVU3L	
	С	3P	C-1SVU	127						
	HL HLF-05SVU		HLF-05SVU							
Handle lock device	HL-S	2P	HLS-05SVU2	134						
	I III-3	3P	HLS-05SVU							

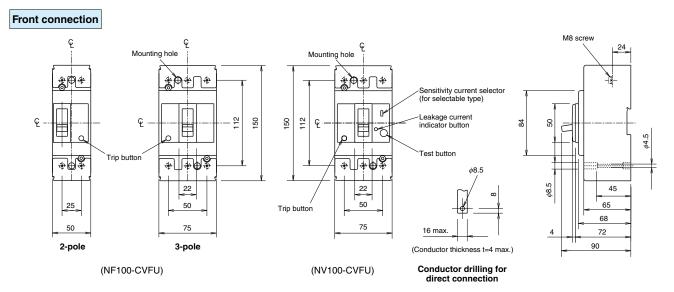


Compatible crimp terminals Tightening torque 54lb-in (6N·m)

	•					
Applicable	wire range	Crimp terminal type (*1)				
mm ²	AWG (#) (60°C/75°C)	JST	NTM			
2.5-2.63	14	R2-8	R2-8			
2.63-6.64	12-10	R5.5-8	R5.5-8			
6.64-10.52	8	R8-8	R8-8			
10.52-16.78	6	R14-8	R14-8			
10.32-10.70	0	1114-0	R14-8S			
16.78-26.66	4	R22-8	R22-8S			
26.66-42.42	2	38-S8	R38-8S			
42.42-60.57	1/0	60-2BA	CB60-8			
42.42-00.57	1/0	60-S8	CB00-8			

JST: Japan Solderless Terminal Mfg. Co.
NTM: Nichifu Co., Ltd.
Note *1 When using with a wire connection, use the crimp
terminal combination shown above.

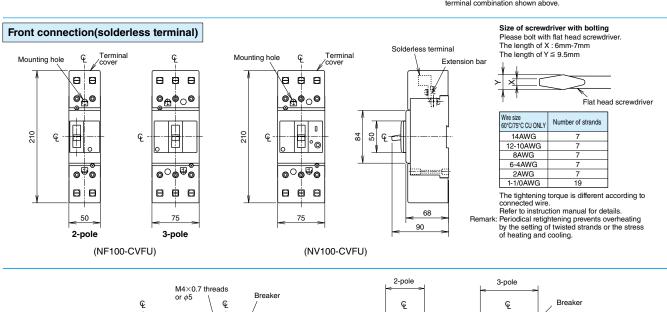

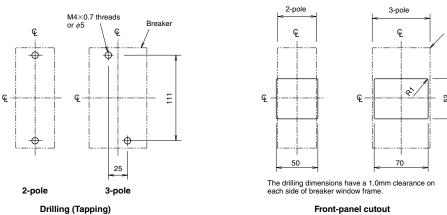

Front-panel cutout

NF100-SRU NF100-HRU **NV100-SRU** NV100-HRU



NF ₁	00-	·HR	U	3P

	Model			NF100)-SRU	NF100-HRU		
	Rated current la Reference amb temperature 4	oienť	1 2 3 15 20 40 50 75 80	60 70	1 2 3 5 10 15 20 25 30 40 50 60 70 75 80 90 100			
	Number of po	les		2	3	2	3	
	UL 489 CSA C22.2	AC	480V	-	-	18(10) (*1)	
Rated short-circuit breaking capacity (kA)	No.5	AC	240V	35(25	5) (*1)	50(25	5) (*1)	
) rea			690V	-	-		-	
(kA)			500V	10)/5	18/9(10)/5) (*1)	
iệ Şi	IEC 60947-2	AC	440V	15	5/8	25/13(1	5/8) (*1)	
hort-circl	EN 60947-2	AC	415V	15	6/8	25/13(1	5/8) (*1)	
la s	(Icu/Ics)		400V	15/8		25/13(15/8) (*1)		
Rate			230V	35/18(25/13) (*1)		50/25(25/13) (*1)		
		DC	250V	-	-		-	
5	Standard attache (Front connect		Terminal screw: 50A or less M5x14 (2P: 4pcs, 3P: 6pcs) 60A or more M8x14 (2P: 4pcs, 3P: 6pcs) Mounting screw: M4x0.7x55 (NF100-SRU 2P, 3P: 2pcs) M4x0.7x52 (NF100-HRU 2P, 3P: 2pcs) Insulation barrier: (2P: 2pcs, 3P: 4pcs Only NF100-HRU)					


Notes *1	Rated short-circuit breaking capacity parenthesized
	are applied to below rated current 15A.

es	" I	Hated short-circuit breaking capacity parentnesize
		are applied to below rated current 15A.
	*2	In case of UL1053, operating time is 0.1s.


_								
ı		Model			NV100)-SRU	NV100-HRU	
1		Phase line			1 <i>∲</i> 2W	3¢3W, 1¢2W	3¢3W, 1¢2W	
١		Number of po	les		2	3	3	
١	Rated	operateional voltage(UL489)(VAC)	120-	-240	120-240-480	
1	Rated	operateional voltage(IEC	60947-	2)(VAC)	100-	-230	100-230-440	
	Refere	Rated current li ence ambient temp		e 40°C	5 10 15 20 25 30 40 50	5 10 15 20 25 30 40 50 60 70 75 80 90 100	5 10 15 20 25 30 40 50 60 70 75 80 90 100	
	Rate	d current sensitivi	ty l∆r	n (mA)	30 50	30 50 100/300/500 selectable	30 50 100/300/500 selectable	
1		Pickup current U	L105	3	l∆n ×	IΔn × 75%		
1	Max	operating time (s) at	5 l∆n	0.04	(*2)	0.04 (*2)	
1	Leak	age derection cka	sacte	ristics	Тур	e A	Type A	
1	Earth	n-leakage indicat	ion s	ystem	Mechanical button		Mechanical button	
1	±€	UL 489		480V	-	-	18(10) (*1)	
1	Rated short-circuit breaking capacity (kA)	CSA C22.2	AC	240V	35(25	5) (*1)	50(25) (*1)	
1	aci	No.5		120V	35(25	5) (*1)	50(25) (*1)	
	la sh			440V		-	25/13(15/8) (*1)	
	ed s	IEC 60947-2 EN 60947-2	AC	400V	-		25/13(15/8) (*1)	
	Rat	(lcu/lcs)	1	230V	35/18(25	5/13) (*1)	50/25(25/13) (*1)	
١	_ ₽			100V	35/18(25	5/13) (*1)	50/25(25/13) (*1)	
	5	Standard attached		ts	60A or more I Mounting scre	 15×14 (2P: 4pc M8×14 (2P: 4p	cs, 3P: 6pcs)	

M4x0.7x62 (NF100-3RU 2P, 3P: 2pcs) Insulation barrier: (2P: 2pcs, 3P: 4pcs Only NF100-HRU)


Operating Characteristics

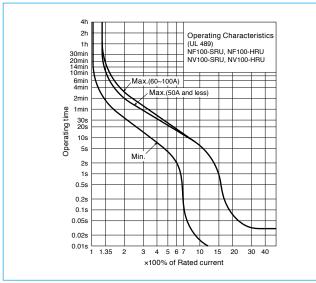


Ground fault Tripping Characteristics

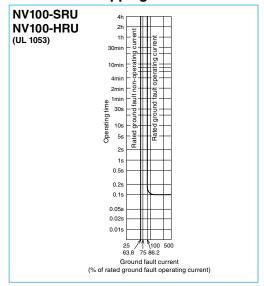

Internal Accessories

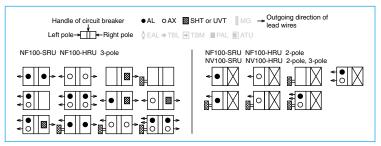


Temperature Characteristics

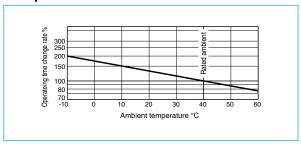

External Accessories

Acc	essories			Type name	Reference page	
		F	2P	F-05SRUL2	123	
Operating har	ndlo	F	3P	F-05SRUL	123	
Operating har	iule	V 2P		V-05SRUL2	125	
	V	3P	V-05SRUL	125		
		HL		HLF-05SRU		
Handle lock de	evice	ce III C		HLS-05SRU2	134	
		IIL-3	HL-S 3P HLS-05SRU3	HLS-05SRU3		
	Small	TC-S	2P	TCS-05SRU2		
Terminal cover	Siliali	10-3	3P	TCS-05SRU3	128	
leiiiiiai cover	Large	TO I		TCL-05SRU2	128	
		TC-L	3P	TCL-05SRU3		

Internal Wiring Diagram

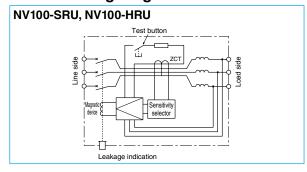


2-pole


(NF100-HRU)

3-pole

(NF100-HRU)

Front connection (solderless terminal)

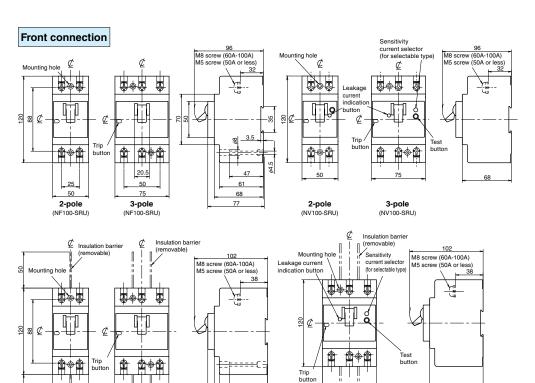

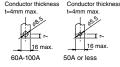

NF100-SRU · NF100-HRU NV100-SRU · NV100-HRU

Conductor drilling

for direct connection
Remark: The wires cannot be connected directly.
Tightening torque 26lb-in. (3N.m)
Compatible crimp terminals (50A or less)

Applicable w	ire range (*1)	Crimp termi	nal type (*2)
mm²	AWG(#) (60°C/75°C)	JST	NTM
2.5 to2.63	14	R2-5 2-M5	R2-5 R2-5M
2.63 to 6.64	12 to 10	R5.5-5 5.5-S5	R5.5-5 R5.5-5S R5.5-5N
6.64 to 10.52	8	R8-5	R8-5 R8-5S
10.52 to 16.78	6	R14-5	R14-5 R14-5S
16.78 to 26.66	4	22-S6	R22-5S
26.66 to 42.42	2, 1	38-S5	CB38-5S

JST: Japan Solderless Terminal Mig. Co.
NTM: Nichifu Co., Ltd.
Notes '1 14 AWG or lager to comply with UL standerds.
'2 When using with a wire connection, use the crimp terminal combination shown above.

Tightening torque 54lb-in. (6N.m) Compatible crimp terminals (60A-100A)

Odinputible crimp terminals (OUA 100A)										
Applicable	wire range	Crimp terminal type (*2)								
mm ²	AWG(#) (60°C/75°C)	JST	NTM							
2.5 to 2.63	14	R2-8	R2-8							
2.63 to 6.64	12 to 10	R5.5-8 5.5-S8	R5.5-8							
6.64 to 10.52	8	R8-8	R8-8							
10.52 to 16.78	6	R14-8	R14-8 R14-8S							
16.78 to 26.66	4	22-S8	R22-8S							
26.66 to 42.42	2	38-S8	R38-8S							
42.42 to 60.57	1/0	CB60-8 60-2BA	CB60-8							


JST: Japan Solderless Terminal Mfg. Co. NTM: Nichifu Co., Ltd.





67 74

(NV100-HRU)


66

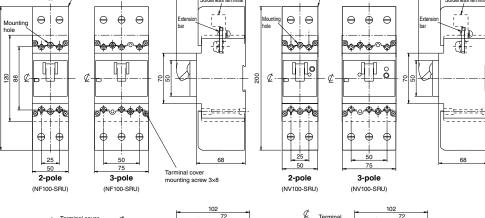

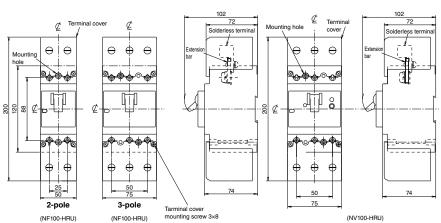

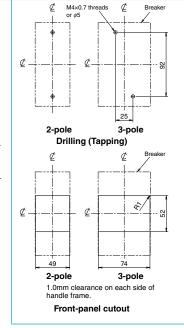

Size of screwdriver with bolting Please bolt with flat head screwdriver. The length of X:6mm-7mm The length of $Y\le 9.5$

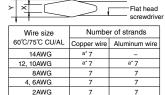

1, 1/0AWG 19 19 The tightening torque is different according to connected wire.

Refer to instruction manual for details. a:Solid wire is usable.

Remark: Periodical retightening prevents overheating by the setting of twisted strands or the stress of heating and cooling.


NF125-SVU


	Mode	I		N	NF125-SVU NF125			5-HVU		
	Rated curre Reference a temperatur	40 5 (70) 7	0 30 0 60 5 (80) 100	12	25	15 20 30 40 50 60 (70) 75 (80) (90) 100	125			
	Number of	pole	S	2	3	2	3	3	3	11
		Rated	voltage VAC	48	30	48	30	600Y/347V	600Y/347V	
€	UL 489		600Y/347V	-	-	-	-	18	18	
Rated short-circuit breaking capacity (kA)	CSA C22.2	AC	480V	3	0	3	0	50	50	$\ $
bac	No.5	AC	240V	5	0	5	0	100	100	
ဗြ			120V	-	-	-	-	-	-	11
ğ.		Rated ins	ulation voltage Ui V	69	90	69	90	690	690	
bre			690V	8.	/4	8/	4	10/5	10/5	
ij			500V	18	3/9	18	/9	25/13	25/13	
- cj.	IEC 60947-2 EN 60947-2		440V	30	/15	30,	/15	50/25	50/25	
hor	(lcu/lcs)	AC	415V	30	/15	30,	/15	50/25	50/25	
S D	, ,		400V	30	/15	30	/15	50/25	50/25	11
Rate			380V	30	/15	30,	/15	50/25	50/25	1
			230V	50	/25	50	25	100/50	100/50	
5	Standard attac (Front conn			Мо	unting	screv	v M4	4 (2P: 4pcs ×0.7×55 (2 2P: 2pcs, 3l	screws),	


	ı	Mode	el		NV12	5-SVU	NV12	5-HVU
	Rated (Refere tempe	nce	ambie	enť	15 20 30 (40) 50 60 75 100	125	15 20 30 (40) 50 60 75 100	125
	Numb	er of	poles	S	3	3	3	3
	Ph	ase l	ine		3φ3W 1φ2W	3φ3W 1φ2W	3φ3W 1φ2W	3φ3W 1φ2W
		UL	489		120-480	120-480	120-480	120-480
Rate	ed age VAC		6094		100-440	100-440	100-440	100-440
High-speed type	Rated cu	urren	t sens	sitivity	30 50 100/200/500 selectable	30 50 100/200/500 selectable	30 50 100/200/500 selectable	30 50 100/200/500 selectable
es-c	Pick-up	curre	ent UL	. 1053	75% of I∆n	75% of I∆n	75% of I∆n	75% of I∆n
ijH	Operating t	time (s	sec) wit	hin AT 5l∆n	0.04 (*1)	0.04 (*1)	0.04 (*1)	0.04 (*1)
Eart	h-leakage	indi	cation	n system	Mechanical button	Mechanical button	Mechanical button	Mechanical button
ng	UL 48	9		480V	30	30	50	50
reaki	CSA C2		AC	240V	50	50	100	100
(kA)	No.5			120V	50	50	100	100
hort-circuit b				440V	30/15	30/15	50/25	50/25
short	IEC 6094 EN 6094		AC	400V	30/15	30/15	50/25	50/25
Rated short-circuit breaking capacity (kA)	(lcu/lc		Α0	230V	50/25	50/25	100/50	100/50
Ra	,			100V	50/25	50/25	100/50	100/50
:	Standard (Front				Terminal screw M8x14 (2P: 4pcs, 3P: 6pcs) Mounting screw M4×0.7×55 (2 screws), Insulating barrier (4pcs)			

Note *1 0.1 for UL1053.


Operating Characteristics

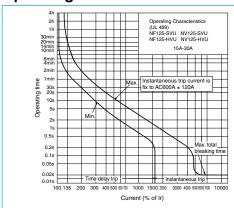

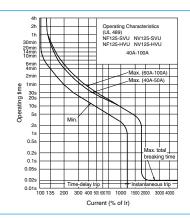


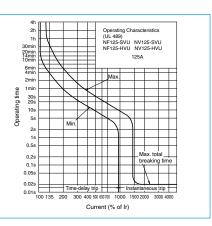


Earth Leakage Tripping Characteristics

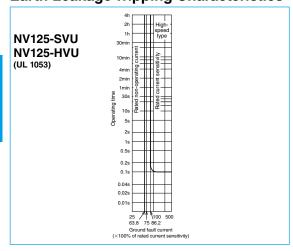


Internal Accessories

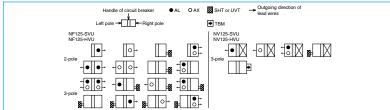

Temperature Compensation Curve Internal Wiring Diagram

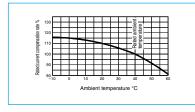


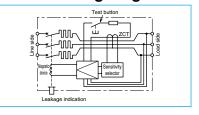

External Accessories

Accessories		Type name	Reference page	Accessories		Type name	Reference page	
	F	F-1SVUL	123	Terminal cover	Large	TC-L	TCL-1SVU3	128
Operating handle	V	V-1SVUL	125	Terminal cover	Large	I C-L	10L-13V03	
	С	C-1SVU	127					
Handle lock device	HL	HLF-05SVU	134					
Handle lock device	HI-S	HLS-05SVII	134					


NV125-SVU · NV125-HVU

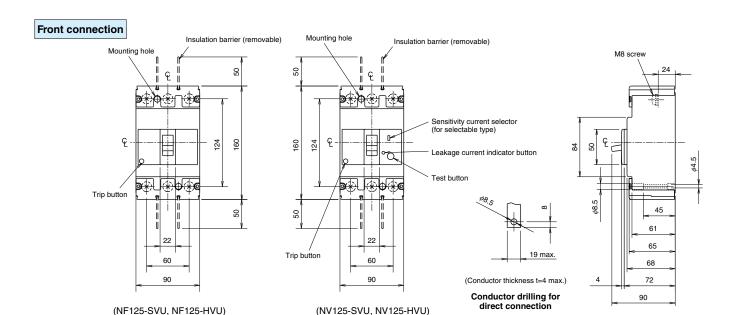



Compatible crimp terminals Tightening torque 54lb-in (6N·m)

Applicable	wire range	Crimp termi	nal type (*1)	
mm ²	AWG (#) (60°C/75°C)	JST	NTM	
2.5-2.63	14	R2-8	R2-8	
2.63-6.64	12-10	R5.5-8	R5.5-8	
6.64-10.52	8	R8-8	R8-8	
10.52-16.78	6	R14-8	R14-8	
10.32-10.76	· ·	1114-0	R14-8S	
16.78-26.66	4	R22-8	R22-8S	
26.66-42.42	2	38-S8	R38-8S	
42.42-60.57	1/0	60-2BA	CBCO O	
42.42-60.57	1/0	60-S8	CB60-8	

JST: Japan Solderless Terminal Mfg. Co.
NTM: Nichifu Co., Ltd.
Note *1 When using with a wire connection, use the crimp terminal combination shown above.

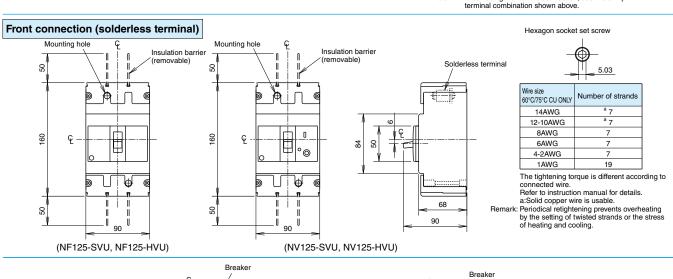

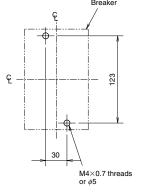

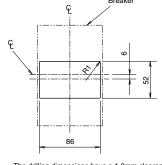

The drilling dimensions have a 1.0mm clearance on each side of breaker window frame.

Drilling (Tapping)

Front-panel cutout




NF250-HVU


	N	1odel		NF250)-CVU	NF250)-SVU	NF250)-HVU	
Rated current In (A) Reference ambient temperature 40°C			125 150 175 200 225	250	125 150 175 200 225	250	125 150 175 200 225	250		
	Numbe	er of p	ooles	3	3	3	3	3	3	
		Rated	voltage VAC	240	240	480	480	600Y/347V	600Y/347V	l
₹ ¥	UL 489		600Y/347V	-	-	-	-	18	18	lſ
<u>~</u>	CSA C22.2	AC	480V	-	-	35	35	50	50	
pac	No.5	AC	240V	35	35	65	65	100	100	I
g			120V	-	-	-	-	-	-	
ğ		Rated insu	ılation voltage Ui V	600	600	690	690	690	690	ıſ
Rated short-circuit breaking capacity			690V	-	-	8/4	8/4	10/5	10/5	lſ
ij			500V	10/8	10/8	25/13	25/13	36/18	36/18	1
Ģ	IEC 60947-2 EN 60947-2		440V	15/12	15/12	36/18	36/18	50/25	50/25	1
hort	(lcu/lcs)	AC	415V	25/19	25/19	36/18	36/18	50/25	50/25	1
s pe	, ,		400V	25/19	25/19	36/18	36/18	50/25	50/25	1
Rate			380V	25/19	25/19	36/18	36/18	50/25	50/25	
			230V	36/27	36/27	65/33	65/33	100/50	100/50	1
S	tandard (Front o		ed parts ction)	Terminal screw M8 (Bolt (Hex-socket)) ×16 (3P: 6pcs) Mounting screw M4×0.7×55 (2 screws), Insulating barrier (4pcs)						

Note	*1	0.1	for UI	1053

U		1	Иο	del		NV250	O-CVU	NV25	O-SVU	NV250)-HVU								
	R		nce	e am	In (A) bient 40°C	125 150 175 200 225	250	125 150 175 200 225	250	125 150 175 200 225	250								
,	1	lumb	er	of p	oles	3	3	3	3	3	3								
		DI-		- 10-	_	3 <i>∲</i> 3W	3ø3W	3¢3W	3ø3W	3ø3W	3¢3W								
		Pn	as	e lin	е	1 <i>∮</i> 2W	1 <i>∮</i> 2W	1 <i>∮</i> 2W	1 <i>∮</i> 2W	1∮2W	1¢2W								
	Ra	ted	ed U		39	120-240	120-240	120-480	120-480	120-480	120-480								
47V	VOI VA	tage .C	IEC 60947-2 EN 60947-2		100-440	100-440	100-440	100-440	100-440	100-440									
	High-speed type			curre tity I	nt ∆n mA				30 50 100/200/500 selectable										
5	gs-r	Pick-u	up current UL 1053			75% of I∆n	75% of I∆n	75% of I∆n	75% of I∆n	75% of I∆n	75% of I∆r								
	į	Operation	ng tir	ne s with	nin AT 5l∆n	0.04 (*1)	0.04 (*1)	0.04 (*1)	0.04 (*1)	0.04 (*1)	0.04 (*1)								
0	Ear	th-leaka	ge ir	ndicatio	n system	Mechanical button	Mechanical button	Mechanical button	Mechanical button	Mechanical button	Mechanical buttor								
5	(KA)	UL 48	II //80		480V	-	-	35	35	50	50								
18	pacity	CSA C2		AC	240V	35	35	65	65	100	100								
25	sing co	No.5			120V	35	35	65	65	100	100								
25	tbreak				440V	15/12	15/12	36/18	36/18	50/25	50/25								
25	Rated short-circuit breaking capacity (kA)	IEC 6094			400V	25/19	25/19	36/18	36/18	50/25	50/25								
25	short	EN 60947-2 (lcu/lcs)		AC	AC	AC	1 1	AC.	AC.	AC.	AC.	AC.	230V	36/27	36/27	65/33	65/33	100/50	100/50
50	Rated	(Iculica)			100V	36/27	36/27	65/33	65/33	100/50	100/50								
s)	Standard attached parts (Front connection)						lounting s	crew M4	lex-socke <0.7×55 arrier (4p	(2 screws									


Operating Characteristics

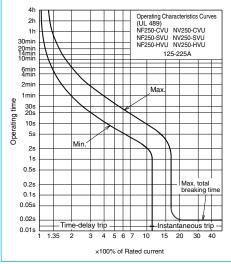

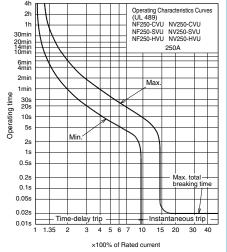


Earth Leakage Tripping Characteristics


Insulating barrier (4pcs)

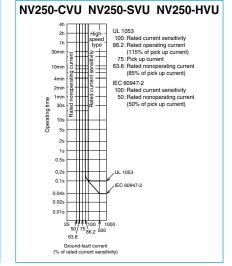


Internal Accessories

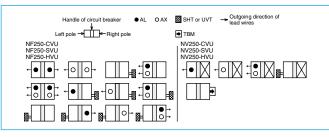

Temperature Compensation Curve Internal Wiring Diagram

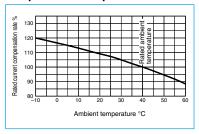

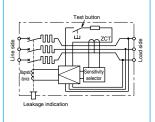

External Accessories

HL-S HLS-2SVU

External Acceptation								
Accessories		Type name	Reference page	Accessories		Type name	Reference page	
Operating handle	F	F-2SVUL	123	Terminal cover	Large	TCI	TCL-2SVU3	128
	V	V-2SVUL	125	reminal cover	Large	10-2	TCL-2SVU3L	120
	С	C-2SVU	127					
	ш	LILE DECVILI						

134


Handle lock device

Compatible crimp terminals


NV250-CVU · NV250-SVU · NV250-HVU

Tightening torque 90lb-in (10N.m)

Front connection

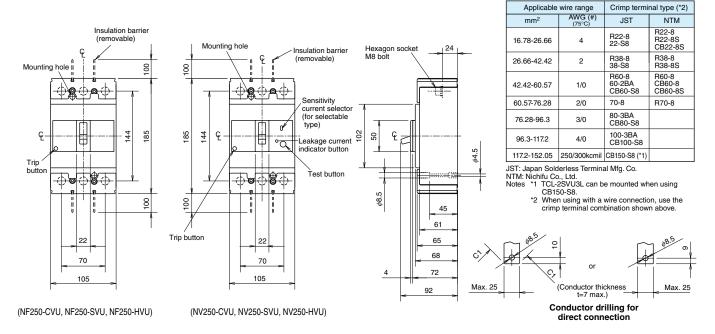

Front connection (solderless terminal)

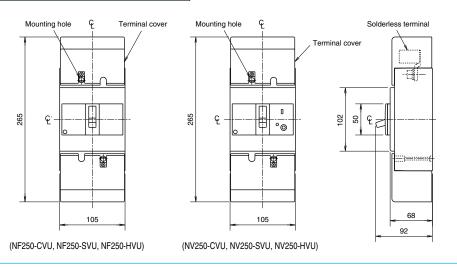




Wire size 75°C CU ONLY	Number of strands
4-2AWG	7
1-1/0AWG	19
3/0-4/0AWG	19
250-350kcmil	37


The tightening torque is different according to connected wire.

Refer to instruction manual for details.

Remark: Periodical retightening prevents overheating by the setting of twisted strands or the stress of heating and cooling.

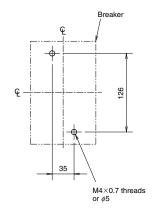

Drilling (Tapping)

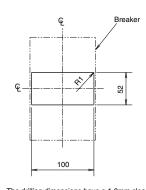

The drilling dimensions have a 1.0mm clearance on each side of breaker window frame.

on side of breaker window frame

Front-panel cutout

NF400-SWU NF400-HWU




NF400-SWU


Model				NF400-SWU	NF400-HWU		
	current In (A) nce ambient tem	nperature 40°	С	250 300 350 400	250 300 350 400		
Number of poles				3	3		
g capacities	UL 489	Rated volta	ge (VAC)	600Y/347	600Y/347		
	02 400	AC	600Y/347V	20	25		
	CSA C22.2 No.5		480V	35	65		
			240V	65	100		
Rated short-circuit breaking capacities (kA)	IEC 60947-2 EN 60947-2 (Icu/Ics)	Rated insulation voltage Ui (V)		690	690		
		AC	690V	10/10(5/5) (*1)	15/10		
			500V	30/30(25/25) (*1)	42/42		
			440V	42/42(36/36) (*1)	65/65		
			415V	45/45(36/36) (*1)	70/70		
			400V	45/45(36/36) (*1)	70/70		
			380V	50/50(42/42) (*1)	70/70		
			230V	85/85(65/65) (*1)	100/100		
Standard attached parts				Terminal screw: M12 bolt×35 (3-pole: 6pcs) Mounting screw: M6×60 (4screws) Insulating plate (1pce) Insulating barrier (4pcs) (Only for type with bar terminals)			

Note *1 In case of solderless terminal, interrupting capacity reduces: (/). *2 0.1 for UL1053.

Operating Characteristics

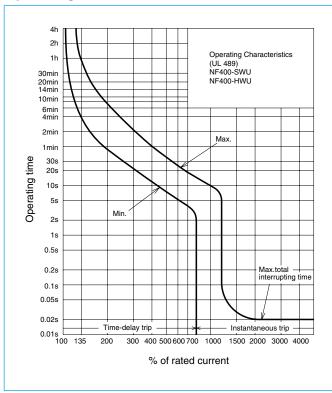


Internal Accessories

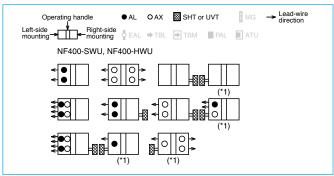

Note *1 Right-side mounting is standard of SHT and UVT. Specify separataly for left-side mounting.


Temperature Compensation Curve

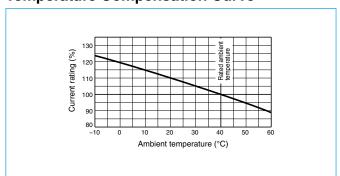


External Accessories

Accessories		Type name	Reference page	Accessories			Type name	Reference page
Operating handle	F	F-4SUL	123	Terminal cover	Large	TC-L	TCL-4SWU	128
	٧	V-4SUL	125					
	С	C-4SWU	127					
Handla lack davice	ш	LI 16/WIT	124	1				


Front connection (Solderless terminal)

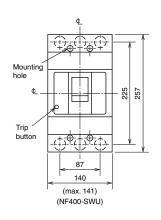

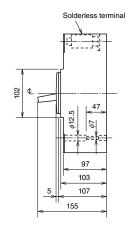

Remarks: 1. Do not remove solderless terminal in any case.
 When using the solderless terminals, conduct periodic inspections and tightening as the wires may wear down over use.

Hexagon socket set screw

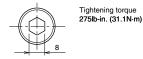


U	L	


Ampere ratings	Wire size	Number of strands
250A, 300A	250-350kcmil CU	37
250A	350kcmil AL	3/
350A, 400A	(2) 3/0AWG CU	19

0					
Amnara ratinga	Wire size (IEC 60228)				
Ampere ratings	Class 2	Class 5			
250A, 300A	70-185mm ²	95-185mm ²			
350A, 400A	150-240mm ²	150-185mm ²			


- 3. Use a wire size that can carry the rated current.
 4. When using IEC Class 5 (multi-core wire), pay attention to strand breakage and pinching, etc., while tightening.
 5. The NF400-HWU does not have a solderless terminal.

Front connection (Busbar terminal)

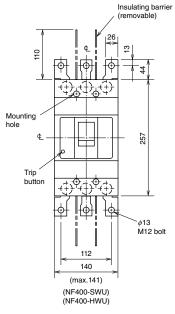


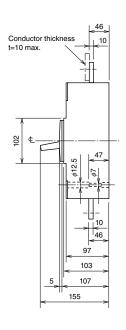

Remark: Do not remove busbar terminal in any case.

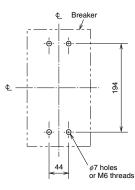


Drilling (Tapping)

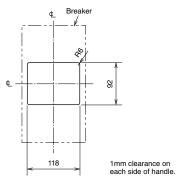

Front-panel cutout


arks: When mounted in steel or cast box cover must be insulated as shown. 58mm air gap to cover or 0.8mm fibre insulating plate extending 12.7mm out from each side of breaker.

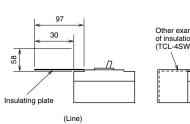




Model	Model			NF630-SWU	NF630-HWU
Rated current In (A) Reference ambient temperature 40°C			С	500 600 630	500 600 630
Numb	er of poles			3	3
₹		Rated volta	ge (VAC)	600Y/347	600Y/347
) SE	UL 489		600Y/347V	20	25
Citie	CSA C22.2 No.5	AC	480V	35	65
Rated short-circuit breaking capacities (kA)			240V	85	100
ng o		Rated insulation voltage Ui (V)		690	690
eaki			690V	10/10	15/10
t bre			500V	30/30	42/42
Icui	IEC 60947-2 EN 60947-2			440V	42/42
T-C	(lcu/lcs)	AC	415V	45/45	70/70
sho			400V	45/45	70/70
ted			380V	50/50	70/70
E E			230V	85/85	100/100
Standard attached parts				Terminal screw: M12 bolt×40 (3-pole: 12pcs) Mounting screw: M6×35 (4pcs) Insulating plate (1pce) Insulating barrier (500A,600A: 2pcs, 630A: 4pcs) (Only for type with bar terminals)	

Operating Characteristics

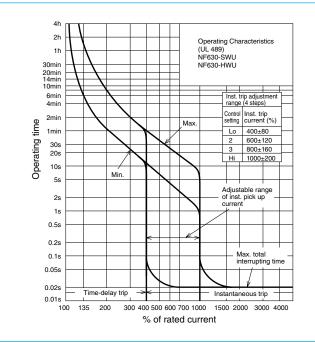


Internal Accessories

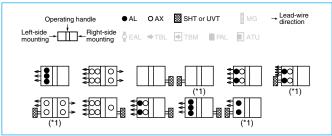

Note *1 Right-side mounting is standard of SHT and UVT. Specify separataly for left-side mounting.


Temperature Compensation Curve

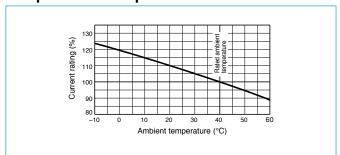


External Accessories

Accessories		Type name	Reference page	Accessories		Type name	Reference page	
Operating handle	F	F-6SUL	123	Torminal aguar	Lorgo	TC-L	TCL-6SWU	128
	V	V-6SUL	125	Terminal cover	Large	I C-L	TCL-65WU	128
Handle lock device	HL	HL-4SWU	134					

Front connection (Solderless terminal)

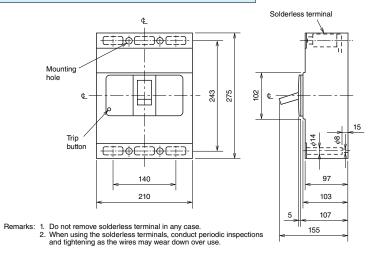

Hexagon socket set screw

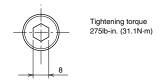


UL								
Ampere ratings	Wire size	Number of strands						
500A, 600A	(2) 250-350kcmil CU ONLY	37						

IEC


	Ampere ratings	Wire size (IEC 60228)				
		Class 2	Class 5			
	500A, 600A	(2) 95-185mm ²	(2) 120-185mm ²			

- 3. Use a wire size that can carry the rated current.
 4. When using IEC Class 5 (multi-core wire), pay attention to strand breakage and pinching, etc., while tightening.
 5. The 630A and NF630-HWU does not have a solderless terminal.

Front connection (Busbar terminal)

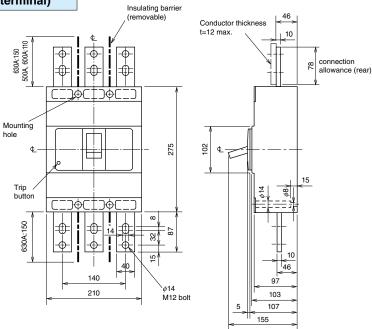

Remark: Do not remove busbar terminal in any case.

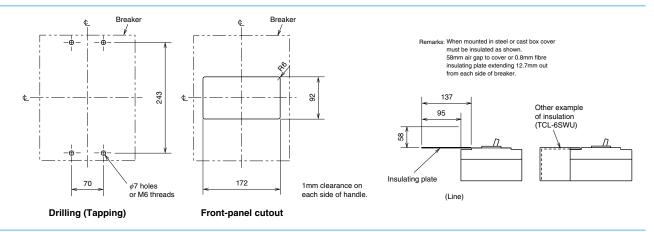

NF30-FAU NF50-FAU **NV30-FAU NV50-FAU**





NF30-FAU

NV30-FAU

Earth Leakage Tripping Characteristics

NV30-FAU NV50-FAU (UL 1053)	4h 2h 1h 30min 10min 4min 2min 2 1min	ourent setting current setting current	
	au in in in in in in in in in in in in in	Too Bated ground fault operating current 75: Rated ground fault perating current 75: Rated ground fault pickup current 76: Rated ground fault pickup current	
		Ground fault current (% of rated ground fault operating current)	


Model				NF30)-FAU	NF50	NF50-FAU	
Rated current In (A) Reference ambient temperature 40°C				5 10 15	5 10 15 20 30 5 10 15 20 30 40			
Numbe	er of poles			2	3	2	3	
uit s (kA)	UL 1077	AC	240V	2.5 (*1)				
short-circuit capacities (k	CSA 22.2 No.235	DC	60V	1.5				
d sh	IEC 60947-2	Rated insulation voltage Ui (V)		250				
Rated breaking	EN 60947-2	AC	230V	2.5/1 (*2)				
bre	(lcu/lcs)	DC	60V	1.5/1				
Standard attached parts			IEC35 rail mounting claws			3		


Notes *1 Rated short-circuit breaking capacity of rated current 5A is 1.5kA.
*2 Rated short-circuit breaking capacity of rated current 5A is 1.5/1kA.

Model				NV30-FAU NV50-FAU)-FAU
	Rated current In (A) Reference ambient temperature 40°C			5 10 15	5 10 15 20 30 5 10 15 20 30 4		30 40 50
Numb	er of poles			2	3	2	3
Phase line				1φ2W	3φ3W 1φ2W	1 <i>ϕ</i> 2W	3φ3W 1φ2W
Rated	current sensitiv	ity (mA)			3	0	
Pick-u	p current sensi	tivity UL 10	53	75% ofl∆n			
Opera	ting time (sec)	within at 51	Δn	0.04 (at 5l∆n)			
Earth	leakage protect	tion charac	teristic	Type AC			
Earth	leakage indicat	ion system		Mechanical type (button)			
short-circuit capacities (kA)	(Y) UL 1077 CSA 22.2 AC 240V No.235			2.5 (*1)			
Rated short-circuit breaking capacities (k	For Be to the part of the part		230V	2.5/1 (*2)			
Standa	ard attached pa	ırts		IEC35 rail mounting claws			3


Notes *1 Rated short-circuit breaking capacity of rated current 5A is 1.5kA.
*2 Rated short-circuit breaking capacity of rated current 5A is 1.5/1kA.

Operating Characteristics

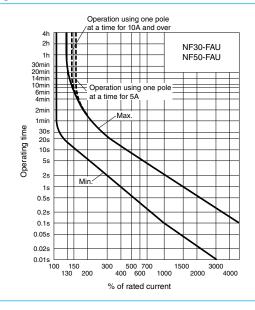


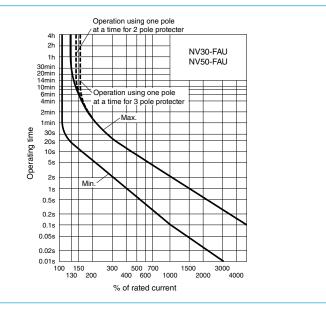

Internal Accessories

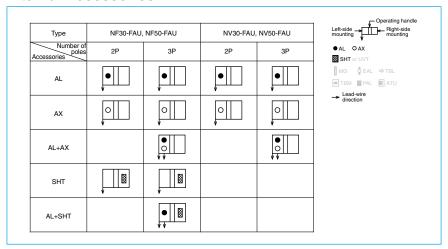

Temperature Compensation Curve

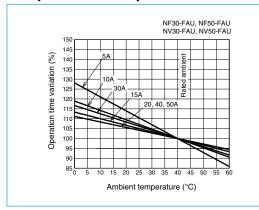


External Accessories

Accessories			Type name	Reference page	
Terminal cover	Small TC-S		TCS-05FA2		
	Small	10-5	TCS-05FA3	128	
	Rear RTC	DTC	RTC-05FA2	120	
		NIC	RTC-05FA3		
Lock cover	LC		LC05FA	135	
Handle lock device	HL		HL-05FA	134	

Note *1 It is recognition of UL (cURus), CSA. It is not recognition of CCC, TÜV, UKCA.

Outline Drawing

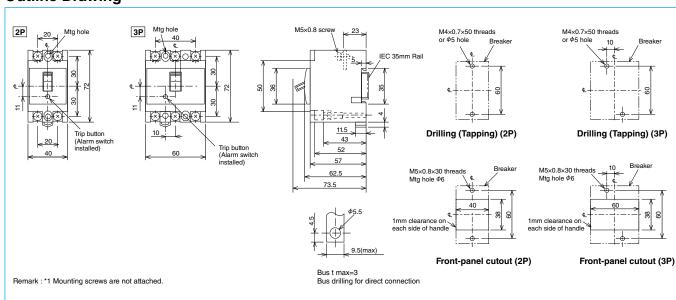

UL Certified Circuit Breakers

NF50-FHU NF100-FHU NV50-FHU NV100-FHU






NF100-FHU

NV100-FHU


Model				NF50-FHU		NF100-FHU
	Rated current In (A) Reference ambient temperature 40°C				0 30 40 50	60 75 100
Numbe	er of poles			2	3	3
short-circuit capacities (kA)	UL 1077 CSA 22.2 No.235	AC	240V	ţ	5	5
d sh	IEC 60947-2	Rated insulation voltage Ui (V)		500		
Rated breaking	EN 60947-2 (lcu/lcs)	AC	400V	1.5/1		-
pre		AC	230V	5/2		5/2
Standa	Standard attached parts			IEC35 rail mounting claws		

Model				NV50	-FHU	NV100-FHU	
	current In (A) ence ambient te	mperature	40°C	5 10 15 20 30 40 50 60 75 100			
Numb	er of poles			2	3	3	
Phase	line			1 <i>∲</i> 2W	3φ3W 1φ2W 1φ3W	3φ3W 1φ2W 1φ3W	
Rated	current sensitiv	rity (mA)		30 50 100			
Pick-u	p current sensi	tivity UL 10	53		75%	ofl∆n	
Opera	ting time (sec)	within at 5I	Δn		0.04 (a	t 5l∆n)	
Earth	leakage protect	ion charac	teristic	Type AC			
Earth	leakage indicat	on system		Mechanical type (button)			
short-circuit capacities (kA)	UL 1077 CSA 22.2 No.235	AC	240V	5			
Rated short-circuit breaking capacities (k	IEC 60947-2 EN 60947-2 (Icu/Ics)	AC	230V	5/2			
Standa	ard attached pa	rts		IEC35 rail mounting claws			

Operating Characteristics

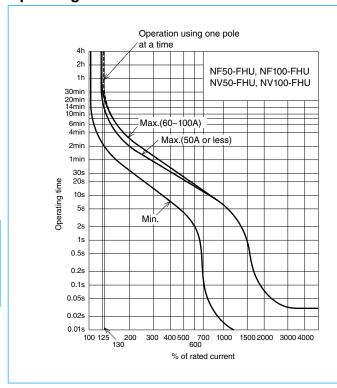


Earth Leakage Tripping Characteristics

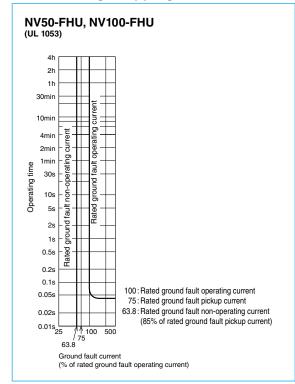

MG → Lead-wire direction

Internal Accessories

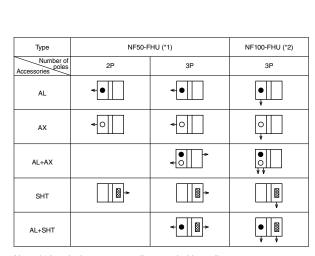

Left-sic mounti	Right-side mounting	ÇEAL ⇒TBL →TBM ■	PAL ATU
Туре	NV50-F	HU (*1)	NV100-FHU (*2)
Number of poles Accessories	2P	3P	3P
AL	<-	< ●	•
AX	+	-	0
AL+AX		• O	•


Operating handle

● AL O AX SHT or UVT

- Note *1 Lead wires are normally extended laterally.

 Grooves are provided standard on the face of the breaker, allowing the extension of the lead wires along them.
 - *2 Lead wires are usually extended load side.

Temperature Characteristic Curve

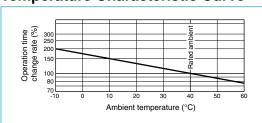


External Accessories

Accessor	ies		Type name	Reference page	
			TCS-05FH2	128	
	Small	TC-S	TCS-05FH3		
Terminal cover			TCS-1FH3		
Terminal cover	Large	TO 1	TCL-05FH2	120	
		TC-L (*1)	TCL-05FH3		
			TCL-1FH3		
Lock cover	LC	(*1)	LC03CS	135	
Handle lock device	HL	(*1)	HL-05FH	134	

Note *1 Not acquire UL (cURus), CCC, TÜV, UKCA.

Outline Drawing

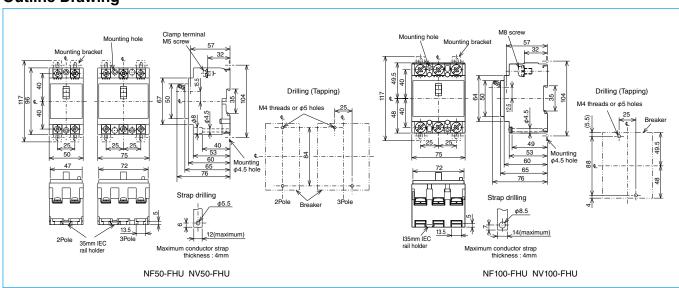

NF250-SEV with MDU NF250-HEV with MDU






NF250-SEV with MDU NF250-SEV with MDU (Breaker mounting)


(External mounting)

	Model			NF250-SE\	with MDU	NF250-HE	V with MDU						
Rated current In (A) Reference ambient temperature 40°C			Adjustable 125-250 (12.5A step)		Adjustable 125-250 (12.5A step)								
Number of poles			3	4	3	4							
Rated insulation voltage Ui (V)			Ji (V)	69	90	69	90						
7	IEC 60947-2 (Icu/lcs)	A(:	690V	8	/8	10)/8						
E E			500V	18	/18	30/23							
Rated short-circuit breaking capacity (kA)									440V	36	/36	50	/50
			415V	36/36		70	/70						
s bei						400V	36	/36	75	/75			
Rat			380V		36/36		75/75						
امًا			230V	85	/85	100	/100						
	Standard attache (Front connect		ts	Mounting screw M4 × 0.7 × 55 (3P: 2psc, 4P: 4pcs) Insulation barrier (3P: 4pcs, 4P: 6pcs)									
		Extern	al mounting	MDU, Mounting	plate, Mounting p	olate screw, MDU	mounting screw						
М	DU accessories	Break	er mounting	MDU, Connection cable (for breaker mounting)									
MDU accessories			Panel ounting	MDU, Panel mounting bracket, Panel mounting screw, Connection cable (for panel mounting)									


Operating Characteristics

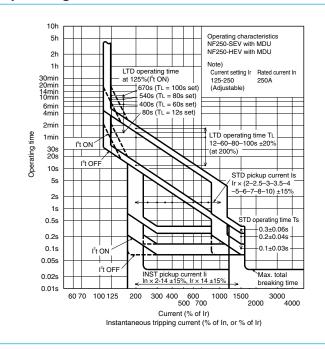

Current Reducing Curve

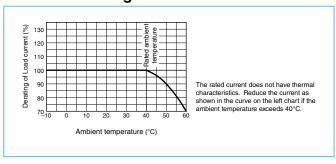


Internal Accessories

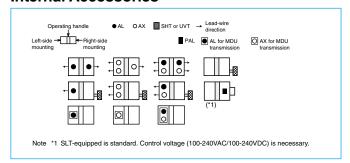

External Accessories

Accessories Type nam		Type name	Reference page	page Accessories			Type name	Reference page	
Onevetine bondle (*1)	F	F-2SV	123	Maak	anical interlock MI		3P	MI-05SV3	400
Operating handle (*1)	V	V-2SV	125	Mech	anicai interiock	meriock Wil		MI-2SV4	136
	LC	LC-05SV	135		Small	TC-S	3P	TCS-2SV3 (*4)	
Llondle leek desisee	HL (*2)	HLF-05SV	134		Siliali	10-3	4P	TCS-2SV4]
Handle lock device	nL (2)	HLN-05SV			Large	TC-L	3P	TCL-2SV3 (*4)	
	HL-S (*1)	HLS-2SV		l				TCL-2SV3L (*4)	
Notes *1 Available only	y for the MDU	canel mounting type.		Terminal			4P	TCL-2SV4	128
		lock and HLN types for	ON lock.	cover	Olyalatasa	TT0	3P	TTC-2SV3 (*4)	
*3 Specify the w			cify the model		Skeleton	TTC	4P	TTC-2SV4	
	*4 In the case of the MDU breaker mounting type, specify the model name with MP at the end.					втс	3P	BTC-2SV3 (*4)]
			Rear	ВІС	4P	BTC-2SV4			
				Electrical operation device (*1)				(*3)	140

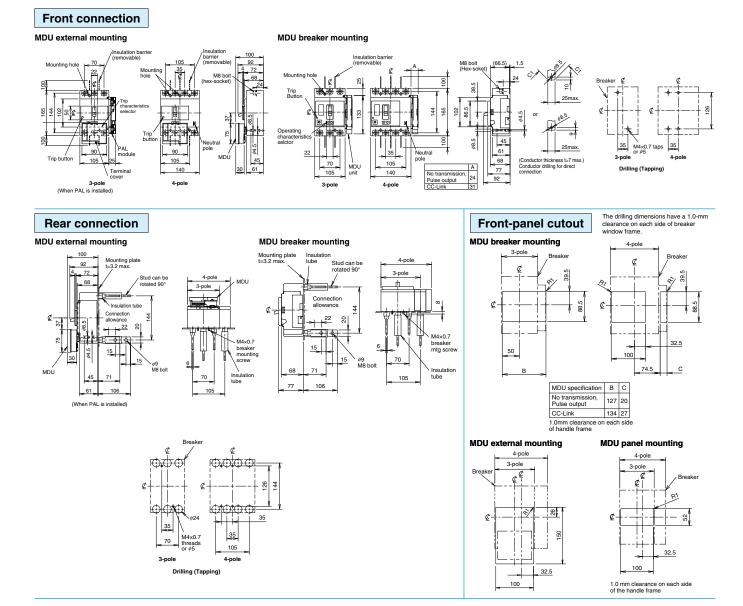

NF400-SEW with MDU NF400-HEW with MDU






NF400-SEW with MDU (Breaker mounting)


NF400-SEW with MDU (External mounting)

	Model			NF400-SEV	V with MDU	NF400-HEV	V with MDU		
Refe	Rated current Ir erence ambient temp		re 40°C	Adj	ustable 200 225	250 300 350 4	100		
	Number of poles			3	4	3	4		
R	ated operational volt	age l	Je V	69	90	69	90		
б			690V	10.	10/10		/10		
iğ		AC	500V	30.	/30	50	/50		
Pre			440V	42	/42	65	/65		
y (K	IEC 60947-2		415V	50.	/50	70/70			
acit	(Icu/Ics)		400V	50.	/50	70/70			
short-circuit breaking capacity (kA)			380V	50.	50/50		70		
Rated :			230V	85.	85/85		/100		
Ba			200V	85	/85	100/100			
	dard attached parts ront connection)	В	reaker	Ir	Mounting screw sulation barrier (3	M6 × 60 (4pcs) 3P: 4pcs, 4P: 6pc	s)		
		E	ternal	MDU	I, Mounting plate,	Mounting plate s	crew,		
		mo	ounting	Co	nnection cable, M	IDU mounting scr	rew		
l N	IDU accessories	Break	er mounting	MDU,	Connection cable	e (for breaker mo	unting)		
			Panel ounting		MDU, Panel mounting bracket, Panel mounting screw, Connection cable (for panel mounting)				
			· · · · · · · · · · · · · · · · · · ·		Connection cable (for parter mounting)				

Operating Characteristics

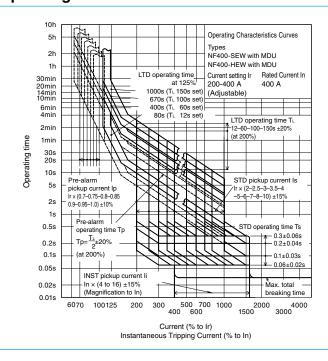


Internal Accessories

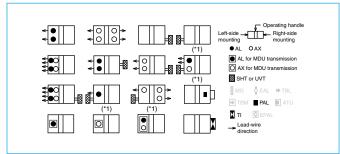

Note *1 Right side mounting is standard of SHT and UVT. Specify separately for left side mounting.

Current Reducing Curve

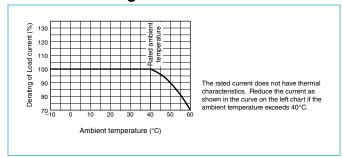


External Accessories


						_
Accessorie			Туре	name	Reference	
Accessorie	3		Breaker mounting	Breaker mounting Panel mounting		
One realing handle	F		-	F-4S	123	
Operating handle	V		-	V-4S	125	١.
Handle lock device	HL		HL-4SW	HL-4SW	134	cover
natitule lock device	HL-S		-	HLS-4SW	134	
Mechanical interlock	мі	3P	MI-4SW3	MI-4SW3	136	ايّا
iviechanical interiock	IVII	4P	MI-4SW4	MI-4SW4	130	Terminal
Auxiliary handle HT		HT-4SW	HT-4SW	135]_	


Notes *1 For NF400SEW with MDU.

- *2 Specify the operation method and voltage. Order in combination with the
- *3 This is for NF400-SEW with MDU. For rear terminal cover of NF400-HEW with

		Acces	ssories		Type n	ame	Reference	
		Acces	5501165		Breaker mounting	Panel mounting	page	
	Lowe	TC-L	3P	-	TCL-4SW3 (*1)			
	_	Large	I I C-L	4P	-	TCL-4SW4 (*1)		
	Skeleton	TTC	3P	TTC-4SW3-MDUB	TTC-4SW3			
		110	4P	TTC-4SW4-MDUB	TTC-4SW4	128		
	1.2			3P	BTC-4SW3 (*1)	DTC 4CM(0 (*0)	128	
	Terminal	Deer	втс	35	Only line side	BTC-4SW3 (*3)		
	_	Rear	ВІС	4P	BTC-4SW4	BTC-4SW4		
	1			4P	Only line side	B1C-45W4		
Ì	Electrical operation device		NFM	3P		(*0)	440	
			INFIN	4P	_	(*2)	140	

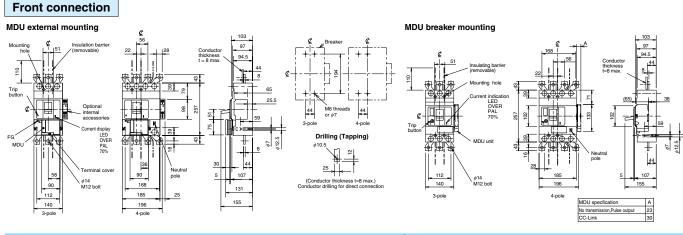


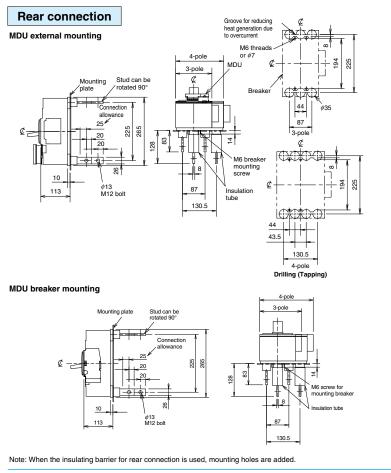

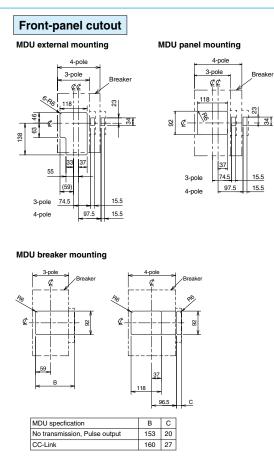

NF800-SEW with MDU NF800-HEW with MDU



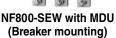





NF800-SEW with MDU (External mounting)

				NEODO OFI	MDII	NEODO LIEV	MDII	NESSO OF		NECOC LIE	MDII
	Model			NF800-SEV	V with MDU	NF800-HEV	V with MDU	NF800-SEV	V with MDU	NF800-HEV	V with MDU
l	Rated current Ir			Adjustable				Adjustable			
Refe	Reference ambient temperature 40°C			300 350 400 500 600 630			400	400 450 500 600 700 800			
	Number of poles			3	4	3	4	3	4	3	4
F	ated operational vol	tage	Ue V	69	90	69	90	69	90	69	90
g			690V	10/	/10	15/	15	10.	/10	15	/15
short-circuit breaking capacity (kA)			500V	30/30		50/	/50	30.	/30	50.	/50
	IEC 60947-2 (Icu/Ics)		440V	42/	/42	65/	65	42.	/42	65.	65
		AC	415V	50/	/50	70/	70	50/50		70/70	
			400V	50/50		70/70		50/50		70/70	
			380V	50/50		70/	70	50.	/50	70.	70
Rated			230V	85/85		100/	100/100		/85	100	/100
Re			200V	85/	/85	100/	/100	85	/85	100	/100
	dard attached parts int connection) (*1)	Br	eaker	Mounting screw M6 $ imes$ 35 (4pcs) Insulation barrier (3P: 2pcs, 4P: 3pcs)							
			ternal ounting	MDU, Mounting plate, Mounting plate screw, Connection cable, MDU mounting screw							
l N	MDU accessories		eaker ounting	MDU, Breaker mounting plate, Mounting screw for breaker mounting plate, Connection cable (for breaker mounting), MDU Mounting screw							
			anel ounting	С	MDU, Panel mounting bracket, Panel mounting nut, Connection cable (for panel mounting), MDU Mounting screw						


Note *1 4-pole models are provided with auxiliary handle.

Operating Characteristics

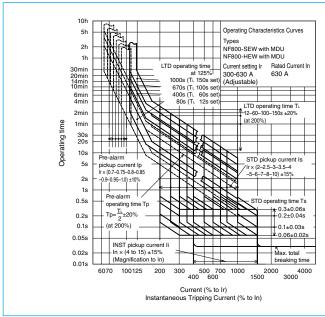

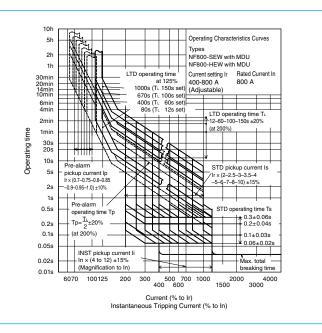


Internal Accessories

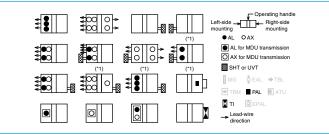

Note *1 Right side mounting is standard of SHT and UVT. Specify separately for left side mounting.

Current Reducing Curve

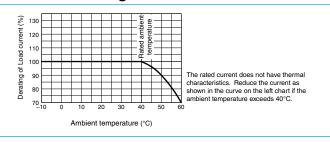


External Accessories


A			Туре	name	Reference	
Accessori	es		Breaker mounting	Panel mounting	page	
Onevetine bandle	F		- F-8S 12			
Operating handle	V		- V-8S		125	l.
Handle lock device	HL		HL-4SW	HL-4SW	134	over 1
nandle lock device	HL-S		-	HLS-8SW	134	1
Mechanical interlock	МІ	3P MI-8SW3 MI-8SW3		MI-8SW3	136	<u>.</u>
Mechanical Interiock	IVII	4P	MI-8SW4 MI-8SW4		136	Termina
Auxiliary handle HT			HT-4SW HT-4SW		135	
Note *1 Consideration			ad and valence Ords	u in acceleination with	Alea	1


ote	*1	Specify the operation method and voltage. Order in combination with the

i Specily	the operation	memod and	voitage.	Order in d	combination v	nun ine
breaker	unit.					


A 0000	norion		Type n	Reference		
Acces	sories		Breaker mounting	Panel mounting	page	
Lorgo	TCI	3P	-	TCL-8SW3		
Large	IO-L	4P	-	TCL-8SW4		
Skeleton Rear	ттс	3P	TTC-8SW3-MDUB	TTC-8SW3		
		4P	TTC-8SW4-MDUB	TTC-8SW4	128	
	DTO	ΔD	BTC-8SW3	DTC 0CM0	128	
Deer		35	Only line side	B1C-85W3		
near	ВІС	40	BTC-8SW4	DTC OCWA		
		46	Only line side	B1C-03W4		
ectrical operation	NEM	3P		(*1)	140	
vice .	INFIVI	4P] -	(1)	140	
,	Large Skeleton Rear ctrical operation	Skeleton TTC Rear BTC ctrical operation NEM	Large TC-L 3P 4P 4P 3P 4P 4P 3P 4P 4P 4P 3P 4P 3P	Breaker mounting	Breaker mounting	

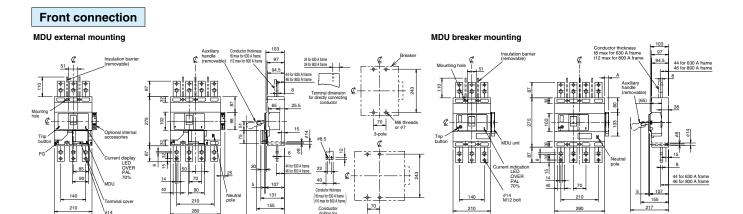

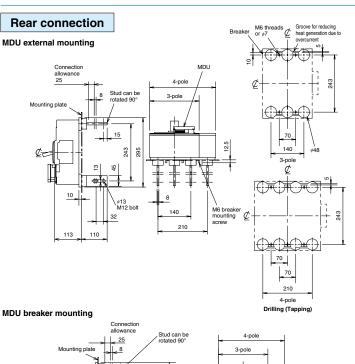


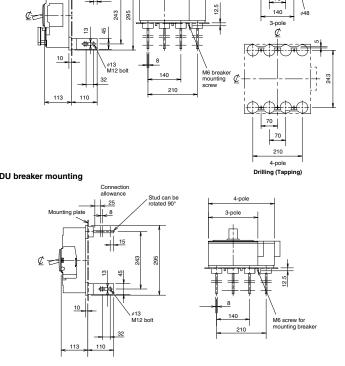

Note: When the insulating barrier for rear connection is used, mounting holes are added.

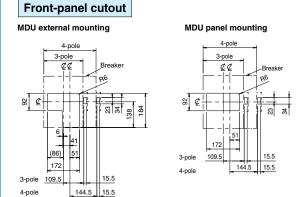


3-pole

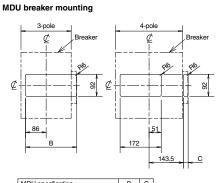


MDU specfication	В	С
No transmission, Pulse output	215	20
CC-Link	222	27



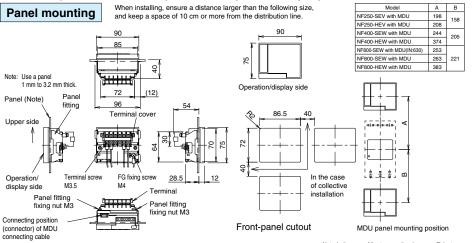

Note: In the case of front connection, keep a sufficient distance from the connecting wires and insulating barrier.


Terminal arrangement Secure the wires with cable clamps, etc

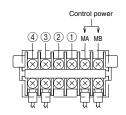


MDU model	Spec.	1	2	3	4
MDU-BN	No transmission	_	_	_	
MDU-BP	Pulse output	_	_	Cb	Ca

(Tightening torque 1.2±0.3N·m)

MDU-BC (CC-Link), MDU-BM (MODBUS)

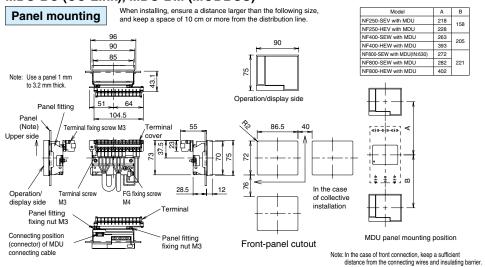




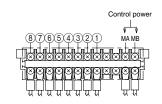


MDU model	Spec.	1	2	3	4	(5)	6	7	8
MDU-BC	CC-Link	SLD	DG	DB	DA	SLD	DG	DB	DA
MDU-BM	MODBUS	SLD	485°	485 ⁻	Ter	SLD	485°	485 ⁻	Ter

(Tightening torque 0.6±0.1N·m)

Breaker mounting

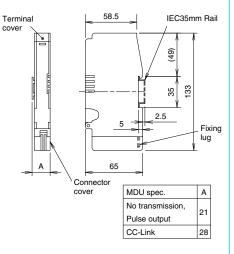


Terminal arrangement

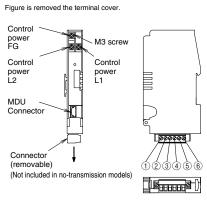

MDU spec.	1	2	3	4	(5)	6			
No transmission	_	-	-	-	_	_			
Pulse output	-	-	-	-	Cb	Ca			
CC-Link	_	SLD	_	DG	DB	DA			
Tightening torque Line side 0.6±0.1N·m									

MDU terminal arrangement

In the figure below the terminal cover is removed. Secure the wires with cable clamps, etc.

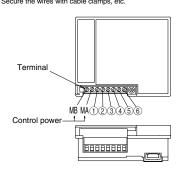

Model	Spec.	1	2	3	4	(5)	6
MDU-BN	No transmission	_	FG	_	_	_	_
MDU-BP	Pulse output	_	FG	_	_	Cb	Ca
MDU-BC	CC-Link	-	FG	SLD	DG	DB	DA
MDU-BM	MODBUS	_	FG	SLD	485÷	485-	Ter

(Tightening torque 0.55±0.05N·m)


NF63-HDV




NF63-HDV


N	Model			NF63-HDV		
Rated o	current In(A)			15 20 30 40 50	15 20 30 40 50	
Reference ambie	ent temperature	40°C		10 20 00 10 00	10 20 00 10 00	
Numb	er of poles			2	3	
Rated insula	tion voltage Ui(V)		600	690	
Rated short-circuit	IEC 60947-2	DC -	400V	10/5	-	
breaking capacity(kA)	(lcu/lcs)		600V	-	5/5	
	attached parts connection)			Terminal screw: M5x14 (2P: 4pcs, 3P: 6pcs) Mounting screw: M4x0.7x55(2P and 3P: 2pcs) Insulation barrier: (2P: 1pcs, 3P: 2pcs)		

Operating Characteristics

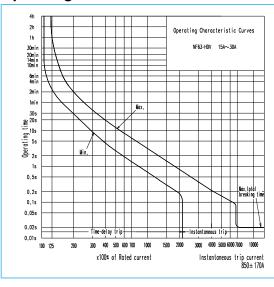


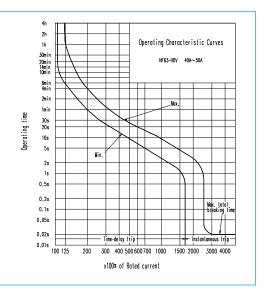

Temperature Compensation Curve

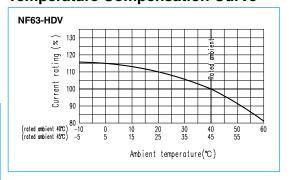

Internal Accessories

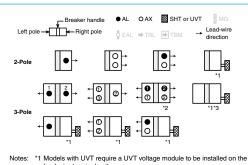

(no such voltage module is required for SHT).

'2 Two AX can be installed on the left pole instead of AL.

'3 SHT and UVT (excluding the reset type UVT) for left pole installation can be produced if specified.

External Accessories

NF63-HDV

Access	Accessories			Reference page	
	_	2P	F-05SV2	123	
Operating handle	「	3P	F-05SV	123	
	V	2P	V-05SV2	125	١,
	'	3P	V-05SV] 125	
Lock cover	LC		LC-05SV	135	-
	HL(*1)		HLF-05SV		
Handle lock device	FIL(1)		HLN-05SV	134	ļ
device	HL-S		HLS-05SV		ľ


*1 HLF types are used for OFF lock and HL types for ON lock.

e	Accessories				Type name	page		
,	Small		TC-S	2P	TCS-05SV2			
•		Smail	10-5	3P	TCS-05SV3			
5	L			2P	TCL-05SV2			
,	cover	Large	TC-L		TCL-05SV2L	1		
5		Large	I I C-L	3P	TCL-05SV3	128		
	Ferminal			J.	TCL-05SV3L	120		
1	en			2P	BTC-05SV2			
	_	Rear	втс	зР	BTC-05SV3			
N				35	BTC-2SV3			
		Plug-in	PTC	2P	PTC-05SV2			
	ΙE	C35mm rail mour	nting ada	pters	DIN-05SV	143		

NF63-HDV 2P


ctor thickness t=4 max.)

Conductor drilling for direct connection

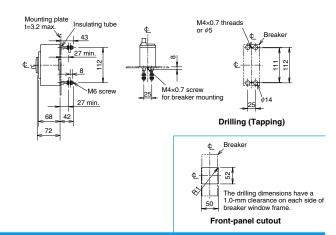

Rear connection



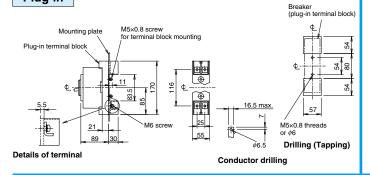

NF63-HDV 3P

Trip button





Applicable wire size for direct wire connection: \$\phi 1.6\$ to 22mm² (for M5x0.8 screw)


Insulating barrier (removable)

M5x0.8 screw

M4x0.7 th or \$\phi 5\$

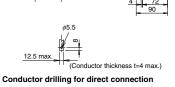

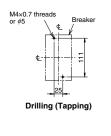

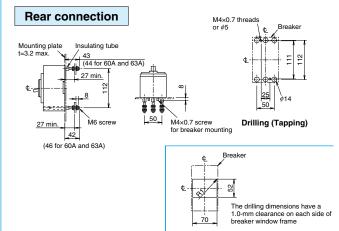

Front-panel cutout


NF125-HDVA NF250-HDVA




NF250-HDVA

	Model			NF125-HDVA	NF250-HDVA			
Rated	d current In(A))		125	125 150 175	250		
Reference am	Reference ambient temperature 40°C				200 225	230		
Nun	nber of poles			4				
Rated insulation voltage Ui(V)				1000				
Rated short-circuit breaking capacity(kA)	IEC 60947-2 (Icu/Ics)	DC	1000V	10/5				
Standard attached parts (front connection)				Terminal screw: M8 bolt ×16 (4pcs) Mounting screw: M4×0.7×55(4pcs) Insulation barrier: (6pcs)				


Operating Characteristics

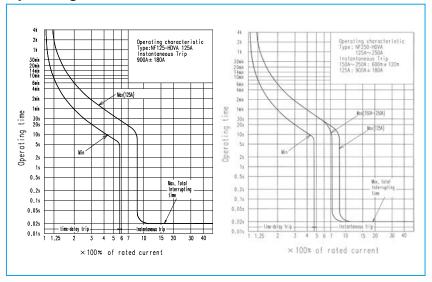

Temperature Compensation Curve

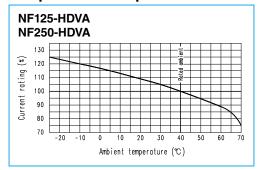

Internal Accessories

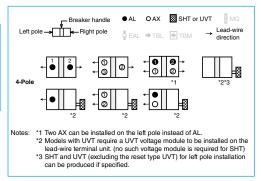

HLN-05SV

HLS-2SV

External Accessories

NE125-HDVA/NE250-HDVA

NF 125-HDVA/NF2	OU-HDVA								
Accessorie	es	Type name	Reference	Accessories		Type name	Reference		
		* *	page					* *	page
Operating bandle	F	F-2SV	123	Terminal cover	Large	TC-L	4P	TCL-2SV4	128
Operating handle	V	V-2SV	125	Note *1 HLF types are used for OFF lock and HLN types fo					for ON lock.
Lock cover	LC	LC-05SV	135]				,,	
	HL(*1)	HLF-05SV							
Handle lock device	mL(I)	HI NLOSCV	12/						


134

Handle lock device


5 Characteristics and Dimensions


NF125-HDVA/NF250-HDVA 4P

Front connection

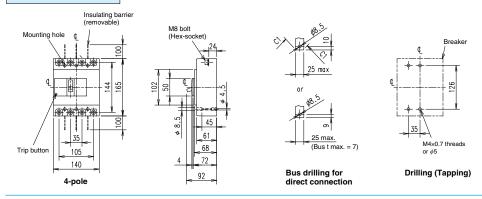




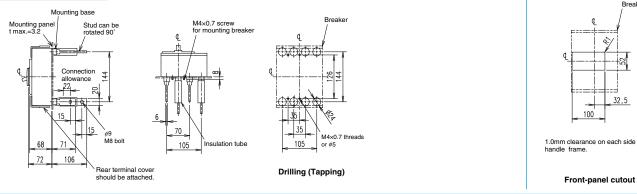

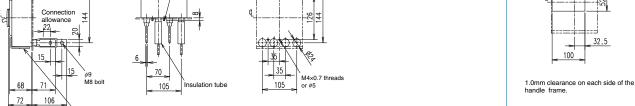



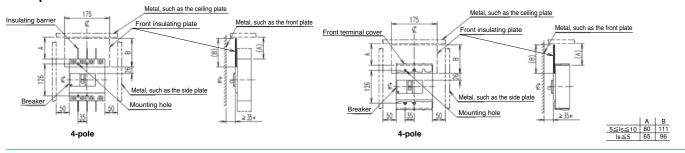

DC High-Voltage Circuit Breakers


NF400-HDW NF800-HDW




Mo	del			NF400)-HDW	NF800-HDW		
Rated current In(A) Reference ambient temperature 40°C				250 300 350 400 50		500 600 63	00 600 630 700 800	
Number	of poles			3	4	3	4	
Rated insulation	Rated insulation voltage Ui(V)				1000	800	1000	
Rated short-circuit	IEC 60947-2 (lcu/lcs)	DC	1000V	-	10/5	-	10/5	
breaking capacity(kA)			750V	10/10	10/10	10/10	10/10	
Standard attached parts	Front connection				v: M6×72(4pcs) 3P: 4pcs, 4P: 6pcs)	Mounting screw: M6×40(4pcs) Insulation barrier: (3P: 2pcs, 4P: 3pcs)		
	Rear co	nnec	tion	Mounting screv	v: M6×72(4pcs)	Mounting screw: M6×40(4pcs)		

Note *1 An auxiliary handle is included with the 4-pole model of the NF800-HDW.


Operating Characteristics

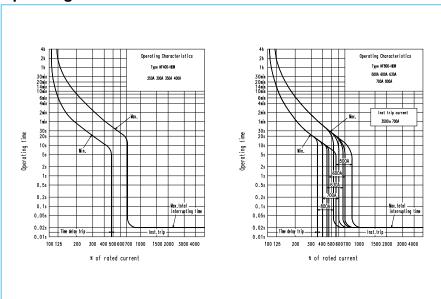

Temperature Compensation Curve

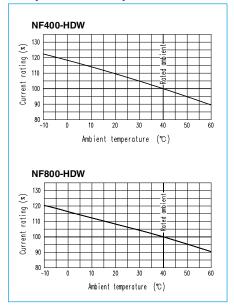

Internal Accessories

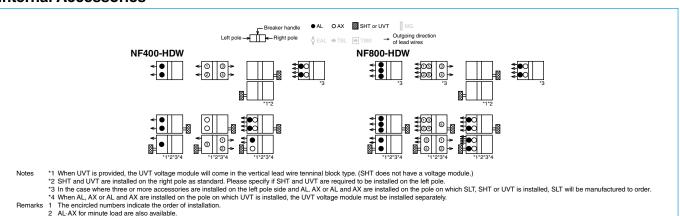


External Accessories


NF400-HDW


	Accessories	Type name	Reference page		
05	erating handle	F		F-4S	123
Op	erating nanule	V		V-4S	125
_	Laura	TC-L	3P	TCL-4SW3	128
) Ye	Earge	I I C-L	4P	TCL-4SW4	
o m	Oleslatas	ттс	3P	TTC-4SW3	
i	Skeleton	1110	4P	TTC-4SW4	128
Terminal cover	Rear	втс	3P	BTC-4HDW3	
-	Rear	ВІС	4P	BTC-4HDW4	
Hai	Handle lock device			HL-4SW	134
Auziliary handle		HT		HT-4SW	135

NF800-HDW


AL.	OUU-NDW					
	Accessories	Type name	Reference page			
On	arating bandla	F		F-8S	123	
Operating handle		V		V-8S	125	
_	1	TC-L	3P	TCL-8SW3		
§	Large	I I C-L	4P	TCL-8SW4		
2	Chalatan	ттс	3P	TTC-8SW3	100	
ij	Skeleton	110	4P	TTC-8SW4	128	
Terminal cover	Rear	втс	3P	BTC-8HDW3		
	Hear	BIC	4P	BTC-8HDW4	1	
Handle lock device		HL		HL-4SW	134	
Auziliary handle		HT		HT-4SW	135	

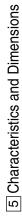

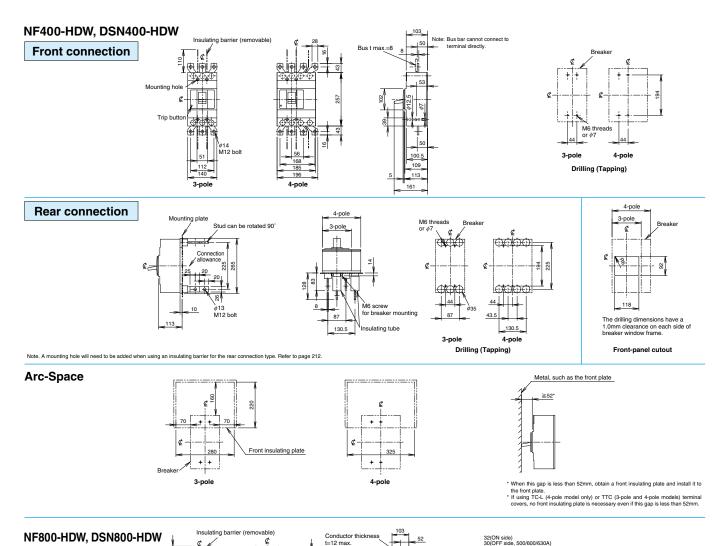


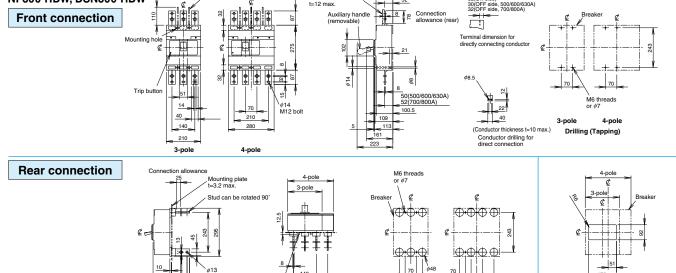



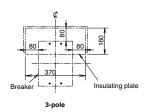

Note. A mounting hole will need to be added when using an insulating barrier for the rear connection type.

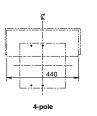

Drilling (Tapping)



The drilling dimensions have a 1.0mm on each side of breaker window frame.

Front-panel cutout

- * When this gap is less than 52mm, obtain a front insulating plate and install it to the front plate.
 * If using TC-L or TTC terminal covers, no front insulating plate is necessary ever if this gap is less than 52mm.

Miniature Circuit Breakers

BH-D6 BH-D10




BH-D6


Model					BH-D6				BH-D10			BH-D10 (For DC)		
Number	Number of poles (P) 1 2 3 4(3+N) 2(1+N) (*1) (*1)					1	2	3	4(3+N) (*1)	1	2			
Instanta	neous tripping				Type E	3, C, D		Type B, C		Type I	3, C, D		Туре	В, С
Rated in	sulation voltage	e Ui	(V)			440				4	40		2	50
Rated current In (A) Reference ambient temperature 30°C			16 20 25 32 40 50 63			0.5 1 1.6 2 3 4 6 10 13 16 20 25 32 40	0.5 1 1.6 2 3 4 6 10 13 16 20 25 32 40 50 63			0.5 1 1.6 2 3 4 6 10 13 16 20 25 32 40 50 63				
	IEC 60898-1	AC	230V	6		_		6	10		-		6	-
	EN 60898-1 GB/T 10963.1	EN 60898-1 GB/T 10963 1	230/400V	6		-		-	10		-		6	-
Rated short-	(Icn)			-	- 6			-	-	10		-	6	
circuit	IEC 60898-2 EN 60898-2	DC	125V			_					_		10	-
(kA) EN 60898 GB/T 1096			250V			-					_		-	10
	GB/T 10963.2 (Icn)	AC	230/400V			-			_			6	-	
(ICII)			400V			_			_			-	6	

Note *1 N pole is a switched neutral pole (without overcurrent release device).


Operating Characteristics

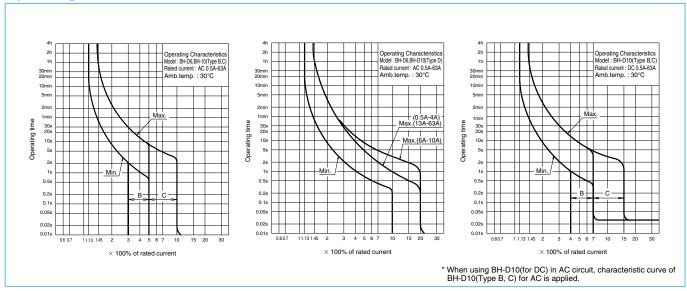

Outline Drawing

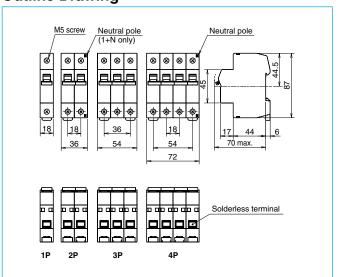

Temperature Compensation Curve

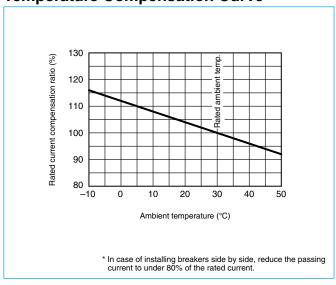


BH-DN




	Mode	I	BH-DN			
Number	of poles (P)			2 (1+N) (*1)		
Instantar	eous tripping			Type C		
Rated ins	sulation voltage	Ui (V)		230		
	rrent In (A) e ambient tempe	erature 3	6 10 16 20			
Rated short- circuit capacity (kA)	IEC 60898-1 EN 60898-1 GB/T 10963.1 (Icn)	AC	230V	4.5		

Note *1 N pole is a switched neutral pole (without overcurrent release device).


Operating Characteristics

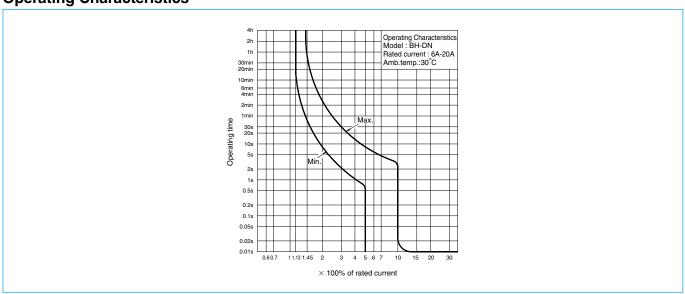

Outline Drawing

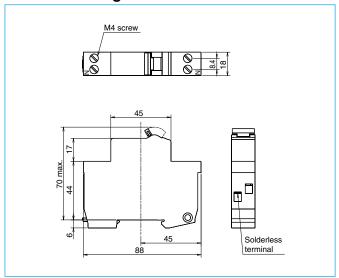


Temperature Compensation Curve

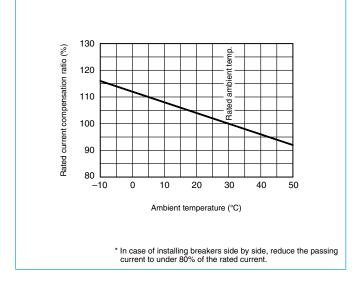




Model	BV-D		
Number of poles (P)	2 (1+N) (*1)	4 (3+N) (*1) (*2)	
Rated operational voltage Ue (VAC)	230	230/400	
Rated current In (A) Reference ambient temperature 30°C	25 4	0 63	
Rated residual operating current I∆n (mA)	30,	300	
Max. operating time at 5lΔn (s)	0.04		
Pulsating current sensitivity	Type A		
Residual operation	Dependent on line voltage		
Rated making and breaking capacity Im (A)	500 (In 25, 40A) 630 (In63A)		
Rated conditional short-circuit current Inc (kA)	6		
Rated residual making and breaking capacity IΔm (A)	500 (In 25, 40A) 630 (In63A)		
Rated conditional residual short-circuit current IΔc (kA)	6		

Earth Leakage Tripping Characteristics

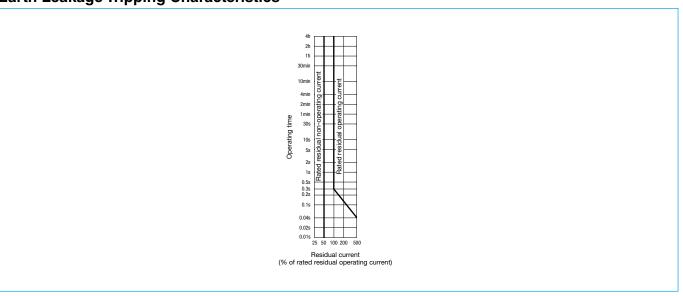

Outline Drawing

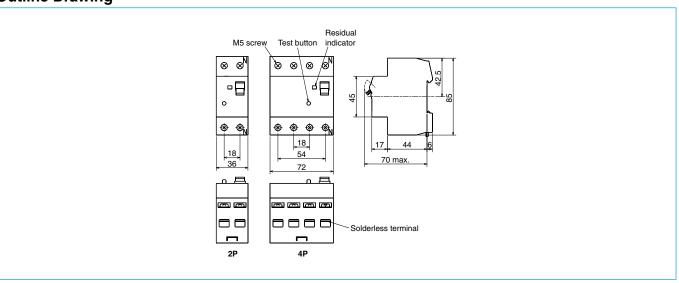

^{*1} N pole is a switched neutral pole (without overcurrent release device).
*2 For use to three phase 4-wire type. When wiring to three phase 4-wire, connect the neutral line to the neutral pole. Not available for use to three phase 3-wire type.

BV-DN BV-DN6




BV-DN


	Model		BV-DN	BV-DN6		
Number of poles (F	P)			2 (1+N) (*1)		
Rated operational	voltage Ue (VAC)		20	30	
Rated current In (A	,	С	6 10 16 20 25 3 6 10 16 20 32 40 32 40			
Instantaneous tripp	ping			Type C		
Rated current sens	itivity I∆n (mA)		30, 100, 300			
Max. operating time	e at 5l∆n (s)			0.04		
Pulsating current s	ensitivity			Type A		
Residual operation				Dependent on line voltage		
Rated short-circuit capacity (kA)	IEC 61009-1 EN 61009-1 GB/T 16917.1 (Icn)	AC	230V	4.5	6	
Rated residual mal	king and breaking	capacity	500			

Note *1 N pole is a switched neutral pole (without overcurrent release device).


Operating Characteristics

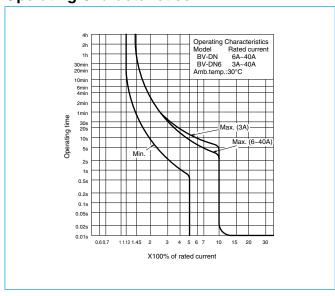


Earth Leakage Tripping Characteristics

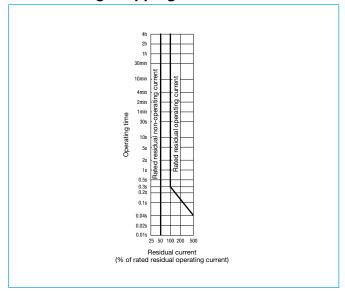

Outline Drawing

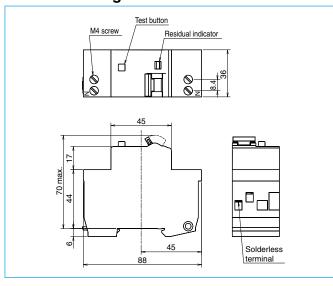

Temperature Compensation Curve

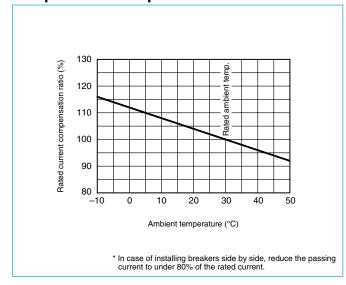

KB-D



 Model
 KB-D

 Number of poles (P)
 1
 2
 3
 4 (3+N) (*1)

 Utilization category
 AC-22A class

 Rated insulation voltage Ui (V)
 250
 440

 Rated voltage Ue (VAC)
 230
 400


 Rated current In (A)
 32 63 80

 Short-time withstand current (A)
 20×In , 1sec

 Short-time making current (A)
 20×In

Note *1 N pole is a switched neutral pole (without overcurrent release device).

Outline Drawing

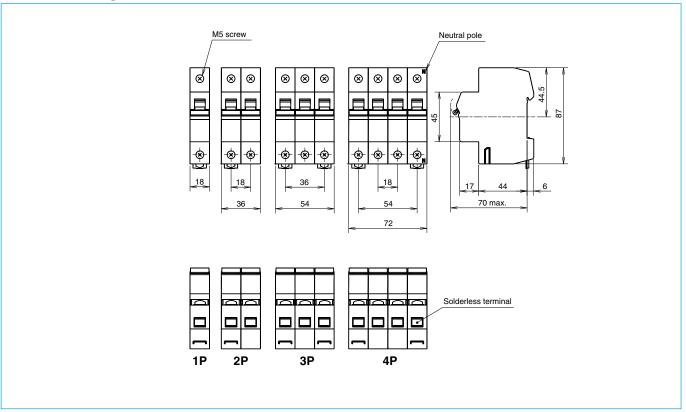

CP30-BA CP30-HU




СР30-ВА





Frame (A)				30		30			
Model				CP30-BA		CP30-HU			
Nun	nber of poles			1	2	3	1	2	3
Rate	ed impulse with	nstand voltage Uimp	(kV)		2.5			2.5	
	ed current (A) erence ambient	temperature 40°C		0.1 0.25 0.3	0.5 1 2 3 5 7	10 15 20 30	0.1 0	0.25 0.3 0.5 1 2	3 5
		Rated voltage (V)	AC (V)		250			250	
3	UL 1077	nated voltage (v)	DC (V)	65	125	-	65	125	-
capacity (kA)	CSA C22.2 No.235	AC		2.5kA at 250V			2.5kA at 250V 10kA at 125V	10kA a	t 250V
ара		DC		2.5kA at 65V	2.5kA at 125V	-	10kA at 65V	10kA at 125V	-
ļ į		Rated insulation volta	ige Ui (V)		250		250		
- circuit	IEC 60934 EN 60934	AC		2.5kA at 230V			2.5kA at 230V 10kA at 120V		
short-		DC		2.5kA at 60V	2.5kA at 120V	-	10kA at 60V	10kA at 120V	-
s p	EN 60947-2	Rated insulation volta	ige Ui (V)		250		250		
Rated	IEC 60947-2 (Icu/Ics)	AC		2.5/2.5kA at 230V			2.5/2.5kA at 230V 10/10kA at 120V	10/10kA	at 230V
	(Icu/Ics)	DC		2.5/2.5kA at 60V	2.5/2.5kA at 120V	-	10/10kA at 60V	10/10kA at 120V	-
AC/DC common use			- (*1)					- (*1)	
Operating characteristics			Instantaneous type (I) Medium type (M),(MD) Slow type (S),(SD) Fast type (F)			Instantaneous type (I) Medium type (M),(MD) Slow type (S)			
Mode of tripping			Instantaneous type (I): magnetic only [MO] Other type (M, MD, S, SD, F):hydraulic-magnetic [HM]			Instantaneous type (I): magnetic [MO] Other type (M, MD, S):hydraulic-magnetic [HM]			


Note *1 The 3-pole products are for AC use only.

Operating Characteristics

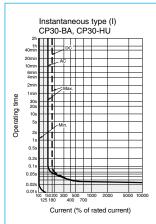


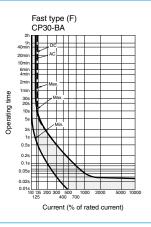


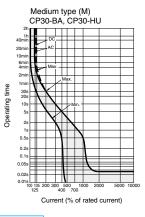

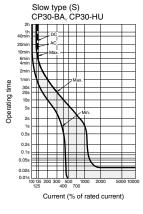


Outline Drawing

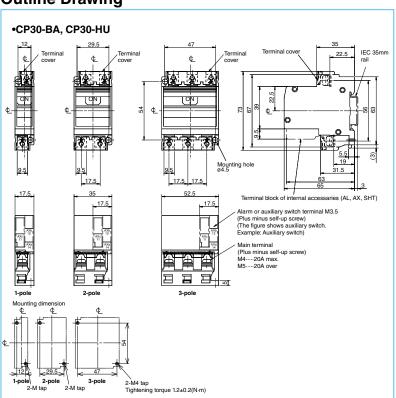

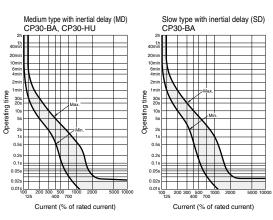

Temperature Characteristics Curve

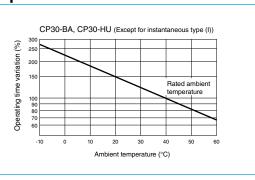

(1) Dimensions of electrical operated circuit breakers


The following concept is applied for the dimensions of the electrical operated circuit breaker. Please understand this before using this type of breaker.

Connection method		Outline dimension	ons listing method	
	Model	Listed page	Model	Listed page
	NF125-CV/SV/HV	200	NF400-CW/SW/SEW/HEW/REW	
	NV125-CV/SV/HV	229	NF630-CW/SW/SEW/HEW/REW	
	NF125-UV	(*1)	NF400-UEW (3P)	230
	NF125-SEV/HEV/RV/ZEV		NV400-CW/SW/SEW/HEW	230
	NF250-CV/SV/HV/SEV/HEV		NF400-UEW (4P)	
Front connection (Rear connection)	NF250-RV		NV630-CW/SW/SEW/HEW	
(Hear Connection)	NF125-SGV/LGV/HGV/RGV	230	NF800-CEW/SEW/HEW/REW/SDW	
	NF160-SGV/LGV/HGV	230	NF800-UEW	231
	NF250-SGV/LGV/HGV/RGV		NV800-SEW/HEW	
	NV125-SEV/HEV		NETONO OF W. NETONO OF WORK	
	NV250-CV/SV/HV/SEV/HEV		NF1000-SEW, NF1250-SEW/SDW NF1600-SEW/SDW	232
	NF250-UV	(*1)	1000 0217,0211	
Rear connection Plug-in	The drilling dimensions and connection relate each model. Note that for the rear connection		the dimensions for the breaker body. Refer to the required even for the 2-pole or 3-pole types.	e dimension drawings of

(2) Front connection (Rear connection)

NF125-CV, NF125-SV, NF125-HV NV125-CV, NV125-SV, NV125-HV

Front connection

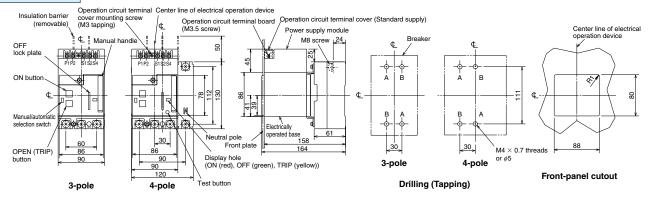

- Remarks: 1. This cannot be mounted on the 2-pole breaker.
 2. The test button is equipped only on the earth leakage circuit breaker.

NF125-SEV, NF125-HEV, NF125-RV

NF250-CV, NF250-SV, NF250-HV, NF250-SEV, NF250-HEV, NF250-RV

NV125-SEV, NV125-HEV


NV250-CV, NV250-SV, NV250-HV, NV250-SEV, NV250-HEV

NF125-SGV/LGV/HGV/RGV


NF160-SGV/LGV/HGV

NF250-SGV/LGV/HGV/RGV


Front connection

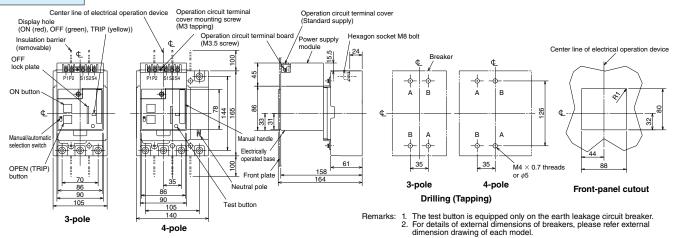


NF400-CW, NF400-SW, NF400-SEW, NF400-HEW, NF400-REW, NF630-CW, NF630-SW, NF630-SEW, NF630-HEW, NF630-REW Motor drive type

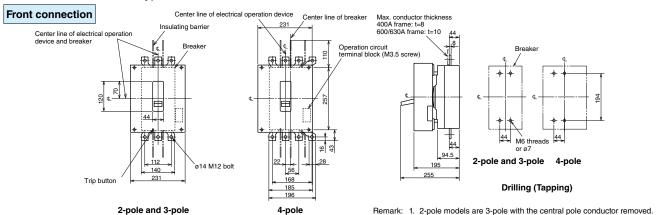


NF400-UEW (3-pole) Motor drive type

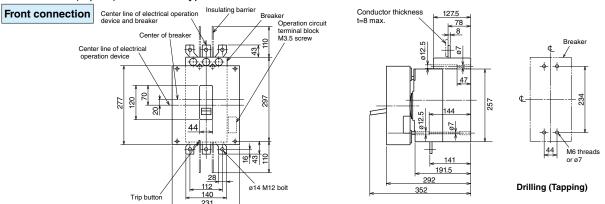


NV400-CW, NV400-SW, NV400-SEW, NV400-HEW, NV630-CW, NV630-SW, NV630-SEW, NV630-HEW Motor drive type

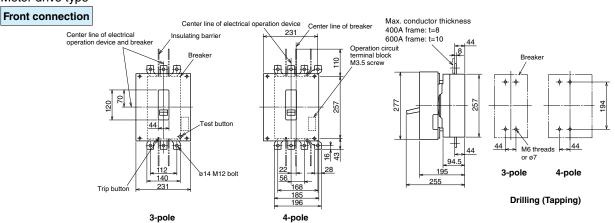

NF400-UEW (4-pole) Motor drive type

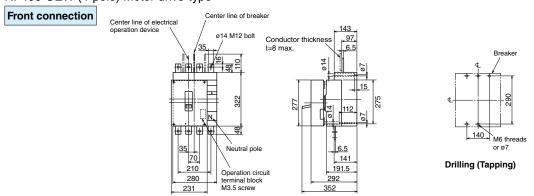


NF800-CEW, NF800-SDW, NF800-SEW, NF800-HEW, NF800-REW Motor drive type

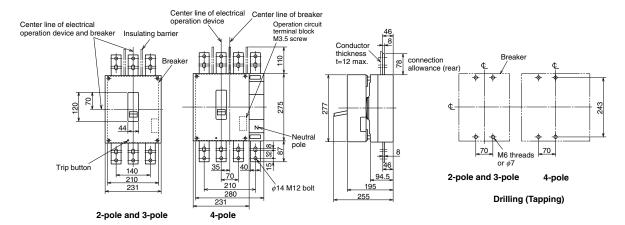

Remark: 1. 2-pole models are 3-pole with the central pole conductor removed.


NF800-UEW Motor drive type

Front connection

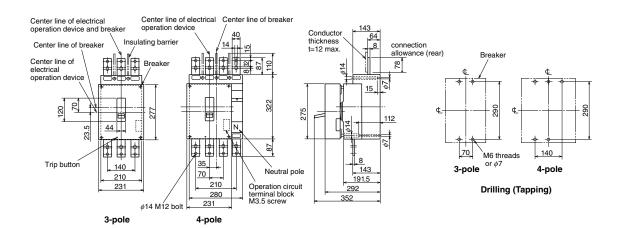


NV800-SEW, NV800-HEW Motor drive type


Front connection

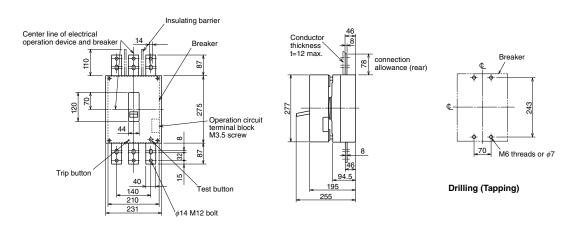

NF1000-SEW, NF1250-SEW, NF1250-SDW Motor drive type

Front connection

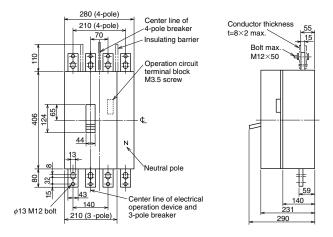


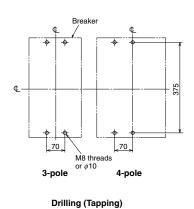


Remark: 1. 2-pole models are 3-pole with the central pole conductor removed.

NF1600-SEW, NF1600-SDW Motor drive type


Front connection

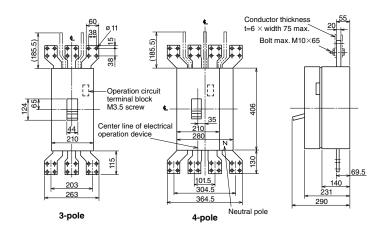

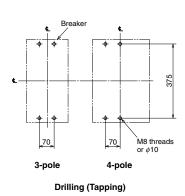



Remark: 1. NF1600-SDW is a 3-pole breaker without a center pole conductor.


NF1600-SEW (3-pole) Motor drive type

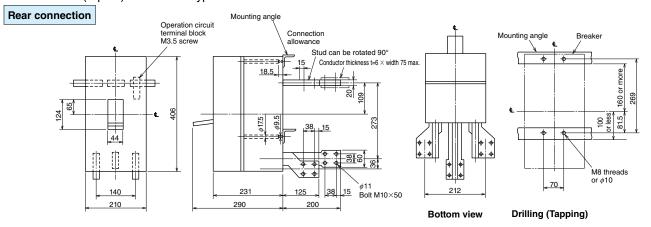

NF1600-SEW (4-pole) Motor drive type

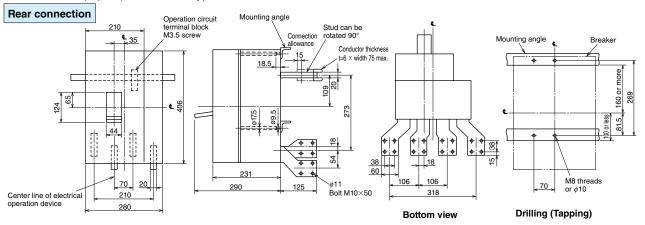


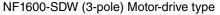

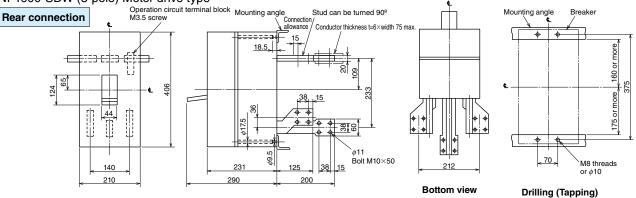

Remark: 2-pole models are 3-pole models with the central pole removed.

NF1600-SDW (4-pole) Motor-drive type

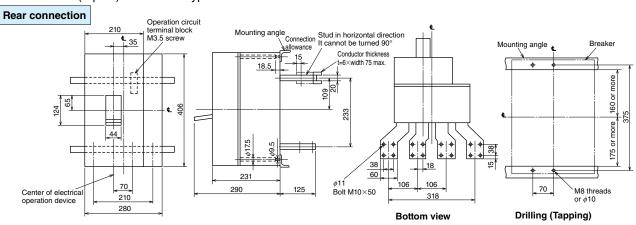





Handling and Maintenance


1) Storage and Transportation	 48
2) Normal Service Conditions	 48
· '	
·	
'	


1. Storage and Transportation


(1) Precautions for storage

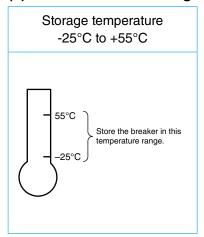

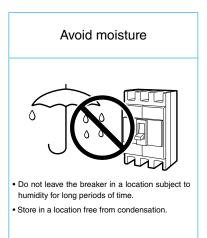


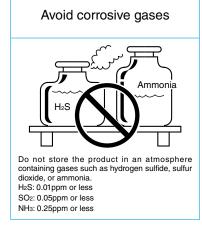


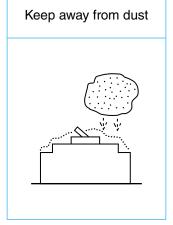

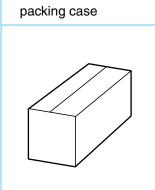


Place and store in a

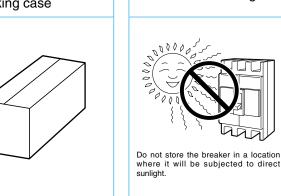

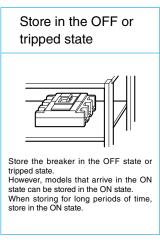

(2) Precautions for transportation

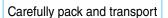



Do not drop the package during transport. When shipping the breaker, make sure to package it carefully.

Do not carry by holding the front and back of the flush plate



Do not carry the flush plate type breaker by holding the front and back of the flush plate. The breaker could drop during

Do not carry by the lead wires

Avoid direct sunlight



Do not carry accessories by the lead wires. Excessive force will be applied to the accessories.

Do not transport upside down (when mounted on IEC 35mm rail)



Do not transport a panel containing parts mounted on an IEC 35mm rail in an upside down state.

2. Normal Service Conditions

●Working ambient temperature ... -10°C to 40°C (Note that the 24-hour average value must not exceed 35°C) working current reduction rate in ambient temperature exceeding 40°C. •Atmosphere ... Free of excessive moisture, oil vapors,


50°C... 0.9 times 60°C... 0.7 times

- •Relative humidity ... 85% or less with no dew condensation.
- ●Altitude ... 2000m or less
 - smoke, dust, salt, corrosive substances, vibration or impact, etc.

3. Mounting and Connections

(1) Precautions for mounting

The operating temperature is -10°C to 40°C and the 24-hr average temperature must not exceed 35°C

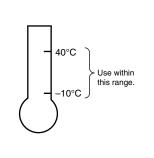


Avoid moisture



- Do not leave the breaker in humid locations.
- · Store in a location free from condensation.

Avoid corrosive gases

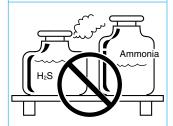

Do not install the product in an atmosphere containing gases such as hydrogen sulfide, sulfur dioxide, or

Avoid vibration and impact



Keep away from rain, drill shavings, and machining dust

Failure to do may cause the breaker to malfunction or become inoperable.



Prevent the breaker from direct contact with rainwater, oil, and dust. In particular, take care to prevent contact with conductive materials such as drill shavings from steel plates.

Prevent the intrusion of foreign matter from the exhaust outlet

Cover with material such as a sheet when performing work.



Failure to do so may cause poor contact point conductivity or overheating.


Do not disassemble

Doing so may cause the breaker to malfunction or become inoperable.



Do not remove the rear cover or the compound applied to screws on the rear surface.


Use inside of a panel or box

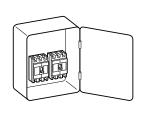

Because the breaker generates an arc, do not leave it exposed, but instead use it inside of a panel or box.


Avoid direct sunlight

Failure to do so may cause the breaker to malfunction due to temperature rises.

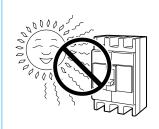

Use the specified screws

Use the specified screws (length and quantity) and the specified mounting bracket, and mount them in the correct

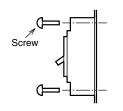


Do not cover the exhaust outlet

Doing so may cause breaker performance to drop.



Prevent liquids such as rainwater from getting inside the panel

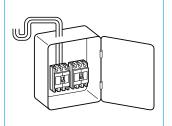

Take measures to prevent conductive liquids such as rainwater from getting inside the panel.

Do not wipe with thinners, detergents, or chemically treated cloths

Doing so may cause markings on the identification plate to disappear or may cause insulation performance to drop.



Instead, clean with air or a brush.


Do not apply tape to the identification plate

Doing so may cause the identification plate to peel off.



Keep away from locations subject to strong magnetic fields

1m away from locations where earth leakage circuit breakers and electronic

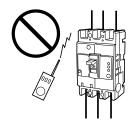


When using a transceiver, use at least type breakers are installed.

Mounting orientation


(1) Because the following models use a completely electromagnetic method of overcurrent tripping, pay attention to the mounting angle as the overcurrent tripping characteristics may vary according to the mounting orientation. Use in a vertical direction is recommended. (The same applies for other model that use a completely electromagnetic method.)

	Model name
Molded case circuit breaker	NF50-FHU, NF100-FHU
Earth leakage circuit breaker	NV50-FHU, NV100-FHU

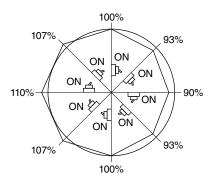


Rate of rated current change due to mounting angle (molded case circuit breakers, earth leakage circuit breakers)

	Model name
Circuit protector	CP30-BA, CP30-HU

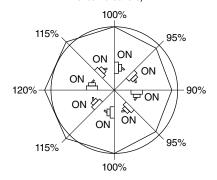

Rate of rated current change due to mounting angle (circuit protectors)

(2) Mounting orientation does not affect thermal-magnetic types, thermal types, or electronic types.

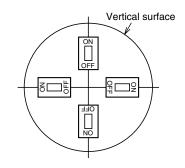

Mounting style that guarantees operating characteristics for complete electromagnetic types

Tightening torque for breaker mounting screws

The case of the breaker is made of plastic. If screws are directly attached to the case of the breaker, install them using the tightening torques shown in the table below and take care to not apply excessive thrust to the breaker.

Tightening torque (N⋅m)

rightening torque (N-II	1)		
Mod	dels that do not include mounting scre	Models that include mounting screws (Note 1)	
Screw material	Steel screws (zinc-plated)	Stainless steel screws	- Models that include mounting screws (Note 1)
NF/NV50-SVFU FHU series	M4:1.2±0.2	M4:0.7±0.1	M4:1.2±0.2 M6:3.3±0.7 M8:6±1
FAU series	M4:1.7±0.2 M5:1.7±0.2 (mounted to front plate)	M4:1.1 \pm 0.1 M5:1.1 \pm 0.1 (mounted to front plate)	M10 : 25±5 M12 : 45±5 M16 : 110±15

Note 1: If mounting screws are included, use those mounting screws.

Note 2: Combine Phillips pan head screws with a spring washer and plain washer (round type) or use Phillips pan head screws that include a spring washer and plain washer.

Remark: Refer to page 265 for information on whether mounting screws are included


(2) Precautions for connections (Secure an insulation distance between phases based on the standard for the panel side.)

Oiling of screws is prohibited




Oil will decrease screw friction and cause the screws to loosen. Excessive tightening can cause

Do not deform studs

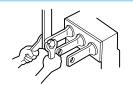

When connecting the conductors. perform tightening in a manner that does not deform the studs.

Insulate exposed portions of live wires

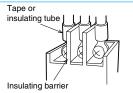

Insulate exposed live terminal wires using means such as tape, an insulating tube, or an insulating barrier if the insulation distance is insufficient, as well as to prevent accidents such as short circuits or earth faults caused by

such as snort circuits or earth faults caused by loose metal pieces.

Bare live wires are particularly dangerous in the case of 400V or higher!

Note: Make sure to mount the insulating barriers in the case of models that come standard with insulating barriers.

Use the included terminal screws

Terminal screws that are too long will cause the insulation distance to be insufficient while terminal screws that are too short will cause tightening force to be insufficient. This could cause overheating to occur.


Note: For terminal screw sizes, refer to Table 5-6 on page 102.

Use the appropriate crimp terminal

If connecting a large number of crimp terminals, perform connection by referring to Table 5-6 on page 102.

Note: If using crimp terminal connections, refer to Table 5-6 on page 102.


Do not connect in reverse

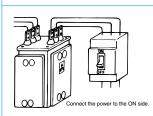

- As a rule, do not connect the power load in reverse. If necessary, refer to the specifications and select a model that can be connected in reverse.

 An insulating barrier should be provided
- on both the power and load sides of the breakers when using a high voltage circuit where dew condenses easily and the circuit is in reverse connection.

Securely fix conductors to each pole in parallel

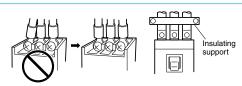

Mount conductors to each pole in parallel. Because large electromagnetic force is applied to connected conductors according to the accident current, securely fix (tighten)


Electromagnetic force applied per 1m conductor (During 3-phase short-circuit)

N/m

Prospective fault current kA(Pf)	Distance between conductors cm	10	20
10	(0.4)	500	250
18	(0.3)	1900	950
25	(0.2)	4500	2250
35	(0.2)	8900	4450
42	(0.2)	12800	6400
50	(0.2)	18200	9100
65	(0.2)	30800	15400
85	(0.2)	52600	26300
100	(0.2)	73000	36500
125	(0.2)	114000	57000

Busbar connection


- When connecting conductors directly, perform machining by referring to the conductor drilling diagram shown in the outline drawing
- When connecting conductors to a busbar terminal, pay attention to the insulating distance with the ground. An earth fault prevention barrier is available

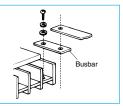

Clamp connection


- When directly connecting to the terminal, insert the single strand or stranded wires in straight and then
- A commercially-available crimp terminal or busbar can also be connected directly.
- When using stranded wires with a thin core wire, such as appliance wiring material, connect less than 5.5 mm2 of wire without splitting it.

If more than 5.5 mm² of wire, connect by splitting it.

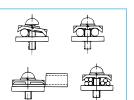

ELCB connection

- When using a 3-pole ELCB with single-phase 2-wire models, connect to the left and right poles (poles at both sides) of the ELCB. Do not use the center pole

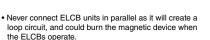

Never connect the MCCB and ELCB in parallel.



1φ<u>2</u>W

Solderless terminal connection

- Untwist the connection wires, align the core wires, and then tighten. The wires will loosen during use, and must be tightened during periodic maintenance.
- · Do not solder or bind the ends of the stranded wires.
- Make sure not to catch the insulating sheath of the wire when tightening.



Earth terminals

• For safety, ground the earth terminals except under certain conditions.

Connecting spring clamp terminals

- Do not allow the wire ends to unravel. Unraveled strands may come in contact with each other and cause a phase fault.
- Use the specified wires, ferrules, and crimping tools. Failure to do so will result in connections being inadequate and may cause heat generation or a fire.
- Make sure to strip wires to the appropriate length. Failure to do so will result in poor connections and may cause heat generation or a fire. Only copper wires can be used. Using other types of wires may cause heat generation
- Do not insert multiple wires into a single wire port. Doing so may damage equipment. Wires can be inserted/extracted 50 times.
- Because wires are inserted from the front of the breaker unit, connected wires may interfere with peripheral parts such as panels or external accessories. Observe the allowable bend radius specified by the wire manufacturer and use the appropriate wire to prevent interference with peripheral parts.

4. Maintenance and Inspections

(1) Initial inspections

After installing the MCCB and ELCB, inspect the following matters before powering the units.

Model	Inspection items	Criterion	Remarks
	Are there any excessive screws, drilling scraps, wire scraps or any other conductive materials around the terminals?	All conductive material must be removed.	Prevent any foreign conductive matter around the terminals from becoming caught as it may cause an earth fault or short circuit.
Common	2. Are there any cracks or damage on the cover or base?	No cracks or breaks allowed.	
Common	3. Is there any dew condensation on the cover, base or terminals?	No dew condensation allowed.	
	4. Measure the insulation resistance with a 500V insulation resistance tester.	5MΩ or more	Refer to Precautions ② for the ELCB.
	5. Are the connector connections tightened securely?	Must be specified tightening torque.	
ELCB	6. Are the ELCB rated voltage and circuit voltage the same?	Voltages must be the same.	
LLCB	7. Apply voltage, press the test button and check the operation.	Must trip with an earth leak.	

Earth leakage tripping must occur and it must close again.

Precautions

①Withstand voltage test

A guide for the test is given on the following. Do not perform a withstand voltage test exceeding these levels. (Note) Test the operating circuit between the live section and ground.

(Application time:	one minute)		(Unit: V)
Main	circuit	Auxiliary circuit	or control circuit
Rated insulation voltage (effective value for alternating current)		Rated insulation voltage of operating circuit	Test voltage (effective value for alternating current)
<i>U</i> i≦300	2000	<i>U</i> is≦60	1000
300< <i>U</i> i≦690	2500	60< <i>U</i> is≦690	2 <i>U</i> is+1000 (min. 1500)

Applying voltage to the incorrect location or applying a voltage that exceeds standards may cause the product to malfunction.

2Insulation resistance measurement and withstand voltage test

The restrictions a and b apply to the following models.

Applicable models: Earth leakage circuit breaker, Measuring display unit breaker.

ı	Mea	Test asurement position	Insulation resistance measurement		Withstand voltage test	
		State of handle	ON	OFF	ON	OFF
	В	etween live section of main circuit and ground	0	0	0	0
Se	ide	Between left - middle, middle - right, left - right poles	\triangle	0	×	0
different poles	Between left - neutral pole, middle - neutral poles right - neutral poles		(*1) ○ (△)	0	(*1) (x)	0
	ide	Between left - middle, middle - right, left - right poles	Δ	Δ	×	×
Between	Loads	Between left - neutral poles, middle - neutral poles right - neutral poles	(*1) ((△)	(*1) ((△)	(*1) (x)	(*1) (x)
		Between power - load side terminals	_	0	_	
Ве	etwe	een main circuit live sections - operating circuit live sections	0	0	0	Ó
	E	Between operating circuit live section - ground	Ō	O	O	0

Note *1 Values in parentheses apply for measuring display unit breaker.

(2) Periodic inspections

To prevent trouble and ensure the breaker operates safely for a long time, inspect the breaker one month after starting use and periodically thereafter according to the environmental conditions.

Inspection Interval Guide

1	Clean and dry environment	Once every 2 to 3 years
2	Environment with low levels of dust,	Once a year
	corrosive gas, vapors, salt, etc.	
3	Places other than 1 or 2	Once every six months

Model	Inspection items	Criterion	Remarks
	Are any of the conductors loose?	No conductor must be loose.	If any conductor is loose, tighten again with the appropriate torque given in Tables 5-5 and 5-6 on pages 101 to 103.
	Is any cover or base cracked? Is any handle damaged?	There must be no cracks, damage or breaks.	
	Has the breaker been submerged and infiltrated with water? Is the breaker heavily dirtied by mud or dust?	There must be no infiltration of water, heavy mud or dust.	If water has infiltrated the breaker, it must be replaced with a new product or overhauled by the Mitsubishi Service Center.
Common (*2)	4. Has the temperature risen abnormally?	(1) Visually inspect that none of the studs on the backs of the terminals, or the breaker's tightened or molded sections are discolored from burning. (2) There must be no especially high temperature rise when the current at each phase is balanced. (Tolerable maximum value for terminal temperature rise: 60K) (3) There should be no difference on the left and right side of the base sides if the load current is balanced.	There may be a light temperature difference between the following terminals. Between the power side terminal and load side terminal Between the center pole terminal and left and right pole terminals.
	5. Can the handle be turned ON and OFF smoothly?	Should operate smoothly.	Open and close a normally closed breaker periodically.
	6. Does pressing the TRIP button result in a trip?	Must be resettable after tripping.	This will clean the contact and prevent abnormal heating. (*1)
NV	7. Test by pressing the TEST button.	Must operate properly and close again.	Test the operation once a month.

Notes: 1. Depending on the usage environment, any lubricants (grease) applied inside the breaker may seep out and become adhered to the outside of the breaker or cause it to become discolored. However, this will not affect the functionality or performance of the breaker and it can continue to be used as is. Any lubricants (grease) that have become adhered can be partially removed using ethanol.

^{2.} Because a silver alloy is used for the contacts (contactors), an oxide film will form on the surface of the contacts when they are in contact with oxygen for a long time. If the resistance value between terminals is particularly high, try cleaning the contact surface by opening and closing the circuit breaker (while energized is recommended) or by operating the trip

(3) Inspection after Tripping

Whether the circuit breaker can be reused or must be replaced after switching off a fault current depends on the intensity of the current which was switched off.

Intensity of trip current, degree of MCCB and ELCB damage, and countermeasures

Intensity of trip current	Degree of MCCB and ELCB damage	Countermeasures
When it is clear that the circuit breaker operated within the time-delay trip range (Overcurrent up to 10 times of rated current)	No abnormality such as contamination around vent observed	Reusable (The circuit breaker can function 50 times (100A or less) at overload current which is 6 times higher than rated current)
Relatively low short-circuit current which causes instantaneous tripping Large short-circuit current close to rated breaking capacity	Soot and dust found near vent Soot and dust found near handle, remarkable contamination found near vent Molten metal found in circuit breaker Box of box type circuit breaker is severely deformed	Reusable The state of the stat

If the intensity of the fault current cannot be estimated, remove the MCCB and ELCB, and measure the insulation resistance. If the specified value $(5M\Omega)$ has not been reached, perform a withstand voltage test. If the withstand voltage is within the specified value, the circuit breaker can be used temporarily but it should be replaced with a new part as soon as possible. If both the insulation resistance and withstand voltage are sufficient, the circuit breaker may be judged as reusable. However, it should be checked for abnormalities, such as an abnormal rise in temperature for a set period.

- Measure the insulation resistance and perform the withstand voltage test with the procedures given in section 1 and 2 on page 252.
- Check that the ELCB operates when the test button is pressed.

(4) Guide to service life

Maintenance and inspection must be conducted according to the environment in which the circuit breaker is installed. The service life of the circuit breaker cannot be determined just by the number of service years.

A reference to the service life is given below, but the circuit breaker must be diagnosed by a specialist for an accurate reading.

Guide to service life

Degr	Degree Environment Example		Example	Guide for replacement (years)
sage	Place where air is always clean and dry		Approx. 10 to 20	
Standard usage state	2	Indoors, where there is little dust and no corrosive gas	Circuit-breakers housed in distribution panels or boxes within an individual electric room having no dust-proofing or air-conditioning	Approx. 7 to 15
Poor environment	Place with gases such as sulfuric acid, hydrogen 1 sulfide, salt and high levels of moisture, but low levels of dust but low levels of dust plans, iron and steel works, paper and pulp plants, etc.		house, sewage treatment plans, iron and steel works, paper and pulp	Approx. 3 to 7
Poor en	Place with high levels of gas and dust which humans cannot endure for long periods of time		Chemical plants, quarries, mines, etc.	Approx. 1 to 3

Standard	Size of circuit breaker frame				Number of tripping times by shunt tripping device or
Staridard	(A)	Energization	No energization	Total	undervoltage tripping device, or by trip button
JIS C 8201-2-1 Ann.2	100 or less	1500	8500	10000	
JIS C 8201-2-2 Ann.2	More than 100, 315 or less	1000	7000	8000	
JIS C 8201-2-1 Ann.1	More than 315, 630 or less	1000	4000	5000	10% of total operating cycles
JIS C 8201-2-2 Ann.1 IEC 60947-2	More than 630, 2500 or less	500	2500	3000	
(*1)	More than 2500	500	1500	2000	

Note *1 The number of trips by the ELCB test button is one-third the number of energizations

The operating life shortens as the circuit breaker frame size increases. (Refer to above tables.)

These values may seem low, but since this circuit breaker is a protective device, it basically differs from a switch intended for frequent opening and closing.

For tripping by a shunt tripping device, the life is especially short and special consideration should be taken.

WARNING Continuing user of a circuit breaker which has reached its service life can result in the following problems. Always update the circuit breakers accordingly.

- ① Insulation fault: Risk of burning, internal short-circuit, and electric shock.
- ② Energizing fault: Burning or unnecessary operations caused by overheating of the internal parts, etc.
- 3 Operation fault: ON and OFF operation of the circuit may be disabled.
- 4 Tripping fault: Protection of the load device or wiring, etc., may be disabled.

8 Handling and Maintenance

5. Troubleshooting (1) Troubleshooting for breaker unit (MCCB, ELCB)

	Fault sta	te	C	ause	Countermeasures and Actions	
			Foreign matter in switching med	hanism	Replace with a new part	
	Can't close		3		Reset again	
					See below (*)	
ors			Wear due to tripping endurance	Excessive use of shunt trip operation	Replace with a new part	
Operation errors			Reset mechanism is faulty	End of service life	Replace with a new part	
eratio	(*) Can't be reset		Undervoltage trip coil is not excited Wiring error		Excite by applying rated voltage	
ŏ	Can't trip Can't turn OFF				Wait until the bimetal cools	
			Switching spring is broken	End of service life	Replace with a new part	
			Contact has fused because of e	excessive breaking current	Replace with a new part with a large breaking capacity	
			Insufficient lubricant (grease)		Replace with a new part	
	1		Excessive power during operation	on	D 1 31	
Broken	handle		Excessive external shock		Replace with a new part	
			Insulation material caught between	een contacts	Double a suite	
			Corrosion due to rainwater, etc.		Replace with a new part	
Poor er	nergizing		Fusion at conductive section	Excessive breaking current	Replace with a new part with a large breaking capacity	
			Excessive wear of contacts	Short-circuit current cut off /	Replace with a new part	
			Excessive wear or contacts	End of service life Incorrect selection	неріасе міті а пем раті	
			Ambient temperature is high	(temperature compensation)	Select a different rating	
				Panel is sealed	Ventilate	
			Excessive temperature rise	Loosening at terminal connections	Tighten	
	Operates unde	r normal load	Applied frequency is incorrect	Incorrect selection (frequency)	Replace with a breaker with the correct frequency	
			Load current contains high level	s of high fraguancy distortion	Insert a reactor to decrease the distortion factor	
			Load current contains riight level	is of high-frequency distortion	Replace with a breaker with a high rated current	
_			Measuring instrument is reading small measurement values because of distorted current		Select the correct rating by measuring with a true RMS converter	
Annoying operation	Electronic	Overcurrent	Rated current setting is too low		Set the correct rated current	
Be	type	indicator LED			Panlace with a new part	
ing o	breaker is ON		Heat accumulation due to	OII	Replace with a new part	
nnoy			repeated starts	Incorrect selection	Replace with a breaker with a higher rating	
₹			Starting current is too high Long starting time		(replace with a new part)	
			Starting rush current is too high			
			Excessive current when Y-Δ starting is selected, excessive current due to reverse operation		Change the instantaneous setting or replace with a breaker with a higher rating (replace with a new part)	
	Instantaneous	operation when	Rush current during instantaneous restart			
	starting		Layer short circuit of motor		Repair or replace the motor	
			Bimetal reset incomplete after in	nstantaneous tripping	Allow the bimetal to cool until properly reset	
			<u> </u>		Inspect the circuit and eliminate the cause	
			Dust has accumulated	e de elecing (ellert ellean elecing)		
Short-c	circuit on power	side	Conductive matter has dropped	into power side	Replace with a new part	
			Improper tightening	Improper maintenance	Tighten	
	Terminal tempe	erature is high	Excessive wear of contacts	I Share as a second	Replace with a new part	
Se			Complete electromagnetic type (400Hz, etc.)	being used at a high frequency	Select a breaker with the correct frequency	
Temperature rise	Mold side temp	erature is high	Load current contains high level	s of high-frequency distortion	Insert a reactor to decrease the distortion factor	
) Derat	erati		Differences according to each p		Replace with a breaker with a high rated current Measure with a measuring instrument	
ਵਿੱ	<u> </u>		Studs are loose	0.000 0000	Tighten	
"	Heating at stud	tiahtenina	Contact fault between stud cond	ductor and body terminal	Reassemble the stud	
	section Grooves to		Grooves to reduce overcurrent h	neating not machined on steel	Machine grooves to reduce overcurrent heating	
			mounting plate of rear connection Selected rated current is too high	,	Replace with a breaker with a lower rating	
፳					(replace with a new part)	
atic			Applied frequency is incorrect	Incorrect selection (frequency)	Replace with a breaker with the correct frequency	
No oper	No tripping at overcurrent		An upstream breaker has instantaneously tripped	The instantaneous tripping current of an upstream breaker is too low	Lower the instantaneous tripping current Raise the instantaneous tripping current of the upstream breaker (In the case of breakers without an adjustment function, replace with a new part with a different rating)	
Does not operate with breaker tester or adjuster (Electronic type breaker)	Overcurrent ind		The battery of the breaker tester	r or adjuster is spent	Replace the battery of the breaker tester or adjuster	
t opera ster or a c type b	Overcurrent ind		Tripping mechanism is faulty			
oes not eaker te: lectronic	turns ON and the	nen OFF after	Electronic circuit failure		Replace with a new part	
ا⊯ق⊡			-Fuse Circuit Breakers. Earth Leakage Circuit Breakers are nonrepairable, we are		o not able to provide reneiving on time	

Remarks: 1. Since the related equipment of No-Fuse Circuit Breakers, Earth Leakage Circuit Breakers are nonrepairable, we are not able to provide repairing services.

(2) Troubleshooting for leakage operation section

	Fault state	Cause	Countermeasures and Actions
eration	Operates simultaneously with closing (The leakage mechanism)	The wiring is long creating a large ground electrostatic capacity, and causes a leakage current flow	Change the rated sensitivity current or install the ELCB near the load
leakage indication button		ELCB units are being used in parallel, or is incorrectly connected with a neutral wire, etc.	Use the correct wiring
Annoying	One water during the	An excessive surge, such as inducted lightning, has infiltrated the unit	Install a surge absorber, etc., near the circuit
•	Operates during use	Induction noise from a nearby large current bus, etc., has infiltrated the unit	Avoid sources of noise
Operation	Leakage operation occurs when the test button is	LED is faulty or is at end of service life	Replace with a new part
Oper	pressed, etc., but there is not indication	The indicator button is improperly adjusted and does not protrude	Replace with a new part
tion		Electronic circuit section is faulty	Replace with a new part
operation	No operation takes place when the test button is pressed	Voltage is not applied	Apply the specified voltage
8		Contact continuity is faulty	Remove the foreign matter from the contact

Remarks: 1. When using a transceiver, use at least 1m away from the electronic MCCB and ELCB.


(3) Troubleshooting for accessories

Fault state)	Ca	Cause		
		Operation power voltage	Operation circuit wire capacity is insufficient	Use a larger operation circuit wire	
		has dropped	Operation power capacity is insufficient	Improve the operation power	
	Operation disabled	Resistor or motor is burned	Excessive continuous operation	Return for repairs (motor replacement)	
NFM		Connection is incorrect		Use the correct wiring	
NVM (Electric operation device)		Applied voltage is incorrect		Apply the correct operation voltage	
	Continuous idling	ON and OFF circuits are operation is mistaken	ng simultaneously,	Provide an interlock at the pushbutton	
	Continuous laining	For the self-holding type, the au automatic reset	xiliary switch contact is used for	Use the alarm switch contact for the automatic reset contact	
	One idle run when	Voltage ripping in the OFF state,	or tripping caused by undervoltage	Turn OFF once to reset, and then turn ON again	
	closing	Breaker itself has automatically	Breaker itself has automatically cut-off and tripped		
	Oleration distributed	Applied frequency or voltage is incorrect		Improve the power	
UVT (Undervoltage tripping device)	Closing disabled	Doesn't attract voltage drop is large		Improve the voltage	
	Doesn't trip even when voltage is absent	Breaker's tripping mechanism is faulty		Return for repairs	
		Insufficient voltage	Operation voltage has dropped	Improve the power	
			Applied voltage is incorrect	Improve the power	
SHT (Shunt tripping device)	Doesn't trip		Coil is continuously excited	Return for repairs (coil replacement, installation of burn prevention auxiliary coil)	
(S. a., pping dovide)		Coil is burnt	Operation voltage has dropped causing continuous excitation	Return for repairs (coil replacement), improve power	
			Burn preventing auxiliary contact is faulty	Return for repairs (coil replacement, contact repair)	
			Abnormal voltage is applied	Return for repairs (coil replacement)	
AL (Alarm switch)		Contact fault caused by overcur	rent	Return for repairs	
AX (Auxiliary switch)	Malfunction	Incorrect connection	Connection mistaken during installation	Refer to nameplate and correct the wiring	
EAL (Earth leakage alarm contact) EBM (Test button module)	Manufiction	Microload	Incorrect selection	Return for repairs (replacement with type for microloads)	
PAL (Pre-alarm)		Loose mounting screws	Insufficient tightening Vibration during transportation	Return for repairs (readjustment)	

8 Handling and Maintenance

(4) Cases of unnecessary ELCB operation

Even if the ELCB is not faulty, there may be a problem in the circuit which causes frequent operation or instantaneous operation at closing. Refer to the following section and incorporate it as part of the circuit inspection and troubleshooting.

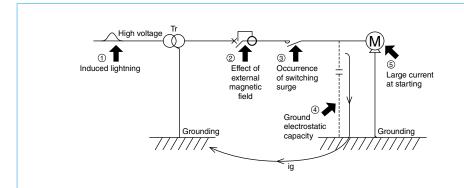

The following five conditions are the most conceivable causes of trips in cases such as when the breaker trips immediately after the ELCB is closed, or when the breaker trips suddenly during use but inspection of circuit shows no ground fault accidents. Check each item and if any problems are found, correct them accordingly.

Cause	Countermeasures
1 Induction lightning	All models incorporate a non-operating shock structure and should sufficiently withstand 7kV (JIS Standards), so unnecessary operation should not occur.
2 External magnetic field	The ZCT is equipped with a magnetic shield, and is not affected easily. However, the breaker could operate if there are large current buses reaching several thousand amperes near the ELCB, or if there is a short-circuit fault in nearby circuit. Separate the ELCB from the large current bus wires by at least 10cm.
3 Switching surge	All models incorporate a non-operating shock structure and should not operate unnecessarily. However if there is a time lag in the closing time of each pole in the magnetic switch, unnecessary operation could occur due to the relation of the ground electrostatic capacity.
4 Effect of ground electrostatic capacity	If the wires are stored in a metal conduit or metal duct wiring, the ground electrostatic capacity will increase compared to other wiring methods. This may cause the leakage current to constantly increase. If the magnetic switch chatters, etc., the leakage current may become temporarily unbalanced thus reaching a leakage current equivalent to the sensitivity current and causing unnecessary operation. Review the following matters in this case. 1) Shorten the load circuit line, or install the ELCB near the load (device) being used. (Install in a branch circuit.) 2) Lead the control circuit for the control device, etc., from the power on the ELCB side. 3) If the above measures are difficult or if they cause further unnecessary operation, reconsider the selected ELCB rated sensitivity current.
5 Equilibrium properties caused by large current at starting	The ZCT is made of high-grade permalloy, a material with Ni as its main element and which has outstanding residual magnetic characteristics. The periphery of the ZCT is covered with material having outstanding magnetic characteristics, creating a complete magnetic shield. This suppresses the effect of residual currents to small, and it has excellent equilibrium characteristics. Therefore, even if the starting inrush current of the motor is several to several tens of times the rated current flowing through the breaker, the earth leakage tripping function will not cause unnecessary operation. When using a compatible ZCT such as a earth leakage relay, This property changes when the primary conductor near the ZCT is bent. When penetrating a primary conductor of 300A or more, make a straight line of 30cm or more on one side.



Appendix

1) Handle Operation Angle Dimensions	. 258
2) MCCB Trip Button, Instantaneous Adjustment Dial Drilling and Terminal Cover Mounting Hole Dimensions	. 259
3) ELCB Button and Switch Dimensions	. 260
4) List of Product Weights	. 261
5) Switching the Adjustable Items	. 262
6) Breaker Mounting Screw Dimensions	. 265
7) List of Mold Surface Temperature-rise Values	. 266
8) Ordering Information	. 267
9) Index	. 269
10) MELSELECT™	. 270
11) Low-Voltage Products Website	. 271
12) Service Network	. 272

1. Handle Operation Angle Dimensions

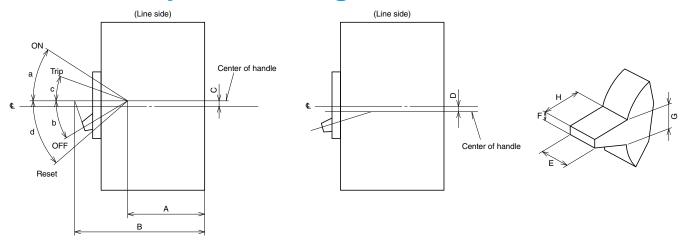


Table of dimension variations

l o	M	odel	Operation angle (°) Dimensions (mm)											
Class	IVIC	odei	ON	OFF	Trip	Reset			DII	Hensi	ווו) פווכ	1111)		
	MCCB, MCB	ELCB, RCCB, RCBO	а	b	С	d	Α	В	С	D	Е	F	G	Н
	NF50-SVFU	NV50-SVFU	12	20	4	27	55	90	13	_	8	5	5	14
	NF32-SV, NF63-HDV NF63-CV, NF63-SV, NF63-HV NF125-CV, NF125-SV, NF125-HV NF100-CVFU, NF125-SVU, NF125-HVU	NV32-SV NV63-CV, NV63-SV, NV63-HV NV125-CV, NV125-SV, NV125-HV NV100-CVFU, NV125-SVU, NV125-HVU	15	19	5	21	40	90	2	-	12	7	7	17
C · s	NF125-SEV, NF125-HEV NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV NF250-SEV/HEV with MDU NF125-HDVA NF250-SGV, NF250-LGV, NF250-HGV NF125-SGV, NF125-LGV, NF125-HGV NF160-SGV, NF160-LGV, NF160-HGV NF250-CVU, NF250-SVU, NF250-HVU	NV125-SEV, NV125-HEV NV250-CV, NV250-SV, NV250-HV NV250-CVU, NV250-SVU, NV250-HVU NV250-SEV, NV250-HEV	15	19	5	21	40	92	2	-	12	7	7	19
•	NF100-SRU	NV100-SRU	20	35.5	5	44.5	71	96	13	_	10	5	8.5	16.5
H	NF100-HRU	NV100-HRU	20	35.5	5	44.5	71	102	13	_	10	5	8.5	16.5
	NF400-CW	NV400-CW	16.5	10	6.5	14.5	49	134	6.5	_	32.5	14.5	15.5	25
	NF400-SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW NF400-SWU/HWU	NV400-SW/SEW/HEW NV630-CW/SW/SEW/HEW	16.5	10	6.5	14.5	49	155	6.5	_	32.5	13.5	15.5	46
	NF400-HDW	_	16.5	10	6.5	14.5	55	161	65	_	32.5	13.5	15.5	46
	NF800-CEW/SDW/SEW/HEW/REW NF800-SEW/HEW with MDU NF630-SWU/HWU	NV800-SEW/HEW	16.5	10	6.5	14.5	49	155	6.5	_	32.5	13.5	15.5	46
	NF800-HDW	_	16.5	10	6.5	14.5	55	161	6.5	_	32.5	13.5	15.5	46
	NF1000-SEW, NF1250-SEW NF1600-SEW	-	18	12	6	17	84	190	_	4	41.5	13.5	15	36.5
	NF125-RGV, NF250-RGV	_	15	19	5	21	40	92	2	_	12	7	7	19
R	NF125-UV	_	15	19	5	21	40	92	-	29	12	7	7	17
•	NF250-UV	_	15	19	5	21	40	92	_	35	12	7	7	19
U	NF400-UEW	-	16.5	10	6.5	14.5	146	252	-	13.5	32.5	13.5	15.5	46
	NF400-UEW(4P), NF800-UEW	_	16.5	10	6.5	14.5	146	252	-	17	32.5	13.5	15.5	46
FAU	NF30-FAU, NF50-FAU	NV30-FAU, NV50-FAU	30	21	1	31	53.5	73.5	5	_	8	5	6	13
	NF50-FHU	NV50-FHU	21	29	1	31	57	76	15.5	_	8.5	4.5	6	13
FHU	NF100-FHU	NV100-FHU	21	29	1	31	57	76	12.5	-	8.5	4.5	6	13
	BH-D6*1, BH-D10*1	_	41	36	_	_	63	76	9	_	_	_	-	-
	BH-DN*1	_	42	48	-	_	63	76	10	_	17	4	9.5	12
ВН	KB-D	_	41	48	-	_	63	76	9	-	-	-	-	-
	_	BV-D*1	42	40	-	-	61	76	10	-	14	4	-	-
	-	BV-DN*1, BV-DN6*1	42	48	-	-	63	76	10	_	17	4	-	-

Note *1 Trip is the same as the OFF position. Resetting is not required.

2. MCCB Trip Button, Instantaneous Adjustment Dial Drilling and Terminal Cover Mounting Hole Dimensions

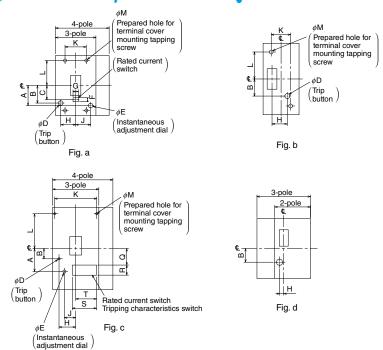


Table of dimension variations

(mm)

																				(111111)
Model	Number of poles	Fig.	Α	В	С	φD	φЕ	F	G	Н	J	K	L	φМ	N	Р	Q	R	s	Т
NF50-SVFU	2, 3	d	-	14	_	6.5	_	-	-	4	_	_	-	-	-	-	-	_	_	-
NF32-SV, NF63-CV	2	b	-	20	-	6.5	-	-	-	21	-	-	-	-	-	-	-	-	-	-
NF63-SV, NF63-HV	3. 4	а	_	20	_	6.5	_	_	_	29	_	_	_	_	_	_	_	_	_	_
NF63-HDV	-,																			_
NF125-CV, NF125-SV, NF125-HV	2	b	_	20	_	6.5		_	_	21			_		-	_	_			_
NF100-CVFU, NF125-SVU, NF125-HVU	3, 4	а	-	20	_	6.5	_	-	-	37	_	_	-	-	-	-	-	_	_	_
NF125-UV	2, 3, 4	а	_	20	_	6.5	_	_	_	37	_			-	_	_	_			_
NF125-SEV, NF125-HEV, NF250-SV, NF250-HV NF125-SGV, NF125-LGV, NF125-HGV NF160-SGV, NF160-LGV, NF160-HGV NF250-SGV, NF250-LGV, NF250-HGV NF250-CVU, NF250-SVU, NF250-HVU, NF250-UV	2, 3, 4	а	-	20	-	6.5	-	-	_	44	-	-	_	-	-	-	-	-	-	_
NF250-SEV, NF250-HEV	3, 4	а	-	20	_	6.5	_	-	-	44			_	_	-	-	-			_
NF125-RGV	2, 3	а	_	20	_	6.5		-	_	44			_	-	-	-	-		_	_
NF250-RGV	2, 3	а	_	20		6.5		_	_	44			_		_	_	_			
NF50-FHU	2	а	_	9.5	_	4	_	-	-	15	_	_	-	-	-	-	-	_	-	_
	3		_	9.5	_	4	_	-	-	27.5	_	-	_	-	-	_	-	_	_	-
NF30-FAU, NF50-FAU	2	а	_	11	_	4	_	-	-	0			-	_	-	-	-		-	_
,	3		-	11	_	4	_	_	-	10	_			_	-	-	_	_		_
NF100-SRU, NF100-HRU	2	а	_	2.5	_	4	_	_	_	18.5	_				_	_	_			_
NE400 EUU	3		_	2.5	_	4	_	_	-	31	_	_		<u> </u>	_	-		_	_	_
NF100-FHU NF400-CW	2, 3	a c	_	12.5 30.5	_	6.5		_	_	27.5 51.5		125	_ 110.5		-	_	_			<u> </u>
NF400-CVV		C	_	30.5		6.5		_	_	51.5	_	125	110.5		_	_	_	-	-	=
NF400-SW, NF400-SWU, NF400-HWU	2, 3	С	_	30.5	_	6.5	_	_	_	51.5	_	125	110.5		_	_	_			=
	3		_	30.5		6.5			_	51.5		125	110.5		_	_	53	30	74	63.5
NF400-SEW, NF400-HEW, NF400-REW	4	С		30.5	_	6.5	_		_	51.5	_	125	110.5		_		53	30	74	63.5
	3		_	50.5		6.5			_	51.5	_	125	130.5		_	_	53	30	74	63.5
NF400-UEW	4	С	_	54	_	6.5	_	_	_	78.5	_	156	152	3.5	_	_	76.5	30	74	98.5
	3		_	30.5	_	6.5	_	_	_	51.5	_	125	110.5		_	_	70.5	_		-
NF400-HDW	4	С	_	30.5	_	6.5	_	_	_	51.5	_	125	110.5		_	_	_	_	_	<u> </u>
NF630-CW	2.3	С	_	30.5	_	6.5	_	_	_	51.5	_	125	110.5		-	_	_	_	_	-
	2, 3		_	30.5	_	6.5	_	_	_	51.5	_	125	110.5		_	_	_	_	_	_
NF630-SW	4	С	_	30.5	_	6.5	_	_	_	51.5	_	125	110.5		_	_	_	_	_	_
	3		_	30.5	_	6.5	_	_	_	51.5	_	125	110.5		_	_	53	30	74	98.5
NF630-SEW, NF630-HEW, NF630-REW	4	С	_	30.5	_	6.5	_	-	-	51.5	_	125	110.5	3.5	-	-	53	30	74	98.5
NIEGOS OFINI NIEGOS OFINI NIEGOS LIEINI NIEGOS DEIM	3		_	30.5	_	6.5	_	-	_	78.5	_	86	128.5	_	-	-	53	30	74	98.5
NF800-CEW, NF800-SEW, NF800-HEW, NF800-REW	4	С	_	30.5	_	6.5	_	-	-	78.5	_	156	128.5	3.4	_	-	53	30	74	98.5
NEGOG ODIAL NEGOG OVALL NEGOG LIVALL	2, 3	_	74	30.5	_	6.5	10	-	-	78.5	57	86	128.5	3.4	_	-	_	-	-	-
NF800-SDW, NF630-SWU, NF630-HWU	4	С	74	30.5	_	6.5	10	-	-	78.5	57	156	128.5	3.4	_	-	_	_	_	-
NF800-UEW	3	_	-	54	-	6.5	-	-	-	78.5	-	86	152	3.4	-	-	76.5	30	74	98.5
NF800-UEW	4	С	_	54	_	6.5	_	-	_	78.5	_	156	152	3.4	-	-	76.5	30	74	98.5
NF800-HDW	3	С	_	30.5	-	6.5	-	-	-	78.5	-	86	128.5	3.4	-	-	-	-	-	-
INI GOO-I IDVV	4		_	30.5	_	6.5	_	-	_	78.5	_	156	128.5	_	_	-	_	_	_	_
NF1000-SEW, NF1250-SEW	3	С	_	70	_	6	_	-	-	56.5	_	199	178.5		-	-	130	30	74	89
NF1600-SEW	4		_	70	-	6	_	_	-	56.5	_	269	178.5	3.4	-	-	130	30	74	89

Remarks: 1. The 4-pole part is available for the S and H Series 50A frame to 1600A frame (excluding NF400-REW, NF630-REW and NF800-REW).

2. The 2-pole part for NF250-CV and larger is the same as the 3-pole part. (Including NF125-HV.)

3. The terminal cover mounting hole shows the case for the screwed type. The breaker mounting hole is used to mount the one-touch terminal cover. Refer to the respective dimension drawings.

4. The K dimensions are divided down the breaker center.

3. ELCB Button and Switch Dimensions

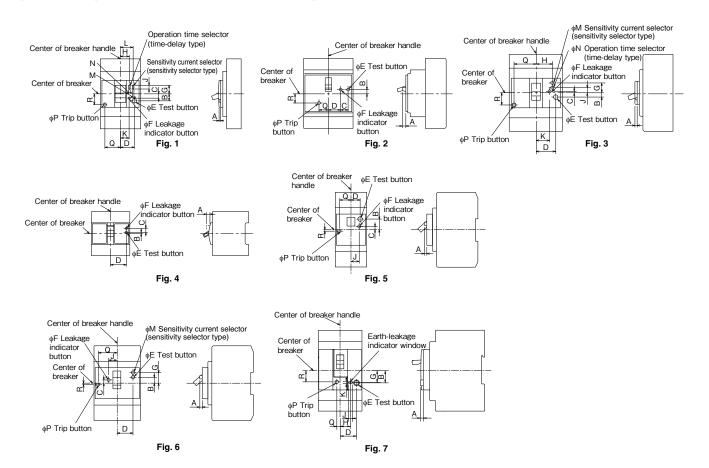


Table of dimension variations

		e							V	ariable (dimensi	ons (mr	n)						
Model		ug gu	/	4															
Model		Reference drawing	Test button	Indicator button	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	Q	R
NV50-SVFU		Fig. 7	3.5	-	15	-	20	7	-	14.5	12.5	4.5	2.5	-	-	-	4	4	14
NV32-SV	Fixed type	Fig. 1			13	8	26.5	9.5	4	_	_	_	16	_	1	-	6	29	20
NV63-CV, NV63-SV, NV63-HV	Selector type	ı ıg. ı			13	0	20.5	9.5	-	16	-	7	10	23.5	3	-	٥	23	20
	Fixed type									_	_	_		_	-	_			
NV125-CV, NV125-SV, NV125-HV	Selector type				13	8	26.5	9.5	4	16	_	7	16	24	3	_	6	37	20
	Time-delay type									16	17	7		24	3	3			
NV250-CV. NV250-SV. NV250-HV	Fixed type	ļ	3	4						_	-	-		_	_	-			
NV250-CVU, NV250-SVU, NV250-HVU	Selector type	_			13	8	34	9.5	4	16	-	7	23.5	31	3	-	6	44	20
	Time-delay type									16	24	7		31	3	3			
NV125-SEV, NV125-HEV	Fixed type										-	-			-	-			
NV250-SEV, NV250-HEV	Selector type	, –			10.5	8	32	9.5	4	16	-	7	23.5	31	3		6	44	20
	Time-delay type									16	24	7		31	3	3			
NV50-FHU	2P 3P	Fig. 2	4	4	6.5	9	9.5 22	4	4	_	_	_	_	-	-	_	_	-	-
NV100-FHU	3P	Fig. 2	4	4	3.5	9	22	4	4	-	-	-	-	-	-	-	-	-	-
NV30-FAU, NV50-FAU	2P 3P	Fig. 4	0	2.5	3	6	15 25	3	3	_	-	-	_	_	-	_	_	_	_
NV100-SRU	2P	Fig. 5			17		15			-					_			18	
NV100-SRU/HRU	3P	Fig. 6	3.5	3	9.5	5	25.5	7.5	4.5	17.5	-	13.5	-	-	5.5	-	4	30.5	2.5
NV400-CW (*1)	Fixed type	1.9.0								-		_			_	_			
NV400-SW	Selector type	Fia. 3	3	3	(2.3)	14.6	43.5	9.5	5	30.6	43.5	_	43.5	_	5.5	_	6.5	51.5	30.5
NV630-CW, NV630-SW	Time-delay type				, ,					30.6		22.6			5.5	5.5			
	Fixed type									-		-			-	_			
NV400-SEW, NV400-HEW NV630-SEW, NV630-HEW	Selector type	Fig. 3	3	3	(2.3)	14.6	43.5	9.5	5	30.6	43.5	-	43.5	-	5.5	-	6.5	51.5	30.5
INVOSU-SEVV, INVOSU-MEVV	Time-delay type		3							30.6		22.6			5.5	5.5			
NV800-SEW, NV800-HEW	Fixed type		3	3	(2.3)	14.6	54.1	9.5	5	30.6	54.1	-	54.1	_	5.5	-	6.5	78.5	30.5
INVOUU-SEVV, INVOUU-MEVV	Time-delay type	rig. 3	ا	3	(2.3)	14.0	54.1	9.5)	30.6	54.1	22.6	54.1	_	5.5	5.5	0.5	10.5	30.5

*1 Dimensions shown in parentheses apply to minus direction.

4. List of Product Weights

							oke " !	od:						005-	oric - 1	wai-b.	of			(kç
	Item	From	t 0000	ootion	tuno		aker b		tuno	Diug in tung	/including n	lua in frama\	Electric					y acces		·
Mo	del	1P	2P	ection 3P	4P	1P	r conn	3P	4P	2P	(including p	4P	operated	S	xed ty	w		ation h		Mechanic interlock (MI)
IVIC	NF32-SV	IP	0.45	0.65	4P	- IP	0.55		4P	_		4P -	type	1.5	5.0	10.2		V type 0.45	Стуре	0.17
	NF63-CV				_			0.8		0.8	1.2						0.4			1
	(rated current 50A or less)	_	0.45	0.65	_	_	0.55	0.8	_	0.8	1.2	-	_	1.5	5.0	10.2	0.4	0.45	_	0.17
İ	NF63-CV	_	0.5	0.7	_	_	0.6	0.85	_	0.85	1.25	_	_	1.5	5.0	10.2	0.4	0.45	_	0.17
	(rated current 60A, 63A)	_	0.5	0.7	_		0.6	0.85	_	0.85	1.25	_		1.5	5.0	10.2	0.4	0.45	_	0.17
	NF63-SV, NF63-HV	_	0.5	0.7	0.9	_	0.6	0.85	1.1	0.85	1.25	1.5	_	1.5	5.0	10.2	0.4	0.45	_	0.17
	(rated current 50A or less) NF63-SV. NF63-HV																			-
	(rated current 60A, 63A)	_	0.55	0.75	1.0		0.65	0.9	1.2	0.9	1.3	1.6	-	1.5	5.0	10.2	0.4	0.45	_	0.17
	NF125-CV	_	0.6	1.0	_	_	1.0	1.5	_	1.2	1.9	_	1.3	1.8	5.1	10.2	0.4	0.45	_	0.17
	NF125-SV	_	0.7	0.95	1.3	_	1.1	1.5	2.0	1.3	1.9	2.4	1.3	1.8	5.1	10.2	0.4	0.45	_	0.17
	NF125-HV NF125-SEV		0.6	1.0 1.7	1.2 2.2		1.0	1.5 2.2	1.9 2.9	1.2	1.9 2.6	2.3 3.3	1.3 1.3	1.8 6.8	5.1 8.7	10.5 13.5	0.4	0.45		0.17
ŀ	NF125-SEV NF125-HEV	-	=	1.7	2.2		-	2.2	2.9	-	2.6	3.3	1.3	6.8	8.7	13.5	0.5	0.55		0.17
	NF250-CV	_	1.3	1.5		_	1.7	2.2	-	3.1	3.4	-	1.3	6.8	8.7	13.5	0.5	0.55	_	0.17
İ	NF250-SV	_	1.4	1.6	2.0	_	1.8	2.3	3.0	3.2	3.5	4.5	1.3	6.8	8.7	13.5	0.5	0.55	_	0.17
	NF250-HV	_	1.4	1.6	2.0	_	1.8	2.3	3.0	3.2	3.5	4.5	1.3		8.7	13.5	0.5	0.55	_	0.17
_	NF250-SEV NF250-HEV	_	_	1.7	2.2			2.4 2.4	3.2		3.6 3.6	4.7 4.7	1.3 1.3	6.8	8.7 8.7	13.5 13.5	0.5	0.55		0.17
C	NF125-SGV		1.4	1.6	2.0		1.8	2.3	3.0	3.2	3.5	4.5	1.3	6.8	8.7	13.5	0.5	0.55		0.17
s	NF125-LGV	_	1.4	1.6	2.0	_	1.8	2.3	3.0	3.2	3.5 3.5	4.5	1.3	_	8.7	13.5	0.5	0.55	_	0.17
ıн	NF125-HGV		1.4	1.6	2.0		1.8	2.3	3.0	3.2	3.5 3.5	4.5	1.3		8.7	13.5	0.5	0.55		0.17
' . '	NF160-SGV NF160-LGV	-	1.4 1.4	1.6 1.6	2.0		1.8	2.3	3.0	3.2	3.5	4.5 4.5	1.3	6.8	8.7 8.7	13.5 13.5	0.5	0.55		0.17
MB	NF160-HGV	_	1.4	1.6	2.0	_	1.8	2.3	3.0	3.2	3.5	4.5	1.3	_	8.7	13.5	0.5	0.55	_	0.17
	NF250-SGV	-	1.4	1.6	2.0	_	1.8	2.3	3.0	3.2	3.5	4.5	1.3	6.8	8.7	13.5	0.5	0.55	_	0.17
	NF250-LGV	_	1.4	1.6	2.0	_	1.8	2.3	3.0	3.2	3.5	4.5	1.3	_	8.7	13.5	0.5	0.55	_	0.17
	NF250-HGV NF400-CW		1.4 4.4	1.6 5.0	2.0		1.8 5.7	2.3 7.0	3.0	7.0	3.5 8.3	4.5	1.3		8.7	13.5	0.5	0.55		0.17
	NF400-SW	_	4.6	5.2	6.8		5.9	7.0	9.7	7.0	8.5	11.3	1		19	30				
l	NF400-SEW/HEW	-	-	6.0	7.6		-	8.1	10.5	-	9.3	12.0			13	30				
	NF400-REW	_	_	6.0	-	_	_	8.5	-	-	9.3	-	ł	_		_				
	NF630-CW	_	5.2	6.0	_	_	6.5	7.9	_	7.6	9.1	_	ĺ	_			2.0	_		
İ	NF630-SW	_	5.4	6.2	8.0	_	6.7	8.1	10.6	7.8	9.3	12.0	9.0	_	33	30	İ			
	NF630-SEW/HEW	_	_	6.5	8.3	_	_	8.4	10.9	_	9.6	12.3	9.0	_			ļ			0.45
	NF630-REW	-	_	6.5	_	_	-	8.4	_	-	9.6	-		_	_	-				
	NF800-CEW	-		10.9	_		- 10	12.1	_	-	16.3				40	70				
	NF800-SDW NF800-SEW/HEW	-	9	10.9	14.2		10	12.1	15.8	 -	16.3	21.4			48	70	2.4	_		
	NF800-SEW/HEW		_	10.9	14.2	_	=	12.1	15.6	H =	16.3	21.4	-				1			
	NF1000-SEW, NF1250-SEW	_	_	23.5	30.7		_	23	30.8		26.6	35.5	10		48	70	3.4			1
	NF1600-SEW	_	_	34.5	41.2		_	30	40.7		-	-	10	_	-	-	3.4	_	_	0.55
	NF125-RGV	-	1.5	1.8	-	_	_	_	-	2.35	2.7	_	1.3	_	-	-	0.5	0.55	_	0.17
	NF250-RGV	_	1.5	1.8	_	_	_	_	_	3.2	3.6	_	1.3	_	_	_	0.5	0.55	_	0.17
R	NF125-UV	_	1.35	1.5	1.9	_	_	_	_	2.2	2.4	_	1.3	_	_	_	0.5	0.55	_	0.17
U	NF250-UV	_	2.5	2.7	3.7	_		- 10.0		4.2	4.5	-	1.3			_	0.5	0.55	_	0.17
	NF400-UEW NF800-UEW	-		16.2 27.6	25.4 33.7	_	_	18.6 31.2	30.7		19.8	_	9.0		-	-	2.2	-	_	0.45
L	NF63-HDV													_				-		+
HDV	(rated current 50A or less)	_	0.45	0.65	_	_	0.55	0.8	_	-	-	-	_	_	-	_	0.4	0.45	_	_
HDVA	NF125-HDVA	_					_				_			_			0.5	0.55	_	
HDVA	NF250-HDVA																			
HDW	NF400-HDW	_	_	5.6	7.3		_	7.3	9.7				_	_		_	2.0	_	_	_
F	NF800-HDW		0.14	9.9	13.0		_	11.0	14.4								2.4	-		-
FA	NF30-FA, NF30-FAU NF50-FA, NF50-FAU	-	0.14	0.2				-		ΗΞ-			-			H =	-	+=-		⊢=
H	NF50-FHU	-	0.16	0.22	_		+=-	H =	+=	+=-		+=-				+=-		+=-		+=
FH	NF100-FHU		-	0.51	_	_	-	_	—	—	_	_	_	_	<u> </u>	—	<u> </u>	—	_	T-
	BH-D6, BH-D10	0.15	0.3	0.45	0.55	_	i –	_	l –	l –	_	_	_	_	l –	l –			_	T -
вн	BH-DN	_	0.12	_	_	_	_	_	_	_	_	_	_	_	_	_	_		_	_
L	KB-D	0.09	0.18	0.27	0.36	_	_	_		_	_		_	_		_	_	_	_	_
1	NF50-SVFU		0.3	0.45	_				-								0.3	0.35	_	_
1	NF100-CVFU	_	0.6	0.85	_	_	_	_	_	_	_	_	_	_	_	_	0.4	0.45	3.2	-
1	NF125-SVU NF125-HVU	- -	0.7	0.95 1.0			H		- -	- -		- -			- -	- -	0.4	0.5	3.2	0.17
UL	NF125-HVU NF250-CVU/SVU/HVU	$\vdash \equiv$	-	1.7					-	$\vdash =$	$\vdash \equiv$	-	$\vdash =$		$\vdash =$	+=-	0.4	0.55	3.2	0.17
١٣٠	NF100-SRU		0.5	0.75				_	_	-				_	_	_	0.4	-	-	0.17
l	NF100-HRU	_	0.55	0.8	_	_	_	_	 	-	_	_	_	_	_	_	0.4	_	_	T -
1	NF400-SWU/HWU	_	-	5.7	-	_	-	_	-		_	-	_	_	_	_	2.0	_	5.3	0.45
1	NF630-SWU/HWU			9.6													2.4		5.3	0.45

	II	em				Bre	eaker bo	ody				Α	ccess	ories (weight	of only	y acces	sories	s)
			Front c	onnectio	on type	Rear c	onnectio	on type	Plug-in type	(including pl	ug-in frame)	Electric	Bo	xed ty	ре	Opera	ation ha	andle	Mechanic
Mo	odel	_	2P	3P	4P	2P	3P	4P	2P	3P	4P	operated type	s	1	w	F type	V type	C type	(MI)
	NV32-SV		_	0.75	_	_	0.95	-	_	1.35	-	_	1.5	5.0	10.2	0.4	0.45	_	0.17
	NV63-CV, NV63-SV (rated current 50A or less)		0.7	0.75	-	0.8	0.95	-	1.1	1.35	-	-	1.5	5.0	10.2	0.4	0.45	-	0.17
	NV63-CV, NV63-SV (rated current 60A, 63A)		0.75	0.8	-	0.85	1.0	_	1.15	1.4	-	-	1.5	5.0	10.2	0.4	0.45	-	0.17
	NV63-HV (rated current 50A or less)		-	0.75	-	-	0.95	-	-	1.35	-	-	1.5	5.0	10.2	0.4	0.45	-	0.17
	NV63-HV (rated current 60A, 63A)		-	0.8	ı	_	1.0	_	-	1.4	-	-	1.5	5.0	10.2	0.4	0.45	-	0.17
	NV125-CV		_	1.0	_	_	1.5	_	_	1.9	_	1.3	1.8	5.1	10.2	0.4	0.45	_	0.17
	NV125-SV		_	1.1	1.4	_	1.6	2.1	_	2.0	2.5	1.3	1.8	5.1	10.2	0.4	0.45	_	0.17
	NV125-HV		_	1.1	1.4	_	1.6	2.1	_	2.0	2.5	1.3	1.8	5.1	10.5	0.4	0.45	_	0.17
	NV125-SEV		_	1.9	2.5	_	2.4	3.2	_	2.8	3.6	1.3	6.8	8.7	13.5	0.5	0.55	_	0.17
	NV125-HEV		_	1.9	2.5	_	2.4	3.2	_	2.8	3.6	1.3	6.8	8.7	13.5	0.5	0.55	_	0.17
	NV250-CV		_	1.7	_	_	2.4	_	_	3.6	_	1.3	6.8	8.7	13.5	0.5	0.55	_	0.17
С	NV250-SV		_	1.9	2.5	_	2.6	3.5	_	3.8	5.0	1.3	6.8	8.7	13.5	0.5	0.55	_	0.17
ŝ	NV250-HV		_	1.8	_	_	2.5	_	_	3.7	_	1.3	_	8.7	13.5	0.5	0.55	_	0.17
•	NV250-SEV		_	1.9	2.5	_	2.6	3.5	_	3.8	5.0	1.3	6.8	8.7	13.5	0.5	0.55	_	0.17
Н	NV250-HEV		_	1.9	2.5	_	2.6	3.5	_	3.8	5.0	1.3	_	8.7	13.5	0.5	0.55	-	0.17
ů	NV50-SVFU		0.4	0.5	-	_	_	_	_	_	_	_	_	_	_	0.3	0.35	_	_
•	NV100-CVFU		_	0.95	_	_	_	_	_	_	_	_	_	_	_	0.4	0.45	3.2	_
UL	NV125-SVU		_	1.1	_	_	_	_	_	_	_	_	_	_	_	0.4	0.5	3.2	0.17
FΑ	NV125-HVU		_	1.1	_	_	_	_	_	_	_	_	_	_	_	0.4	0.5	3.2	0.17
	NV250-CVU/SVU/HVU		_	1.9	_	_	_	-	_	_	_	_	_	_	_	0.5	0.55	3.4	0.17
	NV30-FA		0.16	0.22	_	_	_	-	_	_	_	_	_	_	_	_	_	_	_
	NV50-FA		0.18	0.24	_	_	_	-	_	_	_	_	_	_	_	_	_	_	_
	NV400-CW		_	5.6	-	_	7.7	_	_	8.9	_		_						
	NV400-SW		_	5.9	-	_	8	_	_	9.2	_		_	19	30	2.0	_		
	NV400-SEW/HEW		_	6.6	8.2	_	8.7	11.4	_	9.9	12.5		_				_		
	NV630-CW		_	6.9	_	_	8.8	-	_	10.0	_	9.0	_					1.9	0.45
	NV630-SW		_	6.9	_	_	8.8	-	_	10.0	_		_	33	30			1.5	0.40
	NV630-SEW		_	7.1	8.9	_	9.0	11.5	_	10.2	12.9		_	33	30	2.4	_		
	NV630-HEW		_	7.1	_	_	9.0	-	_	10.2	_		-				_		
	NV800-SEW/HEW		_	15.3	_	_	16.5	_	_	20.7	_	_	_	48	70		_		
	BV-D		0.2	-	0.35	_	_	_	_	-	_	-	-	_	_	_	_	-	_
	BV-DN, BV-DN6		0.19	-	_	_	_	_	_	-	_	-	-	_	_	_	_	-	_
	NV100-SRU		0.55	0.85	_	_	_	_	_	-	_	-	-	_	_	_	_	-	_
	NV100-HRU		_	0.95	_	_		_	_	_	_	_	_	_	_	_		_	_

5. Switching the Adjustable Items

(1) Adjustable rated current and tripping characteristics items

<u> </u>	ajaotabio ratoa oarront aria tripping								
Applica	Adjustable item	Rated current	LTD tripping characteristics	STD tripping characteristics	Instantaneous tripping characteristics	PAL	Rated sensitivity	Rated Operating time (for time-delay type)	Rated voltage
	NF125-SEV/HEV	0	O (*2)	O (*2)	0	○ (*1)			
	NF250-SEV/HEV	0	○ (*2)	○ (*2)	0	○ (*1)			
мссв	NF400-SEW/HEW/REW/UEW NF630-SEW/HEW/REW NF800-CEW/SEW/HEW/REW/UEW NF1000-SEW, NF1250-SEW, NF1600-SEW	0	0	0	0	0			
	NF800-SDW, NF630-SWU/HWU				0				
	NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV	0							
	NV125-SEV/HEV	0	0 (*2)	0 (*2)	0	0 (*1)	0	0	
	NV250-SEV/HEV	0	0 (*2)	0 (*2)	0	O (*1)	0	0	
ELCB	NV400-SEW/HEW NV630-SEW/HEW NV800-SEW/HEW	0	0	0	0	0	0	0	
	NV32-SV, NV63-CV/SV/HV						0		
	NV100-SRU, NV100-HRU NV125-CV/SV/HV/SVU/HVU NV250-CV/SV/HV/CVU/SVU/HVU NV400-CW/SW, NV630-CW						0	0	

Notes *1 Available only for models with pre-alarm module.

*2 Use the OPERATION CHECK & SETUP UNIT Y-360-V(-VW). Consult Mitsubishi for details.

Remarks: Unless otherwise specified, the electronic breaker is adjusted to the following settings as a default.

(1) Rated current: maximum value

(2) LTD tripping characteristics:maximum value

(3) STD tripping characteristics (current, operating time):maximum value


(4) Instantaneous tripping characteristics:maximum value

(5) PAL:minimum value


(6) Rated sensitivity current:maximum value

(7) Leakage operation time (for time-delay type):maximum value

(2) Adjusting the rated current and tripping characteristics

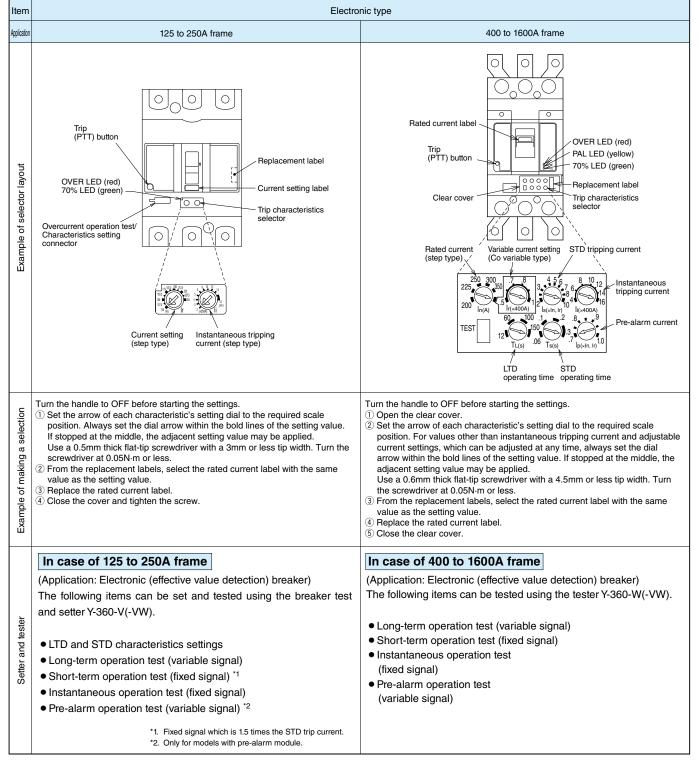

(3) Selecting the rated voltage, rated sensitivity and operating time

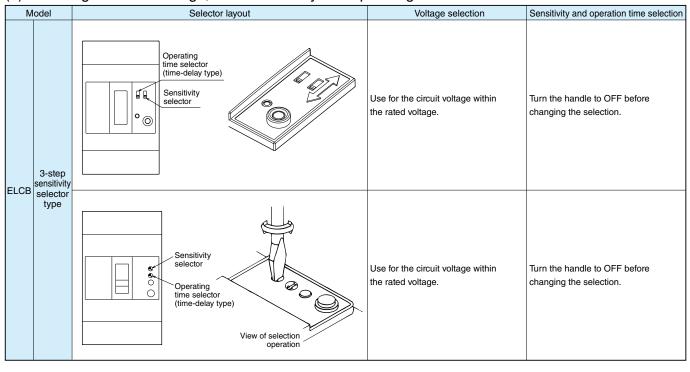

264

6. Breaker Mounting Screw Dimensions

■ MCCB • MCB

Class	Model	Hole depth	Wood screw (round wood screw)	Front	Rear connection	Plug-in type	F	Required q	uantity pe	r unit
0.000		Å	for front connection	connection type	type		1P	2P	3P	4P
	NF50-SVFU	56	-	M4×0.7×65 (note)	_	_	_	2	2	ı
	NF32-SV, NF63-CV, NF63-SV, NF63-HV NF125-CV, NF125-SV, NF125-HV NF100-CVFU, NF125-SVU NF125-HVU	45	4.1×58	M4×0.7×55	M4×0.7×55	M4×0.7×55	_	2	2	4
C • S •	NF125-SEV, NF125-HEV NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV NF250-CVU, NF250-SVU, NF250-HVU NF125-SGV, NF125-LGV, NF125-HGV NF160-SGV, NF160-LGV, NF160-HGV NF250-SGV, NF250-LGV, NF250-HGV	45	4.1×58	M4×0.7×55	M4×0.7×55	M4×0.7×55 M4×0.7×73	-	2 (For plug-in) type 4	2	4
Н	NF400-CW, NF400-SW NF400-SWU, NF400-HWU	47	-	M6×60	M6×72	M6×72	_	4	4	4
	NF400-SEW, NF400-HEW, NF400-REW NF630-CW, NF630-SW, NF630-SEW NF630-HEW, NF630-REW	59	_	M6×72	M6×85	M6×85	-	4	4	4
	NF800-CEW, NF800-SEW NF800-HEW, NF800-REW NF630-SWU, NF630-HWU	15	_	M6×35	M6×40	M6×35	-	4	4	4
	NF1000-SEW, NF1250-SEW	18.5	_	M8×40	M8×40	M8×40	-	4	4	4
	NF1600-SEW	18.5	_	M8×40	M8×40	-	-	4	4	4
	NF125-RGV NF250-RGV	45	_	M4×0.7×55	M4×0.7×55	M4×0.7×55	_	2	2	ı
R	NF125-UV, NF250-UV	45/61	_	M4×0.7×55/73	M4×0.7×55/73	M4×0.7×55/73	_	4	4	-
Ιů	NF125-UV (4P), NF250-UV (4P)	45	-	M4×0.7×55	M4×0.7×55	M4×0.7×55	_	2	2	4
•	NF400-UEW (3P)	47/156	_	M6×65/174	M6×72/181	M6×72/181	_	-	4	_
	NF400-UEW (4P), NF800-UEW	15/112	-	M6×35/132	M6×40/137	M6×35/132	_	-	4	6
	BH-D6	ı	_	-	_	ı	-	-	-	1
BH	BH-DN	ı	_	-	-	ı	-	-	-	1
511	KB-D	-	-	-	-	-	_	_	_	-
	BH-D10	_	_	_	_	_	-	_	_	_

Remarks: 1. The mounting shown in the ______ sections are enclosed with the MCCB. The mounting screws for the plug-in connection are enclosed with the plug-in terminal block. All other mounting screws must be prepared by the user.

- 2. All mounting screws other than the hexagon socket bolts and hexagon bolts are P-type panhead screws.
- 3. For models with two types of mounting screws, the screw length differs on the supply side and load side.
- 4. The plug-in type is not available for NF800-UEW.

Note For the P-type panhead screw, use a type with a spring washer and flat washer (small round) combination, or a P-type panhead screw with spring washer and flat washer.




■ ELCB • RCCB • RCBO

Class	Model	Hole depth	Wood screw (round wood screw)	Screw for ste	eel plates (P-type panhead sc	rew)		uired per unit
		Ä	for front connection	Front connection type	Rear connection type	Plug-in type	2, 3P	4P
	NV50-SVFU	56	_	M4×0.7×65 (note)	_	_	2	_
	NV32-SV, NV63-CV, NV63-SV, NV63-HV							
	NV125-CV, NV125-SV, NV125-HV	45	4.1×58	M4×0.7×55	M4×0.7×55	M4×0.7×55	2	4
	NV100-CVFU, NV125-SVU, NV125-HVU							
	NV125-SEV, NV125-HEV							
	NV250-CV, NV250-SV, NV250-HV	45	4.1×58	M4×0.7×55	M4×0.7×55	M4×0.7×55	2	4
NV	NV250-SEV, NV250-HEV,				iii ineii nee	M4×0.7×73	(For plug-in type 4	
	NV250-CVU, NV250-SVU, NV250-HVU							
	NV400-CW, NV400-SW	47	_	M6×60	M6×72	M6×72	4	4
	NV400-SEW, NV400-HEW							
	NV630-CW, NV630-SW, NV630-SEW	59	_	M6×72	M6×85	M6×85	4	4
	NV630-HEW							
	NV800-SEW, NV800-HEW	15	_	M6×35	M6×40	M6×35	4	4
BV	BV-D	_	_	-	-	-		_
L	BV-DN	_	_	_	_	_	_	_

Remark : 1. The mounting shown in the _____ sections are enclosed with the ELCB.

Note For the P-type panhead screw, use a type with a spring washer and flat washer (small round) combination, or a P-type panhead screw with spring washer and flat washer.

7. List of Mold Surface Temperature-rise Values

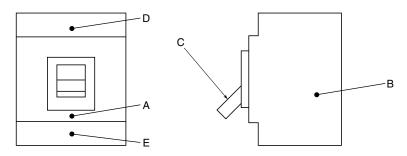

(K)

MCCB

IVICO	_					(IX)
	O a made carbina as		Meas	urement po	int	
Model	Conducting current	Cover surface (A)	Base side (B)	Handle (C)	Line terminal (D)	Load terminal (E)
NF32-SV	32A	14	38	12	36	37
NF63-CV	63A	15	42	14	39	44
NF63-SV	63A	15	39	12	41	44
NF63-HV	63A	15	42	12	41	49
NF125-CV	125A	13	29	9	43	42
NF125-SV	125A	14	32	10	44	40
NF125-HV	125A	16	33	11	49	42
NF250-CV	250A	19	35	13	46	45
NF250-SV	250A	20	36	13	47	45
NF250-HV	250A	20	36	13	49	46
NF125-SGV	125A	20	35	13	42	49
NF250-SGV	250A	20	36	13	49	50
NF160-SGV	160A	20	35	13	40	44

	Conducting		Meas	urement po	int	
Model	Conducting current	Cover surface (A)	Base side (B)	Handle (C)	Line terminal (D)	Load terminal (E)
NF400-CW	400A	16	25	16	47	37
NF400-SW	400A	20	27	10	46	37
NF400-SEW	400A	14	22	9	35	31
NF400-HEW	400A	14	23	8	34	32
NF400-REW	400A	15	23	9	35	32
NF400-UEW	400A	19	28	13	42	33
NF630-CW	630A	23	32	15	52	52
NF630-SW	630A	23	33	16	54	52
NF630-SEW	630A	22	31	14	51	45
NF630-HEW	630A	20	31	13	50	44
NF630-REW	630A	21	31	13	51	44
NF800-CEW	800A	21	30	13	45	40
NF800-SDW	800A	18	28	12	46	44
NF800-SEW	800A	21	30	12	45	41
NF800-HEW	800A	22	31	12	47	42
NF800-REW	800A	21	30	13	46	42
NF800-UEW	800A	25	35	16	51	46

(K)


ELCB


						(N)	
	0	Measurement point					
Model	Conducting current	Cover surface (A)	Base side (B)	Handle (C)		Load terminal (E)	
NV32-SV	32A	15	35	11	36	41	
NV63-CV	63A	17	32	13	43	41	
NV63-SV	63A	17	37	13	45	47	
NV63-HV	63A	17	35	13	43	43	
NV125-CV	125A	13	30	13	47	43	
NV125-SV	125A	14	30	15	45	43	
NV125-HV	125A	14	32	14	42	43	
NV250-CV	250A	21	37	14	43	44	
NV250-SV	250A	21	39	18	47	43	
NV250-HV	250A	23	38	17	48	43	

						(K)	
Model	Conducting current	Measurement point					
		Cover surface (A)	Base side (B)	Handle (C)	Line terminal (D)	Load terminal (E)	
NV400-CW	400A	22	32	11	46	41	
NV400-SW	400A	23	32	12	47	42	
NV400-SEW	400A	16	23	10	36	34	
NV400-HEW	400A	15	22	11	35	35	
NV630-CW	630A	24	34	17	54	52	
NV630-SW	630A	23	33	16	53	53	
NV630-SEW	630A	23	34	17	54	53	
NV630-HEW	630A	22	33	17	54	52	
NV800-SEW	800A	29	40	13	53	46	


*1 The connected wire size follows JIS C 8201 Ann.2 Standards. The temperature rise value will vary according to the size of the connected wire.
*2 This table shows the temperature-rise values. The ambient temperature must be added for the actual measurement value.
*3 These are examples of the measurement values, and are not guaranteed values. Use these as reference data.

8. Ordering Information

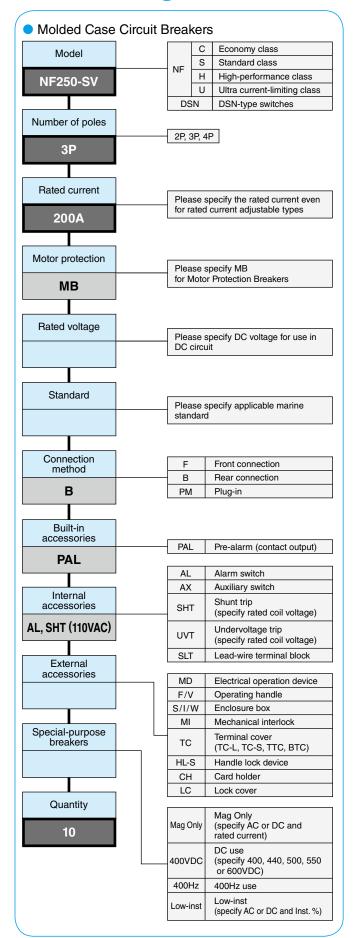

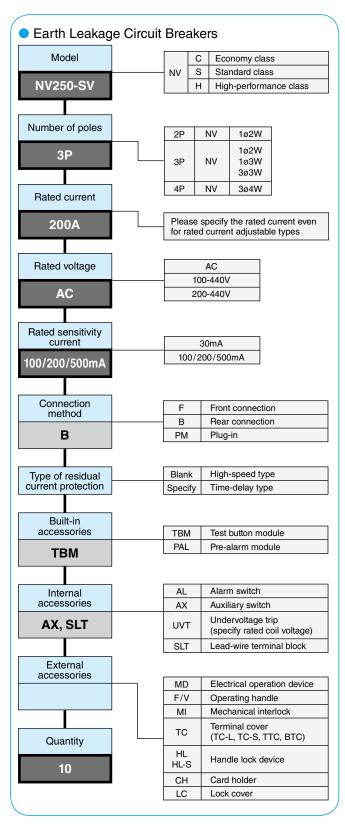





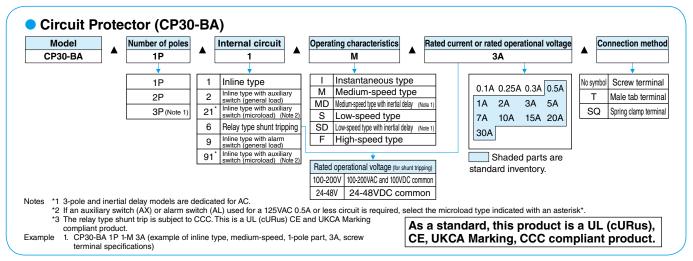

Mandatory items are indicated with a bold box. Always specify these items.

Unless specified, all other items will be manufactured with standard Mitsubishi specifications.

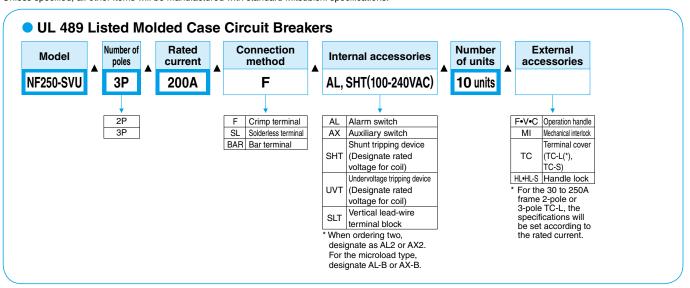

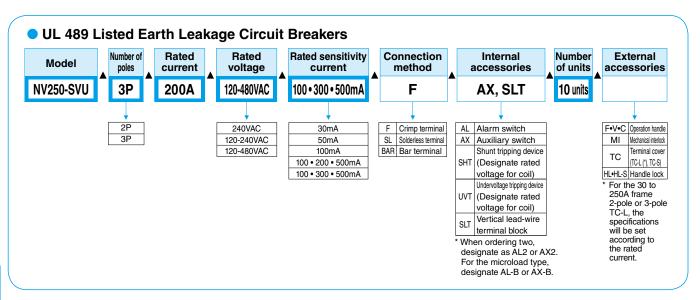


9. Index

		Cnapter	page
Α	AE	2	56
	AL	_	108
	AX	-	108
D	B(Rear)	-	98
В	_ ' _ '		
	BA-B	_	132
	BA-F	-	132
	BA-G	-	133
	BA-P	····· 6	133
	BAR	5	98
	BOX	····· 6	137
	B-ST	5	98
	BTC	6	130
С	CE marking		89
•	CH		135
	CP	•	53
	C-type handle		127
_			
D	DC MCCB		63
	DC DSN switch		63
	DIN rail mounting adapter		143
F	F(AMP-N)		98
	FAU/FHU series	2	38
	FP	5	98
	F-type handle	······ 6	123
Н	HL		134
• •	HL-S	•	134
	HT	-	135
	I-box(Dust-proof type)		
I			137
	IEC 35-mm rail mounting adapter	_	143
L	LC	-	135
М	MB	_	34
	MD	······ 6	140
	MDS	····· 6	140
	MDU breaker	2	41
	MI	6	136
Ν	NFI(Dust-proof type)	6	137
	NFS(Closed type)		137
	NFW(Water-proof type)		137
Р	P-LT		120
'	PAL		120
	. , . =	ĭ	
	PM		98
_	PTC	-	130
S	S-box(Closed-type)		137
	SHT		108
	SLT	····· 6	108
	SQ	2	53
Т	TBM	6	121
	TC-L	6	128
	TC-S	····· 6	129
	TTC	_	129
11	UL 489 Listed		35
U	UVT		
.,			108
۷,	V-type handle		125
W	W-box(water-proof type)		137
Y	Y-360	_	263
Z	ZCT	2	58
	ZT	2	58

Short-circuit current calculation and model selection software

MELSELECT is the software that calculates short circuit current and autoselects suitable products from Mitsubishi Electric ranges for circuit protection.

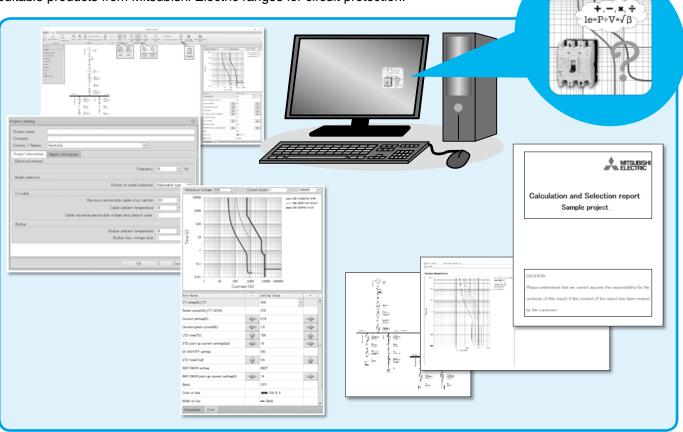

MELSELECT simplifies the circuit design and improves the work rate!

Registered Products

Low-voltage Power Distribution Products: ACBs, MCCBs, ELCBs, MCBs, Contactors, Thermal relays

Features

- Calculating short circuit current and auto-selecting the suitable combination of installation components from Mitsubishi Electric ranges.
- Outputting a report of calculation and selection results.
- Checking coordination by comparing the characteristics of the selected products.
- Multi-languages available. (Japanese, English, Chinese)
- Widely-used in the world. (57 countries and regions)
- Compatibility with Windows 10.
- IEC based SLD (Single Line Diagram) indication.
- Free software open to public on Mitsubishi Electric FA Global Website and off-line operating.

System Requirements

- Operating system (OS): Microsoft Windows 10 (32/64 bit) Pro.
- Microsoft .NET Framework: Microsoft .NET Framework 4.6.
- * Microsoft, Windows, .NET Framework and Word are registered trademarks of Microsoft Corporation in the United States and other countries.

Download Link

http://www.mitsubishielectric.com/fa/products/lvd/lvcb/smerit/melselect/index.html

9

11. Low Voltage Products Website



Changes for the Better

https://www.mitsubishielectric.com/fa/

Easier to Navigate, More Information Available

Whether you are looking for information on high-performance power distribution/protection systems and energy-saving support equipment or simply interested in one of our many low-voltage power control products, we've made things easier for you to find. The website is now organized to provide enhanced usability for customers, and the latest information on our low-voltage products and systems.

Please be sure to visit, check out our new look, and bookmark the site for future reference.



1 Product Information

Based on past customer requests, we've increased the content to include a full product line-up, product specifications and relevant CAD data. The Products pages are divided into two categories:

Low-voltage Circuit Breakers

WS-V Series Next-generation MCCB and ELCB, AE-SW Series ACB, DIN Series MCB Energy Measuring Devices

New SS series Multi-measuring instruments, EcoMoniorPlus Energy Measuring Unit

2 Downloads

The latest catalogs, information on certifications acquired, handling and maintenance information, and technical notes can all be downloaded free of charge. We've organized the information for maximum customer convenience, and will be updating the contents penodically.

3 News

Check here for the latest, up-to-date news on Mitsubishi Electric products such as new product releases and changes in specifications.

Support

Our interest is to serve you! Please contact us whenever you have a question or are in need of support. We'll reply at the earliest possible time. Committed to supporting our customers' businesses, we also provide information through Mitsubishi Electric's global network.

Appendix

12. Service Network

Country/Region	Corporation Name	Address	Telephone
Australia	Mitsubishi Electric Australia Pty. Ltd.	348 Victoria Road, Rydalmere, N.S.W. 2116, Australia	+61-2-9684-7777
Algeria	Mec Casa	Rue i N 125 Hay-Es-Salem, 02000, W-Chlef, Algeria	+213-27798069
	PROGRESSIVE TRADING CORPORATION	HAQUE TOWER,2ND FLOOR,610/11,JUBILEE ROAD, CHITTAGONG, BANGLADESH	+880-31-624307
Bangladesh	ELECTROMECH AUTOMATION& ENGINEERING LTD.	SHATABDI CENTER, 12TH FLOOR, SUITES: 12-B, 292, INNER CIRCULAR ROAD, FAKIRA POOL, MOTIJHEEL, DHAKA-1000, BANGLADESH	+88-02-7192826
Belarus	Technikon	Oktyabrskaya 19, Off. 705, BY-220030 Minsk, Belarus	+375 (0)17 / 210 46 2
Belgium	Mitsubishi Electric Europe B.V. Benelux Branch	Nijverheidsweg 23A, 3641 RP Mijdrecht	+31 (0)297 250 350
Brazil	Mitsubishi Electric do Brasil Comércio e Serviços Ltda.	Avenida Adelino Cardana, 293 – 21º Andar, Bethaville, Barueri, SP, Brasil, CEP 06401-147	+55-11-4689-3000
Cambodia	DHINIMEX CO.,LTD	#245, St. Tep Phan, Phnom Penh, Cambodia	+855-23-997-725
Central America	Automation International LLC	7050 W. Palmetto Park Road Suite #15 PMB #555, Boca Raton, FL 33433	+1-561-237-5228
Chile	Rhona S.A. (Main office)	Vte. Agua Santa 4211 Casilla 30-D (P.O. Box) Vina del Mar, Chile	+56-32-2-320-600
	Mitsubishi Electric Automation (China) Ltd.	Mitsubishi Electric Automation Building, No.1386 Hongqiao Road, Shanghai, China 200336	+86-21-2322-3030
	Mitsubishi Electric Automation (China) Ltd. BeiJing	5/F,ONE INDIGO,20 Jiuxianqiao Road Chaoyang District,Beijing, China 100016	+86-10-6518-8830
China	Mitsubishi Electric Automation (China) Ltd. ShenZhen	Level 8, Galaxy World Tower B, 1 Yabao Road, Longgang District, Shenzhen, China 518129	+86-755-2399-8272
Omia	Mitsubishi Electric Automation (China) Ltd. GuangZhou	Rm.1006, A1 Times E-Park, No.276-282, Hanxi Road East, Zhongcun Street, Panyu Distric, Guangzhou, China 510030	+86-20-8923-6730
	Mitsubishi Electric Automation (China) Ltd. ChengDu	1501-1503,15F, Guang-hua Centre Building-C, No.98 North Guang Hua 3th Rd Chengdu, China 610000	+86-28-8446-8030
	Mitsubishi Electric Automation (Hong Kong) Ltd.	20/F,1111 King's Road, Taikoo Shing, Hong Kong	+852-2510-0555
Colombia	Proelectrico Representaciones S.A.	Carrera 42 N° 75 – 367 Bodega 109, Itagüi, Medellín, Antioquia, Colombia	+57-4-4441284
Czech Republic	AUTOCONT CONTROL SYSTEMS S.R.O	Technologická 374/6, CZ-708 00 Ostrava - Pustkovec	+420 595 691 150
Denmark	BEIJER ELECTRONICS A/S	LYKKEGARDSVEJ 17, DK-4000 ROSKILDE, Denmark	+45 (0)46/ 75 76 66
Egypt	Cairo Electrical Group	9, Rostoum St. Garden City P.O. Box 165-11516 Maglis El-Shaab, Cairo - Egypt	+20-2-27961337
France	Mitsubishi Electric Europe B.V. French Branch	FR-92741 Nanterre Cedex	+33 (0)1 55 68 57 01
Germany	Mitsubishi Electric Europe B.V.	Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany	+49 (0) 2102 4860
Greece	KALAMARAKIS-SAPOUNAS S.A.	IONIAS & NEROMILOU STR., CHAMOMILOS ACHARNES, ATHENS, 13678 Greece	+30-2102 406000
Hungary	Meltrade Ltd.	Fertö utca 14. HU-1107 Budapest, Hungary	+36 (0)1-431-9726
- J. J	Mitsubishi Electric India Private Limited	3rd Floor, Tower A, Global Gateway, MG Road, Gurugram - 122002, Haryana, India	+91(124)673 9300
India	Mitsubishi Electric India Private Limited Pune Sales Office	ICC-Devi Gaurav Technology Park, Unit no. 402, Fourth Floor, Survey no. 191-192 (P), Opp. Vallabh Nagar Bus Depot, Pune – 411018, Maharashtra, India	+91-20-68192100
	Mitsubishi Electric India Private Limited FA Center	204-209, 2nd Floor, 31FIVE, Corporate Road, Prahladnagar, Ahmedabad 380015,Gujarat. India	+91-79677-77888
Indonesia	PT. Sahabat Indonesia	P.O.Box 5045 Kawasan Industri Pergudangan, Jakarta, Indonesia	+62-(0)21-6610651-9
Ireland	Mitsubishi Electric Europe B.V.	Westgate Business Park, Ballymount, IRL-Dublin 24, Ireland	+353 (0)1-4198800
Israel	Gino Industries Ltd.	26, Ophir Street IL-32235 Haifa, Israel	+972 (0)4-867-0656
Italy	Mitsubishi Electric Europe B.V.	Viale Colleoni 7, I-20041 Agrate Brianza (MI), Italy	+39 039-60531
Kazakhstan	Kazpromavtomatika	UI. Zhambyla 28, KAZ - 100017 Karaganda	+7-7212-501000
Korea	Mitsubishi Electric Automation Korea Co., Ltd	9F Gangseo Hangang xi-tower A, 401 Yangcheon-ro, Gangseo-gu, Seoul 07528 Korea	+82-2-3660-9573
Notea	AROUNKIT CORPORATION IMPORT- EXPORT		
Laos Lebanon	SOLE CO.,LTD Comptoir d'Electricite Generale-Liban	SAPHANMO VILLAGE. SAYSETHA DISTRICT, VIENTIANE CAPITAL, LAOS Cebaco Center - Block A Autostrade Dora, P.O. Box 11-2597 Beirut - Lebanon	+856-20-415899 +961-1-240445
Lithuania	Rifas UAB	Tinklu 29A, LT-5300 Panevezys, Lithuania	+370 (0)45-582-728
Malaysia	Mittric Sdn Bhd	No. 5 Jalan Pemberita U1/49, Temasya Industrial Park, Glenmarie 40150 Shah Alam, Selangor, Malaysia	+603-5569-3748
Malta	ALFATRADE LTD	99 PAOLA HILL, PAOLA PLA 1702, Malta	+356 (0)21-697-816
Maroco	SCHIELE MAROC	KM 7,2 NOUVELLE ROUTE DE RABAT AIN SEBAA, 20600 Casablanca, Maroco	+212 661 45 15 96
Myanmar	Peace Myanmar Electric Co.,Ltd.	NO137/139 Botahtaung Pagoda Road, Botahtaung Town Ship 11161, Yangon, Myanmar	+95-(0)1-202589
	Watt&Volt House		
Nepal		KHA 2-65,Volt House Dillibazar Post Box:2108,Kathmandu,Nepal	+977-1-4411330
Netherlands	Mitsubishi Electric Europe B.V. Benelux Branch	Nijverheidsweg 23A, 3641 RP Mijdrecht	+31 (0)297 250 350
North America	Mitsubishi Electric Automation, Inc.	500 Corporate Woods Parkway, Vernon Hills, IL 60061 USA	+847-478-2100
Norway	Scanelec AS Mitsubishi Electric Automation, Inc. Mexico Branch	Leirvikasen 43B, NO-5179 Godvik, Norway Blvd. Miguel de Cervantes Saavedra 301, Torre Norte Piso 5, Col. Ampliación Granada,	+47 (0)55-506000 +52-55-3067-7511
Middle East	Comptoir d'Electricite Generale-International-S.A.L.	Miguel Hidalgo, Ciudad de México, CP 11520, México Cebaco Center - Block A Autostrade Dora P.O. Box 11-1314 Beirut - Lebanon	+961-1-240430
Arab Countries & Cyprus Pakistan	Prince Electric Co.	2-P GULBERG II, LAHORE, 54600, PAKISTAN	+92-42-575232,
Peru	Rhona S.A. (Branch office)	Avenida Argentina 2201, Cercado de Lima	5753373 +51-1-464-4459
	,	-	
Philippines	Edison Electric Integrated, Inc.	24th Fl. Galleria Corporate Center, Edsa Cr. Ortigas Ave., Quezon City Metro Manila, Philippines	+63-(0)2-634-8691
Poland	Mitsubishi Electric Europe B.V. Polish Branch	Krakowska 48, 32-083 Balice, Poland	+48 12 347 65 00
Republic of Moldova	Intehsis SRL	bld. Traian 23/1, MD-2060 Kishinev, Moldova	+373 (0)22-66-4242
Romania	Sirius Trading & Services SRL	RO-060841 Bucuresti, Sector 6 Aleea Lacul Morii Nr. 3	+40-(0)21-430-40-06
Russia	Mitsubishi Electric (Russia) LLC	2 bld.1, Letnikovskaya street, Moscow, 115114, Russia	+7 495 721-2070
Saudi Arabia	Center of Electrical Goods	Al-Shuwayer St. Side way of Salahuddin Al-Ayoubi St. P.O. Box 15955 Riyadh 11454 - Saudi Arabia	+966-1-4770149
Singapore	Mitsubishi Electric Asia Pte. Ltd.	307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943	+65-6473-2308
Slovakia	PROCONT, Presov	Kupelna 1/, SK - 08001 Presov, Slovakia	+421 (0)51 - 7580 61
	SIMAP	Jana Derku 1671, SK - 91101 Trencin, Slovakia	+421 (0)32 743 04 72
Slovenia	Inea RBT d.o.o.	Stegne 11, SI-1000 Ljubljana, Slovenia	+386 (0)1-513-8116
South Africa	CBI-electric: low voltage	Private Bag 2016, ZA-1600 Isando Gauteng, South Africa	+27-(0)11-9282000
Spain	Mitsubishi Electric Europe B.V. Spanish Branch	Carretera de Rubí 76-80, E-08190 Sant Cugat del Vallés (Barcelona), Spain	+34 (0)93-565-3131
Sweden	Mitsubishi Electric Europe B.V. (Scandinavia)	Hedvig Möllers gata 6, 223 55 Lund, Sweden	+46 (0)8-625-10-00
	Euro Energy Components AB	Järnvägsgatan 36, S-434 24 Kungsbacka, Sweden	+46 (0)300-690040
Switzerland	TriElec AG	Muehlentalstrasse 136, CH-8201 Schaffhausen, Switzerland	+41-(0)52-6258425
Taiwan	Setsuyo Enterprise Co., Ltd	5th Fl., No.105, Wu Kung 3rd, Wu-Ku Hsiang, Taipei, Taiwan, R.O.C.	+886-(0)2-2298-8889
Thailand	United Trading & Import Co., Ltd.	77/12 Bamrungmuang Road,Klong Mahanak Pomprab Bangkok Thailand	+66-223-4220-3
Tunisia	MOTRA Electric	3, Résidence Imen, Avenue des Martyrs Mourouj III, 2074 - El Mourouj III Ben Arous, Tunisia	+216-71 474 599
Turkey	Mitsubishi Electric Turkey A.Ş.	Şerifali Mahallesi Kale Sokak No: 41, 34775 Ümraniye, İstanbul, Turkey	+90-216-969-2666
United Kingdom	Mitsubishi Electric Europe B.V.	Travellers Lane, UK-Hatfield, Herts. AL10 8XB, United Kingdom	+44 (0)1707-276100
Uruguay	Fierro Vignoli S.A.	Avda. Uruguay 1274 Montevideo Uruguay	+598-2-902-0808
		· · · · · · · · · · · · · · · · · · ·	
Vietnam	Mitsubishi Electric Vietnam Co.,Ltd. Head Office	11th & 12th Floor, Viettel Tower B, 285 Cach Mang Thang 8 Street, Ward 12, District 10, Ho Chi Minh City, Vietnam	+84-28-3910-5945

Automating the World

Creating Solutions Together.









Transformers, Med-voltage Distribution



Power Monitoring and Energy Saving Products



Power (UPS) and Environmental Products



Compact and Modular Controllers



Servos, Motors and Inverters



Visualization: HMIs



Edge Computing Products



Numerical Control (NC)



Collaborative and Industrial Robots



Processing machines: EDM, Lasers



SCADA, analytics and simulation software

Mitsubishi Electric's product lineup, from various controllers and drives to energy-saving devices and CFRP laser processing machines, all help you to automate your world. They are underpinned by software, innovative data monitoring, and modelling systems supported by advanced industrial networking and Edgecross IT/OT connectivity. Together with a worldwide partner ecosystem, Mitsubishi Electric factory automation (FA) has everything to make IoT and Digital Manufacturing a reality.

With a complete portfolio and comprehensive capabilities that combine synergies with diverse business units, Mitsubishi Electric provides a one-stop approach to how companies can tackle the shift to clean energy and energy conservation, carbon neutrality and sustainability, which are now a universal requirement of factories, buildings, and social infrastructure.

We at Mitsubishi Electric FA are your solution partners waiting to work with you as you take a step toward the realization of sustainable manufacturing and society through the application of automation. Let's automate the world together!

Low Voltage Circuit Breakers

For Safety: Please read the instruction manual carefully before using the products in this catalog.

Wiring and connection must be done by the person have a specialized knowledge of electric construction and wiring.



Mitsubishi Electric's e-F@ctory concept utilizes both FA and IT technologies, to reduce the total cost of development, production and maintenance, with the aim of achieving manufacturing that is a "step ahead of the times". It is supported by the e-F@ctory Alliance Partners covering software, devices, and system integration, creating the optimal e-F@ctory architecture to meet the end users needs and investment plans.



MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN